


song or playlist you want to play. Touch **Search** to look for a song.

MUSIC PLAYER

Just touch a song or playlist to get going.

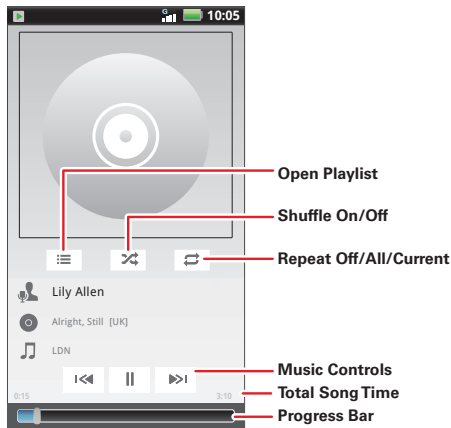

To listen to music **during a flight**, turn off all your network and wireless connections: Press and hold Power  > **Airplane mode**.

MUSIC PLAYER CONTROLS

Controls	
play/pause	Touch  .
previous/next	Touch  .
fast forward/rewind	Touch and hold  .
volume	Press the side volume keys.
view library	Touch Menu  > Library .
add to playlist	Touch Menu  > Add to playlist .
use as ringtone	Touch Menu  > Use as ringtone .
use as notification	Touch Menu  > Use as notification .
delete	Touch Menu  > Delete .

HIDE, WAKE, TURN OFF

Touch Home  to use another app. Your music continues to play.

When you see  in the status bar a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch .

PLAYLISTS

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

To edit, delete, and rename playlists, touch and hold the playlist in the music library.

FM RADIO

Plug in a 3.5mm headset and surf the airwaves for fresh music.

Find it:  >  **FM Radio**



Frequency Bar

Touch to manually select a frequency.

Radio Controls

Scan or search, turn on/off.

Presets

Touch to edit or add the current frequency.

RADIO CONTROLS

Controls	
search for stations	Touch  /  .
scan for stations	Touch  /  .
volume	Press the side volume keys.
save station (preset) name	Touch Menu  > Save Preset .
clear saved stations	Touch Menu  > Clear Presets .

Controls

listen with speaker

(headset needs to stay plugged in)

Touch Menu  > **Loudspeaker.**

scan for local stations

Touch Menu  > **Scan.**

turn off

Touch Menu  > **Exit.**

SET STATIONS (PRESETS)


The first time you plug in your headset and turn on the radio, you can scan and set your favorite stations. You can save up to 20 of them.

WEB

surf the web with your phone

QUICK START: BROWSER

Find it:  **Browser**

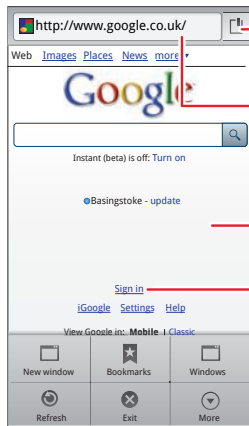

Bookmarks

Touch to see your bookmarks.

Web Address

Touch to enter a URL.

Drag or flick to scroll.

Links

Touch to open.

Touch  to see options.

Note: If you can't connect, contact your service provider.

CONNECT

Your phone uses the mobile phone network (over the air) to automatically connect to the web.

Note: Your service provider may charge to surf the web or download data.

To use a wireless network, touch Menu  > **More** > **Settings** > **Wireless & networks**. Touch **Wi-Fi** to turn it on, then touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect. There's more in "**Wi-Fi**" on page 46.

BROWSER OPTIONS

Touch Menu  to see browser options:

Options	
New window	Open a new window.
Bookmarks	Shows your bookmarks. Touch Add to add the current page to your list.
Windows	Show a list of open browser windows.
Refresh	Reload the current page.
Exit	Closes your browser.

Options

More	Show browser options, like Add bookmark , Find on page , Select text , Page info , Share page , Downloads , and Settings .
-------------	---

DOWNLOAD APPS

Warning: Apps downloaded from the web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust, like For security, download apps only from trusted sites like "**APPS FOR ALL**" on page 36.

Note: All apps downloaded are stored in your phone memory.

To download apps:

- 1 If you want to download apps from any web page, touch Menu  > **More** > **Settings** > **Applications** > **Unknown sources**.
- 2 To launch the browser, touch  **Browser**.
- 3 Find the app you want to download and touch the download link.

MANAGE YOUR DOWNLOADS

To view files or applications you have downloaded, touch  **Browser** >  > **More** > **Downloads**.

To clear your download history, touch Menu  > **Clear list**. To cancel, touch Menu  > **Cancel all downloads**.

APPS FOR ALL

get the app you want

CHINA MOBILE

Get all the fun games and cool apps you want from China Mobile or the web (see “**DOWNLOAD APPS**” on page 35). China mobile provides you with access to **Mobile Market, Fetion, 139Mail, Monternet, Mobile Stock, Mobile Music, Mobile Video, Mobile Reader, Navigation**, and much more.

SELECT APPS

Scroll to and touch the app you want to use.

MANAGE APPS

Find it: Menu  > **More** > **Settings** > **Applications** > **Manage applications**

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear data**, or other options.

TIPS & TRICKS

a few handy hints

SHORTCUTS

To...	
Return to the home screen	Touch Home  .
See recently dialed numbers	Touch  Dialer > Recent .
Sleep/wake your phone	Press Power  .
See last few apps used	In the home screen, touch and hold Home  .
Turn airplane mode on/off	Press and hold Power  > Airplane mode .
Turn phone sounds on/off	Press and hold Power  > Silent .
Set screen timeout	Touch Menu  > More > Settings > Display > Screen timeout .

To...

Turn **Bluetooth™** power on/off

Touch Menu  > **More** > **Settings** > **Wireless & networks** > **Bluetooth**.

Turn **Wi-Fi** on/off

Touch Menu  > **More** > **Settings** > **Wireless & networks** > **Wi-Fi**.

Add a shortcut on your home screen

Touch and hold an open area on your home screen to open the **Add to Home screen** menu, then touch **Shortcuts**. Choose an application, bookmark, or shortcut to add.

Move a shortcut or widget

Touch and hold the shortcut or widget until you feel a vibration, then drag it to where you want.

Delete a shortcut or widget

Touch and hold the shortcut or widget until you feel a vibration, then drag it to the trash  at the top of the screen.

BATTERY TIPS

Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power.

If your battery is low, touch Menu  > **More** > **Settings** > **Battery Manager** > **Battery mode**. In **Battery Manager**, you can touch the battery image to show what's been using the most battery.

To save even more battery life between charges, you could reduce:

- recording or watching videos, listening to music, or taking pictures.
- widgets that stream information to your home screen, like news or weather (“**USE & CHANGE YOUR HOME SCREEN**” on page 8).
- Bluetooth™ use: touch Menu  > **More** > **Settings** > **Wireless & networks** > **Bluetooth** (turn off).
- Wi-Fi use: touch Menu  > **More** > **Settings** > **Wireless & networks** > **Wi-Fi** (turn off).
- GPS use: touch Menu  > **More** > **Settings** > **Location & security** > **Use GPS satellites** (deselect).

- network searching: if you are out of coverage, to keep your phone from looking for networks, press and hold Power  > **Airplane mode**.
- display brightness: touch Menu  > **More** > **Settings** > **Display** > **Brightness** > (*dimmer setting*).
- display timeout delay: touch Menu  > **More** > **Settings** > **Display** > **Screen timeout** > (*shorter setting*).

Tip: Add a widget to control your power use. Touch and hold a blank spot on your home screen, then touch **Android widgets** > **Power Control**.


TEXT ENTRY

think keyboard, now think smaller

TOUCHSCREEN TEXT ENTRY WINDOW


When you touch a text field, your phone opens a touchscreen keypad or handwriting window. To close the keypad or handwriting window, touch Back .

KEYPAD

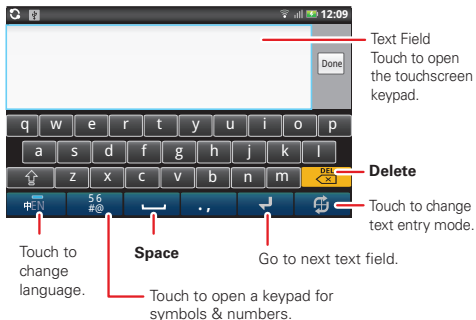

To change keypad settings, from the home screen, touch Menu  > **More > Settings > Language & keyboard > Moto input method > Keyboard.**

HANDWRITING

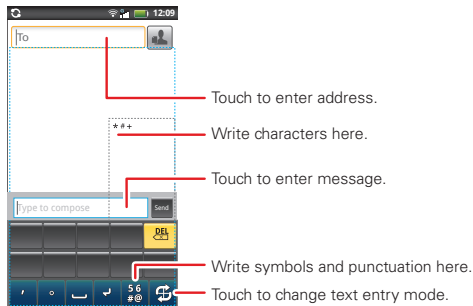

Write a character in the handwriting window, then wait for your phone to recognize and place it in the text field. If your phone places an incorrect character, touch the character in the choice area that you want to replace it.

To change handwriting settings from the home screen, touch Menu  > **More > Settings > Language & keyboard > Moto input method > Handwriting.**

TEXT ENTRY SETTINGS

When you use the touchscreen text entry window, your phone suggests words from your dictionary and

chosen language. Your phone also automatically enters apostrophes in some words, like “don’t.”

Find it: Menu  > **More** > **Settings** > **Language & keyboard**

- To change the language and the style for your touchscreen text entry window, touch **Select locale**.
- To edit your dictionary, touch **User dictionary**.
- To change sounds, corrections, and other settings for your keypad and handwriting window, touch **Moto input method**.

PERSONALIZE

add your personal touch

RINGTONES

To personalize your ringtone for incoming calls or notifications:

Find it: In the home screen touch Menu  > **More** > **Settings** > **Sound** > **Phone ringtone** or **Notification ringtone**

To set your phone to vibrate for incoming calls:

Find it: In the home screen touch Menu  > **More** > **Settings** > **Sound** > **Vibrate**

WALLPAPER

To set a new wallpaper, touch and hold an empty spot on the home screen, then touch **Wallpapers**.

SOUNDS

Features

set volume for ringtone, media & alarm

Menu  > **More** > **Settings** > **Sound** > **Volume**

Features

play tones when using dial pad

Menu  > **More** > **Settings** > **Sound** > **Audible touch tones**

play sound on screen selection

Menu  > **More** > **Settings** > **Sound** > **Audible selection**

DISPLAY

Features

set display brightness

Menu  > **More** > **Settings** > **Display** > **Brightness**

set orientation

Menu  > **More** > **Settings** > **Display** > **Auto-rotate screen**

set animation

Menu  > **More** > **Settings** > **Display** > **Animation**

DATE & TIME

Set date, time, time zone, and formats:

Find it: Menu  > **More** > **Settings** > **Date & time**

LANGUAGE & REGION

Set your menu language and region:

Find it: Menu  > **More** > **Settings** > **Language & keyboard** > **Select locale**