

MOTOKEY™ MINI

with DUAL CHIP

LIFE.  POWERED.

Congratulations

MOTOKEY™ MINI with DUAL CHIP

Your MOTOKEY™ MINI with DUAL CHIP phone is loaded with premium features, including music, photos, videos, browsing, and more—with an easy to use QWERTY keypad.

- **Dual SIM slots.** No need to change SIM cards, use two SIM cards at the same time.
- **Music.** Instantly play your music. Just open your media player and select a playlist.
- **Photos.** Take photos and send them to your friends.

We've crammed all the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. You may be surprised at what you discover.

Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

More

- **Support:** Go to www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Your phone

the important keys & connectors



Note: Your phone might look a little different.

Contents

Let's go	5
Keys	8
Home screen	10
Calls	12
Contacts	15
Messaging	17
Text entry	19
Tips & tricks	21
Music	23
Radio	26
Photos	27
Web	29
Personalize	30
Manage your life	33
Bluetooth™ wireless	36
Memory card & file transfer	38
Security	40
Troubleshooting	42
Safety, Regulatory & Legal	44

Let's go

let's get you up and running

Assemble & charge

1 Cover off



2 SIM cards in



3 microSD in



4 Battery in



5 Cover on



6 Charge up



Caution: Please read "Battery Use & Safety" on page 44.

Turn it on & off

To turn your phone on or off, press and hold Power/End .



Activate SIM cards

Your phone supports two SIM cards. When two SIM cards are installed, you can activate one or both SIM cards.

- 1 From the home screen, press **Menu** (right soft key) to open the app menu.
- 2 Select  **Settings** > **DUAL SIM settings**.
- 3 Select **Dual SIM open**, **Only SIM1 open**, or **Only SIM2 open**.

Note: If only one SIM card is installed, it will be activated by default.

Make & answer calls

To **make** a call from the home screen, enter a number, then press Call .

Note: If two SIM cards are activated, choose which SIM card you want to use.

To **answer** a call, press Call . To **turn off** the incoming call alert, press **Reject**.

To **end** a call, press Power/End .

Cool content & more

Surf the web for cool content and more (see “Web” on page 29). An optional microSD memory card can be installed in your phone—you can load it up with music, photos, and videos from your computer (see “Memory card & file transfer” on page 38).

Keys

a few essentials

Menu navigation

- 1 From the home screen, press **Menu** (right soft key) to open the app menu.



Tip: You can also press the center Select key  to open the app menu.

- 2 Press the Navigation key  up, down, left, or right to scroll and highlight a menu option.



- 3 Press  to select the highlighted option.



Shortcut keys

From the home screen, press , up, down, left, or right to quickly open **Media player**, **Alarm**, **User profiles**, or **Tone settings**.

To change your shortcut keys, press  >  **Settings** > **Phone settings** > **Dedicated key**.

Adjust volume

Press  up or down to change the ring volume for an incoming call, or the earpiece volume during a call.


When playing music or video files, press  up or down to adjust playback volume.

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Power/End  from a menu. It's basically like this:

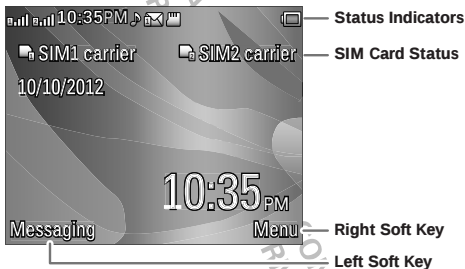

Note: Your home screen might look a little different.

App menu

All the apps on your phone are shown in your *app menu*.

To open the app menu from the home screen, press **Menu** (right soft key) or . Press  up, down, left, or right to highlight an app, then press  to select it. You can press Power/End  to return to the home screen at any time.

Phone status & notifications


The status bar at the top of the screen contains icons that tell you about messages and phone status.

status indicators			
	Signal Strength		General Profile
	Active Call		Meeting Profile
	Phone Lock		Outdoor Profile
	Alarm		Headset
	Roaming Service		Bluetooth™
	New Messages		Battery

Calls

it's good to talk

In-call options

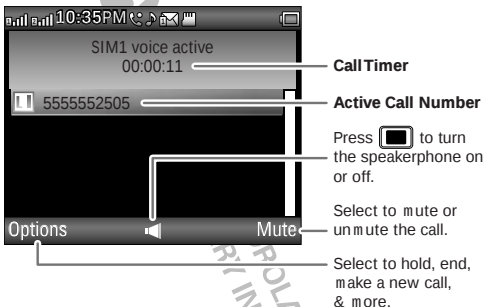

Note: If two SIM cards are activated, choose which SIM card you want to use to make a call.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Redial

Find it:  >  **Call center > Call history > SIM1 call history or SIM2 call history**

Highlight the number you want to call, and press Call .

Save a contact

- 1** Enter a number in the home screen.
- 2** Press **Options > Save to Phonebook > Add new contact or Replace existing.**
- 3** Enter contact details and press **Done**, then **Yes**.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Enter the emergency number in the home screen.
- 2 Press Call  to call the emergency number.

Cool down


In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

Contacts

contacts like you've never had before

Quick start: Contacts

Find it:  >  Phonebook

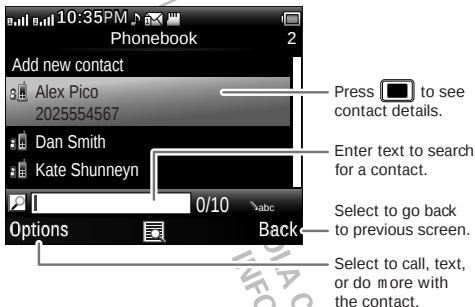

Tip: To see more contacts, press  up or down.

Create contacts

Find it:  >  Phonebook > Add new contact

Enter the contact name and details. When you're finished, press **Done** > **Yes** to save.

Call contacts

Highlight a contact, then press Call .

Tip: Press  up or down to scroll to a contact, then press Call .



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Messaging

sometimes it's best to text or email...

Create & send messages

Find it:  >  **Messaging > Write message**

Use the keypad to enter your message. Press **Options** to insert a picture, sound, or video.

When you finish composing the message, press **Options > Send to**, then:

- To enter a phone number, select **Enter recipient**, type the number, then press **Options > Done**.
- To enter a contact, select **Add from Phonebook**.

To send the message, press **Options > Send**.

Note: If two SIM cards are activated, choose which SIM card you want to use.

Receive a message

When you receive a message, your phone plays an alert and shows the new message indicator  at the top of the screen.

To read the new message, press **View**.

To read messages stored in your inbox, press  **Messaging > Inbox**.

Email

Set up an account

Find it:  >  **Messaging > Email**
> **Email accounts**, press **Options > New account**
> **Yes**

The email setup wizard will guide you through setting up your email account.

Create a new email

Find it:  >  **Messaging > Email > Write Email**

Use the keypad to enter a subject and enter your message, then press **Options > Send**.

Text entry

think keyboard, now think smaller

Use the keypad to enter text and create messages or notes. Indicators at the top left of the text screen show the current text entry mode.

To...	
Enter symbols chosen from a list	Press Symbols 
Enter alternate characters at the top of the keys	Press Alternate 
Enter only alternate characters, until you press Alternate  again	Press Alternate  twice
Enter one capital letter	Press Shift 
Enter only capital letters, until you press Shift  again	Press Shift  twice
Delete characters to the left of the cursor	Press Delete 
Start a new line	Press Enter 

To **change** the keypad text entry mode, press **Options**
> **Input method**:

entry modes	
abc	Enter letters in the text field.
Numeric	Enter numbers in the text field.
Insert symbol	Select a symbol to insert.

Tips & tricks

a few handy hints

To...	
Return to home screen	Press Power/End  .
See recent incoming & outgoing calls	Press  >  Call center > Call history .
Create a new contact in your phonebook	Enter a phone number, press Options > Save to Phonebook .
Adjust sound volume	Press  up or down.
Set app menu style	View the app menu as a Matrix or List : Press  >  Settings > Phone settings > Display > Main menu style .

Battery tips

Want to extend your battery life? Try these:

- Turn off Bluetooth™ power: Press 
>  **Settings** > **Connectivity** > **Bluetooth** > **Power**.
- Reduce the time your phone display stays on:
Press  >  **Settings** > **Phone settings**
> **Misc. settings** > **LCD backlight**, and set **Time (sec)**
to a lower setting.

DRAFT - MOTOROLA CONFIDENTIAL
PROPRIETARY INFORMATION


Music

when music is what you need...

Quick start: Media player

Just open your media player and select a playlist.

Find it:  >  **Multimedia > Media player**
> **Playlists**

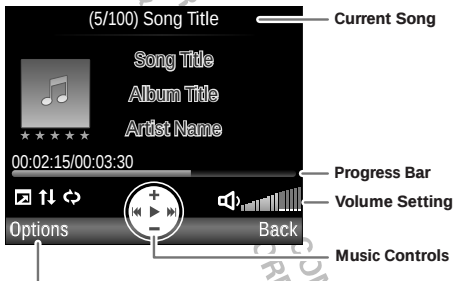

Select to view song/playlist details, change settings, or exit media player.

Media player controls

controls	
play/pause	Press  .
previous/next	Press  left/right.
fast forward/rewind	Press and hold  left/right.
volume	Press  up/down.

To set **Shuffle**, **Repeat**, and more, press **Options**
> **Settings** > **Player settings**.

Get music

You can transfer music from your computer to your phone using a USB connection. See “USB drag & drop” on page 38.

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

Playlists

To **create** a new playlist, press  > **Multimedia**
> **Media player** > **Playlists**, then press **Options**
> **New**.

To **add** a song or video to a playlist, open it and press **Options** > **Add**.

To **delete** or **rename** a playlist, highlight it and press **Options**.

Hide and turn off

Press Power/End  to use another app. Your media continues to play. If you use **Fun & Games** or **FM radio** the media player is turned off.

To turn off your media, press  >  **Multimedia**
> **Media player** > **Now playing**, then press **Options**
> **Exit**.

Radio

news and music on the go

Listen to news and music anywhere, for free.

Find it:  >  **FM radio**

Note: The FM radio only works when a headset is plugged in.

Radio controls

controls	
tune stations	Press  left/right.
volume	Press  up/down.
turn off radio	Press Power/End  twice.

Radio presets

To **auto search and save** preset stations, press **Options** > **Auto search**.

To **manually save** preset stations, press **Options** > **Channel list**, highlight an empty preset location and press **Options** > **Edit**, then enter the **Channel name** and **Frequency**.

To **go to** a preset station, press the channel number. Alternatively, you can press **Options** > **Channel list**, highlight the channel number, and press **Options** > **Play**.

Photos

see it, capture it, share it!

Take & share photos

Take that family photo, and send it to everyone.

Find it:  >  **Camera**

Your phone shows the camera viewfinder.

Press  left/right to increase/decrease exposure.



Press  up/down to zoom in/out.

Press  to take a photo.

Select to return to the home screen.

Select to switch to photo album or video recorder, or to adjust camera settings.

Note: Image size is 2 MP, unless you change it.

To take the photo, press . Your phone saves the photo, and shows the photo in the screen.

Press , then:

- To **send** the photo in a message, email, or over a Bluetooth™ connection, select **Forward**.
- To **edit** the photo, select **Photo editor**.
- To **delete** the photo and return to the viewfinder, select **Delete**.

To **see photos** you've taken, go to the camera viewfinder screen and press , then select **Switch to > Photo album**.

To **record a video**, go to the camera viewfinder screen and press , then select **Switch to > Video recorder**.

Web

surf the web with your phone

Note: To use the browser, you must have data service activated for your account (additional fees may apply for this service).

Use your phone's browser to surf your favorite web sites, upload videos to a video blog, and download files and applications to your phone. Log onto your internet-based email account to check your email.

Find it:  >  **Internet > Internet service**

To...	
Go to your home page	Select Homepage .
Go to a web page	Select Input address .
Bookmark a web page	Press Options > Add to Bookmarks .
Go to a link on a web page	Select the link.

Note: If you can't connect, contact your service provider.

Personalize

add your personal touch

Profiles

Your phone has different profiles. You can customize ringtones, alerts, and volumes for each profile.

Find it:  >  **User profiles**

You can select these profiles:

profiles	
General	Standard profile default setting.
Silent	Ringtone is off, vibrate is off.
Outdoor	Ringtone and key tone volume are set to maximum.
Indoor	Ringtone is on, vibrate is off.
Vibration	Vibrate is on.
Headset	Adjust profile settings for when a wired headset is plugged into your phone.
Bluetooth	Adjust profile settings for when a Bluetooth™ headset is connected to your phone.

To **change** a profile's settings, press **Options**
> **Customize**. You can adjust these settings:

settings	
Tone settings	Set ringtones for incoming calls (for each SIM card), messages, key tones, and other events.
Volume	Set the volume for ringtones and key tones.
Alert type	Set to Ring only , Vib. only , Vib. and ring , Vib. then ring , or Silent .
Ring type	Set to Single , Repeat , or Ascending .
Extra tone	Play an extra tone for Warning , Error , Camp on , and Connect .
Answer options	Set to answer calls by pressing any key.

Display settings

To set display options such as wallpaper and home screen appearance, press  >  **Settings**
> **Phone settings** > **Display**.

Date & time

Set date, time, time zone, and formats:

Find it:  >  **Settings > Phone settings
> Time and date**

Language

Set menu language:

Find it:  >  **Settings > Phone settings
> Language**

Manage your life

stay on top of things

Calendar

Find it:  >  **Tools > Calendar**

To view your calendar in different ways, press **Options** > **Jump to date** or **Go to weekly view**.

Add calendar events

From any calendar view, press **Options** > **Add event** > **Reminder**, **Meeting** or **Course**. Enter event details and press **Options** > **Done** > **Yes**.

Edit calendar events

To edit an event, press **Options** > **View** > **Options** > **Edit**. Edit event details, then when you're done, press **Done** > **Yes**.

Tasks

Find it:  >  **Tools > Tasks**

To add a task, press **Add** > **Date**, **Call**, or **Anniversary**.

Alarm

Find it:  >  **Tools > Alarm**

To turn on an alarm, highlight it and press , scroll to **On** and press .

When an alarm sounds, press **Stop** to turn it off or **Snooze** to delay.

To set a snooze period, highlight the alarm, then press **Edit > Snooze (min)**.

To set FM radio as your alarm, highlight the alarm, then press **Edit > Alarm tone > FM radio**.

Calculator & currency convertor

Find it:  >  **Tools > Calculator or Currency convertor**

File manager

Find it:  >  **File manager**

Select **Phone** or **Memory card**, then select **Open** to view your folders. Press **Options** to **Open**, create **New folder**, **Rename**, **Delete**, and more.

Airplane mode

Use airplane mode to turn off all your wireless connections—useful when flying.

Find it:  >  **Settings** > **Dual SIM settings**
> **Flight mode**

Note: When you select airplane mode, all wireless services are disabled. You can then turn Bluetooth™ back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode. Emergency calls to your region's emergency number (e.g., 911) can still be made.

Bluetooth™ wireless

lose the wires and go wireless

Turn Bluetooth power on or off

Find it:  >  **Settings > Connectivity > Bluetooth > Power**

When Bluetooth power is on, the Bluetooth indicator  appears in the home screen.

Note: To extend battery life, turn off Bluetooth power when not in use.

Connect new devices

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, see “Reconnect devices” on page 37.

- 1 Make sure the device you are pairing with is in discoverable mode (see device instructions).
- 2 Press  >  **Settings > Connectivity > Bluetooth > My device > Search new device.**

Note: If Bluetooth power is not turned on, your phone will ask if you want to **Power on Bluetooth first?** Press **Yes**.

- 3 Your phone lists the devices it finds within range. Highlight a device and press  to connect.

4 If necessary, enter the device passkey (like **0000**) to connect to the device.

Tip: For specific information about a device, check the instructions that came with it. For more Bluetooth support, go to www.motorola.com/Bluetoothsupport.

For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Reconnect devices

To **automatically reconnect** your phone with a paired device, simply turn on the device.

To **manually reconnect** your phone with a paired device, select the device name in the **My device** list.

Disconnect devices

To **automatically disconnect** your phone from a paired device, simply turn off the device.

To **manually disconnect** your phone from a paired device, select the device name in the **My device** list.

Memory card & file transfer

load music, photos, and more on your phone

microSD Memory card

To **format** your memory card, press 

>  **File manager** > **Memory card** > **Format**.

Warning: When you format a memory card, all data on the card is deleted.

To **see files** stored on your memory card, press 

>  **File manager** > **Memory card** > **Open**.

To **copy** or **move** a file from your phone to your memory card:

- 1 Press  >  **File manager** > **Phone** > **Open**.
- 2 Select the file, then select **Copy** or **Move**.
- 3 Select **Memory card** > **Open**.
- 4 Scroll to the destination folder and press **Options** > **Select**.

USB drag & drop

Note: This feature requires an optional accessory.

You can drag & drop your pictures, videos, music, and more from your computer to your phone's memory card.

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

Note: When your phone is connected to a computer, it cannot be used for anything else, including making emergency calls. To restore the phone to normal use, disconnect it from the computer.

- 1 With a memory card inserted and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer.
- 2 Your phone shows a **USB config** dialog. Scroll to **Mass storage** and press **OK**. You can't use the files on your memory card while it is connected.
- 3 On your computer, use the “My Computer” window to find “Removable Disk.”
- 4 Click on the “Removable Disk” icon to access the memory card.
- 5 Drag & drop files between your computer and memory card folders.
- 6 When you're done, use the “Safely Remove Hardware” feature to finish.



Security

help keep your phone safe

Codes & passwords

Your SIM card **PIN** code is originally set to **1234**. If your service provider didn't change the PIN code, you should change it.

Find it:  >  **Settings** > **Security settings**
> **SIM1 security settings** or **SIM2 security settings**
> **Change password**

If you forget your SIM card PIN code: If you forget your PIN code, try entering **1234**. If that doesn't work, contact your service provider.

Lock your SIM

You can lock your SIM card to keep others from using it. You'll need to enter your SIM card PIN code to lock or unlock the SIM card.

Find it:  >  **Settings** > **Security settings**
> **SIM1 security settings** or **SIM2 security settings**
> **SIM lock**

Lock keypad

You can lock your phone's keypad and keys to prevent unwanted phone operations.

Find it:  >  **Settings** > **Security settings**
> **Auto keypad lock** > **None, 5 sec, 30 sec, 1 min, or 5 min**

Your phone automatically locks the keypad and keys when no activity is detected for the specified interval.

To **unlock** the keypad and keys, press **Unlock** then Space .

Troubleshooting

we're here to help

Crash recovery

In the unlikely event that your phone stops responding to key presses, try a quick reset. Remove the back cover and battery (“Assemble & charge” on page 5), then replace and turn on your phone as usual.

Reset

Reset default factory settings on your phone.

Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including pictures, videos, and music files) stored in your phone's memory. After you erase the information, you can't recover it. This option does not delete SIM card or memory card information.

Find it:  >  **Settings**
> **Restore factory settings**, then enter “1234”

Service & Repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 0800 666 8676 (Argentina), 800-201-442 (Chile), 01-800-700-1504 (Colombia), 01 800 021 0000 (México), 0800-100-4289 (Venezuela), or 0-800-52-470 (Perú).

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come in contact with water.*** Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** High temperatures can cause the battery to swell, leak, or malfunction.
- **Don't dry a wet or damp battery with an appliance or heat source,** such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.**

*** Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- During charging, keep your battery and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the "Smart Practices While Driving" in this guide and at www.motorola.com/callsmart (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.



To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.

Symbol	Definition
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	For indoor use only.
	Listening at full volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least **1.5** centimeters from your body when transmitting.
- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- **ALWAYS** keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- **DO NOT** carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 1.35 W/kg, and when worn on the

body, as described in this guide, is 1.02 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

Specific Absorption Rate (ICNIRP)

Your model wireless phone meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves recommended by international guidelines.

These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health, and to account for any variations in measurements.

The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The ICNIRP SAR limit for mobile devices used by the general public is 2 watts per kilogram (W/kg), and the highest SAR value for this mobile device when tested at the ear is 0.822 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide. In this case, the highest tested SAR value is 0.745 W/kg. The tests are carried out in accordance with international guidelines for testing. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

As SAR is measured utilizing the mobile device's highest transmitting power, the actual SAR of this mobile device while operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do so by limiting the length of calls or using a handsfree device to keep the mobile device away from the head and body.

Additional Information can be found on the Web sites of the World Health Organization (<http://www.who.int/emf>) or Motorola Mobility, Inc. (<http://www.motorola.com/rfhealth>).

Information from the World Health Organization

"A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established for mobile phone use."

Source: WHO Fact Sheet 193


Further information: <http://www.who.int/emf>

European Union Directives Conformance Statement

CE 0168

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

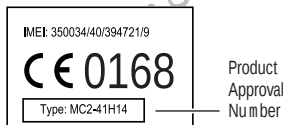

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.

- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be

shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.



extreme heat or cold

Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F). Don't recharge your mobile device in temperatures below 0°C (32°F) or above 45°C (113°F).



microwaves

Don't try to dry your mobile device in a microwave oven.



dust and dirt

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



shock and vibration

Don't drop your mobile device.



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling



Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by

implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Latin America Warranty, Except Mexico

Latin America Warranty Motorola Mobility Inc. Subscribers/Cellular Division

Through its own service centers and/or its authorized service centers, Motorola provides a 1-year warranty that covers the cellular phone, all its parts and labor against any defect and operation as long as the "Product" has been operated and handled under normal conditions. The term of 1 year begins when the "Product" is purchased.

Conditions

1. For warranty service, return the "Product" and this warranty to the place of purchase or to any Motorola authorized service center.
If additional information is needed, please contact any of our service centers:

Motorola Comercial, S.A. de C.V.
Bosques Alisos No. 125
Bosques de las Lomas
CP 05120 México, D.F.
Telephone: 257-6700

Motorola Industrial Ltda.
Av. Chedid Jafet
222-Bloco D-1º Andar
Vila Olimpia 04551-065
Sao Paulo, Brazil
Telephone: 0800-773 1244

Motorola Mobility Colombia S.A.S.
Carrera 7 7152
Torre B Piso 13 Oficina 1301
Torre del Banco Ganadero
Santa Fe de Bogotá, Colombia
Telephone: 01800 700 1504

If the cellular phone has been installed in a vehicle, take the vehicle to the service center to analyze the equipment, or the installation on the vehicle. This warranty does not cover the installation of the cellular phone.

2. Motorola Mobility Inc., through its own service centers and/or their authorized service centers, will repair or replace the cellular phone at no charge. This warranty covers shipping expenses, only if it is needed to make the repair. Motorola Mobility Inc. through its own service centers and/or their authorized service centers, at its own discretion, will repair, replace, or reimburse the purchase price of the defective cellular phone only during the warranty period, as long as the "Product," in accordance with the conditions established in this warranty, is returned to a Motorola service center or to a Motorola authorized service center. All the accessories, batteries, parts, small boards or equipment of the cellular telephone that by virtue of being defective are replaced in fulfillment of this warranty, will automatically become property of Motorola Mobility, Inc.
3. To receive warranty service, present your cellular phone or accessory to any Motorola service center or Motorola authorized service center, along with your receipt of purchase or comparable substitute that indicates the date of purchase, serial number of the transceiver, and/or electronic serial number.
4. The repair time will not be greater than 30 days, starting from the day the

- equipment was received at the service center.
5. To purchase parts, spare parts, accessories and service not covered by this warranty, contact one of the service centers listed in section 1, or any authorized service center in your locality.
 6. This warranty is not valid in the following cases:
 - Defects or damages derived from abnormal use.
 - Defects or damages derived from accident or negligence.
 - Defects or damages derived from tests, unsuitable operation, maintenance, installation and adjustments, or derived from any alteration or modification of any type.
 - Damage caused to antennas, unless they are consequences of defects in material or workmanship.
 - When the cellular phone has been disassembled and/or repaired so that its operation has been affected or that it can not be tested to verify any claim that grants this warranty.
 - Any cellular phone with a serial number that has been removed, altered, or obliterated.
 - Defects or damages caused by food spills or liquids.
 - When the cables of the control unit have been stretched or the module tongue-piece has broken.
 - When the surface of the "Product" and its pieces have been scratched or damaged due to normal use.
 - Leather cases.
 - Rented cellular phones.
 - When the "Product" has been altered or repaired by non-Motorola authorized service centers.
 - When the "Product" has not been operated in agreement with the instructions that accompany the "Product."
 7. The batteries (Nickel-Cadmium) are warranted only if their capacity is reduced by 80% below its predicted capacity. This warranty is null for all types of batteries if:
 - The batteries are charged by a charger that has not been approved by Motorola.
 - Any of the battery seals are broken or tampered with.
 - The batteries were used or installed in non-Motorola equipment.

"Product":
Brand: Motorola Model:
Number of Mechanical Series:
Number of Electronic Series:
Name of Distributor:
Street and Number:
Town:
Municipality:
Postal Code, City, State, or Country:
Telephone:
Date of Delivery or Installation:

Limited Warranty (Mexico)

For Motorola personal communication products and accessories purchased in Mexico

I. Concepts Covered by this Warranty

This warranty covers all the parts, components, accessories and labor of the Motorola "Product" from defects in materials and workmanship under normal consumer usage.

The Motorola "Products" that are protected under this warranty can be: (a) cellular telephones, (b) radar sets, (c) two-way radios, and (d) wireless telephones.

Motorola Comercial, S.A. de C.V., at its option, will at no charge repair, replace, or refund the purchase price of any "Product" that does not conform to this warranty.

Motorola may use functionally equivalent reconditioned/refurbished/pre-owned or new products, accessories, or parts. Updates in software are not covered.

II. Length of Warranty Coverage

The length of coverage is one (1) year from the date the new "Product" was purchased from an authorized distributor.

III. Place where consumers can make the warranty effective, obtain parts, components, and accessories

Motorola Comercial, S.A. de C.V.

Bosques de Alisos 125

Col. Bosques de las Lomas

Del. Cuajimalpa

Te:(55) 5257-6700

IV. Procedure to Make the Warranty Effective

For warranty service, return the "Product" (with its components and accessories, such as batteries, antennas, and charger) to the place of purchase, to the address above, or to an authorized service center, or call 01 800 021 0000. To request a refund, you must present this warranty, sealed by the place of purchase, along with the "Product."

V. Warranty Limitations or Exceptions

The warranty is not valid when:

- The "Product" has been used in conditions different from the normal ones.
- The "Product" has not been operated as described in the operating instructions.)
- The "Product" has been altered or repaired by someone other than Motorola, or its authorized service centers.

If repairs are not covered by this warranty, Motorola, at the request of the purchaser, will provide information regarding availability, prices, and other conditions for the repair of the "Product."

To obtain information on products that need repairs not covered by this warranty, please call 01 800 021 0000.

Product Model:	Date of Purchase:
Seal of the authorized or established distributor where the "Product" was purchased:	

Note: In other countries, consult the laws and local regulations under the warranty and its local Motorola office.

Copyright & Trademarks

Motorola Mobility Argentina S.A.

Suipacha 1111 - Piso 18

C1008AAW Buenos Aires

ARGENTINA

www.motorola.com

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply.

Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. All other product or service names are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Product ID: MOTOKEY™ MINI (EX109)

Manual Number: 68014823001-A

