

MOTOROLA **FIRE**[™]

XT311/XT316

LIFE.  POWERED.

Congratulations

MOTOROLA FIRE™

Your MOTOROLA **FIRE** phone is loaded with features, including videos, music, Web access, a powerful set of business tools, and more—all in a stylish phone design.

- **Mobile video:** Record and watch videos, download or stream videos to watch on your phone.
- **Photos:** Take and share great photos with a high performance camera.
- **Web:** Get more from the Web, with support for Adobe® Flash® Player. Search, browse, everything you want to do, all made easier.

Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information at the back of this guide.

want More?

- **Support:** Phone updates, PC software, online help and more at www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

Your phone

the important keys & connectors



Note: Your phone can only use an OMTP headset.

Note: Your phone might look a little different.

Contents

Let's go	5
Touchscreen & keys.	8
Home screen	13
Calls	17
Contacts	22
Messaging	24
Te entry	28
Tips & tricks.	30
Web	33
Location	35
Photos & videos.	38
Music	40
personalize	43
Connections	46
Security	52
Troubleshooting	54
Safety, Regulatory & Legal	55

Let's go

let's get you up and running

Assemble & charge

1 Cover off



2 SIM in



3 microSD in (may already be inserted)



4 Battery in



5 Cover on



6 Charge up



Caution: Please read “**Battery Use & Safety**” on page 55.

Tip: To save battery life, see “**Battery tips**” on page 31.

Turn it on & off

To turn on your phone, press Power  (on the top left).

To turn off your phone, press and hold Power , then touch **Power off**.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

Unlock

To unlock your phone, touch the unlock icon  and drag it to the right.

Sounds off & on

To turn phone sounds off, touch the sound icon  and drag it to the left.

Wi-Fi™ connect

You can use a Wi-Fi™ connection for even faster Internet access. Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**. Touch **Wi-Fi** to turn it on and search for nearby wireless networks. Touch a network to connect. There's more in "**Wi-Fi Networks**" on page 49.

Touchscreen & keys

Touchscreen on/off

a few essentials

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power .
- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To let the touchscreen adjust brightness automatically, touch Menu  > **Settings** > **Display** > **Brightness** and check **Automatic brightness**.

Touch tips

Here are some tips on how to navigate around your phone.


Touch

To choose an icon or option, *touch* it.



Touch & hold


To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  >  **Contacts**, then touch and hold a contact to open options.

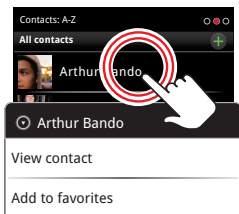

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  >  **Contacts**, then drag your **Contacts** list up or down.

Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.

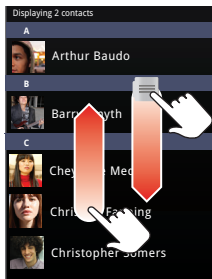

Flick


To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

Pinch-to-zoom

Get a closer look at maps, web pages, or photos. To zoom in, *touch* the screen with two fingers and then slide them apart. To zoom out, *drag* your fingers together.

Pinch to zoom out.

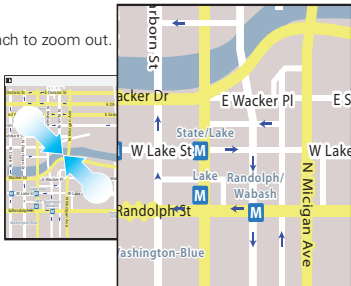

Key tips

Menu, home, back & search

Menu Key 

Touch to open menu options.

Search Key 

Touch for text search.

Home Key 

Back Key 



Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold Home  to show the last few apps you used, then touch an app to open it.

Touch Search  for text search.

Touch Menu  to open menu options, or touch Back  to go back.

Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power . To wake up the touchscreen, just press Power  again.

To change how long your phone waits before the screen goes to sleep automatically, touch Menu  > **Settings** > **Display** > **Screen timeout**.

Power key menu

Press and hold Power  to open the power key menu, where you can turn off the phone (**Power off**), or turn **Silent mode** or **Flight Mode** on or off.

Adjust volume

Press the volume keys to change the ringer volume (in the home screen), or the earpiece volume (during a call).



Rotate the screen

The touchscreen can spin to stay right-side up when you rotate your phone:


Find it: Menu  > **Settings** > **Display**
> **Auto-rotate screen**

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

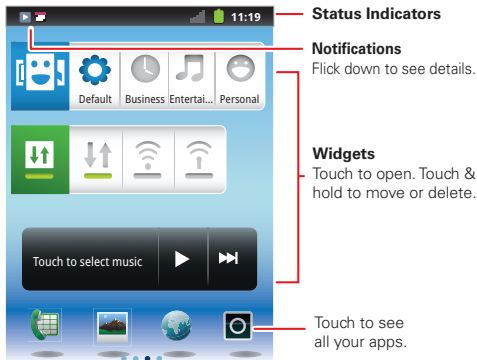

Use the widgets, shortcuts, and panels to show what's important to you—whether it's home, work or play.

Use & change your home screen

On your home screen, *shortcuts* are icons that open your favorite apps, web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.

Click the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Touch Home  to return to the home screen.

Tip: When you open a widget, touch Menu  to show any options or settings.

- To **add** something or change your **wallpaper**, touch and hold an empty spot until you see the **Add to Home screen** menu.

You can add a folder to organize your shortcuts.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the bottom of the screen.

App menu

Quick start: App menu

The app menu shows you all of your applications. To open it from the home screen, touch .



Flick up and down to see all of your apps. Any new apps that you download are added to the app menu.

To close the app menu, touch Home  or Back .

Running multiple apps

No need to close an app before opening another one. Your phone runs multiple apps, all at once.



You can open a new app while running another. Touch Home  to return to the home screen, touch  to open the main menu, then touch the app you want. To switch from one running app to another, touch and hold Home  to see what apps are already open, then touch the one you want.

Search

To search, touch Search  on the front of the phone, or touch the search widget in the app menu.

Phone status & notifications

At the top of the screen, icons on the left notify you about new messages or events (notifications). Icons on the right tell you about phone status. Flick the bar down to show notification details.

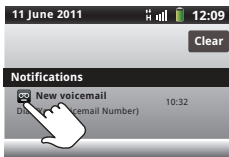

	voicemail message		USB connection
	Bluetooth™ active		Bluetooth connected
	Wi-Fi™ active		flight Mode
	vibrate mode		silent mode
	mute call		speakerphone active
	firewall active		alarm set
	battery (full charge)		battery (charging)

Calls

it's good to talk

Quick start: Calls

From the home screen, touch  **Phone**.




Open your **Contacts**, **Call Log** (recent calls), or **Favorites**, then touch an entry to call.

Delete

Hide the dialer to show a list of both recent calls and **Contacts**.

Call

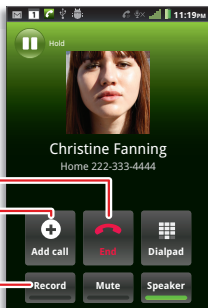

Hang up.

Start a conference call.

Start & stop recording (stored in a file on your memory card).

Note: Recording of calls is subject to varying State and Federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

- To **make** a call, touch , enter a number, then touch .

When dialing, touch Menu  to add a **pause** (pauses two seconds), or **wait** (waits for your confirmation). To enter the **international** dialing code, touch and hold .

- To **answer** a call, drag  to the right.
- **During** a call, touch Menu  to switch to a Bluetooth headset. Touch Home  or Back  to hide the active call display (to reopen it, touch .

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

- To **end** a call, touch .
- To **ignore** a call, drag  to the left.

Tip: Touch  **Phone** > **Favorites**, then touch Menu  to edit your **Favorites**.

Recent calls

To show recent calls, touch  **Phone** > **Call log**