


ADXV DAS LPR User Manual

Version 0.1

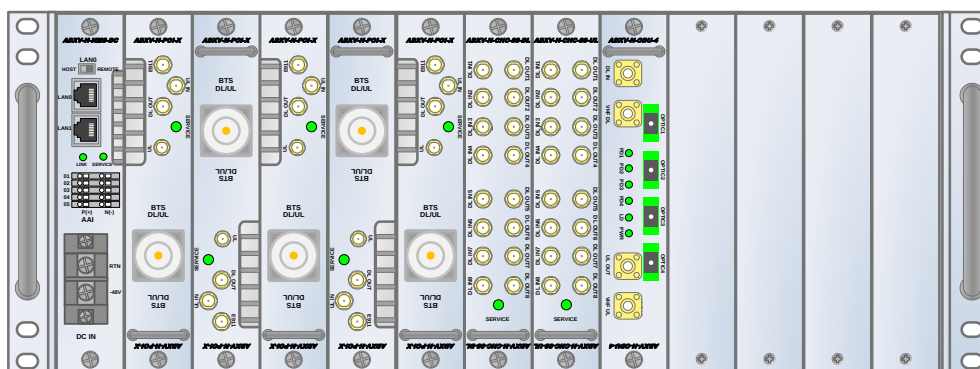

3116 West Vanowen St.
Burbank, CA 91505
Tel: 818-840-8131
Fax: 818-840-8138
www.adrftech.com

Information in this document is subject to change without notice.

***Advanced RF Technologies, Inc. 1996-2015.
All rights reserved.***

- Please send comments to:

E-Mail: info@adrftech.com

Phone: (818) 840-8131

(800) 313-9345

Fax: (818) 840-8138

- Address:

Advanced RF Technologies, Inc.
Attention: Technical Publications Department
3116 Vanowen St.
Burbank, CA 91505
USA
www.adrftech.com

Revision History

Version	Author	Descriptions	Date
0.1	BY Park	Initial Release	01/26/2024

Change List

Version	Change list	Contents

Table of Contents

1.	Introduction	10
1.1	Highlights	10
1.2	ADXV DAS Quick View	11
1.2.1	HE Quick View	11
1.2.2	HUB-LPR Quick View	12
1.3	Warnings and Hazards	13
2.	Block Diagram	17
2.1	ADXV DAS LPR Block Diagram	17
2.2	ADXV DAS LPR Scalability	17
3.	ADXv Overview	18
3.1	Head End	18
3.1.1	NMS (Network Management System)	19
3.1.1.1	LEDs	20
3.1.1.2	AAI (only for DC type)	20
3.1.1.3	Ethernet Port	21
3.1.1.4	Host/Remote Switch	21
3.1.1.5	Power Connection	22
3.1.1.6	POI (ADXV-H-POI-x)	23
3.1.1.7	POI (ADXV-H-POI-N77x)	23
3.1.2	POIL (ADXV-H-POIL-x)	24
3.1.3	POIL-VU (ADXV-H-POIL-VU)	26
3.1.3.1	LED	26
3.1.3.2	RF Ports	27
3.1.4	Channel Combiner (CHC, ADXV-H-CHC)	27
3.1.5	Channel Combiner (CHC, ADXV-H-CHC-X)	27
3.1.5.1	RF ports	28
3.1.6	Optical Donor Unit (ODU(ODU-X), ADXV-H-ODU-4(ADXV-H-ODU-4X)	28
3.1.6.1	LED	29
3.1.6.2	RF Ports	29
3.1.6.3	Optic Ports	30
3.2	ADXV-L-HUB-4-AC	31
3.2.1	Port	32
3.2.2	LED	32
3.3	LPR Unit	33
3.3.1	ADXV-L-23N77HM-P	33
3.3.1.1	Port	34
3.3.1.2	LED	34

3.3.2	ADXV-L-23N77LM-S	35
3.3.2.1	Port	36
3.3.2.2	LED	36
3.3.3	ADXV-L-20PAWBT-P	37
3.3.3.1	Port	38
3.3.3.2	LED	38
3.3.4	ADXV-L-1767S8C-S.....	39
3.3.4.1	Port	40
3.3.4.2	LED	40
4.	Cable Connection	41
4.1	Head End Connection Diagrams	41
4.2	LPR Unit Connection Diagrams	41
5.	Mounting method.....	42
5.1	Head End.....	42
5.1.1	Rack Mount	42
5.2	LPR	43
5.2.1	Wall Mount.....	43
6.	Installation	44
6.1	Pre-Installation Inspection	44
6.2	ADXV DAS Installation Procedure	44
6.2.1	HE Installation Procedure	44
6.2.1.1	Installing a ADXV DAS HE in a rack.....	44
6.2.2	LPR Installation Procedure	46
6.2.3	RF coaxial cable and antenna connection	48
6.3	Grounding	48
6.4	Optic Port Cleaning.....	48
7.	Web-GUI	50
7.1	Web-GUI Setup	50
7.1.1	DAS system/PC Connection Using Web-GUI	50
7.2	Administrator/User Mode	51
7.2.1	Common	51
7.2.1.1	Navigation Tree.....	51
7.2.1.2	Power Status.....	51
7.2.1.3	Commissioning Status.....	51
7.2.1.4	Information.....	51
7.2.2	Status Tab	53
7.2.2.1	Status – NMS	53
7.2.3	System	56
7.2.3.1	System: Account	56

7.2.3.2	System: Logs	57
7.2.3.3	System: Update.....	58
7.2.4	Help	59
7.2.5	Logout.....	59
7.3	Guest Mode	59
8.	System Specification	60
8.1	ADXV-L-HUB-4-AC Specifications	60
	ADXV-L-HUB-4-AC Optical Specifications	61
	ADXV-L-HUB-4-AC Mechanical & Power Specifications	61
8.2	ADXV-LPR Specifications	62
9.	Mechanical Drawing	64
9.1	HE.....	64
9.2	ADXV-L-HUB-4-AC	65
9.3	ADXV-L-23N77HM-P	66
9.4	ADXV-L-23N77LM-S	67
9.5	ADXV-L-20PAWBT-P	68
9.6	ADXV-L-1767S8C-S	69

Figures

Figure 1-1	ADXV DAS HE Quick View (Front and Rear)	11
Figure 1-2	ADXV DAS HUB-LPR Quick View (Front and Side)	13
Figure 2-1	ADXV DAS LPR Block Diagram	17
Figure 3-1	Head End Front View	18
Figure 3-2	ADXV-H-NMS-DC Front View	19
Figure 3-3	ADXV-H-NMS-AC Front View	20
Figure 3-4	NMS LED	20
Figure 3-5	NMS AAI	21
Figure 3-6	Ethernet Port	21
Figure 3-7	Host/Remote Switch	22
Figure 3-8	POI front View	23
Figure 3-9	POI-N77x front View	24
Figure 3-10	POIL front View	25
Figure 3-11	POIL-VU front View	26
Figure 3-12	POI LED	26
Figure 3-13	ADXV-H-CHC Front View	27
Figure 3-14	ADXV-H-CHC-X Front View	28
Figure 3-15	ADXV-H-ODU-4(ADXV-H-ODU-4-X) Front view	29
Figure 3-16	ADXV-H-ODU-4(ADXV-H-ODU-4-X) LED	29
Figure 3-17	ODU(ODU-X) RF Ports	30
Figure 3-18	ODU Optic Ports	30
Figure 3-19	ADXV-L-HUB-4-AC LPR HUB Front and Side View	31
Figure 4-1	HE Cable connection (4 ADXV-H-POIs, 2 ADXV-H-ODUs)	41
Figure 4-2	LPR Unit Cable Connection	41
Figure 5-1	HE Rack Mount (Front & Rear view)	42
Figure 5-2	LPR Wall Mount Front and Side View	43
Figure 6-1	HE Installation Procedure	45
Figure 6-2	LPR Installation Procedure	47
Figure 6-3	HE Ground Cable Connection, Protective Earthing Conductor (HE chassis rear side)	48
Figure 7-1	Login screen	50
Figure 7-2	ADXV DAS General Information	52
Figure 7-3	SNMP (Install – NMS)	53
Figure 7-4	Location Setting (Install – NMS)	54
Figure 7-5	External Modem Box Setting (Install – NMS)	54
Figure 7-6	Description (Install – NMS)	54
Figure 7-7	SNMP Agent False Alarm Test (Install – NMS)	55
Figure 7-8	Location Info / Installer Info (Install – NMS)	55
Figure 7-9	Date & Time Setting (Install – NMS)	56
Figure 7-10	Description (Install-Remote Module)	56
Figure 7-11	Account Management	56
Figure 7-12	New Account	57
Figure 7-13	Change Password	57
Figure 7-14	User Log	58
Figure 7-15	System update	58
Figure 7-16	Message after System update is complete	58
Figure 7-17	Help	59
Figure 9-1	HE Drawing	64
Figure 9-2	ADXV-L-HUB-4-AC Drawing	65
Figure 9-3	ADXV-L-23N77HM-P Drawing	66
Figure 9-4	ADXV-L-23N77LM-S Drawing	67

Tables

Table 2-1	ADXV-DAS Scalability	17
Table 3-1	NMS LED Specifications	20
Table 3-2	NMS AAI Specifications	21
Table 3-3	POI LED Specifications	26
Table 3-4	POI RF port.....	27
Table 3-5	ODU LED Specifications	29
Table 7-1	Account Information for Login	50
Table 7-2	Navigation tree	51
Table 7-3	Power Supply Status	51
Table 7-4	Commissioning ICON	51
Table 7-5	System Summary Description	53

Terms and Abbreviations

The following is a list of abbreviations and terms used throughout this document.

Abbreviation/Term	Definition
AGC	Automatic Gain Control
ALC	Automatic Level Control
AROMS	ADRF' Repeater Operation and Management System
BCU	Band Combiner Unit
BTS	Base Transceiver Station
CDMA	Code Division Multiple Access
CHC	Channel combiner
CW	Continuous Wave (un-modulated signal)
DAS	Distributed Antenna System
DL	Downlink
Downlink	The path covered from the Base Transceiver Station (BTS) to the subscribers' service area via the repeater
HE	Head End
HPA	High Power Amplifier
HW	Hardware
IF	Intermediate Frequency
LNA	Low Noise Amplifier
LTE	Long Term Evolution
MS	Mobile Station
NMS	Network Management System
ODU	Optical Donor Unit which is located in ADXV-HE.
OEU	Optic Expansion Unit
PLL	Phased Locked Loop
POI	Point Of Interface
PSU	Power Supply Unit

RF	Radio Frequency
RU	Remote Unit which is composed of master RU and multiple slaves RU
RM	Remote Module
SW	Software
UL	Uplink
Uplink	The path covered from the subscribers' service area to the Base Transceiver Station (BTS) via the repeater
VSWR	Voltage Standing Wave Ratio

1. INTRODUCTION

ADXV-LPR System supports N77H, N77L, PCS, **AWS, WCS, BRS/EBS (20 dBm)**, Cellular, 700 (Lower A, Lower B, Lower C, Upper C), 600 services, and each service band RF DL output is N77H, N77L (23dBm), PCS, AWS, WCS, BRS (20dBm), Cellular, 700, 600 (17dBm)

1.1 Highlights

- Modular Structure (HE)
 - Supports multi bands service in one body
 - Supports up to 12 slot available for POI, POIL, ODU, CHC card, etc.
- 17~23dBm of downlink composite output power
- N77H, N77L Band SISO/MIMO Concept
- Requires only single strand of fiber per remote unit
- Operates with up to 5dBo optical loss
- Supports SNMP v1, v2, v3 (get, set & traps)
- Web-based GUI Interface; No 3rd party GUI software required
- Web-GUI connectivity via DHCP in host mode
- Versatility and Usability: ADXV gives total control to the user. Control parameters such as gain, output power, and alarm threshold can be changed using Web-GUI interface allowing the user to fine tune the system to the given RF environment.

1.2 ADXV DAS Quick View

1.2.1 HE Quick View

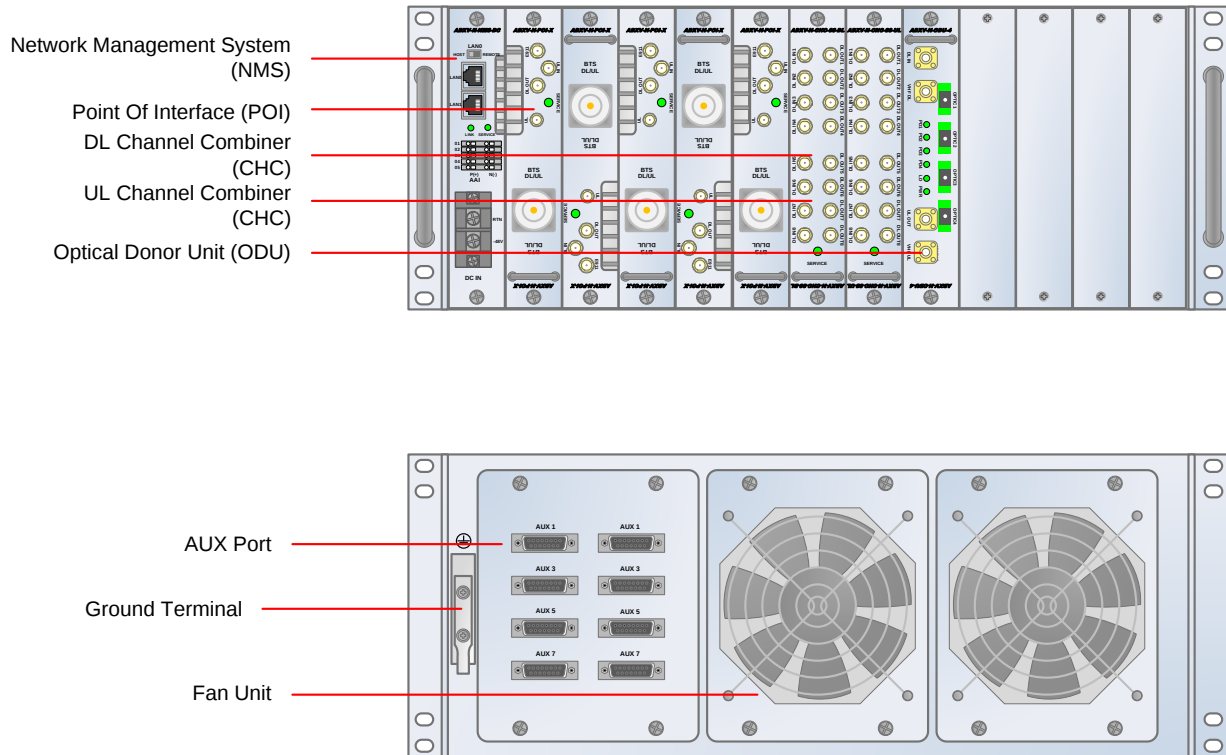


Figure 1-1 ADXV DAS HE Quick View (Front and Rear)

1.2.2 HUB-LPR Quick View

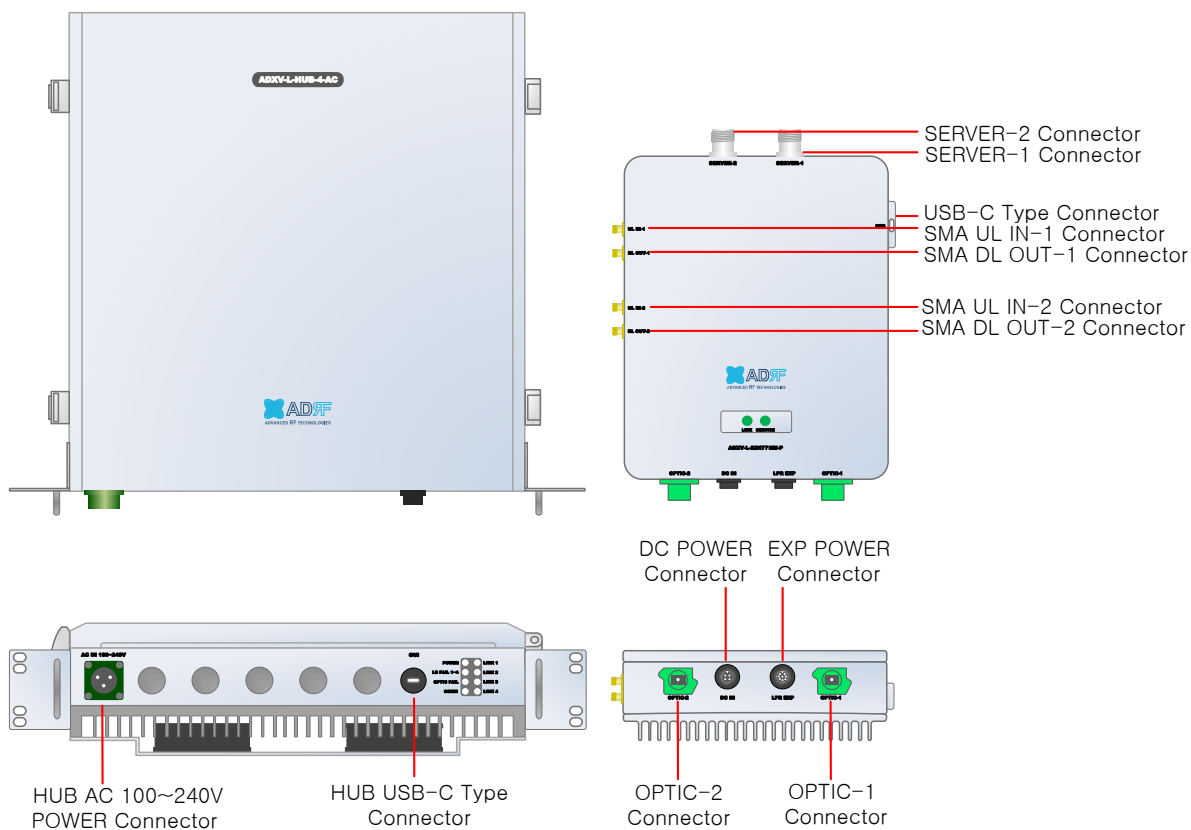


Figure 1-2 ADXV DAS HUB-LPR Quick View (Front and Side)

1.3 Warnings and Hazards



WARNING! ELECTRIC SHOCK

Opening the ADXV DAS could result in electric shock and may cause severe injury.



WARNING! EXPOSURE TO RF

Working with the ADXV DAS while in operation, may expose the technician to RF electromagnetic fields that exceed FCC rules for human exposure. Visit the FCC website at www.fcc.gov/oet/rfsafety to learn more about the effects of exposure to RF electromagnetic fields.

RF EXPOSURE & ANTENNA PLACEMENT Guidelines

Actual separation distance is determined upon gain of antenna used.

Please maintain a minimum safe distance of at least 20 cm while operating near the donor and the server antennas. (Antenna gain: 4.2 dBi for AWS/PCS, 4.5 dBi for WCS/BRS/EBS service)

WARRANTY

Opening or tampering the ADXV DAS will void all warranties.

Lithium Battery: CAUTION. RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS.

Ethernet Instructions: This equipment is for indoor use only. All cabling should be limited to inside the building.

FCC Part 15 Class A

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

FCC Part 20

WARNING. THIS is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You **MUST** have an FCC LICENSE or express consent of an FCC Licensee to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Laser Safety

Fiber optic ports of the ADXV DAS emit invisible laser radiation at the 1310, 1550nm wavelength window.

To avoid eye injury never look directly into the optical ports, patch cords or optical cables. Do not stare into beam or view directly with optical instruments. Always assume optical output is on.

Only technicians familiar with fiber optic safety practices and procedures should perform optical fiber connections and disconnections of the ADXV DAS and the associated cables.

The ADXV DAS complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to laser notice No.50 (July26, 2001)@IEC 60825-1, Amendment2 (Jan. 2001).

Care of Fiber Optic Connectors

Do not remove the protective covers on the fiber optic connectors until a connection is ready to be made. Do not leave connectors uncovered when not connected.

The tip of the fiber optic connectors should not come into contact with any object or dust.

Refer to the cleaning procedure for information on the cleaning of the fiber tip.

Use of unauthorized antennas, cables, and/or coupling devices not conforming with ERP/EIRP and/or indoor-only restrictions is prohibited.

Home/ personal use are prohibited

Only 50 ohm rated antennas, cables and passive equipment shall be used with this remote. Any equipment attached to this device not meeting this standard may cause degradation and unwanted signals in the bi-directional system. All components connected to this device must operate in the frequency range of this device.

Only 50 ohm rated antennas, cables and passive components operating from 150 - 3 GHz shall be used with this device.

◆ FCC LABEL WARNING ◆

WARNING.

This is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC Licensee to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

◆ ISED LABEL WARNING ◆

WARNING: This is NOT a CONSUMER device. It is designed for installation by an installer approved by an ISED licensee. You MUST have an ISED LICENCE or the express consent of an ISED licensee to operate this device.

AVERTISSEMENT : Les enrichisseurs de zone industriels ne sont PAS des appareils de CONSOMMATION. Ils sont conçus pour être installés par des titulaires de licence d'ISDE et des installateurs qualifiés qui ont reçu une formation reconnue en RF. Vous DEVEZ être le titulaire de licence d'ISDE ou avoir le

◆ RSS-GEN (6.8 Transmit antenna) ◆

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Confonctionner avec une antenne d'un type et d'un gain maximal approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

◆ RF Radiation Exposure ◆

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 540 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances.

(Antenna gain: 4.2 dBi for AWS/PCS, 4.5 dBi for WCS/BRS/EBS service)

L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de au moins 540 cm entre la source de radiation (l'antenne) et toute personne physique. Cet appareil ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou émetteur.

(Antenna gain: 4.2 dBi for AWS/PCS, 4.5 dBi for WCS/BRS/EBS service)

2. BLOCK DIAGRAM

2.1 ADXV DAS LPR Block Diagram

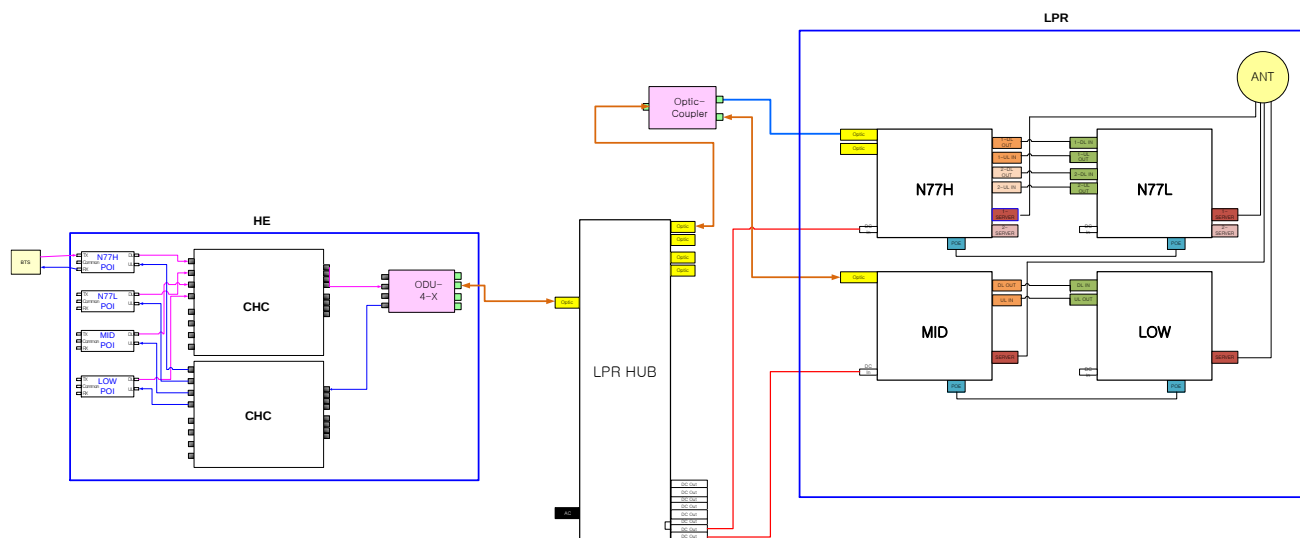


Figure 2-1 ADXV DAS LPR Block Diagram

2.2 ADXV DAS LPR Scalability

Table 2-1 ADXV-DAS Scalability

Unit		Scalability	Remarks
Supported band		N77H, N77L, PCS, AWS, WCS, BRS, Cellular, 700(Lower A, Lower B, Lower C, Upper C), 600	
HE	POI/POIL	No limitation in 12 slots except NMS	
	NMS	1	
	CHC	No limitation in 12 slots except NMS	
	Optic Unit	No limitation in 12 slots except NMS In case of Aux, No limit in 8 Aux ports	
LPR	LPR HUB	1	
	LPR	16	HUB 4 Optic Output X LPR 4

3.1.1 NMS (Network Management System)

- Functions and features
 - Supports SNMP v1, v2, and v3 (get, set & trap) and web-based GUI Interface.
 - Monitors alarms and status
 - Provides control interfaces with all subordinate modules
 - Provides overall DAS structure via the auto tree update function
 - ADXV-H-NMS-DC is for DC type
 - ADXV-H-NMS-AC is for AC type
 - HE's battery backup option is available only in ADXV-H-NMS-AC
- Spec
 - Size: 19.0 x 12.1 x 1.7inches
 - Weight: 3.5lbs

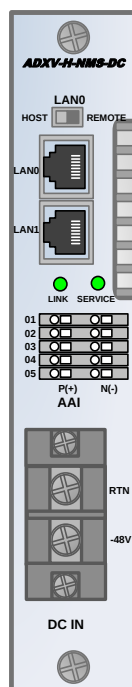


Figure 3-2 ADXV-H-NMS-DC Front View

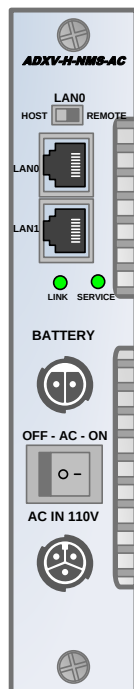


Figure 3-3 ADXV-H-NMS-AC Front View

3.1.1.1 LEDs

NMS has LEDs on the front panel as shown in Figure 3-4.




Figure 3-4 NMS LED

Table 3-1 NMS LED Specifications

ADXV DAS-NMS		Specifications
POWER	Solid Green	NMS power is ON
	OFF	NMS power is OFF
LINK	Solid Red	HE Link Fail alarm exists in the system
	Solid Green	No HE Link Fail alarms are present in the system

3.1.1.2 AAI (only for DC type)

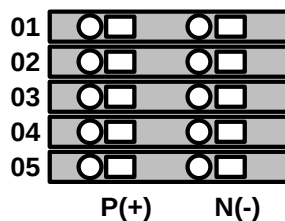


Figure 3-5 NMS AAI

NMS has 5 external alarms out interface pins on the front panel.

Table 3-2 NMS AAI Specifications

AAI Alarm Status	Output
Normal	High Impedance (Open)
Alarm	Low Impedance (Short)

3.1.1.3 Ethernet Port

The Ethernet port can be used to communicate directly with the ADXV DAS using a RJ-45 crossover cable or can also be used to connect the ADXV DAS to an external modem box.

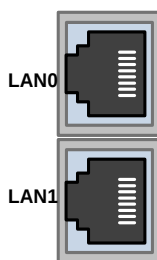


Figure 3-6 Ethernet Port

3.1.1.4 Host/Remote Switch

The Host/Remote Switch allows the user to switch the default Repeater IP, Subnet Mask, and Gateway of the repeater to an alternative setup. These settings can be adjusted by logging into the ADXV DAS in HOST mode and configuring the settings under the Modem Box Setting section under the Install Page of NMS.

Once the settings are set, flipping the switch to the REMOTE position will reboot NMS module with the new alternate settings. *Please note that when the NMS is set to the REMOTE position, DHCP is disabled and the NMS will not automatically assign an IP address to any device that connects directly to the NMS.*

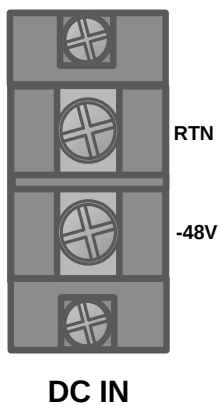


Figure 3-7 Host/Remote Switch


- Host IP: 192.168.63.1 (Fixed IP, unable to modify this IP address)
- Remote IP: 192.168.63.5 (Default IP, but can be modified in Host mode)

3.1.1.5 Power Connection

- For DC type(-48VDC)
ADXV-H-NMS-DC has terminal block for DC power connection on the front panel.
You should verify voltage and power polarity of each power line and should turn on the power after power connection necessarily.



- For AC type(AC 110V)
 ADXV-H-NMS-AC has two push-lock connectors for battery backup and AC power connection on the front panel.
 You should verify voltage and should turn on the power after power connection necessarily

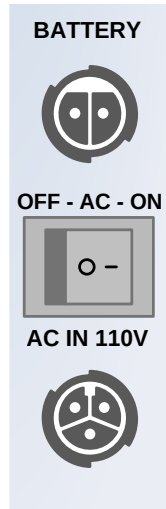

3.1.1.6 POI (ADXV-H-POI-x)




Figure 3-8 POI front View

3.1.1.7 POI (ADXV-H-POI-N77x)

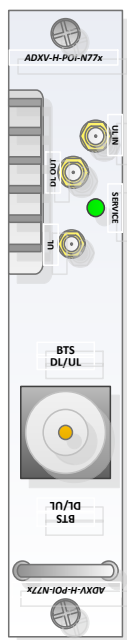


Figure 3-9 POI-N77x front View

- Functions and features
 - Provide RF interface with BTS
 - Each POI has independent gain control and filtering
 - Modular type and hot swappable
 - Supports duplex port and simplex RX port
 - Easily support additional frequency bands by adding a POI
 - Reduces complexity and overall equipment size
- Specifications
 - Size: 1.3 x 17.0 x 6.85 (in)
 - Weight: 6.17lbs

3.1.2 POIL (ADXV-H-POIL-x)

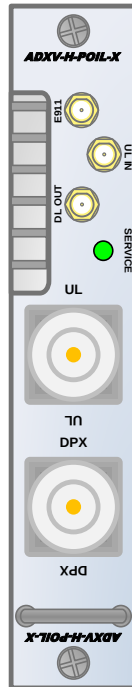


Figure 3-10 POIL front View

- Functions and features
 - Provide RF interface with BTS
 - Each POIL has independent gain control and filtering
 - Modular type and hot swappable
 - Supports duplex port and simplex RX port
 - Easily support additional frequency bands by adding a POIL
 - Reduces complexity and overall equipment size
- Specifications
 - Size: 1.3 x 17.0 x 6.85 (in)
 - Weight: 5.0 lbs

3.1.3 POIL-VU (ADXV-H-POIL-VU)

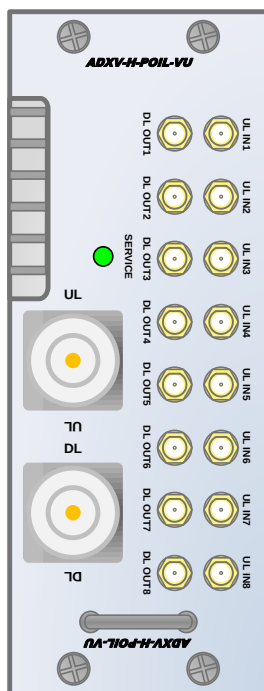


Figure 3-11 POIL-VU front View

- Functions and features
 - Supports VHF/UHF frequency band
 - Provide RF interface with BTS
 - Modular type and hot swappable
 - Supports simplex TX and RX port
- Specifications
 - Size: 2.6 x 17.1 x 6.85 (in)
 - Weight: 8.85 lbs

3.1.3.1 LED

POI has LEDs on the front panel as shown in Figure 3-12.

POWER



Figure 3-12 POI LED

Table 3-3 POI LED Specifications

POI		Specifications
Power	Solid Green	POI power is ON and POI/POIL is normal status
	Solid Red	POI power is ON and POI/POIL is hard fail alarm status
	Solid Yellow	POI power is ON and POI/POIL is soft fail alarm status

3.1.3.2 RF Ports

BTS DL/UL, DL OUT, UL IN, E911 Ports (refer to Figure 3-8) are located at the front of the POI

Table 3-4 POI RF port

RF Port	Function
BTS DL/UL	BTS Interface, DL duplexer Input, UL duplexer output
DL OUT	DL output
UL IN	UL input
UL OUT	UL output not passing through duplexer
E911	E911 RF interface (POI & POIL Only)

3.1.4 Channel Combiner (CHC, ADXV-H-CHC)

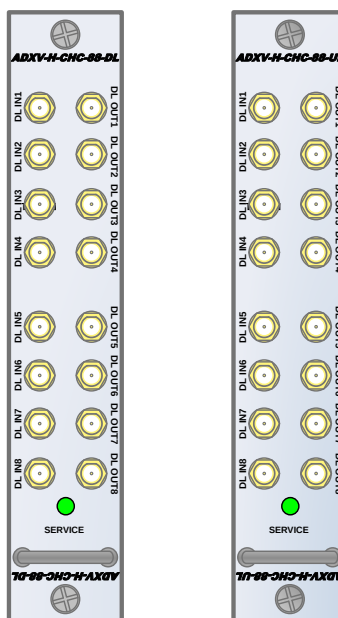


Figure 3-13 ADXV-H-CHC Front View

3.1.5 Channel Combiner (CHC, ADXV-H-CHC-X)

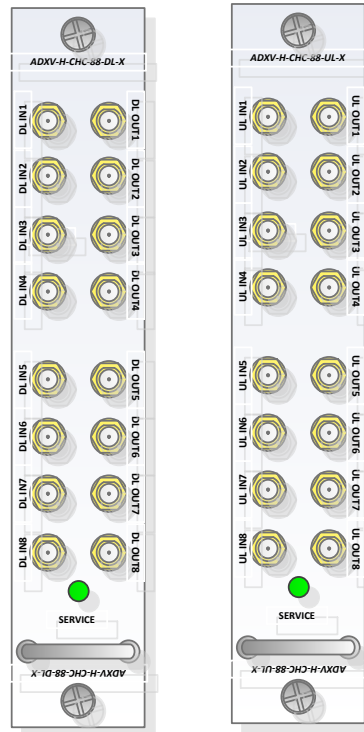


Figure 3-14 ADXV-H-CHC-X Front View

- **Functions & Features**
 - Combines DL signals received from each POI and feeds the combined signals to the ADXV-H-ODU
 - Combines UL signals received from each RU and feeds the combined signal to the ADXV-H-POI
 - No limit of installation number and location to install POI/POIL, ODU(ODU-X), CHC(CHC-X) card in 12 slots except NMS card
- **Specifications**
 - Size: 1.3 x 17.0 x 6.85 (in)
 - Weight: 4.4lbs per CHC(CHC-X)

3.1.5.1 RF ports

3.1.5.1.1 RF ports at the front panel (DL 1 to DL 8, UL 1 to UL 8)

DL 1(to DL 8) & UL 1(to UL 8) RF ports are connected to DL OUT/UL IN Ports at the front panel of POI.

- Receive the downlink signal from each POI
- Split the uplink signal received from ODU(ODU-X) to each POI

3.1.5.1.2 RF ports at the back panel (DL 1 to DL 8, UL 1 to UL 8)

DL 1(to DL 8) & UL 1(to UL 8) RF ports are connected to DL IN/UL OUT Ports at the back panel of ODU(ODU-X).

- Transfer the combined downlink signals to ODU(ODU-X)
- Receive the uplink signal from ODU(ODU-X)

3.1.6 Optical Donor Unit (ODU(ODU-X), ADXV-H-ODU-4(ADXV-H-ODU-4X))

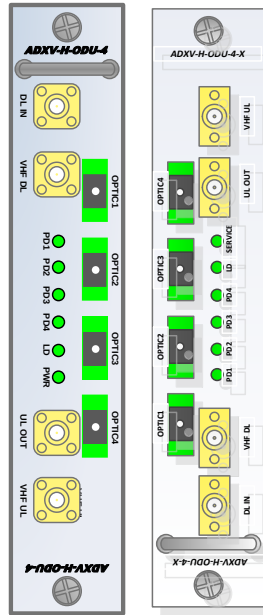


Figure 3-15 ADV-H-ODU-4(ADV-H-ODU-4-X) Front view

- Functions & Features
 - Converts signal from RF to optic and transports signals up to a maximum of 10Km (optical 5dBo loss including optical connection loss).
 - One ADV-H-ODU-4 (ADV-H-ODU-4-X)supports up to 4 RUs
 - Minimizes the number of optic fiber cable need by transporting multi band signals over a single strand of fiber using WDM technology.
- Spec
 - Size: 1.3 x 17.0 x 6.85 (in)
 - Weight: 5.3lbs

3.1.6.1 LED

The ADV-H-ODU-4(ADV-H-ODU-4-X) has the following LEDs on the front panel as shown in Figure 3-16.



Figure 3-16 ADV-H-ODU-4(ADV-H-ODU-4-X) LED

Table 3-5 ODU LED Specifications

ADV DAS-Module		Specifications
PWR	Solid Green	Module power is ON
	OFF	Module power is OFF
LD	OFF	ODU is not installed
	Solid Yellow	LD Fail alarm exists in the ODU
	Solid Green	No LD Fail alarm is present in the ODU
PD1 to PD4	Solid Yellow	PD Fail alarm exists
	Solid Green	No PD Fail alarm is present

3.1.6.2 RF Ports



Figure 3-17 ODU(ODU-X) RF Ports

3.1.6.2.1 DL IN/UL OUT

The combined downlink signal received from ADXV-H-CHC(ADXV-H-CHC-X) is transferred to the DL IN at the back of ODU.

The UL OUT port connects any of the ports on back of the ADXV-H-CHC(ADXV-H-CHC-X) labeled UL 1 ~8.

3.1.6.2.2 VHF DL/VHF UL

VHF DL/UHF UL ports are used to support Public Safety in the VHF & UHF frequency bands. VHF/UHF signals for Public Safety bypass the ADXV-H-CHC and connect directly to the VHF DL/UHF UL ports of the ADXV-H-ODU.

3.1.6.3 Optic Ports




Figure 3-18 ODU Optic Ports

The ADXV-H-ODU4(ADXV-H-ODU4-X) has (4) optic ports and can support up to (4) Main RU's. Likewise, the ADXV-H-ODU1 has (1) optic ports and can support up to (1) Main RU.

3.2 ADXV-L-HUB-4-AC

- The HUB Unit provides power and optical communication connections between LPR Units.
- Specifications
 - Size: 19.0 x 4.37 x 15.8 in (482 x 111.0 x 400mm)
 - Weight: 31.5lbs
 - Power Input: 110VAC

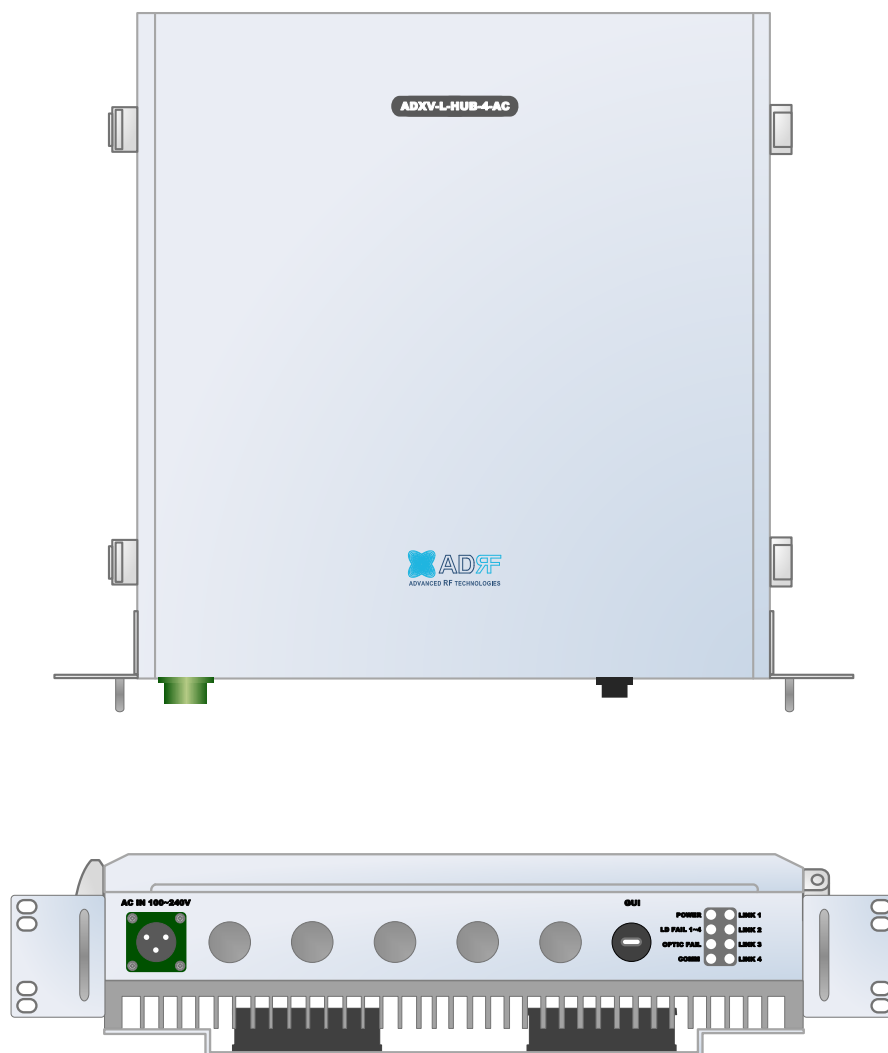


Figure 3-19 ADXV-L-HUB-4-AC LPR HUB Front and Side View

3.2.1 Port

- GUI USB-C Type port connects.
- 5 Hole Optic Cable In-Out connects
- AC IN 110V port connects to AC 110V

3.2.2 LED

LED	LED color	Status
Power	Green	Normal
LD FAIL 1~4	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail
OPTIC FAIL	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail
COMM	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail
LINK1	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail
LINK2	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail
LINK3	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail
LINK4	Green	Normal
	Yellow	Soft Fail
	Red	Hard fail

3.3 LPR Unit

- The LPR Unit consists of ADXV-L-23N77HM-P, ADXV-L-23N77LM-S, ADXV-L-20PAWBT-P, ADXV-L-1767S8C-S.

3.3.1 ADXV-L-23N77HM-P

- Specifications
 - Size: 8.67 x 10.64 x 3.0 inches
 - Weight: 12.0 lbs
 - Power Input: -48VDC
 - RF DL Output Power: +23dBm

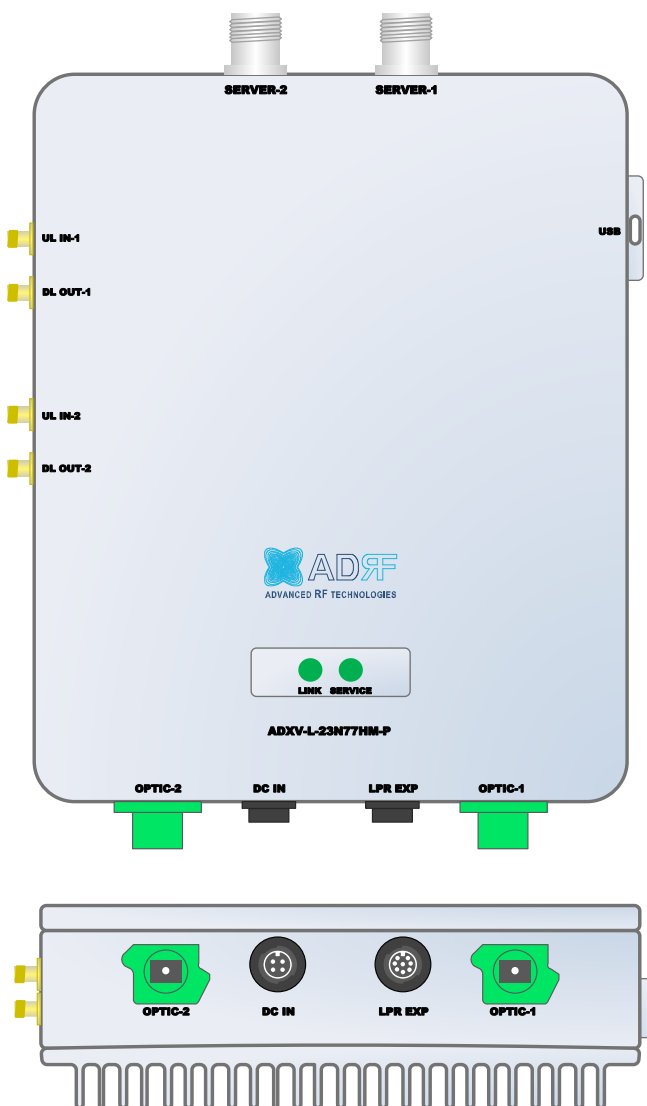


Figure 3-20 ADXV-L-23N77HM-P Front and Side View

3.3.1.1 Port

- SERVER-1 Port connects to Antenna N77H Band SISO Cable
- SERVER-2 Port connects to Antenna N77H Band MIMO Cable
- UL IN-1 Port connects to N77L Band Up Link SISO Cable
- DL OUT-1 Port connects to N77L Band Down Link SISO Cable
- UL IN-2 Port connects to N77L Band Up Link MIMO Cable
- DL OUT-2 Port connects to N77L Band Down Link MIMO Cable
- OPTIC-1 Port connects to N77H Band SISO Optic Cable
- OPTIC-2 Port connects to N77H Band MIMO Optic Cable
- DC IN port connects to HUB Unit DC -48V Cable
- LPR EXP port connects to N77L Band DC -48V Cable
- USB port connects to Lap- top

3.3.1.2 LED

LED	LED color	Status
Link	Green	Link normal
	Red	Link fail
Service	Green	Normal
	Yellow	Soft fail
	Red	Hard fail

3.3.2 ADXV-L-23N77LM-S

- Specifications
 - Size: 8.67 x 10.64 x 3.0 inches
 - Weight: 11.5 lbs
 - Power Input: -48VDC
 - RF DL Output Power: +23dBm

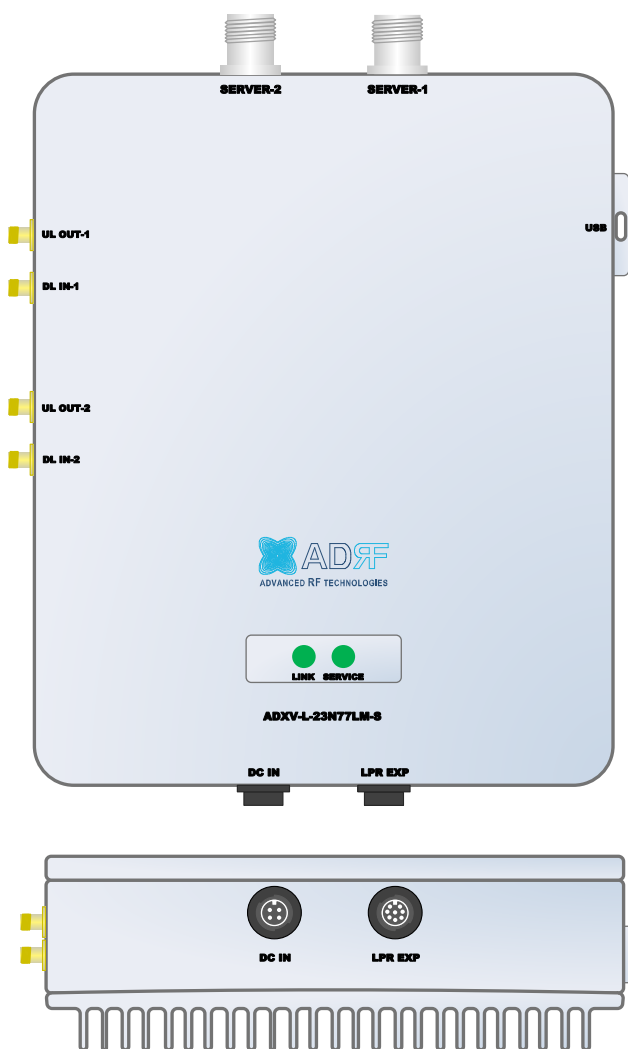


Figure 3-21 ADXV-L-23N77LM-S Front and Side View

3.3.2.1 Port

- SERVER-1 Port connects to Antenna N77L Band SISO Cable
- SERVER-2 Port connects to Antenna N77L Band MIMO Cable
- UL OUT-1 Port connects to N77L Band Up Link SISO Cable
- DL IN-1 Port connects to N77L Band Down Link SISO Cable
- UL OUT-2 Port connects to N77L Band Up Link MIMO Cable
- DL IN-2 Port connects to N77L Band Down Link MIMO Cable
- DC IN port connects to Not Connects
- LPR EXP port connects to N77L Band DC -48V Cable
- USB port connects to Lap- top

3.3.2.2 LED

LED	LED color	Status
Link	Green	Link normal
	Red	Link fail
Service	Green	Normal
	Yellow	Soft fail
	Red	Hard fail

3.3.3 **ADXV-L-20PAWBT-P**

- Specifications
 - Size: 8.67 x 10.64 x 3.0 inches
 - Weight: 12.0 lbs
 - Power Input: -48VDC
 - RF DL Output Power: +20dBm

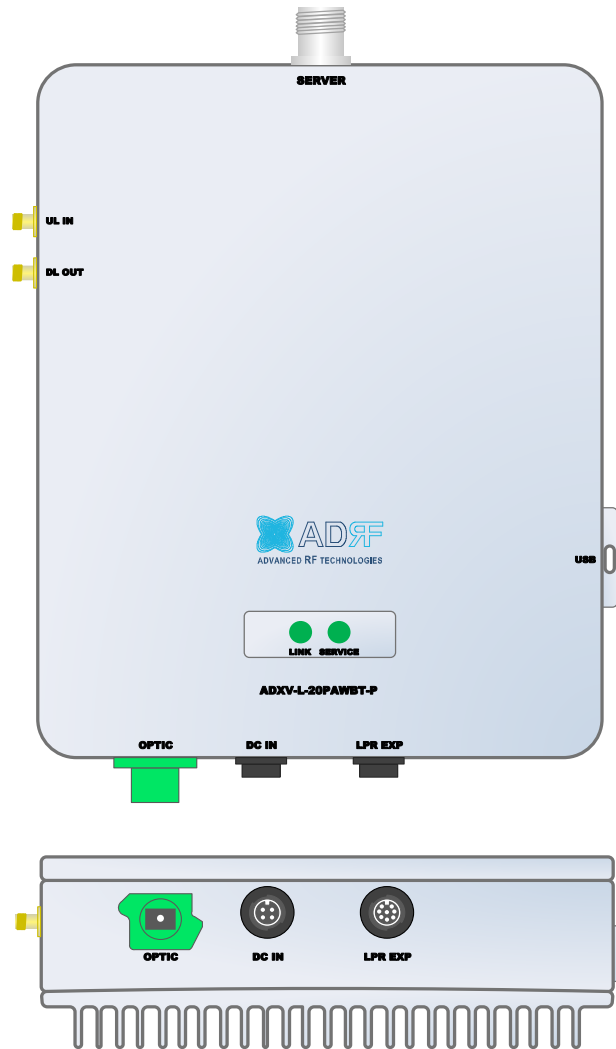


Figure 0-22 ADXV-L-20PAWBT-P Front and Side View

3.3.3.1 Port

- SERVER Port connects to Antenna PCS, AWS, WCS, BRS Band Cable
- UL IN Port connects to 600, 700, Cellular Band Up Link Cable
- DL OUT Port connects to 600, 700, Cellular Band Down Link Cable
- OPTIC Port connects to PCS, AWS, WCS, BRS Band Optic Cable
- DC IN port connects to HUB Unit DC -48V Cable
- LPR EXP port connects to 600, 700, Cellular Band DC -48V Cable
- USB port connects to Lap- top

3.3.3.2 LED

LED	LED color	Status
Link	Green	Link normal
	Red	Link fail
Service	Green	Normal
	Yellow	Soft fail
	Red	Hard fail

3.3.4 ADXV-L-1767S8C-S

- Specifications
 - Size: 8.67 x 10.64 x 3.0 inches
 - Weight: 12.5 lbs
 - Power Input: -48VDC
 - RF DL Output Power: +17dBm



Figure 0-23 ADXV-L-1767S8C-S Front and Side View

3.3.4.1 Port

- SERVER Port connects to Antenna 600, 700, Cellular Band Cable
- UL OUT Port connects to 600, 700, Cellular Band Up Link Cable
- DL IN Port connects to 600, 700, Cellular Band Down Link Cable
- DC IN port connects to Not Connects
- LPR EXP port connects to 600, 700, Cellular Band DC -48V Cable
- USB port connects to Lap- top

3.3.4.2 LED

LED	LED color	Status
Link	Green	Link normal
	Red	Link fail
Service	Green	Normal
	Yellow	Soft fail
	Red	Hard fail

4. CABLE CONNECTION

4.1 Head End Connection Diagrams

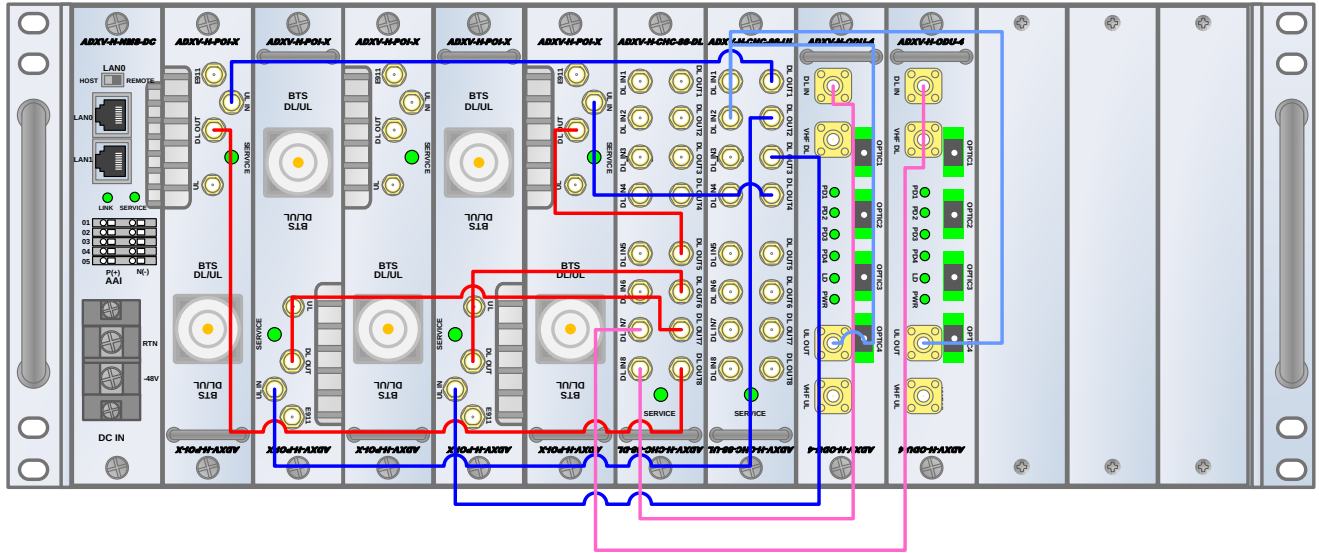


Figure 4-1 HE Cable connection (4 ADXV-H-POIs, 2 ADXV-H-ODUs)

4.2 LPR Unit Connection Diagrams

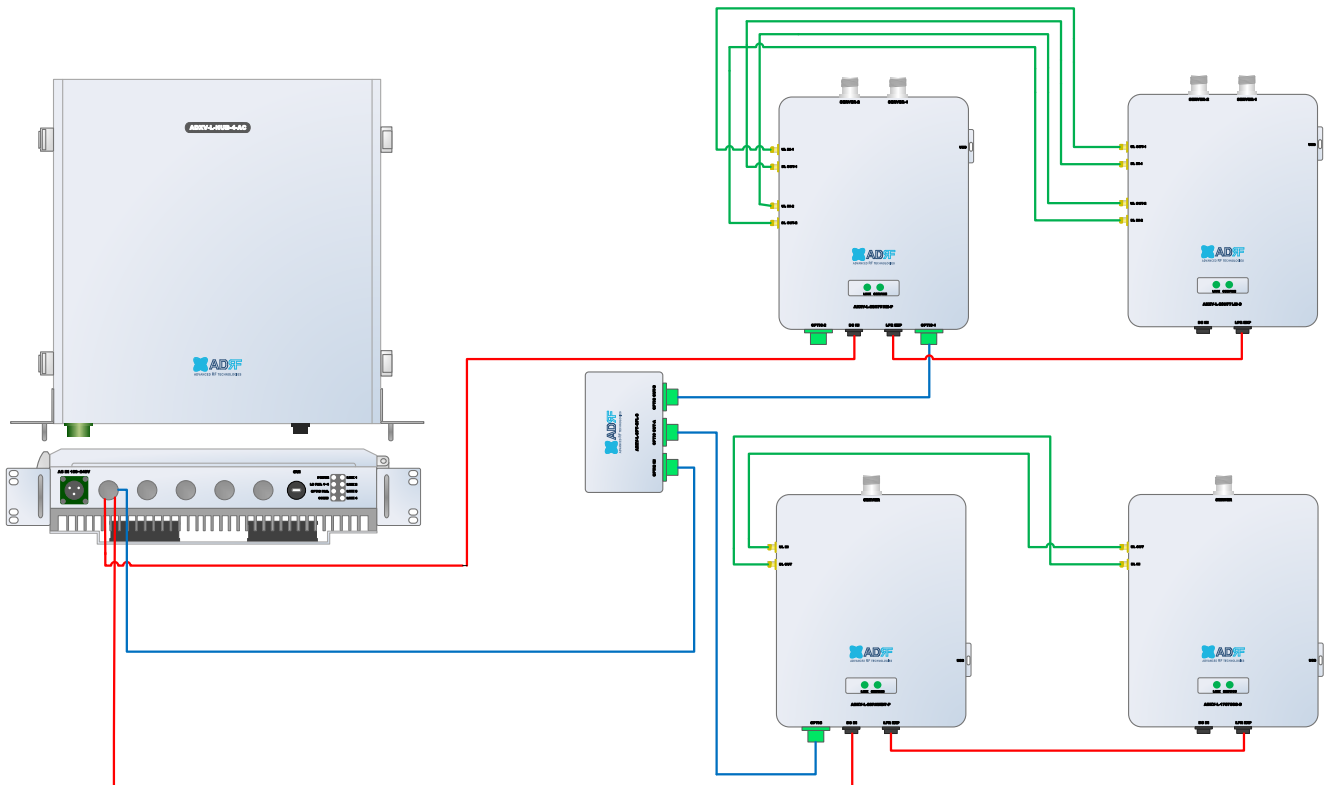


Figure 4-2 LPR Unit Cable Connection

5. MOUNTING METHOD

5.1 Head End

5.1.1 Rack Mount

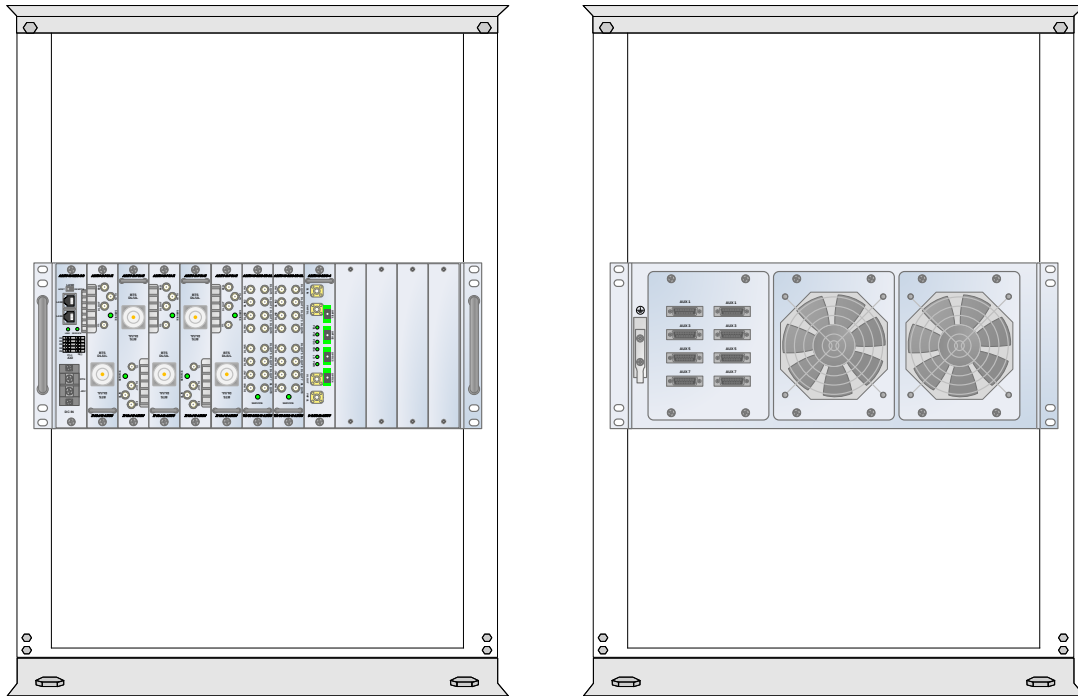


Figure 5-1 HE Rack Mount (Front & Rear view)

5.2 LPR

5.2.1 Wall Mount

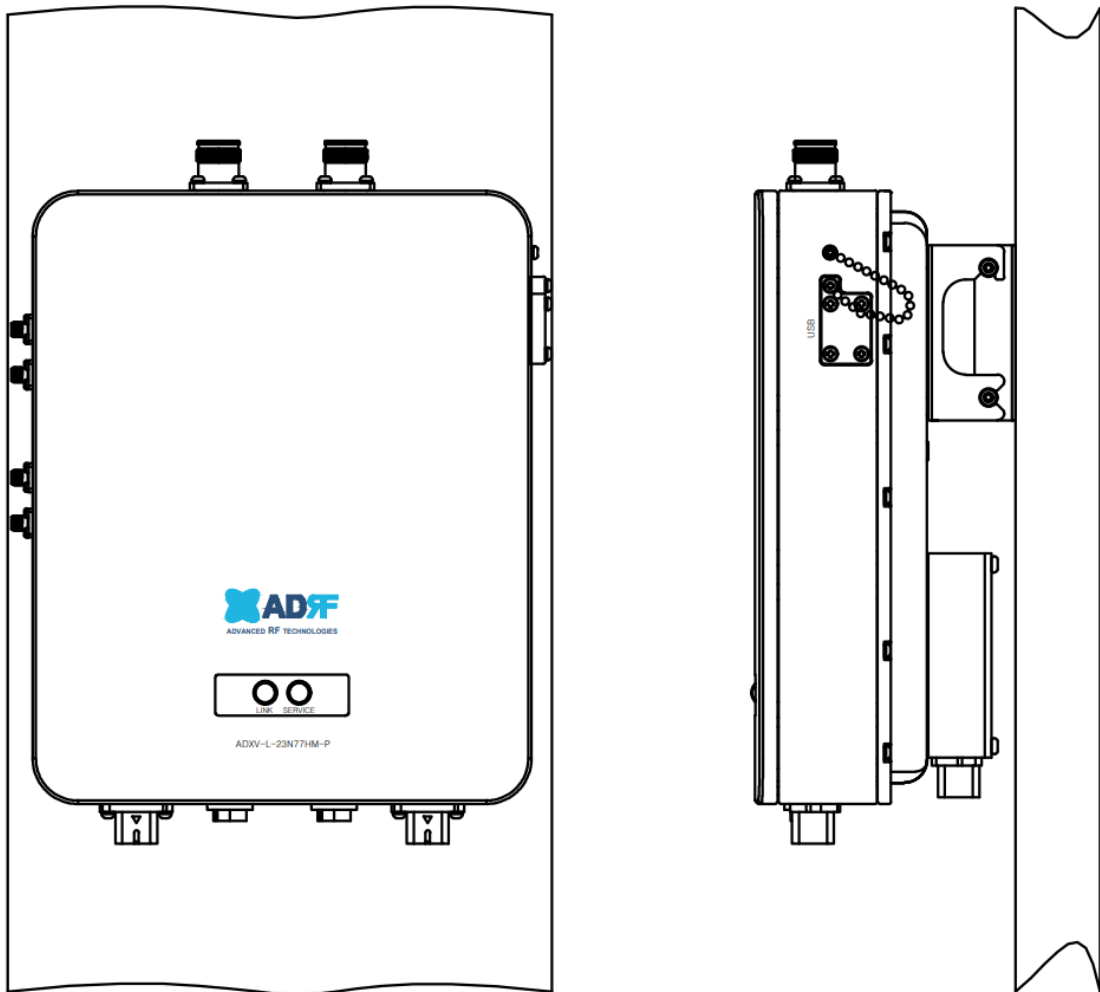


Figure 5-2 LPR Wall Mount Front and Side View

6. INSTALLATION

6.1 Pre-Installation Inspection

Please follow these procedures before installing ADXV LPR equipment:

- Verify the number of packages received against the packing list.
- Check all packages for external damage; report any external damage to the shipping carrier. If there is damage, a shipping agent should be present before you unpack and inspect the contents because damage caused during transit is the responsibility of the shipping agent.
- Open and check each package against the packing list. If any items are missing, contact ADRF customer service.
- If damage is discovered at the time of installation, contact the shipping agent.
- Verify the AC voltage with DVM (Volt meter) is 110V AC. Incorrect AC voltage can damage the ADXV equipment.
- This power of this system shall be supplied through wiring installed in a normal building. If powered directly from the mains distribution system, it shall be used additional protection, such as overvoltage protection device.
- Over voltage category(OVC) & Pollution degree(PD)

Over voltage category (OVC)	OVC II
Pollution degree (PD)	PD2

6.2 ADXV DAS Installation Procedure

6.2.1 HE Installation Procedure



CAUTION: ADXV DAS HE should be installed inside building only.

6.2.1.1 Installing a ADXV DAS HE in a rack

The ADXV HE chassis mounts in a standard 19" (483mm) equipment rack. Allow clearance of 3" (76mm) at the front and rear, and 2" (51mm) on both sides for air circulation. No top or bottom clearance is required.

- Consideration:
 - Eight mounting holes are located on 4 corners of ADXV HE to attach it to the 19" rack. The ADXV HE must be securely attached to a rack that can support the weight of the ADX.
- Mount procedure
 - The following steps should be followed while mounting the ADXV HE
 - > Verify that the HE and Mounting holes are in good condition
 - > Set the ADXV DAS HE against the 19" rack and secure the unit with screws
 - > Verify that ADXV HE is securely attached
 - > Connect the GND cable
 - > Connect the RF cable
 - > Connect the Power
 - > Connect the Optic cable

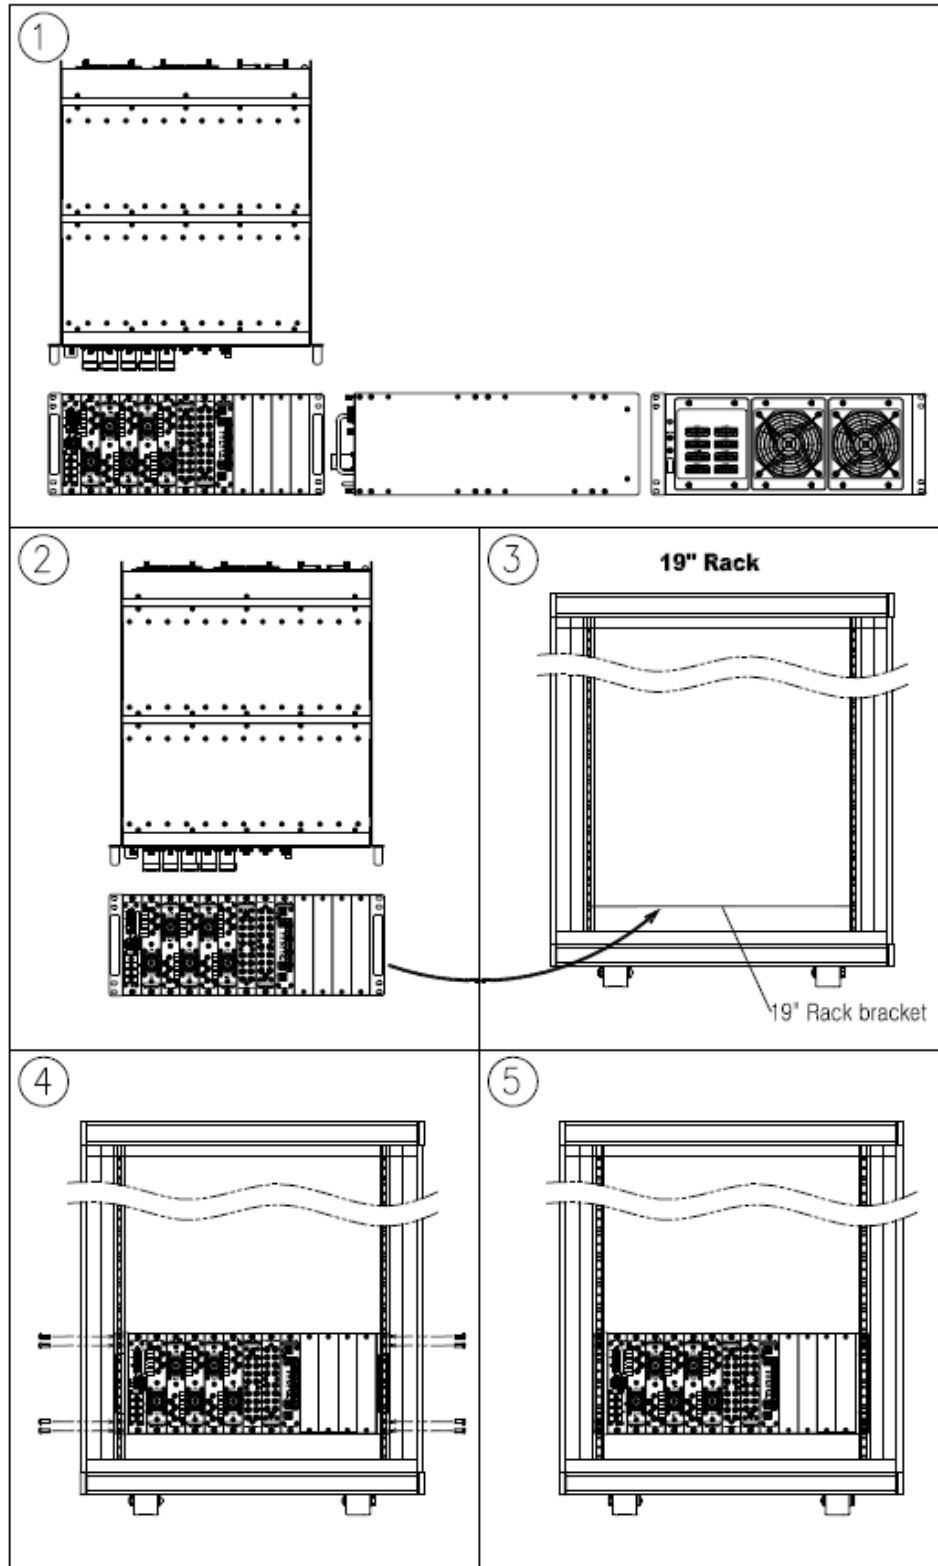


Figure 6-1 HE Installation Procedure

6.2.2 LPR Installation Procedure

ADXV LPR Unit provides wall mounting as standard.

- Consideration:
 - Re-check the screw fastening condition.
- Procedure
 - The following steps should be followed while mounting the ADXV LPR
 - > Desorption LPR Unit X Mount Bracket
 - > Insert Anchor Screw 5 X 6 X 35
 - > Insert Mount Bracket M4 Screw
 - > Attach LPR Unit On Mount Bracket
 - > Insert Mount Bracket M4 Screw

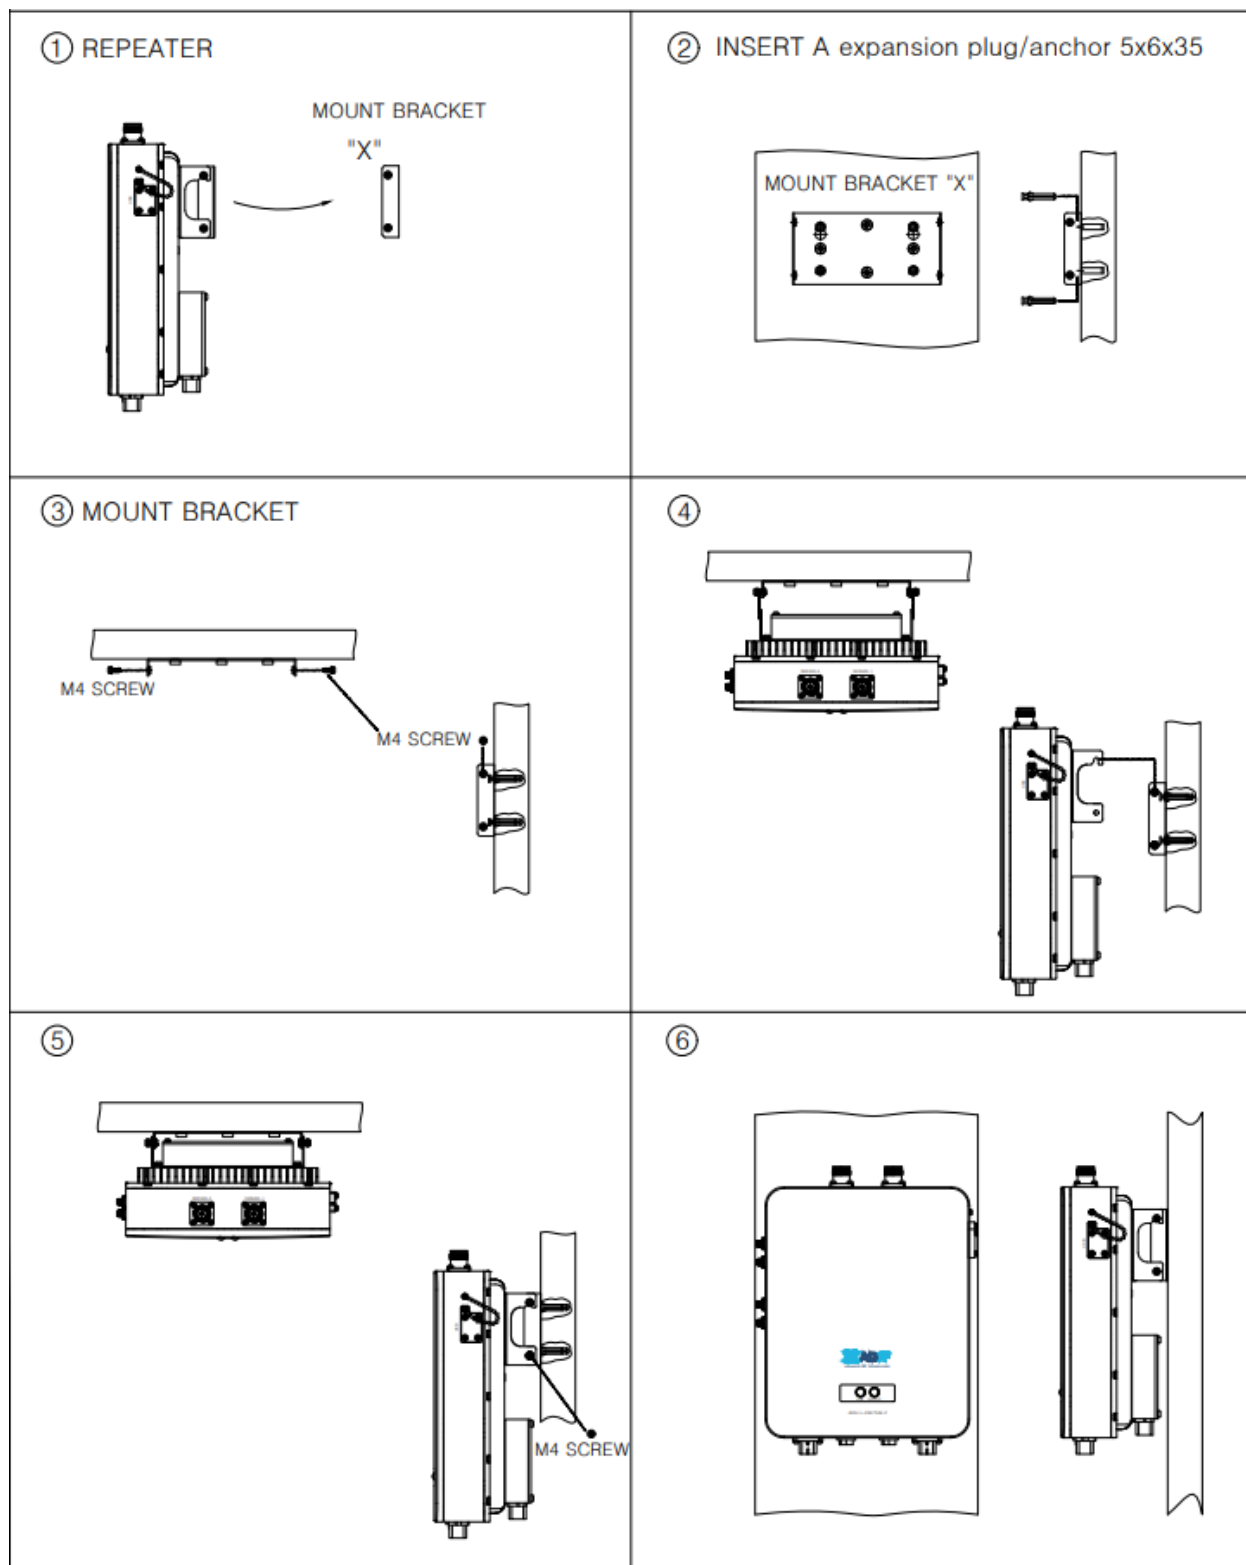


Figure 6-2 LPR Installation Procedure

6.2.3 RF coaxial cable and antenna connection

- > The coaxial cables which are connected to antenna port of LPR.
- > The part of antenna connection fasten to port not to be loosened and not to be injected the dusty and insects
- > The antenna connected to LPR is only serviced in in-building

6.3 Grounding

A ground cable is included in the box. The grounding terminals are located at the rear of the ADXV HE and The grounding cable should be properly connected before powering on the equipment.

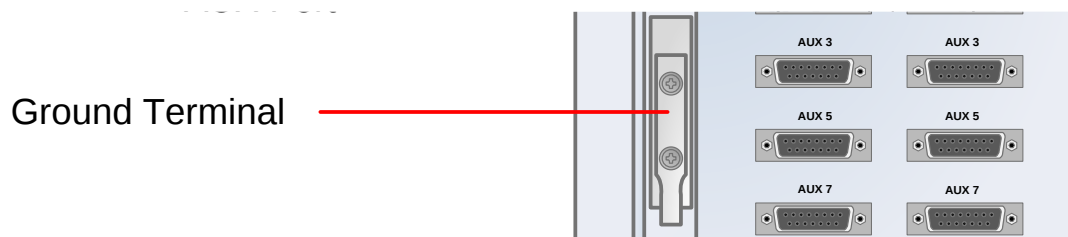


Figure 6-3 HE Ground Cable Connection, Protective Earthing Conductor (HE chassis rear side)

6.4 Optic Port Cleaning

- We recommend cleaning optic connector using a dry optical cleaning swab or tissue in a dry environment as needed. We recommend cleaning the optic connectors only if the expected optic loss is higher than the loss reported in the Web-GUI by 1.5dB. (Figure 6-)
- When optic connector are not in use, the port should be covered with a protective dust cap. (Figure 6-)

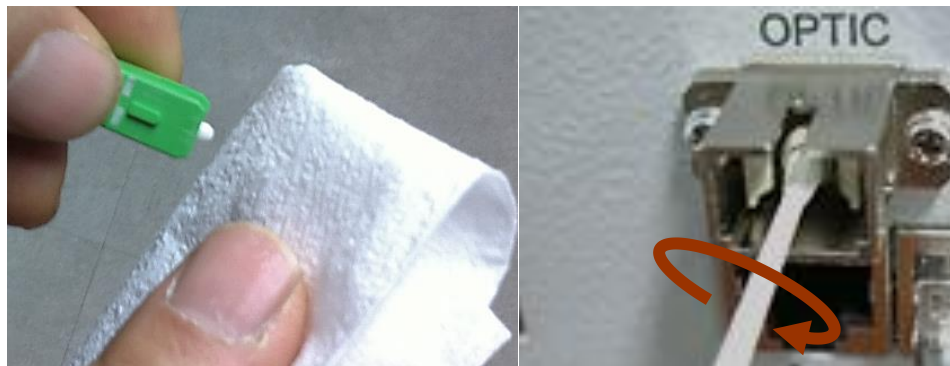


Figure 6-4 Optic Connector Cleaning (left) and Optic Port Cleaning (right)

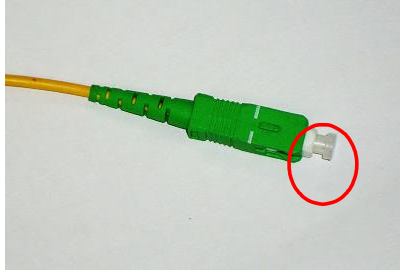


Figure 6-5 SC/APC Optic Connector Dust Cap

7. WEB-GUI

7.1 Web-GUI Setup

The Web-GUI allows the user to communicate with the DAS system either locally or remotely. To connect to the DAS system locally, you will need a laptop with an Ethernet port and a RJ-45 crossover cable. To connect to the DAS system remotely, you will need to have an active internet connection and the ADXV system must have an external modem box connected to the ADX.

7.1.1 DAS system/PC Connection Using Web-GUI

- Verify that your Local Area Connection is set to Obtain an IP address automatically under the Internet Protocol (TCP/IP) properties
 - If you are connecting to the unit remotely (use of a modem), then skip this and next step.
- Connect the RJ-45 crossover cable between the laptop's Ethernet port and the repeater's Ethernet port
- Launch an Internet Browser
- Type the following IP address into the address bar of Microsoft Internet Explorer: <http://192.168.63.1>
 - If you are connecting to the unit remotely, then type the IP address of the modem to connect to the unit
- The following login screen will appear:

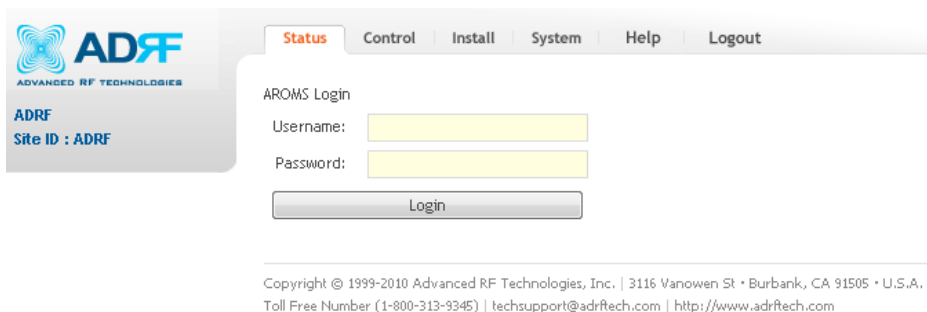


Figure 7-1 Login screen

If you are not the Administrator, please type in your assigned username & password which you should have received from the Administrator.

Table 7-1 Account Information for Login

Account type	Show items	Control Items	Default ID	Default Password
Administrator	all Items	all items	admin	admin
User	restricted items	restricted items	adrf	adrf
Guest	restricted items	read-only	guest	guest


7.2 Administrator/User Mode

7.2.1 Common

7.2.1.1 Navigation Tree

The navigation tree located on the left hand side of the Web-GUI allows the user to switch between the various modules that are connected to the system.

Table 7-2 Navigation tree

Parameters	Description
	Expands the entire navigation tree
	Collapses the entire navigation tree
	The module has the expandable subordinate modules
	The branch is currently expanded
	The module has soft fail alarm
	The module has hard fail alarm
	The module has no alarms (normal)
	The selected module will have orange colored text

7.2.1.2 Power Status

Display the power source that is currently being used.

Table 7-3 Power Supply Status

Input Power Status	Display Image
AC	
Battery	

7.2.1.3 Commissioning Status

Display whether or not the module has successfully been commissioned.

Table 7-4 Commissioning ICON

Status	Display Image
Commissioned	
Not-Commissioned	

7.2.1.4 Information

ADRF Remote Operation & Management System

Information

Serial Number	AVL23N77HMP0002(Optic1)
Latitude	N +777.777777
Longitude	E +777.777777
Firmware	F.0.15
Web GUI	1.1.18

Location

ADRF

Description

Technical Support

Phone: 1-800-313-9345

E-mail: techsupport@adrfttech.com

Installer Contact Info

Company:ADRF

Installer:Installer

Phone:1-800-313-9345

E-mail: techsupport@adrfttech.com

Figure 7-2 ADXV DAS General Information

- Information: Displays the serial number, latitude/longitude, firmware version of selected module, and Web GUI version of the NMS.
- Location: Displays the address where the ADXV DAS is installed.
- Description: Displays the description of selected module. The description of each module can be edited from the Install tab. It is recommended to use the location of the module as the description. This description information can be seen when hovering over the device tree in order to easily identify each component.
- Technical Support: Displays ADRF's Technical Support contact information.
- Installer Contact Info: Displays the contact information of the installer.

7.2.2 Status Tab

7.2.2.1 Status – NMS

The NMS Status page provides an overall view of how the system is performing. From the NMS Status page, the user can see what modules are connected to ADXV DAS. In addition, the user can see if any alarms are present in the system and also the commissioning status of each module.

7.2.2.1.1 System Summary

The Summary section provides the user with the number of components physically connected, the number of soft/hard/link fails present in the system, and also the number of commissioned and non-commissioned components.

Table 7-5 System Summary Description

Parameters	Description
Connected	Display the number of modules physically connected to ADXV DAS
Soft Fail	Display the number of soft fail present on each module
Hard Fail	Display the number of hard fail present on each module
Link Fail	Display the number of link fail present on each module
Not Commissioned	Display the number of non-commissioned or commission failed module
Commissioned	Display the number of successfully commissioned module

7.2.2.1.2 HE Alarm Status

Display the alarm status of each HE component.

7.2.2.1.3 HE Commissioning Status

Display commissioning status of each HE component.

7.2.2.1.4 Alarm

Displays alarm status of the NMS. If an alarm is present in the system, the color of the system alarm tab will change according to the type of failure.

7.2.2.1.5 SNMP



The figure shows a web-based configuration form for SNMP. It has a title "SNMP" at the top. Below the title, there are two input fields: "Site ID" with the value "adrf" and "Manager IP" with the value "0.0.0.0". Both fields have a yellow background. Below these fields is a "Set" button.

Figure 7-3 SNMP (Install – NMS)

The SNMP section allows you to specify the Site ID and Manager IP. The Site-ID is the code that is used to identify a particular module. The Manager IP field is where the user inputs the IP address of the NOC system that is being used to monitor the SNMP traps.

7.2.2.1.6 Location

This section allows the user to input the latitude and the longitude of the repeater.

The screenshot shows a form titled "Location". It contains two rows of input fields. The first row is labeled "Latitude" and has a dropdown menu with "N" selected, followed by a plus sign and a text input field. The second row is labeled "Longitude" and has a dropdown menu with "E" selected, followed by a plus sign and a text input field. A "Set" button is located at the bottom right of the form.

Figure 7-4 Location Setting (Install – NMS)

- Select N or S from the dropdown menu for Latitude
- Select E or W from the dropdown menu for Longitude
- Input the first 3 numbers of the latitude/longitude in the text area after the “+” and before the “.”
- Input the last 6 numbers of the latitude/longitude in the text area after the “.”

7.2.2.1.7 External Modem Box Settings

This section allows the user to specify an alternative IP, Subnet Mask, and Gateway settings. These settings are enabled when the Host/Remote switch is set to the Remote position.

The screenshot shows a form titled "External Modem Box Settings". It contains three rows of input fields. The first row is labeled "Repeater IP" and has a text input field with the value "192.168.70.202". The second row is labeled "Subnet Mask" and has a text input field with the value "255.255.255.0". The third row is labeled "Gateway" and has a text input field with the value "255.255.255.0". A "Set" button is located at the bottom right of the form.

Figure 7-5 External Modem Box Setting (Install – NMS)

7.2.2.1.8 Description

This section allows the user to save the description of NMS.

The screenshot shows a form titled "Description". It contains one row of input fields labeled "Description" with a text input field containing the value "desp_rfu_700". A "Set" button is located at the bottom right of the form.

Figure 7-6 Description (Install – NMS)

7.2.2.1.9 SNMP Agent False Alarm Test

This section allows the user to generate both soft and hard fail alarms. After alarms are generated, the NOC can poll the ADXV to see if alarms are present. All alarms generated during this test are false alarms.

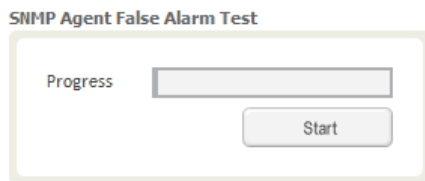


Figure 7-7 SNMP Agent False Alarm Test (Install – NMS)

7.2.2.1.10 Location Info / Installer Info

This section allows the user to specify the address of the repeater and also the information of the installer.

ADRF Remote Operation & Management System

Location Info

Company

Address1

Address2

City

State ▼

ZIP Code

Installer Info

Company

Name

Phone

E-mail

Figure 7-8 Location Info / Installer Info (Install – NMS)

7.2.2.1.11 Date & Time

This section allows the user to specify the current date and time.

The interface shows a 'Date & Time' section. The 'Date' field is set to '12/09/2011' with a calendar icon. The 'Time' field is set to '17:03:32' with dropdown arrows. A 'Set' button is located below the fields.

Figure 7-9 Date & Time Setting (Install – NMS)

7.2.2.1.12 Description

This section allows the user to save the description of remote module.

The interface shows a 'Description' section. The 'Description' field contains the text 'ru_desc.'. A 'Set' button is located to the right of the field.

Figure 7-10 Description (Install-Remote Module)

7.2.3 System

The System tab allows the user to perform firmware updates, upload closeout packages, view any changes to the system, backup existing configuration, and add/remove user accounts, and change the login credentials of the Administrator.

7.2.3.1 System: Account

7.2.3.1.1 System: Account - Account Management (Admin Only)

The Account Management section allows the Administrator to delete any user/guest account. Please note that the Account Management section is only available if you are logged into the system as the Administrator. To delete a user/guest account click on the Account Management link and under the Delete column, click on the delete button.

Account Management / New account / Change Password

No	Login Name	Password	Status	Last Login	Edit
1	admin	admin	administrator	2012-02-28 18:37:53	-
2	adrf	adrf	user	2012-02-28 00:47:55	delete
3	guest	guest	guest	1970-01-01 00:00:00	delete

Figure 7-11 Account Management

7.2.3.1.2 System: Account - New Account (Admin Only)

The New account section allows the Administrator to create a new user/guest account. Please note that the new account section is only available if you are logged into the system as the Administrator. To create a new user/guest account click on the new account link and fill in the fields highlighted in yellow as shown below.

Account | Logs | Update | System Information | Backup/Restore | SNMP | Closeout Package

Account Management / New account / Change Password

Account Name

Account Group

user

Password

Confirm password

Create

Cancel

Figure 7-12 New Account

7.2.3.1.3 System: Account - Change Password

The Change Password section allows the current user who is logged into the system to change their login credentials.

Account Management / New account / Change Password

User Name

admin

Password

Confirm password

Please enter new password.

Apply

Cancel

Figure 7-13 Change Password

7.2.3.2 System: Logs

7.2.3.2.1 System: Logs - Event Log

This section displays system events that have taken place. The Event Log displays who has made the changes, the time and date of when the event took place, and what changes were made to the system. The System Log tracks the following events:

- System Initiation
- Alarm Set
- Alarm Clear

7.2.3.2.2 System: Logs - User Log

This section tracks user activity within the system. The User Log displays who has made the changes, the time and date of when the event took place, and what changes were made to the system. The User Log tracks the following items:

- Log in / Log out activity
- Changes to gain/attenuation/output values
- System event generated by user(firmware update, backup/restore, create/delete account)
- DAS Navigation Tree Lock/Unlock
- Description change
- Repeater/installer information change
- Setting date/time

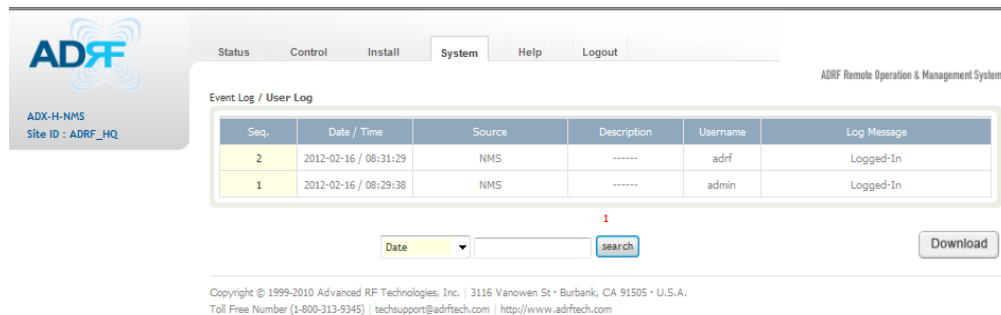


Figure 7-14 User Log

7.2.3.3 System: Update

- To perform a firmware update, click on the System:Update tab and the following screen will show up.

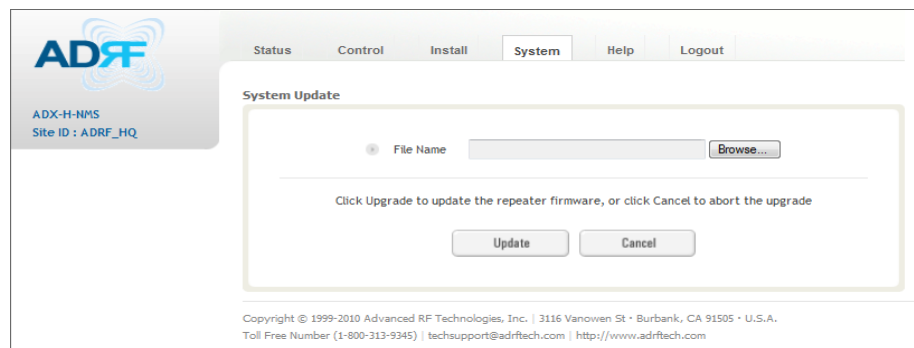


Figure 7-15 System update

- Click on the 'Browse' button and locate the firmware file.
- Click on the Update button to perform the firmware update.
- Once the firmware update is complete, the following message will appear.

```
File Size = 1149078///1149095
File upload OK.
Now copying files and reboot. Do not close this page.
Updated... Web
Updated... Universal Extra files
Updated ...
Rebooting now ...
Turn off this terminal.
And connect GUI after 30 seconds ...
***** End Download *****
```

Figure 7-16 Message after System update is complete

7.2.4 Help

If an internet connection is available, clicking on the Help Tab will redirect the user to our Technical Support page.

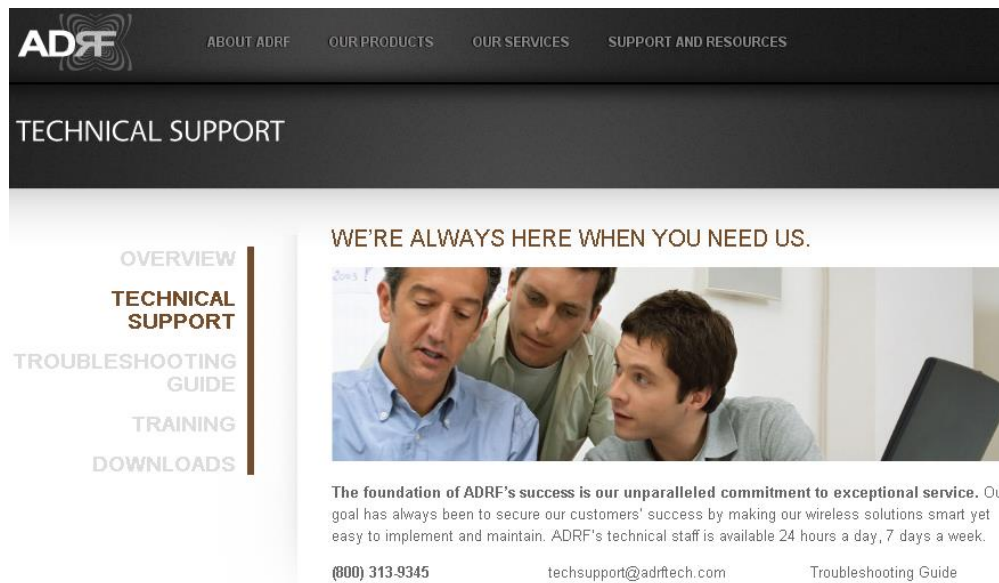


Figure 7-17 Help

7.2.5 Logout

Clicking the Logout button will log the current user off the system.

7.3 Guest Mode

When logging into the system as a guest, the guest will only have read-only privileges and will not be able to make any changes to the system.

8. SYSTEM SPECIFICATION

8.1 ADXV-L-HUB-4-AC Specifications

Parameters		Specifications		Remarks
		DL	UL	
Frequency Range (MHz)	600	617-652	663-698	
	700	728-757	698-716 776-787	
	S8C	862-894	817-849	
	PCS	1930-1995	1850-1915	
	AWS	2110-2180	1710-1780	
	WCS	2350-2630	2305-2315	
	BRS	2496-2690	2496-2690	
	N77L	3450-3550	3450-3550	
	N77H	3700-3980	3700-3980	
System total Gain (dB) [ADXV-L-HUB-4-AC]		0	0	
Power Consumption		+24V@1.25A 30W		
Spurious		FCC Rule Compliant		
Passband Ripple		±1dB		
Enclosure Cooling		FAN Cooling		
Alarm (LED Indicator)	Power			
	LD FAIL			-1dBm ± 1dB @DL +1dBm ± 1dB @UL
	OPTIC FAIL			-7dBm± 1dB @DL -2dBm ± 1dB @UL
	LINK 1			
	LINK 2			
	LINK 3			
	LINK 4			
Local Connection (GUI)		USB-C Type		
Optic Power	3 dBm ±2dB(Typ)			@1310nm Optic 1~4 Port
	8 dBm±2dB(Typ)			@1550nm Optic In Port
LD Alarm		<= -1dBm ± 1dB		

PD Alarm	$\leq -7\text{dBm} \pm 1\text{dB}$	
VSWR	$\leq 1.5: 1$	
TX↔RX Isolation	$\geq 60\text{dBc}$	
Impedance	50 Ω	
Relative Humidity	5% - 90%	
Operating Temperature	-22°F to +131°F (-30°C to +55°C)	
Power Consumption	TBD	

ADXV-L-HUB-4-AC Optical Specifications

Optic Wavelength	DL: 1310 nm; UL: 1550 nm	
Optic Connector	SC / APC	
Optic Loss	0~5dBo	
Optic Connector	4 Port	

ADXV-L-HUB-4-AC Mechanical & Power Specifications

Dimension (W x D x H)	19.0 x 4.37 x 15.8 in (482 x 111.0 x 400mm)	
Weight	31.5lbs	
Conduit Hole	1/2 Inch (5Φ, 22.2mm)	
AC Input Power	100~240VAC(47~63Hz)	
DC Feeding Voltage	-48V(-36~-52V)	
DC Feeding Power Capacity	600Watt /8Port(Total)	
DC Feeding Connector	8 Port	
Weather Resistance	IP66	
Optic Terminal Tray (internal)	2	2 optic cables per optic tray in the enclosure

8.2 ADXV-LPR Specifications

Parameters		ADXV-L-23N77HM-P	ADXV-L-23N77LM-S	ADXV-L-20PAWBT-P	ADXV-L-1767S8C-S
Frequency	Downlink	3700~3980MHz	3450~3550MHz	PCS: 1930~1995MHz AWS: 2110~2180MHz WCS: 2350~2360MHz BRS: FCC: 2496~2690MHz IC: 2500~2690MHz	600: 617~652MHz 700F: 728~757MHz S8C: 862~894MHz
	Uplink	3700~3980MHz	3450~3550MHz	PCS: 1850~1915MHz AWS: 1710~1780MHz WCS: 2305~2315MHz BRS: FCC: 2496~2690MHz IC: 2500~2690MHz	600: 663~698MHz 700F: 698~716MHz 776~787MHz S8C: 817~849MHz
Occupied BW Support		100MHz	100MHz	PCS/AWS: 20MHz WCS: 10MHz BRS: 100MHz	20MHz
Power Consumption		-48V@961mA 46W	-48V@746mA 36W	-48V@985mA 47W	-48V@423mA 21W
Input Power Range @ POI /POIL	Power Mode	POI: +48~ 0dBm/ POIL: +25~ -15dBm			
System Gain	Downlink	POI to N77H: -25~23dB, POIL to N77H: -2~38dB			
		POI to N77L: -25~23dB, POIL to N77L: -2~38dB			
		POI to MID: -28~20dB, POI to MID: -5~35dB			
		POI to LOW: -31~17dB, POI to LOW: -8~32dB			
	Uplink	0~10dB			
Maximum Composite Output Power(DL)		+23dBm	+23dBm	+20dBm	+17dBm
Maximum Composite Output Power(UL)		-35dBm(Typ)			
Noise Figure		≤ 8dB @maximum gain, Center Frequency			
VSWR		≤ 1.5:1 @ BTS interface port ≤ 1.5:1 @ Internal interface port ≤ 1.8:1 @LPR interface port			
Optical Loss		0~5dBo			
System Delay		< 2us			
Spurious		Meet FCC rules			
Dimension (WXDXH)	Head End Chassis	19.0 x 7.0 x 19.7 inches			
	POI/POIL	1.3 x 6.85 x 17.0 inches			

Weight	Head End Chassis	20.9 lbs (Include NMS-AC)				
	POI	6.17 lbs				
	POIL	5.00 lbs				
Operating Temperature	LPR/HUB	ADXV-L-23N77HM-P	ADXV-L-23N77LM-S	ADXV-L-20PAWBT-P	ADXV-L-1767S8C-S	ADXV-L-HUB-4-AC
		12.0 lbs	11.5 lbs	12.0 lbs	12.5 lbs	31.5 lbs
	POI/POIL	-10 ~ 50°C				
	LPR/HUB	-30 ~ 55°C				
Operating Humidity		5~90%RH				
Power Supply	Head-End	ADXV-H-NMS-AC: 100 to 240V, 50-60Hz with battery backup function ADXV-H-NMS-DC: -36V to -72V DC				
	HUB Unit	ADXV-L-HUB-4-AC: 100 to 240V, 47-63Hz				
Network Management System		Ethernet(RJ45)				
Optic Connectors		SC/APC (Green)				
Optic Wavelength		1310nm for downlink, 1550nm for uplink				
RF connector	POI	DIN (Female) SMA (Female) SMB (Female)				
	POIL	4.3-10 (Female) SMB (Female)				
	LPR	4.3-10 (Female) SMA (Female)				
Weather Resistance (Remote Modules)	POI/POIL	IP20				
	LPR/HUB	IP66				

9. MECHANICAL DRAWING

9.1 HE

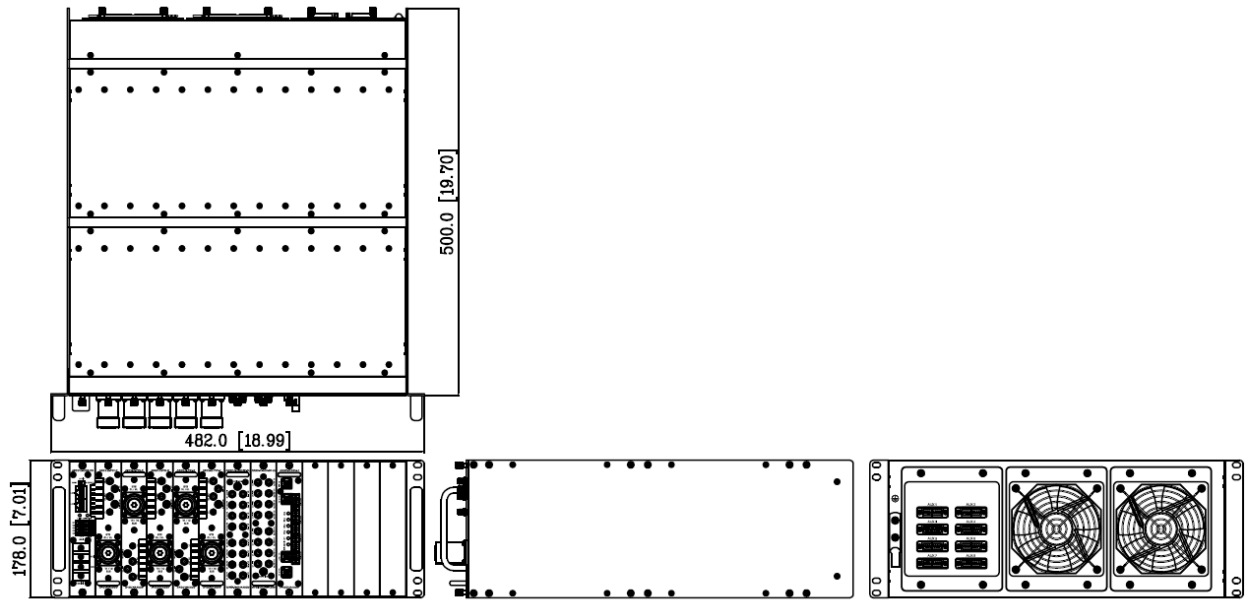


Figure 9-1 HE Drawing

9.2 ADXV-L-HUB-4-AC

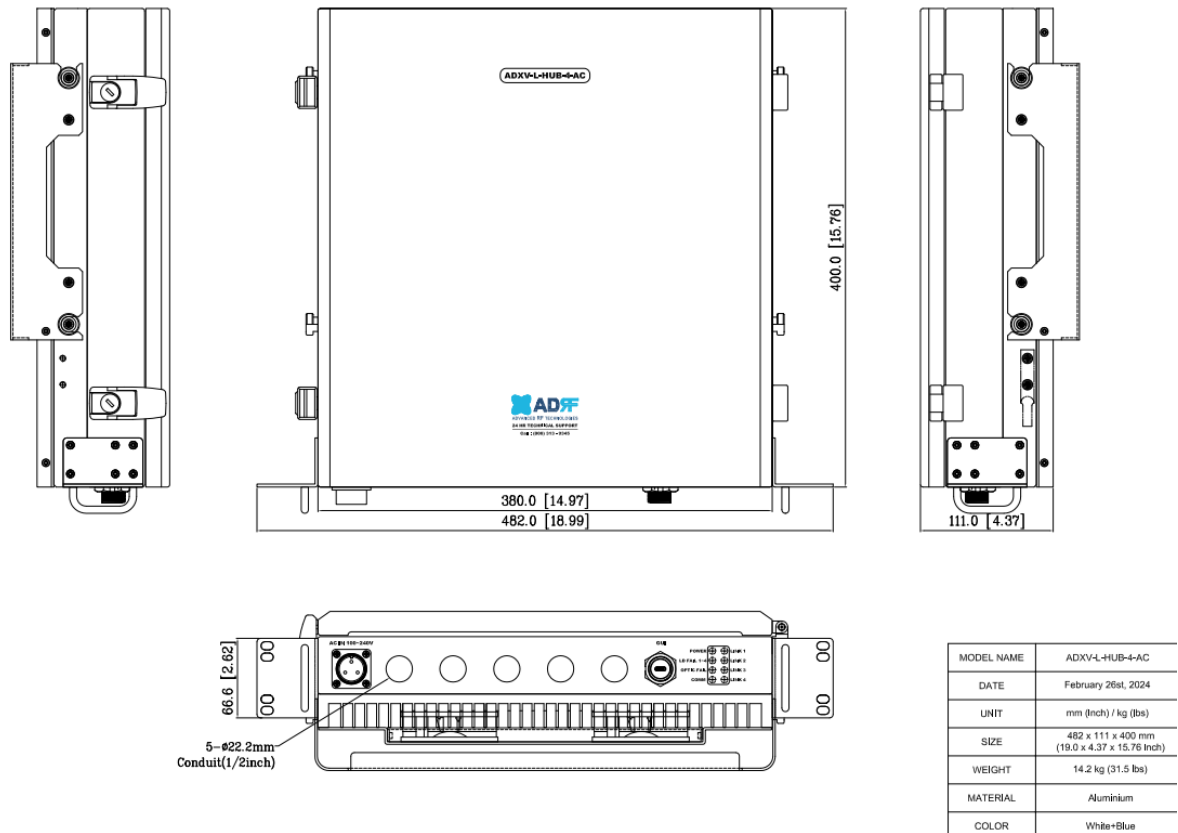


Figure 9-2 ADXV-L-HUB-4-AC Drawing

9.3 ADXV-L-23N77HM-P

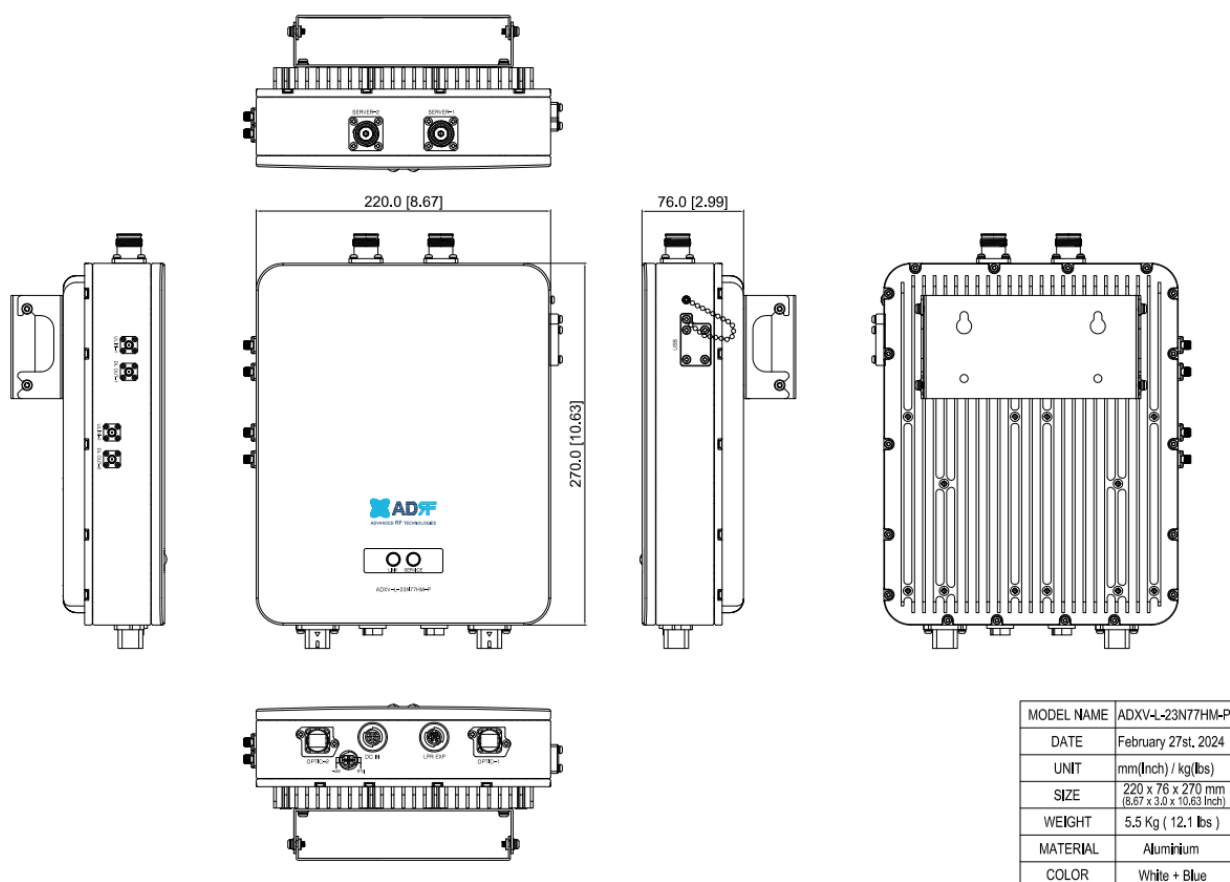


Figure 9-3 ADXV-L-23N77HM-P Drawing

9.4 ADXV-L-23N77LM-S

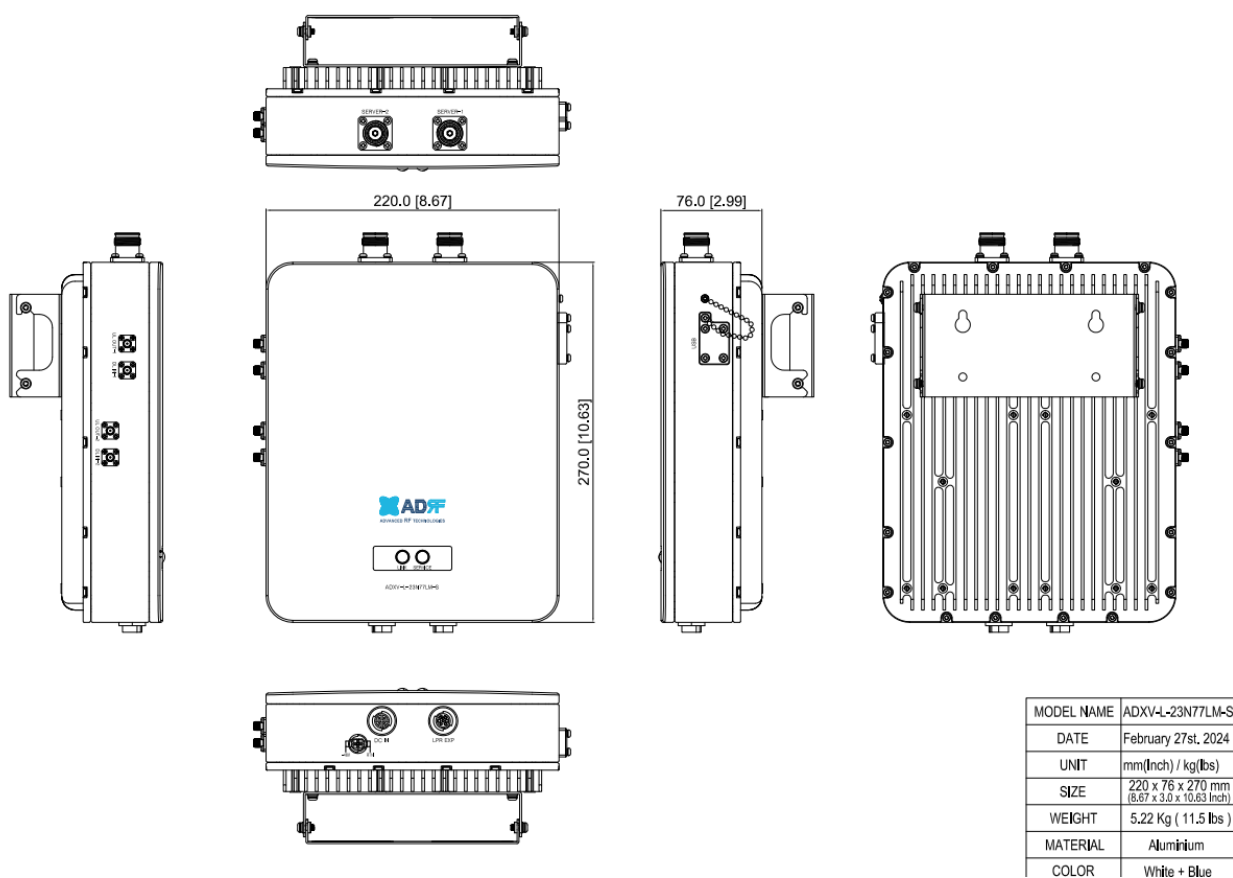


Figure 9-4 ADXV-L-23N77LM-S Drawing

9.5 ADXV-L-20PAWBT-P

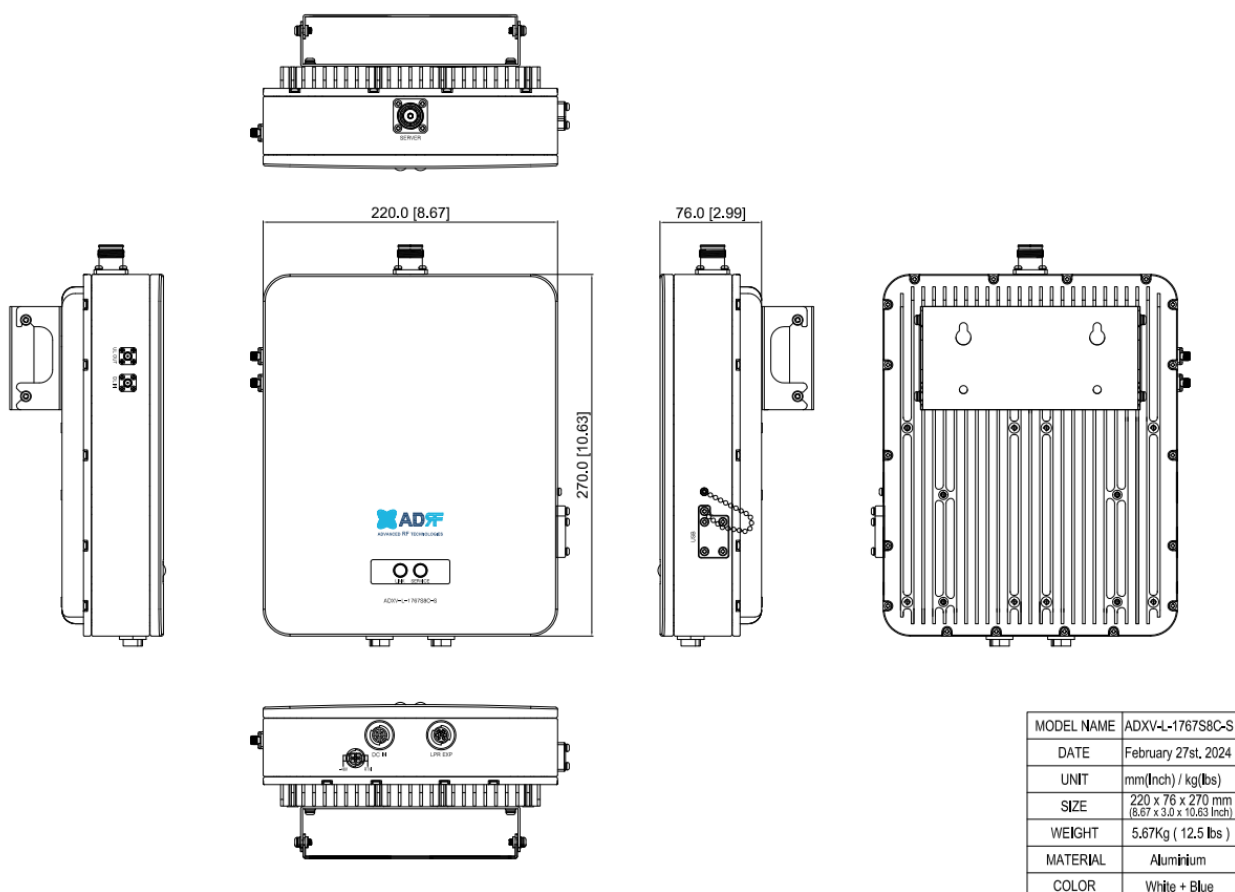


Figure 9-5 ADXV-L-20PAWBT-P Drawing

9.6 ADV-L-1767S8C-S

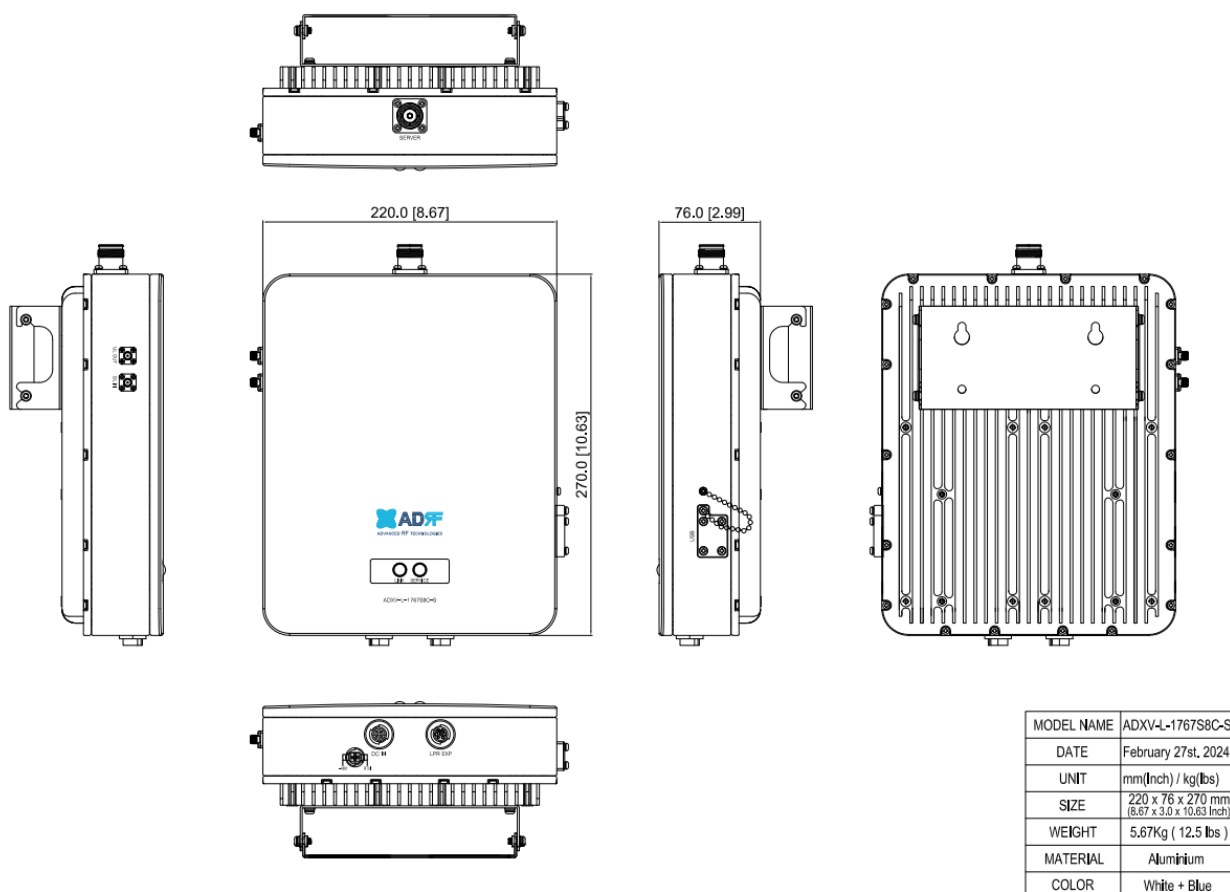


Figure 9-6 ADV-L-1767S8C-S Drawing