




# **HEAVY DUTY**

# **JHD916BT**

*AM/FM/RBDS/WB/USB/AUX-IN/BT/SiriusXM-Ready™ Heavy Duty Radio*

## **Installation and Operation Manual**

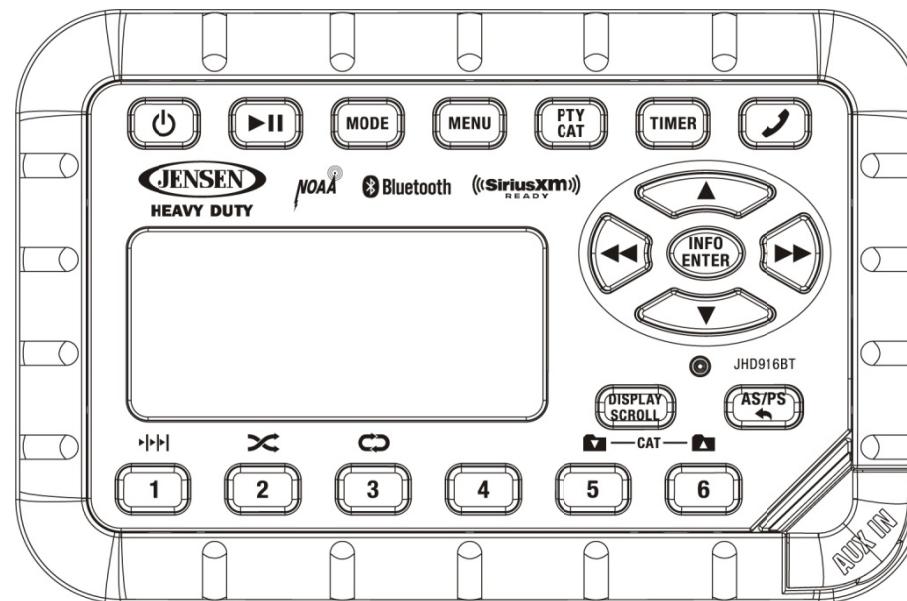

## CONTENTS

Introduction .....	1
Safety Information .....	2
Installation .....	3
Wiring .....	3
Basic Operation .....	5
Tuner Operation .....	7
USB Operation .....	9
SiriusXM Radio Operation .....	10
iPod® Operation .....	14
Bluetooth Operation .....	15
Care and Maintenance .....	17
Troubleshooting .....	17
Specifications .....	18

# INTRODUCTION

## System Features


Features of Jensen JHD916BTmobile audio system include:

- Full Dot Matrix LCD
- AM/FM US/ Turkey/ Italy/ Brazil Tuner with 12 Presets (6AM, 6FM)
- RBDS (Radio Broadcast Data Service) with PTY Search
- SiriusXM-Ready™ (requires SiriusXM Connect Tuner SXV300V1)
- USB Playback of MP3 and WMA files
- Weatherband Tuner with SAME Technology
- Mute
- Bluetooth (Supports A2DP, AVRCP and HFP)
- Loudness
- Electronic Bass, Treble and Balance Controls
- Output Power 9W x 2
- Clock 12/24 Hour Selectable
- Headphone output
- 2-Channel Pre-amp Line Level Outputs
- 2-Wire Power with Non-Volatile Memory and Clock/Time support
- Auxiliary Audio Input (Front 3.5mm Stereo Jack, Rear RCA)
- Compatible with JMICHFP hands free microphone (sold separately)

## Content List

- Jensen Heavy Duty Radio
- Hardware Kit
- Mounting Bracket
- 1/8" Auxiliary Cable
- Quick Reference Guide

## HARDWARE KIT CONTENTS

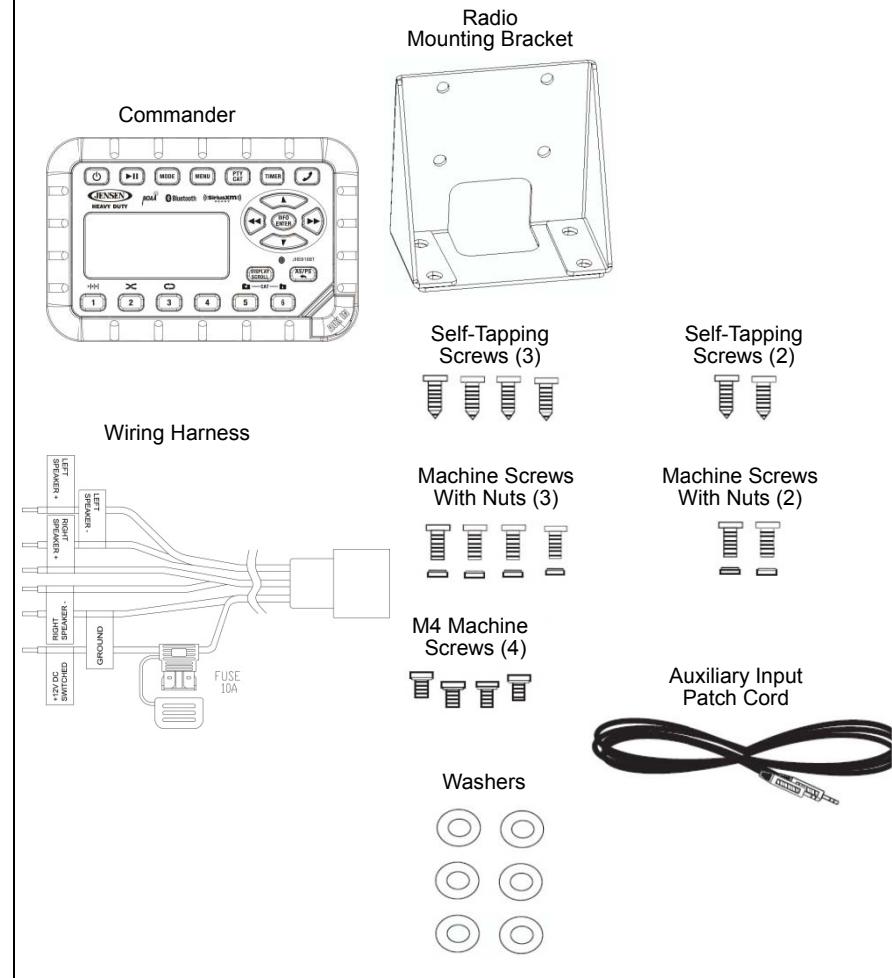

## SAFETY INFORMATION

### ***When Driving***

Keep the volume level low enough to be aware of the road and traffic conditions.

### ***When Washing Your Vehicle***

Do not expose the product to water or excessive moisture. Moisture can cause electrical shorts, fire or other damage.

### ***When Parked***

Parking in direct sunlight can produce very high temperatures inside your vehicle. Give the interior a chance to cool down before starting playback.

### ***Use the Proper Power Supply***

This product is designed to operate with a 12 volt DC negative ground battery system.

### **WARNING:**


- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

## INSTALLATION


### Mounting the Bracket

Two options are provided for mounting the bracket (self-tapping screws or machine screws with nuts) to ensure a mounting option ideal for your mounting location. Avoid obstructing airflow to the rear cooling fins on the radio.


**Notes:** *Mounting holes should be drilled to 7/32". Before drilling the mounting holes, make sure the area behind the panel where the holes are desired is clear of wires and fuels, vacuum and or brake lines.*

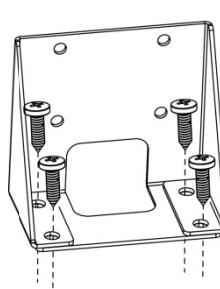

Self-Tapping  
Screws  
(Hole size 7/32")

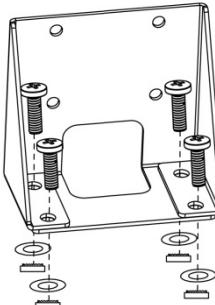



Machine Screws  
with Nuts  
(Hole size 7/32")

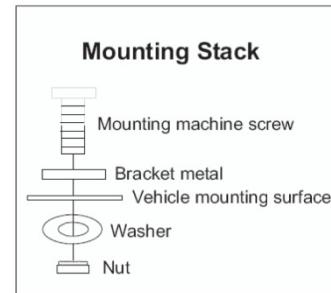

### Attaching the Radio

Once the bracket is securely mounted, use the four included M4 machine screws to fasten the bracket to the back of the radio. Alternatively, the radio can be mounted directly to the instrument panel if access to the rear of the instrument panel is available.

**CAUTION!** *Do not over tighten the 4 mounting screws. Hand tighten only.*

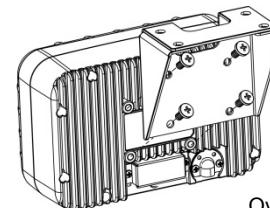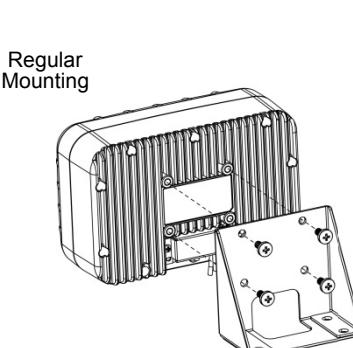


Overhead  
Mounting

### Mounting the Headphone Bracket


Three options are provided for mounting the bracket (self-tapping screws, machine screws with nuts or double-sided tape) to ensure a mounting option ideal for your mounting location.

Alternately, the headphone can be mounted directly to the instrument panel if access to the rear of the instrument panel is available.


**NOTE:** *Mounting holes should be drilled to 7/32". Before drilling the mounting holes, make sure the area behind the panel where the holes are to be drilled is clear of wires and fuel, vacuum and or brake lines.*

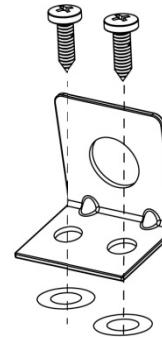


Self-Tapping  
Screws  
(Hole size 7/32")

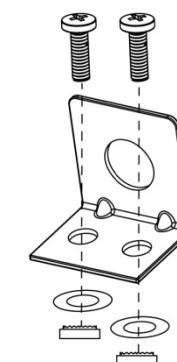



Machine Screws  
with Nuts  
(Hole size 7/32")

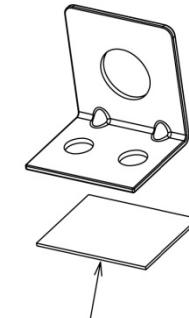

Double-Sided Tape

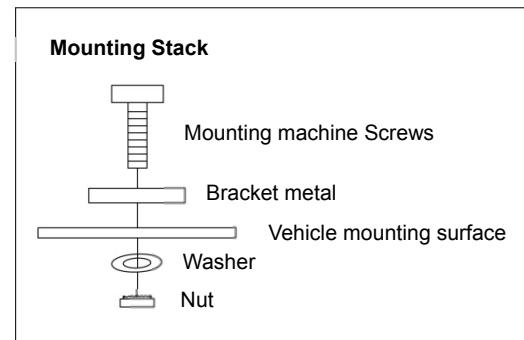


## WIRING

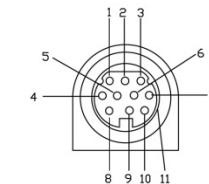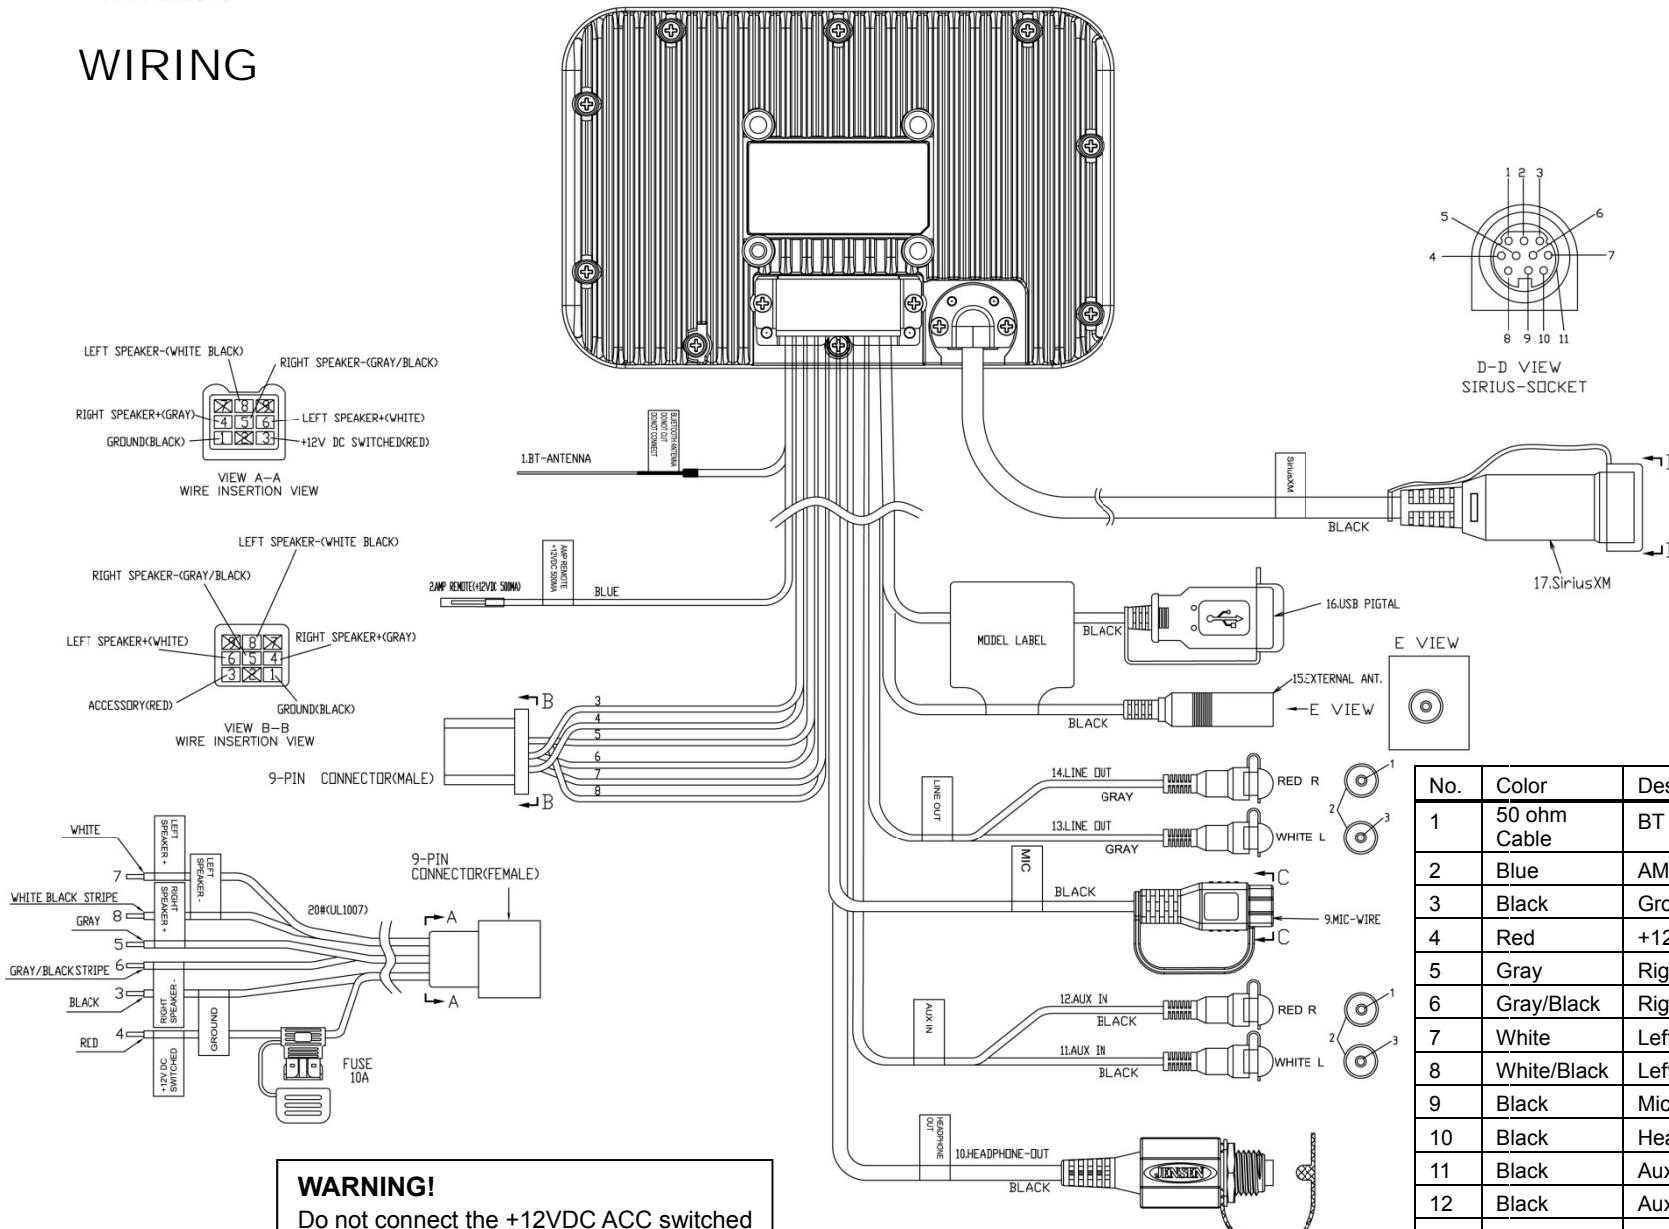

D-D VIEW  
SIRIUS-SOCKET

No.	Color	Description
1	50 ohm Cable	BT Antenna
2	Blue	AMP Remote (+12VDC 500MA)
3	Black	Ground
4	Red	+12V DC SWITCHED
5	Gray	Right Speaker (+)
6	Gray/Black	Right Speaker (-)
7	White	Left Speaker (+)
8	White/Black	Left Speaker (-)
9	Black	Mic
10	Black	Headphone out
11	Black	Aux-In
12	Black	Aux-In
13	Gray	Line-Out
14	Gray	Line-Out
15	Black	External Antenna
16	Black	USB Pigtail
17	Black	SiriusXM

## BASIC OPERATION

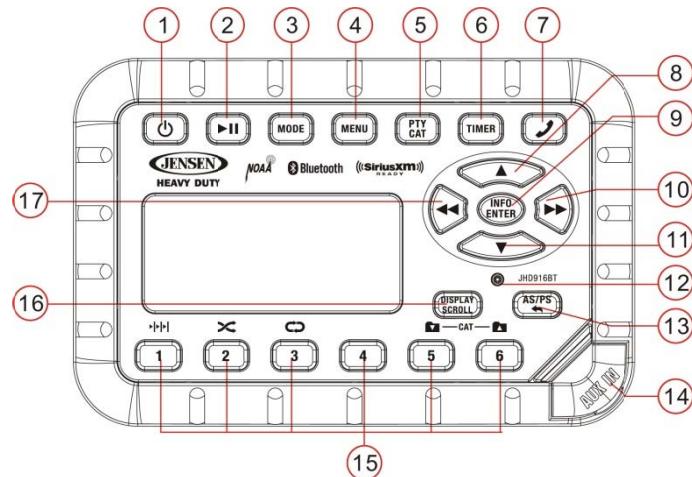

### Power On/Off

Press the **POWER** button (1) to turn the unit on or off.

### Volume Control

To increase the volume, press the ▲ button (8). To decrease the volume, press the ▼ button (11).

### Play/Pause/Mute

Press the ▶|| button (2) on the control panel to pause or mute the audio output. Press ▶|| button again to unmute or restore the audio output to the previous level.

### Mode

Press the **MODE** button (3) to select a different mode of operation, as indicated on the display panel. Available modes include the following: FM > AM > Weather Band > Auxiliary > BT Audio > iPod/USB > SXM (SiriusXM). FM is the default source when a prior source is no longer available.

**NOTE: iPod, USB or SiriusXM (SXM) mode will be skipped if the device is not installed.**

**NOTE: Weather Band or SiriusXM (SXM) mode will be skipped when the Region menu option is set to "Turkey / Italy / Brazil".**

### Reset

The reset button (12) should be activated for the following reasons:

- Initial installation of the unit when all wiring is completed
- Function buttons do not operate
- Error symbol on the display

Use a ball point pen or thin metal object to press the reset button. This may be necessary should the unit display an error code.

### Audio Menu

Press the **MENU** button (4) to access the audio menu. You can navigate through the audio menu items by pressing the **MENU** button repeatedly. Once the desired menu item appears on the display, adjust that option by pressing the ▲ or ▼ buttons (8, 11) within 5 seconds. The unit will automatically exit the audio menu after five seconds of inactivity. The following menu items can be adjusted.

#### Bass Level

Use the ▲ or ▼ buttons (8, 11) to adjust the Bass level range from "-6" to "+6".

#### Treble Level

Use the ▲ or ▼ buttons to adjust the Treble level range from "-6" to "+6".

#### Balance

Use the ▲ or ▼ buttons to adjust the Balance between the left and right speakers from "Left 12" to "Right 12".

### System Menu

- Press and hold the **MENU** button (4) for more than 2 seconds to enter the system menu. The first menu item, "Key Beep", will appear on the display.
- Press the ▲ or ▼ buttons (8, 11) repeatedly to navigate the system menu.
- Press the **INFO/ENTER** button (9) to select the desired item.
- Press the **INFO/ENTER** button again to adjust the selected menu item.

The following items can be adjusted:

- Key Beep (On / Off): Turn the audible beep On/Off (heard when functions/buttons are selected).
- LCD Backlight (1-10): Adjust LCD brightness.
- LCD Contrast (1-10): Adjust LCD contrast.
- Tuning Region (USA / EURO): Set frequency spacing for various regions.
- Loudness (On / Off): When the volume is low, turn the LOUD ON to improve bass performance.
- Power-Off Clock (Off, 1-10): Brightness setting of clock when powered off
- Clock Format (12Hour / 24Hour): Select 12 or 24 hour display mode.
- Set Clock (HH : MM):
  - Press the **INFO/ENTER** button (9) to view the clock set screen.
  - Press the ▲ or ▼ buttons (17, 10) to move to the next digit.

- Press the ▲ or ▼ buttons (8, 11) to adjust the selected digit.
- Rear AUX Enable (On/ Off)
- Preset-Only Tuning (On / Off)
- Sirius XM Settings Menu (only appears when Sirius XM tuner is connected and in Sirius XM mode)
  - Clock Autoset (On/Off): Sets clock based on SXM data
  - Time Zone1 (Atlantic / Eastern / Central / Mountain / Pacific / Alaska)
  - Daylight Saving Time (Yes/No)
  - Set Lock Code: \_\_\_\_\_
  - Locked Channels: List of Channels (Locked / Unlocked)
  - SXI Firmware Version
- Weather Alert Configuration
  - Min Alert Level (All / None / Warnings / Watches)
  - Auto-On Enable (Yes/No): Select “Enabled” to turn on the radio when NOAA alerts are issued. This function only works when the +12V switched is on.
  - Alert Volume (Select Volume Level 0-40)
  - Clear SAME Codes <ENTER>
  - SAME Code 1: \_\_\_\_\_
  - SAME Code 2: \_\_\_\_\_
  - SAME Code 3: \_\_\_\_\_
  - SAME Code 4: \_\_\_\_\_
  - SAME Code 5: \_\_\_\_\_
  - SAME Code 6: \_\_\_\_\_
  - SAME Code 7: \_\_\_\_\_
- Battery Alarm (On/Off)
- Battery Auto-Off (On/Off)
- Bluetooth Setup
  - BT: (On/Off)
  - BT HFP Volume: (Select Volume Level 0-40) Hands-free call volume
  - BT Device List <Enter>: View a list of devices paired with the unit
    - Lock
    - Connect / Disconnect
    - Delete
  - BT Pair <Enter to enable>
  - BT Auto Answer: (On/Off)
- Reset System Defaults <ENTER>: Press the **INFO/ENTER** button (9) to return the unit to factory default set up values.

## Auxiliary Input

To access an auxiliary device:

1. Connect the portable audio player to the 1/8" AUX IN on the front panel (14)
2. Press the **MODE** button (3) to select “Auxiliary” mode.
3. Press **MODE** again to cancel “Auxiliary” mode and go to the next mode.

## Liquid Crystal Display (LCD)

The current frequency and activated functions are shown on the LCD panel.

***NOTE: LCD panels may take longer to respond when subjected to cold temperatures for an extended period of time. In addition, the visibility of the characters on the LCD may decrease slightly. The LCD display will return to normal when the temperature increases to a normal range.***

## Setting the Clock

To set the clock to display the current time, turn the vehicle ignition on and turn the radio on.

Enter the system menu and adjust the clock by selecting the “Set Clock” menu item.


- Press the **INFO/ENTER** button (9) to view the clock set screen.
- Press the ▲ or ▼ buttons (8, 11) to adjust the selected digit.

Press the **◀◀** or **▶▶** buttons (17, 10) to move to the next digit. When no adjustment is made for five seconds, the time will become set and normal operation will resume.

## Scroll

When the information is too long to be displayed on the LCD, press the **DISPLAY/SCROLL** button (16) to view the entire title. The information will scroll twice and then return to abbreviated text.

## TUNER OPERATION

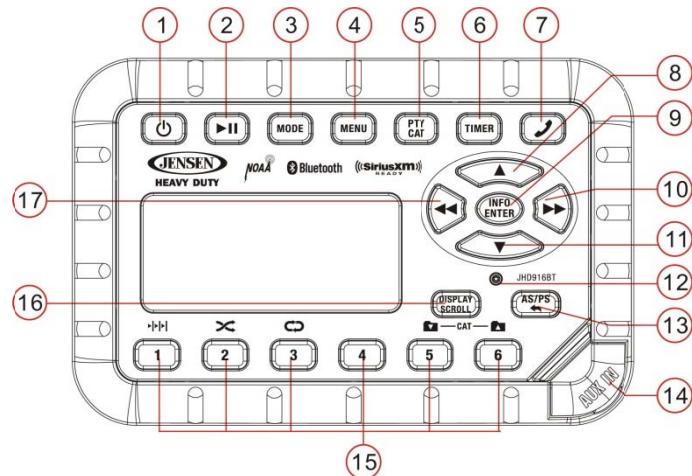

### Select a Band

Press the **MODE** button (3) to change between FM, AM and Weatherband (WB).

### Manual Tuning

Press the **◀◀** or **▶▶** buttons (17, 10) to seek stations up/down step by step.

### Auto Seek Tuning

Press and hold the **◀◀** or **▶▶** buttons (17, 10) to automatically seek the next or previous strong station.

**NOTE:** Seek tuning is not available for weather band channels. Use the up or down tuning buttons to manually select any of the seven available weather band channels.

### Preset Stations

Six numbered preset buttons store and recall stations.

#### Store a Station

Select a station, then *press and hold* a preset button from **1 – 6** on the number buttons (15) for two seconds. The preset number will appear on the LCD.

#### Recall a Station

Press a preset button from **1 – 6** on the number buttons to select the corresponding stored station.

**NOTE:** Preset buttons are pre-assigned frequencies in weather band mode.

### Automatically Store / Preset Scan (AS/PS)

#### Automatically Store

Select an AM or FM band. Press and hold the **AS/PS** button (13) for more than 2 seconds to automatically select 6 strong stations. "Storing Presets" appears on the screen and the new stations replace any stations already stored.

#### Preset Scan

Select a band. Press **AS/PS** (13) to scan stations stored in the current band. The unit will pause for 10 seconds at each preset station. Press **AS/PS** again to stop scanning when the desired station is reached.

### RBDS Operation

This unit is equipped to display RBDS (Radio Broadcast Data Service) information when broadcast by the radio station.

**NOTE:** Radio stations broadcasting RBDS may not be available in your listening area.

In FM radio mode, press the **PTY/CAT** button (5) to list the following Program Type (PTY) options: ANY / News / Information / Sports / Talk / Rock / Classic Rock / Adult Hits / Soft Rock / Top 40 / Country / Oldies / Soft / Nostalgia / Jazz / Classical / Rhythm and Blues / Soft Rhythm & Blues / Foreign Language / Religious Music / Religious Talk / Personality / Public / College / Weather / Emergency Test / EMERGENCY

To search for stations in a PTY category:

1. Press the **PTY/CAT** button (5) to view the current PTY category.
2. Press the **◀◀** or **▶▶** buttons to move through the list of available categories and select the program type you wish to search.
3. After selecting the desired PTY, press the **INFO/ENTER** button (9) to search the band for broadcasts of this type. "PTY Search" is displayed while the tuner is searching.

**NOTE:** Performing a PTY search on "ANY" will Seek Tune and stop on any station broadcasting RBDS, regardless of the program type.

## Weather Band Operation

### **What is the NOAA Weather Radio/Weatheradio Canada?**

NOAA (National Oceanic and Atmospheric Administration) is a nationwide system that broadcasts local weather emergency information 24 hours a day via the National Weather Service (NWS) network. The U.S. network has more than 530 stations covering the 50 states as well as the adjacent coastal waters, Puerto Rico, the U.S. Virgin Islands and the U.S. Pacific Territories. Each local area has its own transmitting station and there are a total of seven broadcasting frequencies used. A similar system is available in Canada under the Weatheradio Canada service administered by Environment Canada.

### **Tuning to Weatherband**

Press and hold the **MODE** button (3) to access the Weatherband. The indication "WB" will appear on the display panel, along with the current number and channel indication: "WB-1", "WB-2", "WB-3", "WB-4", "WB-5", "WB-6" or "WB-7". The seven frequencies are shown in the following table:

**WB Frequencies**

Frequency (MHz)	Preset
162.400	2
162.425	4
162.450	5
162.475	3
162.500	6
162.525	-
162.550	1

The above table also shows which preset button will access the frequency. Note that one frequency cannot be accessed using a preset button. The frequency can only be reached using the tuning controls.

Use the **◀◀** or **▶▶** buttons (17, 10) or the preset buttons to tune to each of the seven channels until you find the weatherband station broadcasting in your area.

### **How many stations can I expect to receive?**

Since the broadcasts are local weather and information, the transmission power is usually very low (much less than standard AM or FM stations) so you will usually receive only one station unless you are on the edge of two or more broadcast signals. The most you will receive will be two or three, and that is rare.

### **Is it possible I won't receive any stations?**

Depending on where you are located, there is a possibility you will receive only a very weak signal or none at all. Also, similar to AM and FM signals, weatherband signals are subject to

surrounding conditions, weather, obstructions of the signal by hills or mountains, etc.

### **NOAA Weather Alert**

The Weather Alert function adds an additional level of user safety by automatically switching from any of the available function modes to weather band for a minimum of 60 seconds if a NOAA warning tone is received/ detected. If no additional warning tone is received for 60 seconds, the unit will switch back to the last known function mode. See "System Menu" on page 6 to learn how to turn the WB Alert feature on.

### **SAME Decoding and Filtering**

Specific Area Message Encoding (SAME) data is also broadcast prior to alert broadcasts. SAME data contains information about the geographic region affected by the alert, the type of alert, and its effective time. The geographic region included in the SAME data is called the Geographical Area code and has the form PSSCCC where "P" represents a portion of the county, "SS" is a two-digit state, territory, or offshore marine area identifier and "CCC" identifies the county, province, or major metropolitan area within the state. This unit can be configured through the system setting menu with up to seven Geographical Area codes to limit the automatic tuning or power on functions described above.

SAME data also includes the type of alert being broadcast. This unit can be configured through the System Setting Menu to limit the automatic tuning or power on functions based on the type of alert.

SAME is activated by programming a 6 digit code - called a FIPS code - into your radio. The FIPS code or Federal Information Processing System code is a six digit code that identifies the states and counties (or parishes) in the United States. The first digit identifies the county subdivision. The next two digits identify the state or territory, and the last three identify the county. The FIPS code for your area can be found by calling the NWS toll free number or visiting the web site.

The phone number is 1-888-NWS-SAME (1-888-697-7263). Upon calling, an automated system will prompt you to enter your state and county. When you confirm the information, the system will provide your six digit FIPS code.

The web site is: [www.nws.noaa.gov/nwr/indexnw.htm](http://www.nws.noaa.gov/nwr/indexnw.htm). Upon selecting your state from the chart, you will see a listing of all the counties in that state. For each county there is a listing of the SAME# (FIPS code), the location of the transmitter, the WB frequency, the call sign, the transmitter power and miscellaneous remarks.


---

**NOTE: Because broadcast areas overlap you may want to set more than one S.A.M.E. location. If you live near the border between counties, you may want to receive alerts from more than one tower.**

---

Your radio is capable of being programmed with up to 7 different FIPS location codes. The default code has been programmed at the factory - 000000 - to respond to all messages within your area.

## USB OPERATION

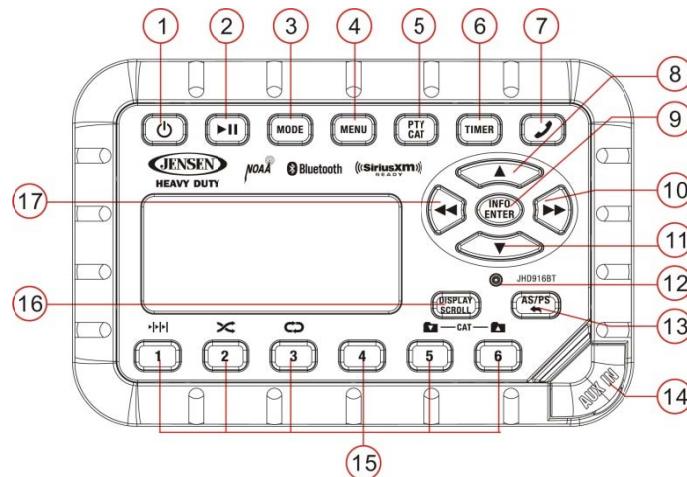

### Digital File Playback

If the user connects a USB mass storage device, the radio automatically powers on, if necessary, and switches to digital file playback mode. Changing modes or turning off the radio pauses playback. Playback shall resume exactly where paused when returning to digital file playback mode.

### Inserting a USB Device

Insert your USB drive into the USB connector routed from the rear of the radio. The unit will automatically search for MP3 and WMA files on the device and begin playback. You can access USB mode from any other mode by pressing the **MODE** button (3).

**WARNING: Do not remove the USB device when USB PLAY mode is active. Press MODE (3) to change to another mode before removing the device.**

### Controlling File Playback

#### Selecting Tracks

Press the **◀◀** or **▶▶** buttons (17, 10) to advance to the next track/ file. The selected track number will appear on the display. Press and hold the **◀◀** or **▶▶** buttons to fast forward or fast reverse. Playback begins when the button is released.

#### Play/Pause Playback

Press the **▶||** button (2) to suspend playback. "Pause" is displayed on the screen.

Press the **▶||** button again to resume play.

#### Previewing Tracks

Press the **1/INT** button to play the first 10 seconds of each track in the current folder sequentially. Press **1/INT** again to stop Intro Scan and resume normal play at the current track.

#### Repeat Play

- Press the **3/RPT** button during disc play to repeat the current track.
- Press **3/RPT** again to stop repeat play.

#### Random Play

- Press the **2/RDM** button during playback to play all tracks in the current folder in random, shuffled order.
- Press **2/RDM** again to stop random play.

#### Folder Navigation (MP3 Only)

- Press the **PTY/CAT** button (5) to view a list of all songs in the current folder.
- Press the **▲** or **▼** buttons (8, 11) to navigate the list.
- Press the **INFO/ENTER** button (9) to play the highlighted song or view files in the selected folder. Continue pressing **INFO/ENTER** until the desired file is selected.
- Press the **PTY/CAT** button again to navigate up through the file structure.
- The unit will automatically exit the folder navigation menu after 5 seconds of inactivity.

### MP3 Specifications


#### Notes on MP3 Playback

- Any directory that does not include an MP3 file is skipped
- Maximum number of folders: 512 (including skipped directories)
- Maximum number of folder levels: 12
- Maximum number of MP3 files: 999
- Maximum number of characters for MP3 file name and folder name: 32
- Maximum number of Characters of ID3 Tag:
  - ID3 Tag version 1.0: 32
  - ID3 Tag version 2.x: 32

#### File Playing Order

Files will be continually played sequentially within the current folder. To play songs in another folder, press the **PTY/CAT** button (5) twice to move up a folder level. Press the **▲** or **▼** buttons (8, 11) to navigate the list and then press the **INFO/ENTER** button (9) to access the selected song or folder.

## SIRIUSXM™ RADIO OPERATION

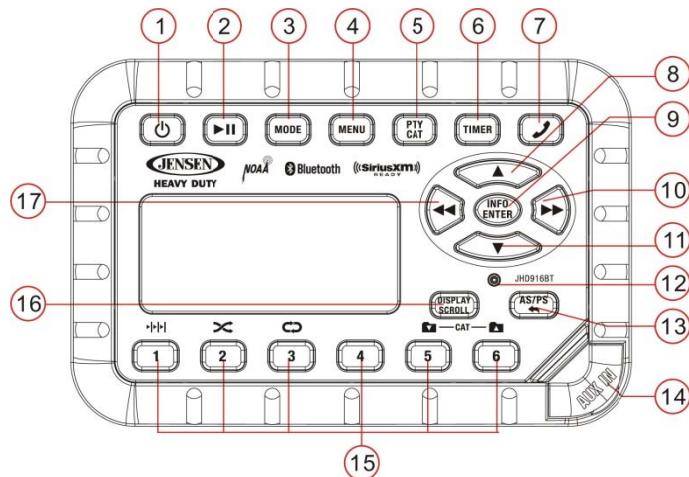

**NOTE: Only SiriusXM™ brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).**

### Accessing SIRIUSXM Mode (Requires optional SIRIUSXM tuner)

Press the **MODE** button (3) to change the mode to SiriusXM mode.

### Accessing your SiriusXM ID

The SiriusXM ID is required for activation. To display your SiriusXM radio ID, use the **◀◀** button (17) to tune to channel “000”. The screen will display “Radio ID” with the ID displayed in the middle of the LCD screen. The SiriusXM radio ID is 8 characters long and does not include the letters I, O, S, or F.

### Category Tuning

1. Press the **PTY/CAT** button (5) to access Category mode.
2. While in category mode, press **5/CAT-** OR **6/CAT+** buttons to choose a category.
3. Press the **◀◀** or **▶▶** buttons (17, 10) to navigate channels in that category.  
(The current channel number within the chosen category will always be the default first channel tuned.)
4. Press the **INFO/ENTER** button (9) to select the desired channel.

### Channel Up/Down Tuning

Press the **◀◀** or **▶▶** buttons (17, 10) to search for a channel. Press and hold the **◀◀** or **▶▶** buttons to fast search.

### Direct Tuning Mode

1. Press and hold the **INFO/ENTER** button to enter direct tuning mode.
2. Press **◀◀** or **▶▶** buttons to change the first of three digits for the desired channel in the direct entry screen.
3. Press the **INFO/ENTER** button to confirm the entered digit and move to the second digit field.
4. Press **◀◀** or **▶▶** buttons to select the second digit.
5. Press the **INFO/ENTER** button to confirm the entered digit and move to the third digit field.
6. Press **◀◀** or **▶▶** buttons to select the third digit.
7. Press the **INFO/ENTER** button to confirm the three digit channel and tune to the selected channel.

### Storing Preset Channels

The preset buttons (5-10) can be used to store 6 channels, allowing convenient access to your favorite channels.

#### Programming Channels

1. Select the channel you want to store in memory.
2. Press and hold a preset button (15) until the corresponding preset button number appears.
3. Repeat steps 1 and 2 to program additional channels.

#### Preset Recall

Press one of the six preset buttons (15) to directly select a preset channel stored in the current band.

#### Preset Scan

Press **AS/PS** button (13) to scan stations stored. The unit will pause for 10 seconds at each preset station.

#### Preset Tuning

In Preset Tuning Mode, you can use the **◀◀** or **▶▶** buttons to access all 6 preset stations in sequential order. Access preset tuning mode through the system menu.

Set Preset-Only Tuning to “ON.”

## Satellite Signal Strength

The display will indicate satellite reception strength as shown below.

Signal Strength	Strength Display
No Signal	
Weak	
Good	
Excellent	

## Channel Lock

Access Channel Lock through the System Menu under the "SiriusXM Satellite Radio" menu. See "System Menu" on page 5.

1. Select "Set Lock Code" and press the **INFO/ENTER** button (9).
2. Enter the default lock code of "0000". To set the lock code:
  - a. Press the **◀◀** or **▶▶** buttons (17, 10) to enter the first digit of the default code.
  - b. Press the **INFO/ENTER** button to move to the next digit.
  - c. Repeat above steps to enter all 4 digits of the default code.
  - d. Press the **◀◀** or **▶▶** buttons (17, 10) to enter the first digit of the new code.
  - e. Press the **INFO/ENTER** button to move to the next digit.
  - f. Repeat above steps to enter all 4 digits.
  - g. Repeat above steps to confirm the new code.
3. After setting a new four digit code, you can lock channels by entering the "Locked Channels" menu.
4. Upon entering the Locked Channels list, you will be prompted to enter your four digit code.
  - a. Press the **◀◀** or **▶▶** buttons (17, 10) to enter the first digit.
  - b. Press the **INFO/ENTER** button to move to the next digit.
  - c. Repeat above steps to enter all 4 digits.
5. After entering the code, you can navigate the list using the **◀◀** or **▶▶** buttons (17, 10) to highlight the channels.
6. Press the **INFO/ENTER** button to Lock (indicated by a  icon) or Unlock  the selected channel.

## Reset SiriusXM Channel Lock Code

If you forget your Parental Control lock code, use the following directions to reset the code to the default "0000". Resetting the lock code will not affect the locked channels list.


1. In SiriusXM mode, tune to CH-0
2. Tune the volume to 0.
3. Press the **POWER** button (1) to power off the unit.
4. With power off, *press and hold* the **POWER** button to lights on the LCD.
5. Press the **3** from the number buttons (15) to lights off the LCD after several seconds.
6. Press the **POWER** button to power on the unit.
7. The lock code has now been reset to "0000"

## Advisory Messages Reported by the SiriusXM Vehicle Tuner

On-Screen Display	Advisory Message	Cause	Explanation/Solution
Check Antenna	Check Antenna	The radio has detected a fault with the SiriusXM antenna. The antenna cable is either disconnected or damaged.	<ul style="list-style-type: none"> <li>Verify that the antenna cable is connected to the SiriusXM Connect Vehicle Tuner.</li> <li>Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged.</li> </ul>
Check Tuner	Check Tuner	<ul style="list-style-type: none"> <li>The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner.</li> <li>The tuner may be disconnected or damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio SiriusXM mating connector/ cable.</li> <li>If the problem persists, disconnect and reconnect the tuner and then contact your dealer.</li> </ul>
No signal	No signal	The SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.	<ul style="list-style-type: none"> <li>Verify that your vehicle is outdoors with a clear view of the southern sky.</li> <li>Verify that the SiriusXM magnetic mount antenna is mounted on a metal surface on the outside the vehicle.</li> <li>Move the SiriusXM antenna away from any obstructions.</li> <li>Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged.</li> <li>If the problem persists, disconnect and reconnect the tuner and then contact your dealer.</li> </ul>
Scrolling "Subscription Updated" – press any key to continue"	Subscription Updated	The radio has detected a change in your SiriusXM subscription status.	<ul style="list-style-type: none"> <li>Press any key to clear the message.</li> <li>No further action is required.</li> <li>Questions about your subscription in the United States please visit <a href="http://www.siriusxm.com/activatenow">http://www.siriusxm.com/activatenow</a> or call SiriusXM Listener Care at 1-866-635-2349</li> <li>Questions about your subscription in Canada, please visit <a href="http://www.siriusxm.ca/help/activation-help/">http://www.siriusxm.ca/help/activation-help/</a> or call XM Listener Care at 1-877-438-9677</li> </ul>
Chan Unavailable	Channel Not Available	The channel that you have requested is not a valid SiriusXM channel or the channel that you were listening to is no longer available. You may also see this message briefly when first connecting a new SiriusXM Connect Vehicle tuner. Visit <a href="http://www.siriusxm.com">www.siriusxm.com</a> for more information about the SiriusXM channel lineup.	Visit <a href="http://www.siriusxm.com/channellineup">http://www.siriusxm.com/channellineup</a> for more information about the SiriusXM channel lineup.
Ch Unsubscribed	Channel Not Subscribed	The channel that you have requested is not included in your SiriusXM subscription package or the channel that you were listening to is no longer included in your SiriusXM subscription package.	<ul style="list-style-type: none"> <li>Questions about your subscription in the United States please visit <a href="http://www.siriusxm.com/activatenow">http://www.siriusxm.com/activatenow</a> or call SiriusXM Listener Care at 1-866-635-2349.</li> <li>Questions about your subscription in Canada please visit <a href="http://www.siriusxm.ca/help/activation-help/">http://www.siriusxm.ca/help/activation-help/</a> or call XM Listener Care at 1-877-438-9677.</li> </ul>

On-Screen Display	Advisory Message	Cause	Explanation/Solution
Chan Locked	Channel Locked	The channel that you have requested is Locked by the radio Parental Control feature.	See the section on Parental Control, page 11 for more information on the Parental Control feature and how to access locked channels.
Enter Code: _____	Enter Lock Code	User prompted to enter the lock/unlock code.	Enter the four digit code to unlock the channel
Wrong Code	Invalid Lock Code	The unlock code entered by the user is incorrect	<ul style="list-style-type: none"> <li>• Input the correct four digit code to unlock the channel.</li> <li>• Reset lock code to default following instructions on page 6</li> </ul>

## IPOD® OPERATION

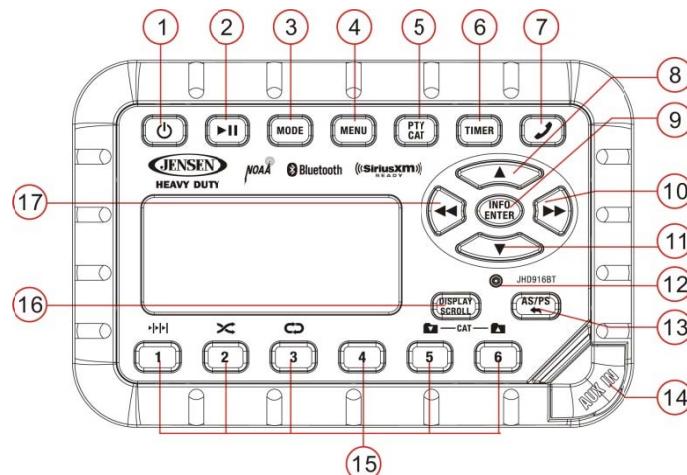


This unit is equipped with an iPod ready function that will allow you to control your iPod (if compatible) using the control panel buttons. The following iPod versions are supported:

- iPod Nano 7
- iPod Touch 6
- iPhone 4s, 5, 5c, 5s, 6, 6 plus, 6s

**NOTE: Earlier model iPod's are not supported because they do not implement the required control protocol. Also, the iPod shuffle is not supported because it does not utilize the 30-pin Apple iPod Connector. These unsupported iPod models may be connected to the radio using one of the Auxiliary Inputs.**

### Accessing iPod Mode

Connect a supported iPod or iPhone to the front panel USB (or Rear USB) connector. The iPod icon illuminates in the bottom left corner of the LCD whenever an iPod or iPhone is attached to the USB connector. Music playback begins automatically. To enter iPod mode from any other source, press the **MODE** button (3) until "iPod" appears on the display. If the user connects an iPod containing no songs, the radio will display a message stating "No Songs" in iPod mode.

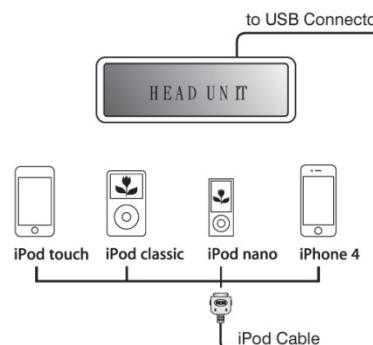

### Turning the iPod On/Off

The iPod power turns on automatically when it is connected to the front panel USB port, as long as the vehicle ignition is turned on. You can turn the iPod off by disconnecting it or by turning the ignition off. When the ignition is off, the iPod will pause and then enter sleep mode after 2 minutes. While the iPod is connected, the power cannot be turned on or off from the iPod itself.

### Controlling Playback

#### Pausing Playback

During playback, press the **►||** button (2) to pause the iPod player. "Pause" will appear on the LCD. Press **►||** again to resume playback.

#### Repeat Play

During playback, press the **3/RPT** button to repeat the current song. "RPT" will appear on the LCD. Press **3/RPT** again to stop repeat playback.

#### Random Play

During playback, press the **2/RDM** button to play all songs in the current category in random order. Random play will begin once the current song has finished playing. "RDM" will appear on the LCD. Press **2/RDM** again to stop random playback.

#### Selecting Tracks

During playback, press the **◀◀** or **▶▶** buttons (17, 10) to play the previous or next track in the current category. Press the **◀◀** button once to play the song from the start position or press **◀◀** twice to play the previous track. Pressing the **◀◀** button during the first 2 seconds of a track will play the previous track.

After 2 seconds, this action returns to the beginning of the current track.

*Press and hold the **◀◀** or **▶▶** button to fast reverse/forward the song.*

**NOTE: If you press and hold the **◀◀** or **▶▶** button to change the current song to the previous/next song, you will exit fast reverse/forward mode.**

### Alternate Display Mode

Press the **DISPLAY/SCROLL** button (16) to change the display information between single and double line text display.

### Playlist Search

Press the **PTY/CAT** button (5) to access Playlist selection mode. While in Category mode, press the **◀◀** or **▶▶** buttons to choose file search by Playlist, Artist, Album, Genre, Song, Audiobook or Podcast. Press the **INFO/ENTER** button (9) to select the search mode. Use the **◀◀** or **▶▶** buttons to search the available files on the iPod.


Press the **INFO/ENTER** button to play the selected song or file.

## BLUETOOTH OPERATION

The JHD916BT includes built-in Bluetooth technology that allows you to connect this head unit to Bluetooth devices for streaming audio playback.

### About Bluetooth Technology

Bluetooth is a short-range wireless radio connectivity technology developed as a cable replacement for various electronic devices. Bluetooth operates in 2.4 GHz frequency range and transmits voice and data at speeds up to 2.1 Mbit/s over a range of up to 10 meters.

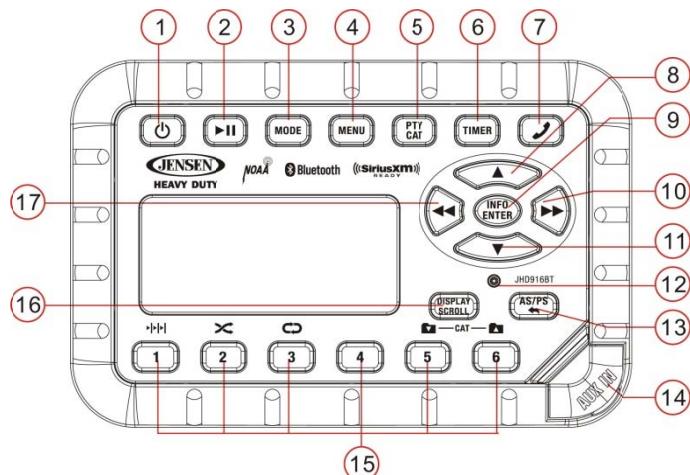

### Bluetooth Menu Options

**NOTE:** Please note that some BT menu options are only available while the unit is in Bluetooth Audio mode.

Press and hold the **MENU** button (4) to enter menu adjustment mode. Press the **▲** or **▼** buttons (8, 11) repeatedly to view the Bluetooth Setup Menu options. Press **INFO/ENTER** button (9) to choose the highlighted option.

- BT ON/OFF:** Press the **INFO/ENTER** button (9) to select "BT ON" or "BT OFF". When "On", the LCD will display the Bluetooth icon  (default "BT ON").
- BT HFP Volume:** Press the **INFO/ENTER** button repeatedly to adjust the ring volume from 0-40 (default 35/previous setting).
- BT Device List:** Press the **INFO/ENTER** button to view a list of previously paired mobile phone device models. Press the **▲** or **▼** buttons to view devices from the list. You cannot delete a device that is actively connected. Press the **INFO/ENTER** button to select the device. Press the **▲** or **▼** buttons to choose Lock/Unlock, Disconnect or Delete for this device.
  - LOCK/UNLOCK:** The JHD916BT can store up to 5 devices for Bluetooth connection.

The devices are stored in FIFO (First in First Out) order. To prevent a device from being bumped from the list when more than 5 devices are used, you must lock the device. To lock/Unlock a device, press the **INFO/ENTER** button to display/change the Locked or Unlocked icon.

- DISCONNECT:** To disconnect a paired device, press the **INFO/ENTER** button to temporarily remove the Bluetooth link. The link can be re-established through your phone menu by selecting the JHD916BT for connection.
- DELETE:** To delete a device from the list, press the **INFO/ENTER** button. NOTE: Device must be disconnected to be deleted.
- BT Pair:** Press the **INFO/ENTER** button to turn BT Pair "On" to put the unit pairing mode to search for and be discovered by Bluetooth devices.
- BT Auto Answer:** Press the **INFO/ENTER** button to turn the Auto Answer function "On" or "Off".

### Pairing a Bluetooth Device

Before you begin, consult the owner's manual for the Bluetooth device you want to pair with the JHD916BT.

#### Bluetooth Quick Pair:

- On your personal Bluetooth device, enter the Bluetooth settings list. Make sure your device has Bluetooth turned on and is searching for new devices.
- Enter Bluetooth mode on the JHD916BT by pressing the **MODE** button (3).
- Press and hold the **INFO/ENTER** button for three seconds to make the JHD916BT available on your Bluetooth device.
- On your Bluetooth device, select **JHD916BT** once it becomes available to pair and connect your device.

*Enter the pairing password (0000), if requested.*

**NOTE:** You can alternatively pair from the Bluetooth Menu.

After connecting successfully, you will be able to listen to music stored on your Bluetooth enabled device through the radio.

### BT Audio (A2DP)

The A2DP music is available for Bluetooth enabled phones when the phone is connected. To access Bluetooth mode and play songs stored on your phone, press the **MODE** button.

While in Bluetooth mode, the Bluetooth Audio icon  will appear on the LCD.

#### Selecting Tracks

During playback, press the **◀◀** or **▶▶** buttons (17, 10) to play the previous or next track.

#### Pausing Playback

During playback, press the **▶||** button (2) to pause the Bluetooth AUDIO player. "BT AUDIO

PAUSE" will appear on the LCD. Press ►|| again to resume playback. If you change to another mode, the mobile phone audio will pause. Press the **MODE** (3) button to return to Bluetooth mode and resume mobile phone audio playback.

---

***NOTE: If a Bluetooth device is disconnected due to the power being turned off or if the device is disconnected inadvertently, the unit will automatically search for the matching Bluetooth device when the power is restored.***

---

## Incoming/Outgoing calls

While the mobile device is connected through Bluetooth, the phone number for incoming calls will appear on the LCD. The incoming ring will be output through the unit unless the unit is broadcasting a Weather Band Alert or the PA system is in use.

### ***Answer Call***

If the Bluetooth Auto Answer function is turned "Off", the user must press the "**CALL**" button (7) to receive an incoming call.

If the BT Auto Answer function is turned "On", the unit will automatically receive the incoming call after 5 seconds of ringing.

While the microphone (JMICHFP) is connected to the unit, the user can answer incoming calls through the Microphone.

### ***Transfer Call***

During the call, *press and hold* the "**CALL**" button transfer the call between the unit and the mobile device.

### ***End Call***

Press the "**CALL**" button to end a call. The unit will return to the previous mode.

### ***Reject Incoming Call***

To reject an incoming call, press and hold the "**CALL**" button.

## CARE AND MAINTENANCE

- Keep the product dry. If it does get wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Keep the product away from dust and dirt, which can cause premature wear of parts.
- Handle the product gently and carefully. Dropping it can damage circuit boards and cases, and can cause the product to work improperly.
- Wipe the product with a dampened cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the product.
- Use and store the product only in normal temperature environments. High temperature can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.

### Ignition

The most common source of noise in reception is the ignition system. This is a result of the radio being placed close to the ignition system (engine). This type of noise can be easily detected because it will vary in intensity of pitch with the speed of the engine.

Usually, the ignition noise can be suppressed considerably by using a radio suppression type high voltage ignition wire and suppressor resistor in the ignition system. (Most vehicles employ this wire and resistor but it may be necessary to check them for correct operation.) Another method of suppression is the use of additional noise suppressors. These can be obtained from most CB radio or electronic supply shops.

### Interference

Radio reception in a moving environment is very different from reception in a stationary environment (home). It is very important to understand the difference.

AM reception will deteriorate when passing under a bridge or when passing under high voltage lines. Although AM is subject to environmental noise, it has the ability to be received at great distance. This is because broadcasting signals follow the curvature of the earth and are reflected back by the upper atmosphere.

## TROUBLESHOOTING

SYMPTOM	CAUSE	SOLUTION
No power	The vehicle's accessory switch is not on	If the power supply is properly connected to the vehicle's accessory terminal, switch the ignition key to "ACC".
	Fuse is blown	Replace the fuse.
No sound	Volume too slow	Adjust volume to audible level.
	Wiring is not properly connected	Check wiring connections.
The operation keys do not work	Control panel is not properly installed	Reinstall control panel.
	Built-in microcomputer is not operating properly due to noise	Press the <b>RESET</b> button.
Cannot tune to radio station, auto-seek does not work	Antenna cable is not connected	Insert the antenna cable firmly.
	Signals are too weak.	Select a station manually.
ERROR-01 on LCD	Database or decoder error	Change to another mode.
ERROR-02 on LCD	No songs on device	Remove device and add songs.
ERROR-03 on LCD	Abnormal current to USB device	Change mode or unplug and reconnect USB device.
ERROR-04 on LCD	iPod/iPhone is not verified	Unplug and reconnect iPod/iPhone.

## SPECIFICATIONS

### USB

Signal to Noise Ratio.....	> 60 dB
Channel Separation.....	More than 50 dB
Frequency Response.....	20 Hz - 20 kHz

### FM Radio

Frequency Coverage (USA).....	87.5 to 107.9 MHz
Frequency Coverage (Turkey/ Italy/ Brazil).....	87.5 to 108 MHz
Sensitivity (S/N = 30dB).....	2.2µV
Stereo Separation.....	>25 dB

### AM/MW

Frequency Range (USA/ Brazil).....	530-1710 kHz
Frequency Range (Turkey/ Italy).....	531-1602/ 522-1620 kHz
Sensitivity (S/N=20dB).....	30 dB

### General

Frequency band(s) (for Bluetooth).....	2.4~2.4835GHz
Operating Voltage.....	DC 12 Volts
Grounding System.....	Negative Ground
Speaker Impedance.....	4-8 ohms per channel
Tone Controls:	
Bass (at 100 Hz).....	±10 dB
Treble (at 10 kHz).....	±10 dB
Power Output.....	9W x 2
Idle/Standby Current.....	0 A
Fuse Rating.....	10 Ampere Max
Dimensions.....	131.6 (W) x 61.2 (D) x 86 (H)

## FCC Notes

**WARNING!** Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.