

886 mobileMate

User's Manual



Published on 03-Oct-2008

Table of Contents

Chapter 1 Before you begin.....	3
1.1 Appearance	4
1.2 Checking the package content	5
Chapter 2 Getting started.....	6
Step 1 Charging Your Battery	6
Step 2 Turn on/off 886.....	7
Step 3 Connecting your handheld device with 886	7
Step 4 Load your GPS mapping or routing software.....	10
Step 5 Start the application	10
Chapter 3 How to configure your GPS Receiver ?	11
3.1 Driver Installation.....	11
3.2 GpsView software	11
3.2.1 Connect USB cable between GPS and laptop.....	11
3.2.2 Executing GpsView Program.....	12
3.2.3 Download AGPS.....	13
Appendix A. LED Display	16
Appendix B. Fuzzy Auto On/Off	17
Appendix C. Specification	17
Appendix D. Frequently Asked Questions.....	20
Appendix E. Helpful tips	21
Appendix F. Certification.....	22
Appendix G. Warranty Information.....	24

Note and Warning

- 886 uses + Lithium-Ion battery. If 886 is used in temperature lower than -10°C or higher than 60°C , its battery charging capability will decrease. Please leave the 886 far from heat or high temperature environment. In addition, do not expose your 886 in temperature higher than $140^{\circ}\text{F}/60^{\circ}\text{C}$. If you do not follow these rules, the battery inside 886 may become heat, explode or burn itself, and this will lead to very serious damage. The + Lithium-Ion battery inside the 886 should be recycled.
- While in the hospital, turning off the 886 is recommended. Like other common equipments do, wireless GPS receiver may also affect these medical equipments which use radio frequency and make these equipments malfunction.
- For a long period not using 886, take out the battery and store it in dry/cool places.
- For safety, keep the 886 and all accessories out of small children's reach.
- We assume no responsibility for any damages and loss resulting from the use of this manual and also by deletion of data as a result of malfunction, dead battery, or misuse of the product in any way.
- Use only the supplied and approved accessories. Unauthorized accessories, antenna, modifications or attachments could damage the 886, and may violate regulations governing radio devices.
- Use a dry, clean soft cloth to clean the unit. Do not use harsh cleaning solvents, chemicals, or strong detergents.
- Do not attempt to open the 886 yourself. Unauthorized hacking may damage the unit, and void your warranty.

Chapter 1 Before you begin

Thank you for purchasing the mobileMate, 886, a global positioning system receiver with Bluetooth wireless technology. 886 is well suited to system integrations including PDA, smart phone, Tablet PC and Notebook PC with Bluetooth devices. It can satisfy a wide variety of applications such as PDA and smart phone navigation, automotive vehicle tracking, personal positioning and sporting. With the dimension of 44 x 26 x 15 mm and weight only 18g (w/ battery), 886 is an ideal solution to carry along everywhere.

886's chargeable battery can save satellite information such as the status of the satellite signal, most recent location and the data and time of its last use. The low-power design has extended the operation time up to 11 hours and brought you the most convenient and longest usage of its kind. With the lead-free production process (starting Jan. 1, 2006), 886 is the most environmentally friendly wireless GPS receiver in the market.

886 has distinguished features others don't have. With our patent pending **Smart Power Save Mechanism** and **Fuzzy Auto On/Off** features, our 886 consumes 65% less power than other Product, and can extend the operating time up to 11 hours.

1.1 Appearance



1. Power jack (mini USB type)
2. Mode switch (Power off/ Navigation/ USB)
3. Battery status LED (red/green)
4. Bluetooth status LED (blue)
5. GPS status LED (orange)

1.2 Checking the package content

Congratulations on your purchase of the 886 with built-in + Lithium-Ion chargeable battery. Before you start using 886, please make sure if your package includes the following items. If any item is damaged or missing, please contact your dealer at once.

- mobileMate - 886 x 1
- Car charger x 1
- CD(User Manual and software utility) x 1
- Strap x 1
- USB to mini USB cable x 1

*Unit package contents may vary depending on countries without prior notice.

Chapter 2 Getting started

Please follow the procedure step by step.

Step 1 Charging Your Battery

For the 1st time you use the 886, please charge battery until it is full (no LED light display). Take the power cable and connect it to the power jack (mini USB type). This will begin to charge the battery. The LED that represents the battery is the green light battery icon (shown in below).



- If the LED is red, that means battery power is critically low. Charge immediately.
- If the LED is green, that means battery is charging now.
- If the no LED light display, that means battery is fully charged.
- When you plug into the mini USB cable to charge your unit, it will takes 1~2 seconds then you can see the green LED turning on.

Step 2 Turn on/off 886

Push button 3 sec to turn on/off 886.



Power off



Power on


Step 3 Connecting your handheld device with 886

Please refer to the user manual of PDA to enable the Bluetooth connectivity. If the connection between your device and 886 is successful, the blue LED of 886 will be blinking.

Below, we provide a common procedure of software installation to set up your PDA. (For other PDA, the steps may be a little bit different. Bluetooth Manager is one of popular program used for Bluetooth device.)



Start -> Bluetooth Manager

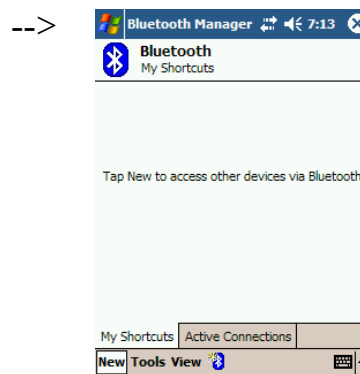

New

1. Open “Bluetooth Manager” on pocket pc, and establish new connection.



Explore A Bluetooth device
->Next



Tap 886 GPS

2. Explore a Bluetooth device, and find the “886 GPS”



Password 0000 (if your PDA ask for the password)

3. (Optional)




Select SPP slave->Next

-->



Finish

4. Connect to Serial Port Profile (SPP) Slave

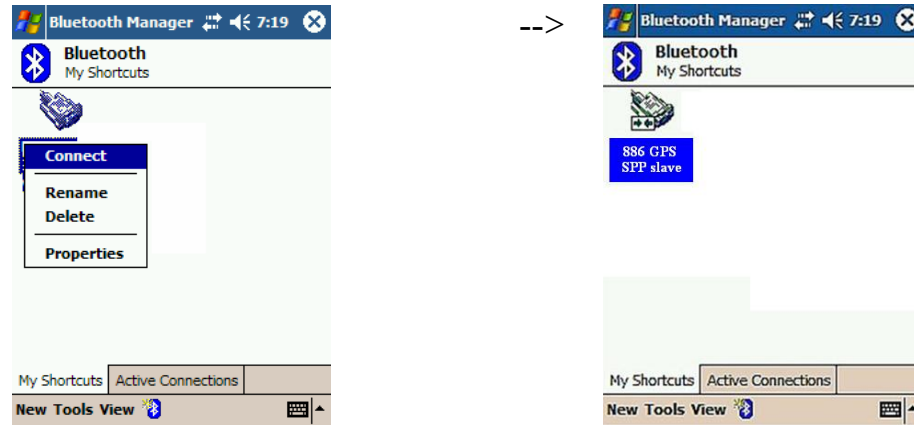

Tap and Hold 886 GPS: SPP
slave, Connect

Done

5. Finish Bluetooth Manager Setup

Step 4 Load your GPS mapping or routing software

You should have mapping software on your PDA/ Smartphone/ laptop or you need to install it before using the 886 for navigation.

Step 5 Start the application

Select the correct COM port & baud rate within the application.

Note: The Bluetooth device in most of the applications has an “auto-detect” feature so that you do not need to select the Baud Rate.

Chapter 3 How to configure your GPS Receiver ?

The GpsView program only supports the Microsoft Windows based platform.

3.1 Driver Installation

Before the USB connector plugs in your PC/ Laptop, please have your USB Driver Installation ready. (Install InstallDriver.exe driver for USB port from CD-ROM.)

3.2 GpsView software

Open the GpsView software, please select correct COM port and Baud Rate (USB / Bluetooth :115,200bps) to configure GPS.


3.2.1 Connect USB cable between GPS and laptop



To USB port on PC/Laptop


3.2.2 Executing GpsView Program

Click “Command” tap. Update Rate 1 ~ 5Hz is user configurable. And still more options for choice of NMEA output, DGPS...etc. all available through pull-down menus.

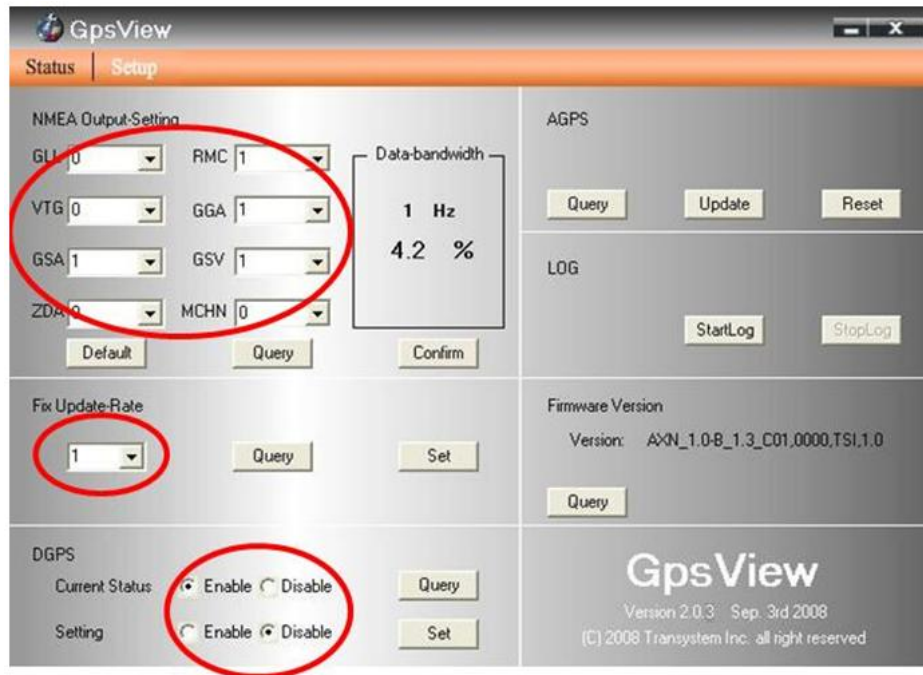


3.2.3 Download AGPS


1. Start→Control Panel→System→Hardware→Device Management→
Connector (COM and LPT) Check Com port position。

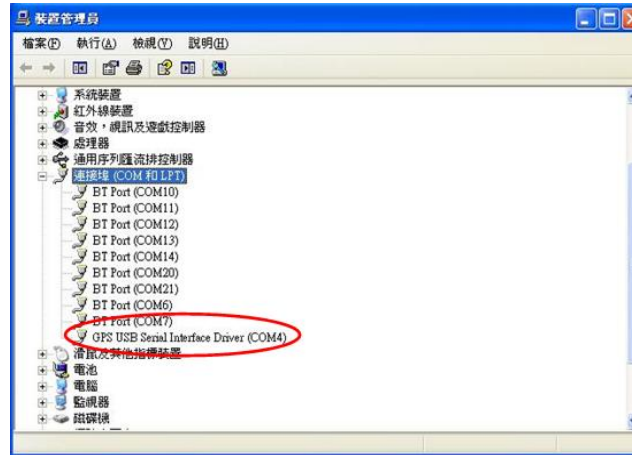

2. Open GpsView.exe→Check Baud Rate and Com port→click On

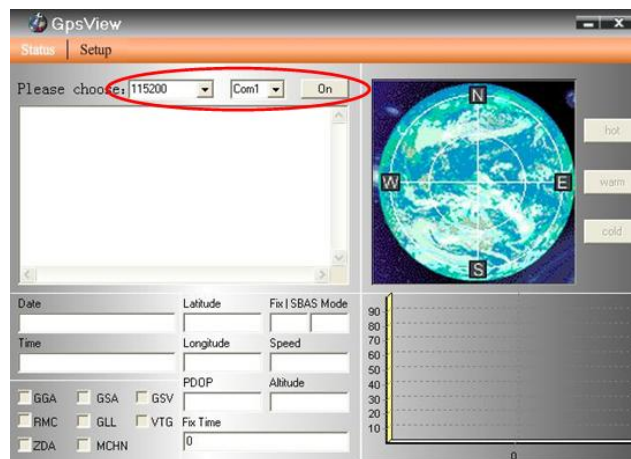

3. Choice Setup

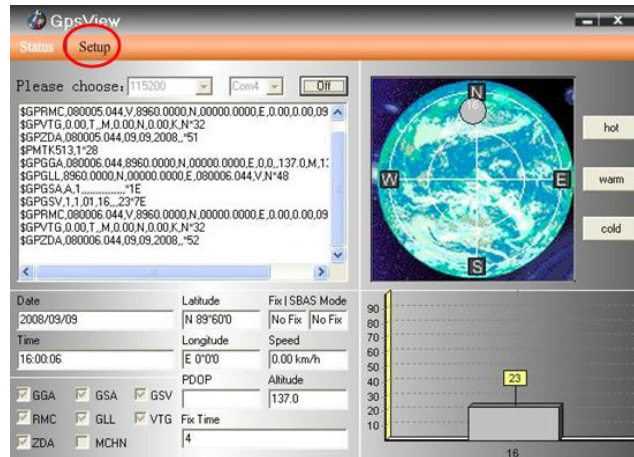

4. Choice Update ◦




5. When Updating now...100%, click Enter complete ◦



NOTE: When you use AGPS function, we suggest use GpsView to download the AGPS data via USB cable. AGPS has six day time limited.

Appendix A. LED Display

The Bluetooth GPS Receiver has three LED lights, one is Bluetooth Status LED, the 2nd one is Battery Status LED, the 3rd one is GPS Status LED. The status table of LED shows as follows:

Category	SYMBOL	COLOR	STATUS	Function
Bluetooth Status LED		Blue	Always on:	Not connected to any Bluetooth devices yet
			Slowly blinking:	Sleeping mode (1 time / 5 seconds)
			Quickly blinking:	Bluetooth is connected and ready for data transmission (1 time / 2 seconds)
Battery Status LED		Red	Blinking:	The battery is too low
		Green	On	The battery is charging
		Green	Off	The battery is fully charged
GPS Status LED		Orange	Always on:	Acquiring satellites, GPS position not fix
			Blinking:	GPS position is fixed, Navigation

Appendix B. Fuzzy Auto On/Off

886 supports fuzzy auto on/off. It can automatically enter the sleeping mode after your turning off the Bluetooth connectivity, thus you can always power it on with very low power consumption.

With fuzzy auto on/off, if the connection between your device and 886 is successful, 886 will wake up itself and the blue LED of 886 will be quickly blinking again (every 2 sec) and the orange LED of 886 will also be on.

Appendix C. Specification

General

Chipset	MTK MT3329
Frequency	L1,1575.42MHZ
C/A Code	1.023MHZ
Channels	66
DGPS	WAAS,EGNOS,MSAS
Datum	WGS84
CPU	ARM7TDMI

Performance Characteristics

Position Accuracy	Without aid: 3.0m 2D-RMS <3m CEP(50%) without SA(horizontal) DGPS (WAAS,EGNOS,MSAS):2.5m
-------------------	--

Velocity Accuracy	Without aid: 0.1m/s DGPS (WAAS,EGNOS,MSAS):0.05m/s
Acceleration	Without aid:<4g DGPS (WAAS,EGNOS,MSAS):<4g
Timing Accuracy	50 ns RMS
Reacquisition Time	<1s
Hot start	1.5s
Warm start	34s
Cold start	35s
AGPS	<15s
Sensitivity	Acquisition:-148dBm Max. Tracking:-165dBm Max.
Update	1~5Hz
Dynamic	
Altitude	Maximum 18,000m
Velocity	Maximum 515m/s
Acceleration	Maximum 4g
Power	
Input Voltage	Vin : DC 5.0V±10%
Battery	Built-in chargeable + Lithium-Ion battery
Protocols	
GPS Output Data	Baud rate 115200 bps, Data bit: 8, Stop bit: 1

	(Default)
NMEA	NMEA0183 v3.01 Default: GGA, GSA, GSV, RMC
Environment	
Operating Temperature	-10 ~ 60C
Storage Temperature	-20 ~ 60C
Charging	0 ~ 45C
Bluetooth	
Standard	Fully compliant with Bluetooth V1.2
Output Power	0dBm (Typical),ClassII
Range	Over 10 meters
Bluetooth Profile	Serial Port Profile(SPP)
Frequency	2.4G ~ 2.4835GHz ISM Band
Security	Yes
Physical Characteristics	
Dimension	44 x 26 x 15 mm
Weight	18g

*.Citation MTK original chipset spec.

Appendix D. Frequently Asked Questions

Q: The GPS Demo software GpsView doesn't seem to be making any connections with my Bluetooth GPS receiver. How do I make it work?

A: You will need to make sure your PDA is paired with Bluetooth device. Follow the section "Chapter 2. Getting started > Step 3 Connecting your handheld device with the 886" to make sure that your PDA is recognizing the Bluetooth GPS receiver properly. If so, you will need to connect with the device by going to the Bluetooth Manager and double-tapping on the 886 icon.

Q: My Bluetooth GPS Receiver seems to be receiving the satellite signals, but I am unable to establish a connection between the receiver and my PDA. How can I make a connection?

A: Go to the Bluetooth Manager on your PDA. Locate the "886: SPP Slave" icon and tap and hold. A pop-up menu will appear, select Delete. Next, perform a soft reset on your PDA.

Once your PDA has finished resetting itself, go back to the Bluetooth Manager screen and perform the typical setup and connection procedures for your Bluetooth receiver (for help with connection please review the section "Chapter 2 Getting started > Step 3 Connecting your handheld device with the 886").

Appendix E. Helpful tips

Your 886 should be treated with care and properly maintained to ensure the best performance. Keep in mind these helpful tips when using your receiver:

- Some vehicles having heavy metallic sun protecting coating on windshields, which may affect signal receptions
- Driving in and around high buildings may affect signal receptions.
- Driving under tunnels or in buildings may affect signal receptions.
- Low battery of a PDA or of an 886 may affect signal receptions.
- Please check the correct “COM” and “Baudrate” of your PDA.
- In general, any GPS receiver performs best in open space where it can see clean sky. Also weather will affect GPS reception – rain & snow contribute to worse sensitivity.
- 886 output data updates every second, thus the actual position and the position in your map may have time delay. This may happen when you drive at higher speed or make a turn around a corner.
- Note that 886 may not work indoors where it can not see the sky.
- For the 1st time you use the 886, it will take 1 to 3 minutes to get the satellite constellation and fix your position, this is called “Cold Start”. If you replace the battery, 886 will do Cold Start again.
- If your 886 can’t fix your position for more than 20 minutes, we suggest you change to another open space and then try again.

Appendix F. Certification

FCC Notices

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interface, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHOURIZED MODIFICATION TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC RF Exposure requirements:

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Industry Canada Caution

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, o737A inable from Health Canada's website. "www.hc-sc.gc.ca/rab".

CE Notices



Is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (89/336/EEC), Low-voltage Directive (73/23/EEC) and the Amendment Directive (93/68/EEC), the procedures given in European Council Directive 99/5/EC and 89/3360EEC.

The equipment was passed. The test was performed according to the following European standards:

- EN 300 328-2 V.1.2.1 (2001-08)
- EN 301 489-1 V.1.4.1 (2002-04) / EN 301 489-17 V.1.2.1 (2002-04)
- EN 50371: 2002
- EN 60950: 2000

Appendix G. Warranty Information

Thank you for your purchase of GPS product from the company.

The company warrants this product to be free from defects in materials and workmanship for one year from the date of purchase. The warranty for accessories is six months. The stamp of distributor or a copy of the original sales receipt is required as the proof of purchase for warranty repairs. The company will, as its sole option, repair or replace any components, which fail in normal use. Such repair or replacement will be made at no charge to the customer for parts or labor. The customer is, however, responsible for any transportation costs.

This warranty does not cover failures due to abuse, misuse, accident or unauthorized alteration of repairs. The company assumes no responsibility for special, incidental punitive or consequential damages, or loss of use.

Warranty

Model number: _____

Series number: _____

Data of purchase: _____

Name: _____

Address: _____

City, Zip code: _____

State, Country: _____

E-mail address: _____

Distributor Stamp Here