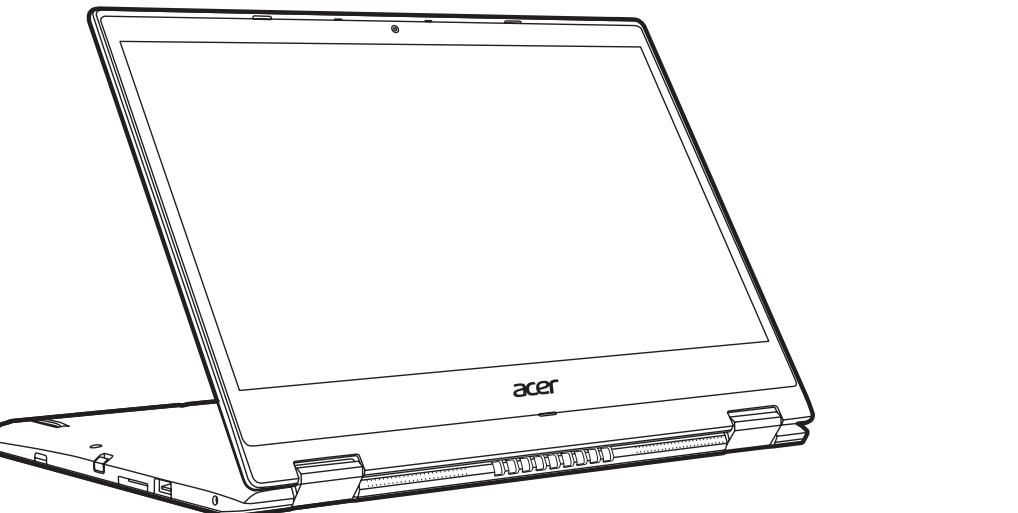
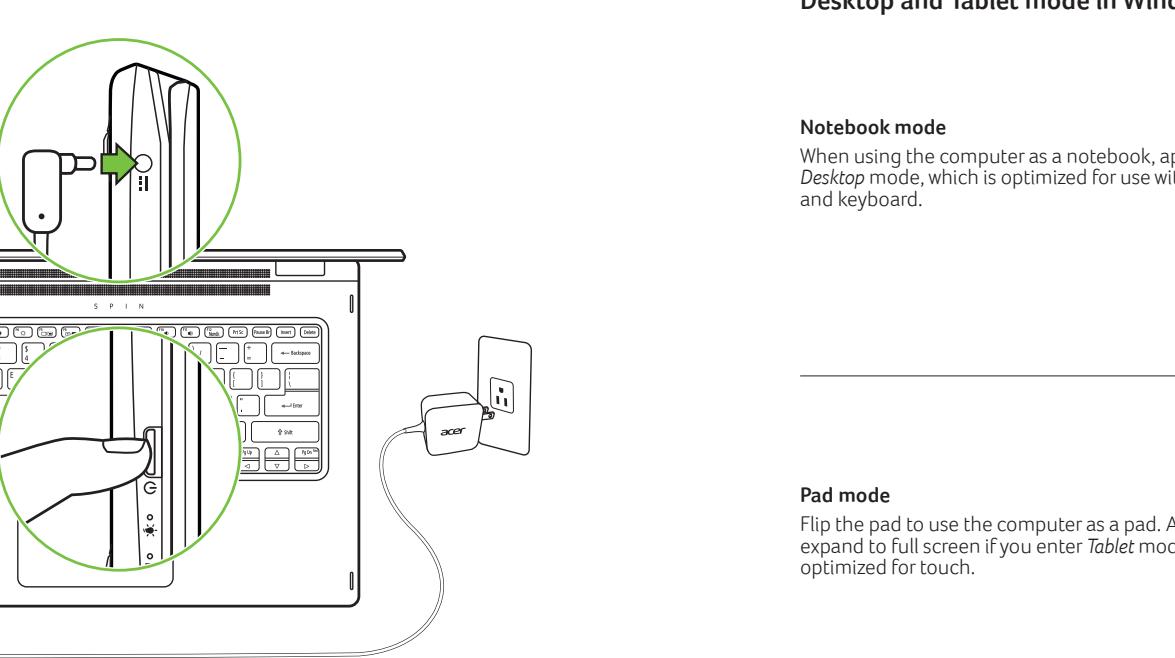


SETUP GUIDESETUP GUIDE
SETUP GUIDE
SETUP GUIDE
SETUP GUIDE
SETUP GUIDE

- 1 Plug in before turning on for the first time.
- 2 Press the power button.
Then follow the onscreen instructions to complete setup.

Note: Open the Start Menu and search for 'Acer Documents' for help with setting up a network connection, using the touchpad, and other information which is important for your health and safety.

Using the notebook for the first time

- 1 Plug in before turning on for the first time.
- 2 Press the power button.
Then follow the onscreen instructions to complete setup.


Note: Open the Start Menu and search for 'Acer Documents' for help with setting up a network connection, using the touchpad, and other information which is important for your health and safety.

Flip between different modes**Desktop and Tablet mode in Windows 10**


Notebook mode
When using the computer as a notebook, apps run in *Desktop* mode, which is optimized for use with a mouse and keyboard.



Pad mode
Flip the pad to use the computer as a pad. Apps expand to full screen if you enter *Tablet* mode, which is optimized for touch.

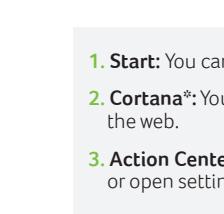

Display mode
Reverse the screen to function as a display, you can share the screen with others. In this mode, you can manually choose either *Tablet* or *Desktop* mode in *Action Center*.

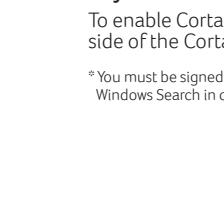

Note: You can choose how to switch between Tablet and Desktop mode. Open *Settings*>*System*>*Tablet mode* to see more options.

Getting started with Windows 10**Desktop and Tablet mode in Windows 10**

1

2

3

1.

2.

3.

How do I use Cortana®?

Type anything you want to ask Cortana in the search box, or select the microphone icon and talk to Cortana.

Hey Cortana

To enable Cortana by saying 'Hey Cortana', click on the search box and then select the icon  in the lower-left side of the Cortana window. Then turn on the "Hey Cortana" switch.

* You must be signed in to your Microsoft account to use Cortana. The Cortana feature is being progressively rolled out globally. It will be replaced by Windows Search in countries where it is not available.

How do I switch between apps?



























4

**How do I access Action Center?**

5



Note: You can choose how to switch between Tablet and Desktop mode. Open *Settings*>*System*>*Tablet mode* to see more options.

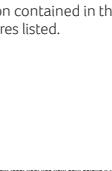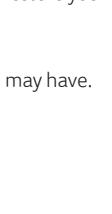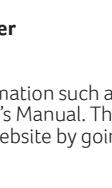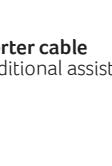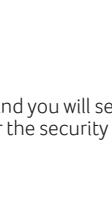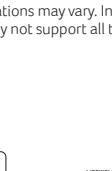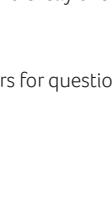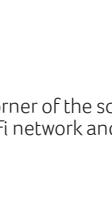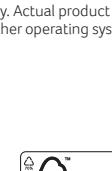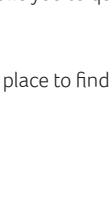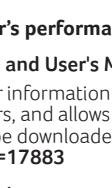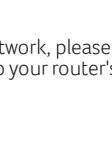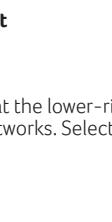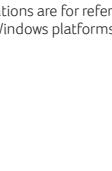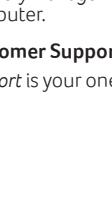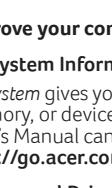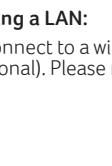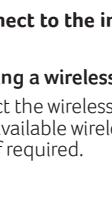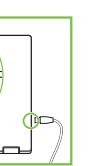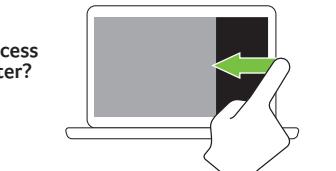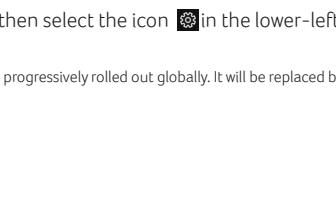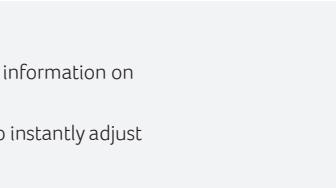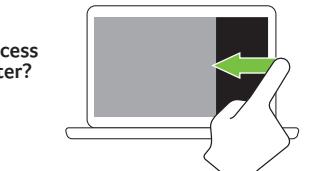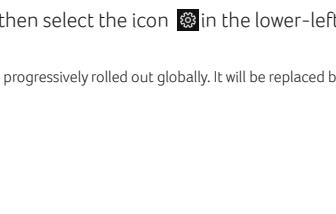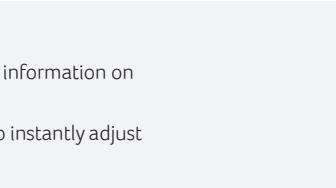

Illustrations are for reference only. Actual product specifications may vary. Information contained in this poster is for Windows platforms only. Other operating systems may not support all the features listed.



NC-817-001-R-1

