

Getac

B360
B360 Pro

USER MANUAL

September 2024

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Thunderbolt is a trademark of Intel Corporation or its subsidiaries.

All brand and product names are trademarks or registered trademarks of their respective companies.

Disclaimer

Specifications and manuals are subject to change without notice. Getac assumes no liability for damage incurred directly or indirectly from errors, omissions, or discrepancies between the device and the manuals.

Note

For the latest version of the manual, please visit the Getac website at www.getac.com.

Table of Contents

- Chapter 1 Getting Started1**
 - Getting the Computer Running..... 2
 - Unpacking..... 2
 - Connecting to AC Power..... 3
 - Turning On and Off the Computer 4
 - Taking a Look at the Computer 6
 - Front Components 6
 - Rear Components..... 7
 - Right-Side Components..... 9
 - Left-Side Components..... 10
 - Top-open Components..... 12
 - Bottom Components 14
- Chapter 2 Operating Your Computer17**
 - Using the Keyboard..... 18
 - Typewriter Keys..... 18
 - Cursor-Control Keys..... 18
 - Numeric Keypad 19
 - Function Keys 19
 - Fn Key 20
 - Hot Keys 20
 - Windows Keys 21
 - Using the Touchpad 22
 - Configuring the Touchpad 23
 - Using the Touchscreen (Optional) 24
 - Using Multi-touch Gestures 25
 - Using the Tether (Optional)..... 27
 - Using Network and Wireless Connections..... 28
 - Using the LAN 28
 - Using the WLAN 29

	Using the Bluetooth Feature	29
	Using the WWAN Feature (Optional)	30
	Using the Optical Disc Drive (Select Models Only)	33
	Inserting and Removing a Disc	34
	Using the Fingerprint Scanner (Optional)	35
	Using the RFID Reader (Optional)	36
	Using the Barcode Scanner (Optional)	37
	Notes	38
Chapter 3	Managing Power	39
	AC Adapter	40
	Battery Pack	41
	Charging the Battery Pack	41
	Initializing the Battery Pack	42
	Checking the Battery Level	42
	Battery Low Signals and Actions	43
	Replacing the Battery Pack	43
	Power-Saving Tips	46
Appendix A	Specifications	47
Appendix B	Regulatory Information	50
	Safety Notices	51
	About the Battery	51
	About the AC Adapter	54
	Heat Related Concerns	55
	North America	56
	USA	56
	Canada	59
	User Notification of Take-back Service	59
	Europe Marking and Compliance Notices	61
	Statements of Compliance	61
	Notices	62
	Restriction of Hazardous Substances (RoHS) Directive	63
	Declaration of Conformity	63
	ENERGY STAR	64
	About Battery and External Enclosure Replacement	65
	Battery	65
	External Enclosure	65
	Manufacture Date and Labels	66

Chapter 1

Getting Started

This chapter first tells you step by step how to get the computer up and running. Then, you will find a section briefly introducing the external components of the computer.



CAUTION: Safety instructions are provided in related sections throughout the User Manual. Please read the manual and any accompanying document(s) before starting to use the product.

NOTE: The information in this document applies to both B360 and B360 Pro models though most illustrations show the B360 model as the example. The difference between the B360 Pro model and B360 model is that the former has an expansion unit at the bottom providing extra functions.

Getting the Computer Running

Unpacking

After unpacking the shipping carton, you should find these standard items:

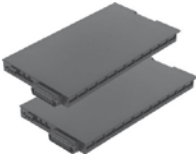● Notebook computer	
● Battery pack × 2 	● AC adapter 
● Additional battery pack* (for B360 Pro) 	● AC power cord 
● Document(s)	● Stylus and tether* 
● Driver disc*	

* Optional

Inspect all the items. If any item is damage or missing, notify your dealer immediately.

NOTE: Specific models do not have the AC adapter and power cord as standard items. To purchase the AC adapter kit for your model, contact a Getac authorized distributor. (Check <https://www.getac.com/en/contact/> for contact information.)

Connecting to AC Power


CAUTION: Use only the AC adapter included with your computer. Using other AC adapters may damage the computer.

NOTE:

- The battery pack is shipped to you in power saving mode that protects it from charging/discharging. It will get out of the mode to be ready for use when you install the battery pack and connect AC power to the computer for the very first time.
- When the AC adapter is connected, it also charges the battery pack. For information on using battery power, see Chapter 3.

You must use AC power when starting up the computer for the very first time.

1. Plug the DC cord of the AC adapter to the power connector of the computer (❶).
2. Plug the female end of the AC power cord to the AC adapter and the male end to an electrical outlet (❷).

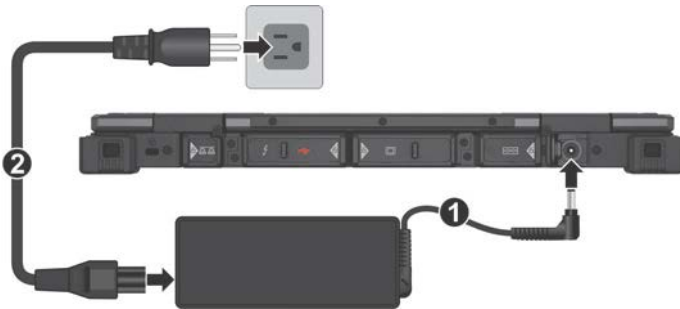

NOTE: The power cord type varies with countries. The look of your power cord and electrical outlet might not match the one shown in this document.

3. Power is being supplied from the electrical outlet to the AC adapter and onto your computer. Now, you are ready to turn on the computer.

Turning On and Off the Computer

Turning On

1. Open the top cover by pushing the cover latch (❶) and lifting up the cover (❷). You can tilt the cover forward or backward for optimal viewing clarity.



2. Press the power button (). The Windows operating system should start.



Turning Off

When you finish a working session, you can stop the system by turning off the power or leaving it in Sleep or Hibernation mode:


To...	Do this...
Power off (Shutdown)	Select Start →  Power → Shut down.
Sleep	Use one of these methods: ● Press the power button.* ● Close the top cover.* ● Press Fn + F12.* ● Select Start →  Power → Sleep.
Hibernate	By default, this option is not shown in the Start menu. If you want to use the feature, set up accordingly in Windows settings.

* “Sleep” is the default result of the action. You can change what the action does through Windows settings.

Taking a Look at the Computer

- NOTE:** Depending on the specific model you purchased, the color and look of your model may not exactly match the graphics shown in this document.
- CAUTION:** You need to open the protective covers to access the connectors. When not using a connector, make sure to close the cover completely for water- and dust-proof integrity. (Engage the locking mechanism if existing.)


Front Components

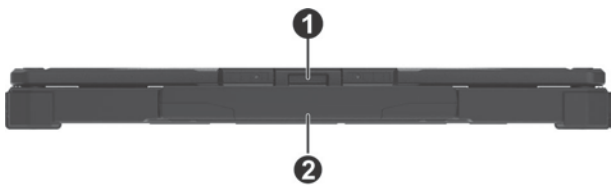

Ref	Component	Description
❶	Top cover latch	Locks the top cover.
❷	Handle	Provides a convenient way to carry the computer. NOTE: When carrying the computer around, always use the handle or the carrying strap (purchased separately).

Rear Components

For covers with an arrowhead icon, push the cover toward one side to unlock and the other side to lock. The arrowhead points to the side for unlocking.

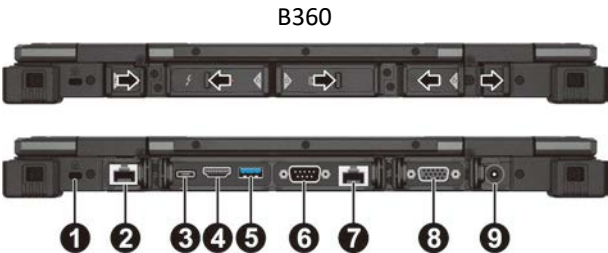

Ref	Component	Description
❶	Kensington Security Slot	Locks the computer to a stationary object for security.
❷	RJ45 connector	Connects the LAN cable.
❸	USB-C Thunderbolt™ 4 port	Connects to devices that support Thunderbolt or USB-C connection.
❹	HDMI connector	Connects a HDMI monitor or TV set.
❺	USB 3.2 Gen 2 port	Connects a USB device.
❻	Depending on the model, the component can be one of the following:	
	VGA connector	Connects an external display monitor.

Ref	Component	Description
	RS-232 serial connector	Connects a serial mouse or serial communication device. NOTE: This is the component shown as the example in the illustration.
7	RJ45 connector (optional)	Connects the LAN cable.
8	Depending on the model, the component can be one of the following:	
	RS-232 serial connector	Connects a serial mouse or serial communication device.
	VGA connector	Connects an external display monitor. NOTE: This is the component shown as the example in the illustration.
	DisplayPort connector	Connects a DisplayPort monitor or TV set.
	HDMI connector	Connects a HDMI monitor or TV set.
	USB-C Thunderbolt™ 4 port	Connects to devices that support Thunderbolt or USB-C connection.
9	Power connector	Connects the AC adapter.
10	RS-232 serial connector (optional)	Connects a serial mouse or serial communication device.

NOTE: The set of connectors for the No. 6, 7, and 8 items is pre-defined. There are five possibilities. (For information, see the “Model-dependent set” row in the table in Appendix A.)

Right-Side Components

For covers with an arrowhead icon, push the cover toward one side to unlock and the other side to lock. The arrowhead points to the side for unlocking.




Ref	Component	Description
❶	Barcode scanner (optional)	Scans and reads barcodes.
❷	SIM card slot (optional)	Accepts a SIM card for models having the WWAN module. NOTE: The slot still exists but cannot be used for models without the WWAN module.
❸	Storage card reader (optional)	Accepts a microSD card for removable storage media.
❹	Combo audio connector	Connects a set of headphones or external speakers with amplifier. Supports a headset microphone with 4-pole TRRS 3.5mm jack.

Ref	Component	Description
5	PowerShare USB 3.2 port	Provides either of the below two functions depending on your setting.
		Charges a connected mobile device.
		- or -
		Functions as a standard USB 3.2 port (default setting).
6	Select models have one of the following components.	
	Optical disc drive	Accepts an optical disc. NOTE: This is the component shown as the example in the illustration.
	Additional SSD	Contains the additional solid-state drive for more storage capacity. CAUTION: This device is not hot-swappable. Do not remove it without turning off the system first.
	Additional battery pack	Provides additional battery power to your computer. This battery pack is not visible from this side of the computer. You can access it from the bottom of the computer. (See “Bottom Components” for information.)


Left-Side Components

For covers with an arrowhead icon, push the cover toward one side to unlock and the other side to lock. The arrowhead points to the side for unlocking.

B360

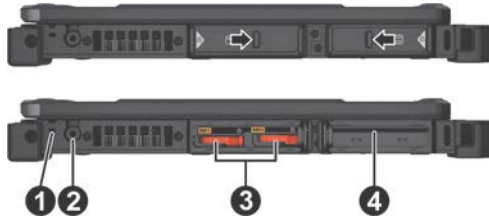


B360 Pro

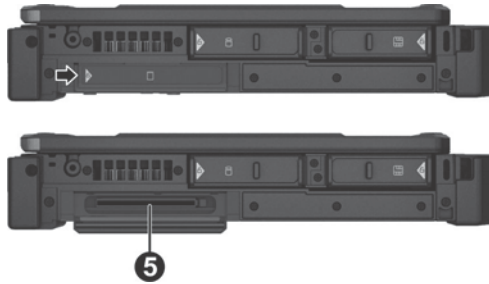

Ref	Component	Description
❶	Tether hole	Stylus tethered to this hole.
❷	Stylus slot	For storing the stylus (optional).
❸	SSD canister	Contains the solid-state drive, which is the mass storage device of your computer. Depending on your model, you have one SSD (SSD 1) or two SSDs (SSD 1 and SSD 2). CAUTION: This device is not hot-swappable. Do not remove it without turning off the system first.
❹	Smart card reader	Accepts a smart card for additional security feature.
❺	Select models have one of the below components.	
	ExpressCard slot	Accepts an ExpressCard for additional functions. NOTE: This is the component shown as the example in the illustration.
	PC Card slot	Accepts a PC card for additional functions.

Ref	Component	Description
	This option is mutually-exclusive with the Discrete GPU option.	

Top-open Components

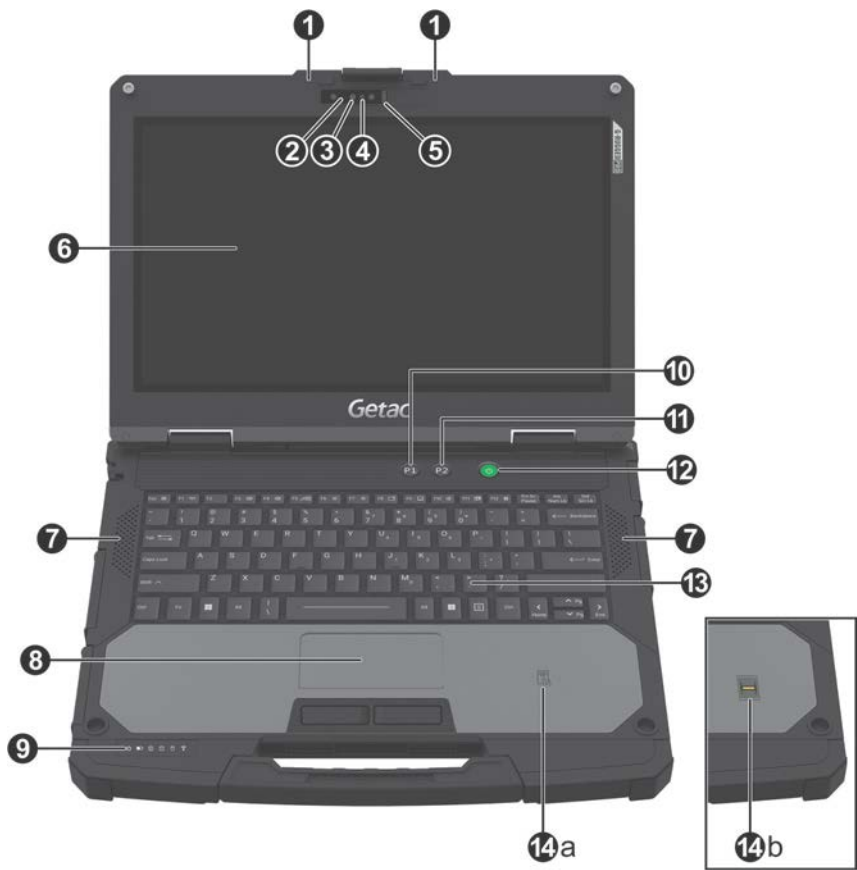

Ref	Component	Description
❶	Microphone	Receives sound and voice for the computer.
❷	Camera indicator (optional)	Lights up when the camera is in use.

Ref	Component	Description
③	IR sensor (optional)	Detects the infrared energy of objects to form an image. The sensor flashes red light when in use. The near infrared (IR) imaging capability allows you to use Windows Hello face authentication.
④	Camera lens (optional)	Allows you to use the camera function.
⑤	Camera cover (optional)	Covers the camera lens. Slide the camera cover toward the right to use the camera; slide it toward the left for privacy protection.
⑥	LCD screen	Displays the output of the computer. Select models have the touchscreen feature.
⑦	Stereo speaker	Sends out sound and voice from the computer.
⑧	Touchpad	Serves as the pointing device of the computer.
⑨	Indicators	
	 Power	Lights green when computer is on.
		Blinks green when computer is in Sleep mode.
	 Battery	Lights amber when the battery is being charged.
		Lights green when battery charging is completed.
		Blinks green to indicate the battery's built-in high temperature protection mechanism is activated. CAUTION: Do not remove the battery during this period.
		Blinks red (once per second) when the battery's capacity is below 10%.
		Blinks red rapidly (once per 0.5 second) when there is a thermal protection problem. Ask for repair service in case this happens.
		Blinks amber when the battery charging is in an abnormal state. Replace the battery in case this happens.
	 Caps Lock	Lights green when Caps Lock is on.
	 Num Lock	Lights green when Num Lock is on.

Ref	Component	Description
	 Hard Disk	Blinks green when the computer is accessing the hard disk (SSD).
	 Airplane mode	Lights green when the RF radio of any RF feature (WLAN/Bluetooth/WWAN) is on. If Airplane mode is switched on, the light turns off.
10	P1 button	Toggles Blackout mode on or off. In Blackout mode, the LCD backlight, keyboard/button backlight, and LED indicators are all turned off; and the sound is muted.
		Can be changed to a different function using G-Manager.
11	P2 button	Toggles the sunlight-readable mode on or off. In sunlight-readable mode, the LCD brightness is increased to the highest level.
		Can be changed to a different function using G-Manager.
12	Power button	Turns the power on or off. (The default “off” state is “Sleep mode.”)
13	Keyboard	Serves as the data input device of the computer.
14	Select models have one of the below components.	
	a	HF RFID reader Reads data from HF RFID tags.
	b	Fingerprint scanner Serves as the fingerprint verification, preventing unauthorized access to your computer.

Bottom Components

B360



B360 Pro



Ref	Component	Description
❶	Antenna pass-through (optional)	Connects to the docking station for using external WWAN/WLAN/GPS antenna.
❷	Battery pack (❶ and ❷)	Supplies power to your computer when external power is not connected.
❸	Docking connector	Connects to the office or vehicle dock (purchased separately).
Ref	Component	Description
❹	Additional battery pack (optional)	Provides additional battery power to your computer.

Chapter 2

Operating Your Computer

This chapter provides information about the use of the computer.

If you are new to computers, reading this chapter will help you learn the operating basics. If you are already a computer user, you may choose to read only the parts containing information unique to your computer.

CAUTION:

- Do not expose your skin to the computer when operating it in a very hot or cold environment.
- The computer can get uncomfortably warm when you use it in high temperatures. As a safety precaution in such a circumstance, do not place the computer on your lap or touch it with your bare hands for extended periods of time. Prolonged body contact can cause discomfort and potentially a burn.

Using the Keyboard

Your keyboard has all the standard functions of a full-sized computer keyboard plus an **Fn** key added for specific functions.

The standard functions of the keyboard can be further divided into four major categories:

- Typewriter keys
- Cursor-control keys
- Numeric keys
- Function keys

Typewriter Keys

Typewriter keys are similar to the keys on a typewriter. Several keys are added such as the **Ctrl**, **Alt**, **Esc**, and lock keys for special purposes.


The Control (**Ctrl**) / Alternate (**Alt**) key is normally used in combination with other keys for program-specific functions. The Escape (**Esc**) key is usually used for stopping a process. Examples are exiting a program and canceling a command. The function depends on the program you are using.

Cursor-Control Keys

Cursor-control keys are generally used for moving and editing purposes. They include:


- Up, down, left, and right arrow keys
- Page Up, Page Down, Home, and End keys (used with the **Fn** key)
- Insert and Delete keys

NOTE: The word “cursor” refers to the indicator on the screen that lets you know exactly where on your screen anything you type will appear. It can take the form of a vertical or horizontal line, a block, or one of many other shapes.



Numeric Keypad

A 15-key numeric keypad is embedded in the typewriter keys as shown next:

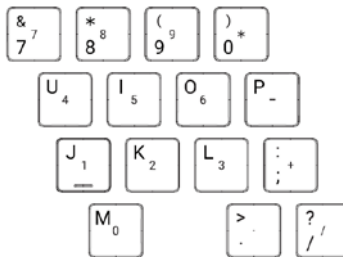

Numeric keys facilitate entering of numbers and calculations. When Num Lock is on, the numeric keys are activated; meaning you can use these keys to enter numerals.

NOTE:

- When the numeric keypad is activated and you need to type the English letter in the keypad area, you can turn Num Lock off or you can press **Fn** and then the letter without turning Num Lock off.
- Some software may not be able to use the numeric keypad on the computer. If so, use the numeric keypad on an external keyboard instead.
- The Num Lock key can be disabled. (See “Main Menu” in Chapter 5.)

Function Keys

On the top row of the keys are the function keys: **F1** to **F12**. Function keys are multi-purpose keys that perform functions defined by individual programs.


Fn Key

The **Fn** key, at the lower left corner of the keyboard, is used with another key to perform the alternative function of a key. To perform a desired function, first press and hold **Fn**, then press the other key.

Hot Keys

Hot keys refer to a combination of keys that can be pressed any time to activate special functions of the computer. Most hot keys operate in a cyclic way. Each time a hot key combination is pressed, it shifts the corresponding function to the other or next choice.

You can easily identify the hot keys with the icons imprinted on the keytop. The hot keys are described next.

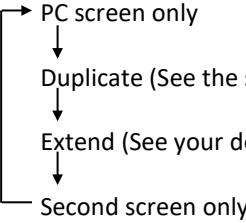Key	Description
Fn + Esc	Switches the keyboard backlight on or off.
Fn + F1	Switches the RF (radio frequency) radio on and off. When off, all wireless modules (such as WLAN, Bluetooth, and WWAN) cannot be used. When on, individual settings of the module work.
Fn + F3	Decreases the sound volume.
Fn + F4	Increases the sound volume.
Fn + F5	Switches the display output to the next choice if an external display is connected. Choices are: <pre>graph TD; A[PC screen only] --> B[Duplicate (See the same thing on all your displays.)]; B --> C[Extend (See your desktop across multiple screens.)]; C --> D[Second screen only];</pre> The hot keys are equivalent to  Windows logo key + P.
Fn + F6	Decreases the LCD brightness.
Fn + F7	Increases the LCD brightness.
Fn + F8	Switches the touchscreen function off or on (select models only).

Key	Description
Fn + F9	Switches the touchpad function off or on.
Fn + F10	Switches the system sound output off (mute) or on.
Fn + F11	Switches the display backlight off or on.
Fn + F12	Serves as the sleep button that you can define with Windows' Power Options.

Windows Keys

The keyboard has three keys that perform Windows-specific functions.

- The  Windows Logo key opens the **Start** menu and performs software-specific functions when used in combination with other keys.
- The  Application key usually has the same effect as a right mouse click. (On your keyboard, this function shares the same key with another function. To use this function, you have to first press and hold the **Fn** key and then press the key.)
- The  Copilot key invokes Copilot in Windows, which provides centralized AI assistance to you. It requires Microsoft account to log in. When Copilot for Windows is not available or enabled on the computer, pressing the Copilot key will launch Windows Search.

NOTE: If Copilot has not been included as a default tool in your Windows 11 version yet, you can enable Copilot by updating your Windows to the latest version. Go to [Settings → Windows Update](#) to perform the update.

Using the Touchpad

CAUTION: Do not use a sharp object such as a pen on the touchpad. Doing so may damage the touchpad surface.

NOTE:

- You can press **Fn+F9** to toggle the touchpad function on or off.
- For optimal performance of the touchpad, keep your fingers and the pad clean and dry. When tapping on the pad, tap lightly. Do not use excessive force.

The touchpad is a pointing device that allows you to communicate with the computer by controlling the location of the pointer on the screen and making selection with the buttons.



The touchpad consists of a rectangular pad (work surface) and a left and a right button. To use the touchpad, place your forefinger or thumb on the pad. The rectangular pad acts like a miniature duplicate of your display. As you slide your fingertip across the pad, the pointer (also called cursor) on the screen moves accordingly. When your finger reaches the edge of the pad, simply relocate yourself by lifting the finger and placing it on the other side of the pad.

Here are some common terms that you should know when using the touchpad:

Term	Action
Point	Move your finger on the pad until the cursor points to the selection on the screen.

Term	Action
Click	Press and release the left button. –or– Tap gently anywhere on the pad.
Double-click	Press and release the left button twice in quick succession. –or– Tap twice on the pad rapidly.
Drag and drop	Press and hold the left button, then move your finger until you reach your destination (drag). Finally, release the button (drop) when you finish dragging your selection to the destination. The object will drop into the new location. –or– Gently tap twice on the pad and on the second tap, keep your finger in contact with the pad. Then, move your finger across the pad to drag the selected object to your destination. When you lift your finger from the pad, the selected object will drop into place.

TABLE NOTE: If you swap the left and right buttons, “tapping” on the touchpad as an alternative method of pressing the left button will no longer be valid.

Configuring the Touchpad

The touchpad supports touch gestures for Windows. You may want to configure the touchpad to suit your needs.

To configure the touchpad, go to **Settings → Bluetooth & devices → Touchpad**.

Using the Touchscreen (Optional)

NOTE: You can press **Fn+F8** to toggle the touchscreen function on or off.

CAUTION: Do not use a sharp object such as a ballpoint pen or pencil on the touchscreen. Doing so may damage the touchscreen surface. Use your finger or the included stylus.

Select models have a capacitive touchscreen. This type of touchscreen responds to objects that have conductive properties, such as fingertips and a capacitive-tipped stylus. You can navigate on the screen without using a keyboard, touchpad, or mouse.

You can change the touchscreen sensitivity settings to suit your scenario. Double-tap the Touch Screen Mode shortcut on Windows desktop to open the settings menu and select one of the options (as shown below).



Select this mode when liquids, such as raindrops, are falling on the screen and should be rejected as input. Works best with fingertips.



Has a higher sensitivity to allow use with gloves (referring to warm gloves or work gloves, not referring to touchscreen-capable gloves).



Enables simultaneous use with Getac stylus or finger touch. (You must use the stylus supplied with your model.)

NOTE:


- In high temperatures (above 60 °C / 140 °F), set the mode to Finger instead of Glove or Stylus mode.
- If liquid is spilled on the touchscreen causing a wet area, the area will stop responding to any inputs. For the area to function again, you must dry it.





The following table shows how you use the touchscreen to obtain equivalent mouse functions.

Term/Action	Equivalent Mouse Function
Tap: Touch the screen once.	Click/Point
Double-tap: Touch the screen twice rapidly.	Double-click
Tap and hold: Tap and hold until a popup menu appears.	Right-click
Drag: Hold the stylus (or finger) on the screen and drag across the screen until reaching your destination.	Drag

Using Multi-touch Gestures

You can interact with your computer by placing two fingers on the screen. The movement of the fingers across the screen creates “gestures,” which send commands to the computer. Here are the multi-touch gestures that you can use:

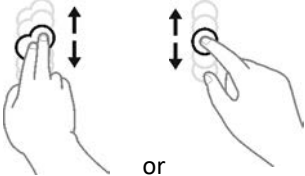
Gestures	Actions  = finger down;  = finger up)	Descriptions
Pan (Scroll)	 Drag 1 or 2 fingers up or down.	Use panning to see another part of a page that has scroll bars.
Zoom (Pinch)	 Move two fingers apart/toward each other.	Use zooming to make an item (a photo for example) on the screen larger or smaller. The gesture works in applications that support mouse wheel zooming.

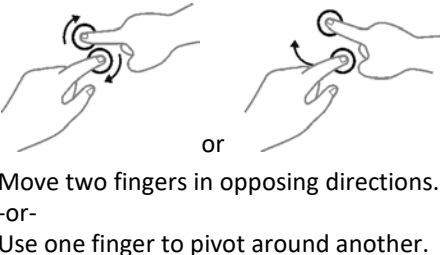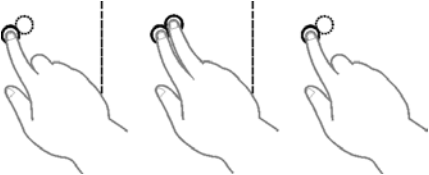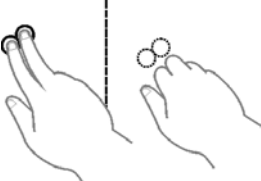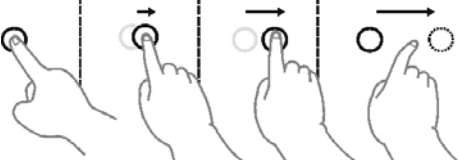Gestures	Actions Q = finger down; ○ = finger up	Descriptions
Rotate	 Move two fingers in opposing directions. -or- Use one finger to pivot around another.	Use rotating to move a picture or other item on the screen in a circular direction (clockwise or counter-clockwise). The gesture works in applications that support the specific gesture.
Press and Tap	 Press on target and tap using a second finger.	Use press and tap to access the shortcut menu.
Two-finger Tap	 Tap two fingers at the same time (where the target is in the midpoint between the fingers).	The function is defined by applications that support the specific gesture.
Flicks	 Make quick drag gestures in the desired direction.	Flick left or right to navigate back and forward in a browser and other applications. The gesture works in most applications that support back and forward.


Using the Tether (Optional)

You can purchase a stylus and tether for your computer model. Use the tether to attach the stylus to the computer.

1. Thread one of the tether's loop through the hole of the stylus (❶), tie a dead knot at the end (❷), and pull the tether (❸) so that the knot fills in the hole and prevents the tether from falling off.

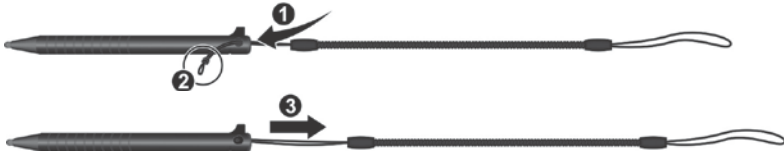

2. Insert the other loop to the tether hole on the computer (❶). Then, insert the stylus through the loop (❷) and pull it tight.

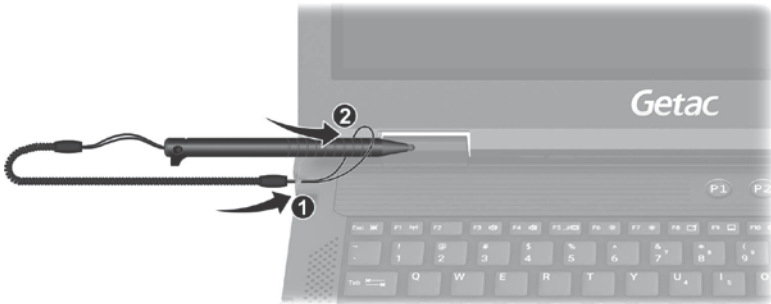

3. When not in use, store the stylus in the stylus slot.

Using Network and Wireless Connections

Using the LAN

The internal 10/100/1000Base-T LAN (Local Area Network) module allows you to connect your computer to a network.



Select models have a second LAN module so you can connect to two networks at the same time.



Using the WLAN

The WLAN (Wireless Local Area Network) module supports IEEE 802.11ax, compatible with 802.11a/b/g/n/ac.

Turning On/Off the WLAN Radio

To turn on the WLAN radio:

Select the network icon in the lower right of the taskbar. Then, select the Wi-Fi button.

To turn off the WLAN radio:

You can turn off the WLAN radio the same way you turn it on.

If you want to quickly turn off all wireless radio, simply switch on Airplane mode. You can control the Airplane mode using one of the below methods.

- Press Fn+F1.
- Select the network icon in the lower right of the taskbar. Then, select the Airplane mode button.

Connecting to a WLAN Network

1. Make sure that the WLAN function is enabled (as described above).
2. Click the network icon  in the lower right of the task bar.
3. In the list of available wireless networks, click a network, and then click **Connect**.
4. Some networks require a network security key or passphrase. To connect to one of those networks, ask your network administrator or Internet service provider (ISP) for the security key or passphrase.

For more information on setting a wireless network connection, refer to Windows online help.

Using the Bluetooth Feature

The Bluetooth technology allows short-range wireless communications between devices without requiring a cable connection. Data can be transmitted through walls, pockets and briefcases as long as two devices are within range.

Turning On/Off the Bluetooth Radio

To turn on the Bluetooth radio:

Go to **Settings → Bluetooth & devices**. Slide the Bluetooth switch to the On position.

To turn off the Bluetooth radio:

You can turn off the Bluetooth radio the same way you turn it on.

If you want to quickly turn off all wireless radio, simply switch on Airplane mode. You can control the Airplane mode using one of the below methods.

- Press Fn+F1.
- Select the network icon in the lower right of the taskbar. Then, select the Airplane mode button.

Connecting to another Bluetooth Device

1. Make sure that the Bluetooth function is enabled (as described above).
2. Make sure that the target Bluetooth device is turned on, discoverable and within close range. (See the documentation that came with the Bluetooth device.)
3. Go to **Settings → Bluetooth & devices → Add device → Bluetooth**.
4. Select the device you want to connect from the search results.
5. Depending on the type of Bluetooth device that you want to connect to, you will need to enter the pertinent information.

For detailed information on using the Bluetooth feature, see Windows' online Help.


Using the WWAN Feature (Optional)

A WWAN (Wireless Wide Area Network) uses mobile telecommunication cellular network technologies to transfer data. The WWAN module of your computer supports 4G and 5G.

NOTE: Your model only supports data transmission; voice transmission is not supported.

Installing a SIM Card

1. Turn off the computer and disconnect the AC adapter.
2. Open the cover of the SIM card slot.
3. Remove one screw to detach the small metal plate that covers the SIM card slot.

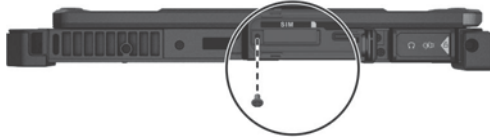

4. Insert the SIM card into the slot. Make sure the golden contact area on the card is facing upward and the beveled corner on the SIM card facing inward.



5. Close the cover.

Turning On/Off the WWAN Radio

To turn on the WWAN radio:

Select the network icon in the lower right of the taskbar. Then, select the Cellular button.

To turn off the WWAN radio:

You can turn off the WWAN radio the same way you turn it on.

If you want to quickly turn off all wireless radio, simply switch on Airplane mode. You can control the Airplane mode using one of the below methods.

- Press Fn+F1.
- Select the network icon in the lower right of the taskbar. Then, select the Airplane mode button.

Setting up a WWAN Connection

Go to Settings → Network & Internet → Cellular. (For detailed information on cellular settings in Windows, see [Microsoft Support website](#).)

Using the Optical Disc Drive (Select Models Only)

Select B360 Pro models have a Super Multi DVD drive or Blu-ray DVD drive.

CAUTION:

- When inserting a disc, do not use force.
- Make sure that the disc is correctly inserted into the tray, and then close the tray.
- Do not leave the drive tray open. Also, avoid touching the lens in the tray with your hand. If the lens becomes dirty, the drive may malfunction.
- Do not wipe the lens using materials with rough surface (such as paper towel). Instead, use a cotton swab to gently wipe the lens.

FDA regulations require the following statement for all laser-based devices:

“Caution, Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.”

NOTE: The drive is classified as a Class 1 laser product. This label is located on the drive.

CLASS 1 LASER PRODUCT
LASER KLASSE 1

NOTE: This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


Inserting and Removing a Disc

NOTE: For optimal performance, use the disc drive where the recommended temperature is between -10 °C (14 °F) and 50 °C (122 °F).

1. Turn on the computer.
2. Push the tab at the right side of the protective cover toward the left (❶) to unlock the cover and then push the upper tab downwards (❷) to open the cover.



3. Press the eject button and the disc tray will slide out partially. Gently pull on it until it is fully extended.
4. To insert a disc, place down the disc in the tray with its label facing up. Slightly press the center of the disc until it clicks into place.

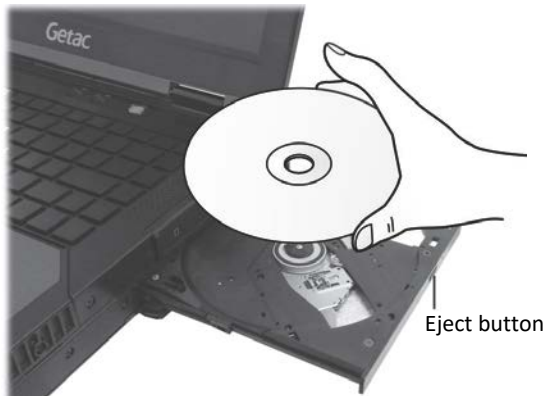

To remove a disc, hold the disc by its outer edge and lift it up from the tray.

5. Gently push the tray back into the drive.

NOTE: In the unlikely event that you are unable to release the drive tray by pressing the eject button, you can manually release the disc. (See “You cannot eject a disc.” in Chapter 8.)

Using the Fingerprint Scanner (Optional)

CAUTION:

- We shall not be liable for any loss or damage whatsoever resulting from your use of the fingerprint scanner or neglect of fingerprint scanner use, or any data loss resulting from such developments as fingerprint authentication malfunctioning.
- It is not recommended that you use the fingerprint scanner in a below-freezing temperature. The moisture on your finger can freeze to the scanner's metal surface when you touch it, resulting in a failed operation. Besides, touching freezing metal with your finger can cause frostbite.

The fingerprint scanner provides a strong authentication mechanism based on fingerprint recognition. You can log on to Windows and dismiss the lock screen with an enrolled fingerprint instead of a password.



NOTE:

- You can enroll a fingerprint only after creating a password for the Windows user account.
- The fingerprint logon process can take a while. This is because the system has to check hardware devices and security configuration before initiating the fingerprint scanner.

To enroll your fingerprint:

1. Go to Settings → Accounts → Sign-in options.
2. Select the fingerprint option. Follow the onscreen instructions to complete.

Using the RFID Reader (Optional)

Select models have an HF RFID reader. The reader can read data from HF (High Frequency) RFID (Radio Frequency Identification) tags.

The RFID reader is enabled by default. To enable or disable the reader, run the BIOS Setup program and select Advanced → Device Configuration → RFID Card Reader. (See Chapter 5 for information on BIOS Setup.)

For optimal results when reading an RFID tag, have the tag face the antenna in the same orientation as indicated by the icon on the exterior of the computer. The icon  indicates where the RFID antenna is located.



NOTE:

- When not using an RFID card, do not leave it within or near the antenna area.
- For enhanced applications and customization of the module, contact your authorized Getac dealer.

Using the Barcode Scanner (Optional)


NOTE:

- For enhanced applications and customization of the module, you can use the Barcode Manager program. (For detailed information on the program, see the program's online help.)
- The maximum operating temperature for the barcode scanner is 50 °C (122 °F).

If your model has the barcode scanner module, you can scan and decode most common 1D and 2D symbologies. To read barcodes:

1. Start your processing software and open a new or existing file. Place the insertion point (or called cursor) where you want the data to be entered.
2. Press the Trigger button on your computer. (The button function is configured by G-Manager.)
3. Aim the scan beam at the barcode. (The scan beam projected from the lens varies with models.)

Adjust the lens' distance from the barcode, shorter for a smaller barcode and farther for a larger one.

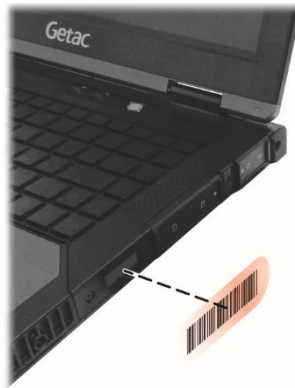

NOTE: Improper ambient light and scanning angle can affect the scanning results.

CAUTION: When or immediately after using the barcode scanner for a long time, do not touch the lens area as the area might be hot.

4. Upon a successful scan, the system beeps and the decoded barcode data is entered.

Notes

The below label on the exterior of your model indicates that your barcode scanner supports the TraCS (Traffic and Criminal Software) trigger button. The TraCS feature is available for customized orders only. If you have already purchased a standard model and require the TraCS feature, please contact Getac technical support for the purpose.



- Pulse repetition rate: 57.67 Hz
- Scan angle: 360° tilt; ±45° pitch; ±60° skew

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

About Manufacture Date and Labels

See “Manufacture Date and Labels” in Appendix B for information.

Chapter 3

Managing Power

Your computer operates either on external AC power or on internal battery power.

This chapter tells you how you can effectively manage power. To maintain optimal battery performance, it is important that you use the battery in the proper way.

AC Adapter

CAUTION:

- The AC adapter is designed for use with your computer only. Connecting the AC adapter to another device can damage the adapter.
- The AC power cord supplied with your computer is for use in the country where you purchased your computer. If you plan to go overseas with the computer, consult your dealer for the appropriate power cord.
- When you disconnect the AC adapter, disconnect from the electrical outlet first and then from the computer. A reverse procedure may damage the AC adapter or computer.
- When unplugging the connector, always hold the plug head. Never pull on the cord.

The AC adapter serves as a converter from AC (Alternating Current) to DC (Direct Current) power because your computer runs on DC power, but an electrical outlet usually provides AC power. It also charges the battery pack when connected to AC power.

The adapter operates on any voltage in the range of 100 V – 240 V AC.

Battery Pack

The battery pack is the internal power source for the computer. It is rechargeable using the AC adapter.

The computer has two battery packs. Select B360 Pro models have an additional battery pack.

CAUTION: Always keep both main battery packs installed, especially when the computer is running on battery power. A battery pack can be removed only when it is not being charged/discharged or if it is being hot-swapped.

Charging the Battery Pack

NOTE:

- Charging will not start if the battery's temperature is outside the allowed range, which is between 0 °C (32 °F) and 50 °C (122 °F). Once the battery's temperature meets the requirements, charging automatically resumes.
- During charging, do not disconnect the AC adapter before the battery has been fully charged; otherwise, you will get a prematurely charged battery.
- The battery has a high temperature protection mechanism which limits the maximum charge of the battery to 80% of its total capacity in the event of high temperature conditions. In such conditions, the battery will be regarded as fully charged at 80% capacity.
- The battery level may automatically lessen due to the self-discharge process, even when the battery pack is fully charged. This happens no matter if the battery pack is installed in the computer.

To charge the battery pack, connect the AC adapter to the computer and an electrical outlet. The Battery Indicator () on the computer glows amber to indicate that charging is in progress. You are advised to keep the computer power off while the battery is being charged. When the battery is fully charged, the Battery Indicator lights green.

The battery packs are charged in parallel. It takes approximately 5 hours (for B360) or 8 hours (for B360 Pro) to fully charge the two main battery packs.

CAUTION: After the computer has been fully recharged, do not immediately disconnect and reconnect the AC adapter to charge it again. Doing so may damage the battery.

Initializing the Battery Pack

You need to initialize a new battery pack before using it for the first time or when the actual operating time of a battery pack is much less than expected. Initializing is the process of fully charging, discharging, and then charging. It can take several hours.

The G-Manager program provides a tool called “Battery Recalibration” for the purpose. (See “G-Manager” in Chapter 6.)

Checking the Battery Level

NOTE: Any battery level indication is an estimated result. The actual operating time can be different from the estimated time, depending on how you are using the computer.

The operating time of a fully charged battery pack depends on how you are using the computer. When your applications often access peripherals, you will experience a shorter operating time.

The battery packs are discharged in parallel.

By Operating System

You can find the battery icon on the Windows taskbar (lower-right corner). The icon shows the approximate battery level.

By Gas Gauge

On the exterior side of the battery pack is a gas gauge for displaying the estimated battery charge.



When the battery pack is not installed in the computer and you want to know the battery charge, you can press the push-button to see the number of LEDs that light up. Each LED represents 20% charge.

Battery Low Signals and Actions

The battery icon changes appearance to display the current state of the battery.

Battery Icon	Battery Level	Description
	Discharging	The icon shows the charge remaining in 10-percent increments until the charge reaches the low-battery level.
	Low	The battery charge has reached the low-battery level.
	Critically low	The battery charge has reached the critical battery level. By default, Windows will display a notification and put your computer into Hibernation.

When the battery is low, the computer’s Battery Indicator () also blinks red to alert you to take actions.

Always respond to low-battery by connecting the AC adapter, placing your computer in Hibernation mode, or turning off the computer.

Replacing the Battery Pack

CAUTION:

- There is danger of explosion if the battery is incorrectly replaced. Replace the battery only with the computer manufacturer’s optional battery packs. Discard used batteries according to the dealer’s instructions.

- Do not attempt to disassemble the battery pack.
- A battery pack can get hot due to long working hours. Do not touch a hot battery pack with bare hands. After removing a battery pack, put it in a well-ventilated area.

NOTE:

- You can hot swap one battery pack while another one is supplying the power. The appropriate temperature range for hot swapping the battery pack is between -21°C (-5.8 °F) and 45 °C (113 °F).
- The illustrations show B360 as the example. The removal and installation method for B360 Pro is the same.

1. Skip this step if you are hot swapping the battery pack.

Turn off the computer and disconnect the AC adapter. After turning off the computer, allow a cool-down time of at least 5 minutes before removing the battery pack.

2. Carefully place the computer upside down.
3. Locate the battery pack you want to remove. (See “Bottom Components” in Chapter 1 for battery pack locations.)
4. Slide the battery latch inwards (❶) and then toward the unlocked position (❷). The battery pack will slightly pop up.




5. Remove the battery pack from its compartment.



(Battery 1 as the example)

6. Fit another battery pack into place. With the battery pack correctly oriented, attach its connector side to the battery compartment at an angle (❶) and then press down the other side (❷).

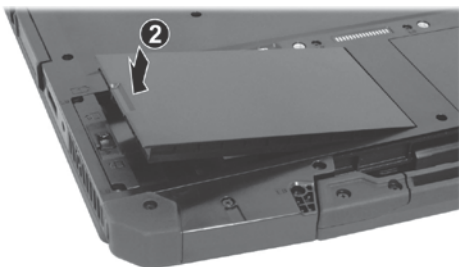

(Battery 1 as the example)

7. Slide the battery latch toward the locked position (🔒).

CAUTION: Make sure the battery latch is correctly locked, not revealing the underneath red part.



Correct



Incorrect
(revealing red part)

Power-Saving Tips

Aside from enabling your computer's power saving mode, you can do your part to maximize the battery's operating time by following these suggestions.

- Do not disable Power Management.
- Decrease the LCD brightness to the lowest comfortable level.
- Shorten the length of time before Windows turn off the display.
- When not using a connected device, disconnect it.
- Turn off the wireless radio if you are not using the wireless module (such as WLAN, Bluetooth, or WWAN).
- Turn off the computer when you are not using it.

Appendix A

Specifications

NOTE: Specifications are subject to change without any prior notice.

Parts		Specifications
CPU		- Intel® Core™ Ultra 5 Processor 125U, 12M Cache, up to 4.30 GHz - Intel® Core™ Ultra 5 Processor 135U, 12M Cache, up to 4.40 GHz - Intel® Core™ Ultra 7 Processor 155U, 12M Cache, up to 4.80 GHz - Intel® Core™ Ultra 7 Processor 165U, 12M Cache, up to 4.90 GHz
BIOS		Insyde, 32MB flash EEPROM, UEFI, supporting TPM, vPro, NIST, Computrace, self-diagnostics, Smart card security, and Asset Tag
RAM		8 GB DDR5 up to 64 GB
Video	Display panel	13.3-inch (16:9) TFT LCD, 1920x1080 FHD, 1400 nits LumiBond® display, dimmer mode, blackout mode
		Option: Capacitive multi-touch - 10 point (option)
	Controller	UMA - Intel® Arc® Xe
		Option (factory pre-installed): Nvidia Quadro MXM A500 (Discrete GPU models)
Audio	Features	High Definition audio
	Microphone	Integrated x 2, Mic Array
	Speaker	Speaker x 2
Keyboard		Standard keys with embedded numeric pad keys, 12 function keys, special Fn (Function) key and Windows keys (Windows Logo, Application, and Copilot), with backlight
Pointing device		Glide touchpad with multi-touch feature, capacitive type
SSD (solid-state drive)	SSD x 2	PCIe interface, M.2 2280 form factor, 256GB/512GB/1TB/2TB Up to two SSDs (SSD 1 and SSD 2) can be installed, with SSD 1 as the C: drive containing the operating system
	Additional (option)	SATA III interface, 256GB/512GB/1TB/2TB, for select B360 Pro models only
Optical disc drive (option)		SATA interface, super-Multi DVD drive or Blu-ray DVD drive, for select B360 Pro models only

Parts		Specifications
I/O ports	Basic	USB-C Thunderbolt 4, USB 3.2 Gen 2, PowerShare USB 3.2, RJ45, HDMI 2.0, combo audio (4-pole TRRS 3.5mm type), docking
	Model-dependent set	One of the below sets: - VGA and RS-232 - RS-232, second RJ45, and VGA - RS-232 and second HDMI 2.0 - RS-232 and DisplayPort 1.4b - RS-232 and USB-C Thunderbolt 4
	Optional	Tri antenna pass-through
		Second RS-232 (optional for B360 Pro)
Card slots		Smart Card
		MicroSD card (option)
		ExpressCard/54 or PC Card (optional for B360 Pro)
LAN		Intel® i219-LM Gigabit Network Connection
Wireless LAN + Bluetooth		Intel® Wi-Fi 6 BE200 + Bluetooth 5.4 combo
GPS (option)		UART
WWAN (option)		4G/5G, external accessible SIM card slot, dual SIM (mini-SIM and eSIM)
Camera (option)		FHD Webcam, IR sensor (option)
Barcode scanner (option)		1D and 2D
RFID reader (option)		USB interface, contactless, supporting HF (13.56 MHz)
Security		Kensington Security Slot
		TPM 2.0
		Fingerprint scanner (option)
Power	AC adapter	Universal AC adapter, 90 W or 120 W (for models with Discrete GPU), input: 100-240 V AC, output: 19 V
	Battery pack x 2	B360: Lithium-ion polymer type, 2-cell, 7.72 V, 3800 mAh, 24 Wh
		B360 Pro: Lithium-ion Cylindrical type, 12-cell, 10.8 V, 6900 mAh, 75 Wh
	Additional battery pack (option)	For select B360 Pro models only: Lithium-ion polymer type, 2-cell, 7.72 V, 3800 mAh, 24 Wh
Dimension		B360: 342 x 281 x 34.9 mm
		B360 Pro: 342 x 281 x 53.5 mm
Weight		B360: 2.32 kg
		B360 Pro: 3.07 kg
Environmental	Temperature*	Operating: -31.7 °C to 63 °C (-25 °F to 145 °F) Storage: -51 °C to 71 °C (-60 °F to 160 °F)
	Humidity	95% relative humidity, non-condensing

Parts		Specifications
	Drop**	1.8 m (6 ft) drop resistant

Table Notes:

* When using the computer with AC power, a low temperature down to -31.7 °C (-25 °F) and the temperature range for MIL-STD-810 are supported. When using the computer with only battery power in a temperature down to -21 °C (-6 °F) (for standard battery packs) or -29 °C (-20 °F) (for high-capacity battery packs), it is advised that the system be booted in a warm environment, if possible, before being taken into an extreme cold environment for work.

** Drop test results vary with different computer configurations and also vary if optional accessories are attached.

Appendix B

Regulatory Information

This appendix provides regulatory statements and safety notices on your computer.

NOTE: Marking labels located on the exterior of your computer indicate the regulations that your model complies with. Please check the marking labels and refer to the corresponding statements in this appendix. Some notices apply to specific models only.

Safety Notices

About the Battery

If the battery is mishandled, it may cause fire, smoke or an explosion and the battery's functionality will be seriously damaged. The safety instructions listed below must be followed.

Danger

- Do not immerse the battery with liquid such as water, sea water or soda.
- Do not charge/discharge or place the battery in high-temperature (more than 80 °C / 176 °F) locations, such as near a fire, heater, in a car in direct sunlight, etc.
- Do not use unauthorized chargers.
- Do not force a reverse-charge or a reverse-connection.
- Do not connect the battery with AC plug (outlet) or car plugs.
- Do not adapt the battery to unspecified applications.
- Do not short circuit the battery.
- Do not drop or subject the battery to impacts.
- Do not penetrate with a nail or strike with a hammer.
- Do not directly solder the battery.
- Do not disassemble the battery.
- Keep the battery away from an extremely low air pressure environment as it may result in an explosion or the leakage of flammable liquid or gas.

Warning

- Keep the battery away from infants.
- Stop using the battery if there are noticeable abnormalities such as abnormal smell, heat, deformities, or discoloration.
- Stop charging if the charging process cannot be finished.

- In case of a leaking battery, keep the battery away from flames and do not touch it.
- Pack the battery tightly during transport.

Caution

- Do not use the battery where static electricity (more than 100V) exists that might damage the protection circuit of the battery.
- When children are using the system, parents or adults must ensure that they are using the system and battery correctly.
- Keep the battery away from flammable materials during charging and discharging.
- In case lead wires or metal objects come out from the battery, you must seal and insulate them completely.

Caution Texts Concerning Lithium Batteries

DANISH

ADVARSEL! Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.

NORWEGIAN

ADVARSEL: Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

SWEDISH

VARNING: Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

FINNISH

VAROITUS: Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan valmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

ENGLISH

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

DEUTSCH

VORSICHT: Explosionsgefahr bei unsachgemäßem Austausch der Batterie. Ersatz nur durch denselben oder einen vom Hersteller empfohlenen gleich-wertigen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

FRENCH

ATTENTION: Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Attention (for USA Users)

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution Texts Concerning Coin Batteries

 WARNING	
● INGESTION HAZARD: This product contains a button cell or coin battery. ● DEATH or serious injury can occur if ingested. ● A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. ● KEEP new and used batteries OUT OF REACH of CHILDREN. ● Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- The coin battery is not user replaceable. It must be replaced by Getac authorized service centers.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.

- Call a local poison control center for treatment information.
- Battery type: CR2016
- Nominal battery voltage: 3 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60 °C (140 °F), or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

About the AC Adapter

- Use only the AC adapter supplied with your computer. Use of another type of AC adapter will result in malfunction and/or danger.
- If a ground/earth pin attachment plug on the AC power cord is provided, always plug the cord into a grounded/earthed outlet. Do not disable ground/earth pin of the plug/cord.
- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter when using it to operate the device or charge the battery. Do not cover the AC adapter with paper or other objects that will reduce cooling. Do not use the AC adapter while it is inside a carrying case.
- Connect the adapter to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.

- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

Heat Related Concerns

Your device may become very warm during normal use. It complies with the user-accessible surface temperature limits defined by the International Standards for Safety. Still, sustained contact with warm surfaces for long periods of time may cause discomfort or injury. To reduce potential heat-related concerns, follow these guidelines:

- Keep your device and its AC adapter in a well-ventilated area when in use or charging. Allow for adequate air circulation under and around the device.
- Use common sense to avoid situations where your skin is in contact with your device or its AC adapter when it's operating or connected to a power source. For example, don't sleep with your device or its AC adapter, or place it under a blanket or pillow, and avoid contact between your body and your device when the AC adapter is connected to a power source. Take special care if you have a physical condition that affects your ability to detect heat against the body.
- If your device is used for long periods, its surface can become very warm. While the temperature may not feel hot to the touch, if you maintain physical contact with the device for a long time, for example if you rest the device on your lap, your skin might suffer a low-heat injury.
- If your device is on your lap and gets uncomfortably warm, remove it from your lap and place it on a stable work surface.
- Never place your device or AC adapter on furniture or any other surface that might be marred by exposure to heat since the base of your device and the surface of the AC adaptor may increase in temperature during normal use.

North America

USA

Federal Communications Commission Radio Frequency Interference Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Please note:

The use of a non-shielded interface cable with this equipment is prohibited.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Information

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure.

For general notebook computers in normal use, you (or any other person in the vicinity) should keep a minimum separation distance of 20 cm away from the front panel of the device to ensures that the RF exposure levels comply with the RF exposure requirement.

For devices designed to be operated at closer proximities, their antennas cannot satisfy the separation distance. Such devices are evaluated with the Specific Absorption Rate (SAR). You (or any other person in the vicinity) should keep a minimum separation distance of 25 mm away from the front panel of the device to ensures that the RF exposure levels comply with the RF exposure requirement.

	Company name	Getac Inc.
	Address	15495 Sand Canyon Rd., Suite 350 Irvine, CA 92618 USA
	Phone	+1-949-681-2900

ANSI Warning

Equipment approved for ANSI/UL121201 and CSA C22.2 No. 213, Nonincendive Electrical Equipment for use in Class I, Division 2, Group A, B, C, and D.
Ambient temperature: -29°C to 55°C

EXPLOSION HARZARD WARNINGS:

- External connections/hubs through the connectors as mentioned (power jack, HDMI, USB, USB-C, RJ45, RS-232, VGA, DisplayPort, audio, smart card slot, memory card slot, SIM card slot, Express card slot, PC Card slot) are NOT to be used in a hazardous location. When used with a docking station (such as the office dock or vehicle dock), the docking/undocking of the equipment must be conducted outside the hazardous area. Docking/undocking in a hazardous area is prohibited.
- The notebook is to be only powered from the battery pack while in hazardous locations. Power adapter is NOT certified to use in hazardous locations and NOT to be used in hazardous locations.
- The battery must only be changed in an area known to be non-hazardous.

- DO NOT disconnect equipment unless power has been switched off or the area is known to be non-hazardous.
- DO NOT remove or replace a user-removable item (such as the battery pack, memory card, smart card, SIM card, Express card, PC Card) while the circuit is live unless the area is free of ignitable concentrations.
- Replace the battery with battery model BP3S2P3450P-01, BP2S1P4060-01 or BP3S2P2100S-04, manufactured by Getac Technology Corporation only. Use of another battery may present a risk of fire or explosion.
- Inspect equipment after any drops and return equipment to its original condition. If equipment cannot be returned to its original condition, then equipment is to be removed from use in hazardous (classified) locations.

California Proposition 65

For California USA:

Proposition 65, a California law, requires warnings to be provided to California consumers when they might be exposed to chemical(s) identified by Proposition 65 as causing cancer and birth defects or other reproductive harm.

Almost all electronic products contain 1 or more of the chemicals listed under Proposition 65. This does not mean the products pose a significant risk of exposure. As the consumers have the right to know about the products they purchase, we are giving this warning on our packaging and user manual to keep our consumers well informed.



WARNING

This product can expose you to chemicals including lead, TBBPA or formaldehyde, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

Canada

Canadian ICES-003

CAN ICES-3(B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device could automatically discontinue transmission in case of absence of information to transmit, or operational failure. Note that this is not intended to prohibit transmission of control or signaling information or the use of repetitive codes where required by the technology.

L'appareil peut interrompre automatiquement la transmission en cas d'absence d'informations à transmettre ou de panne opérationnelle. Notez que ceci n'est pas destiné à interdire la transmission d'informations de contrôle ou de signalisation ou l'utilisation de codes répétitifs lorsque cela est requis par la technologie.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

l'appareil fonctionnant dans la bande 5150-5250 MHz est réservé à une utilisation en intérieur afin de réduire les risques de brouillage préjudiciable pour les systèmes mobiles par satellite dans le même canal.

User Notification of Take-back Service

To customers in United States and Canada:

Getac believes in providing our customers with easy-to-use solutions to recycle your Getac-brand products for free. Getac understands the customers will likely be recycling multiple items at once and as such. Getac wants to make the recycling process for these larger shipments as streamlined as possible. Getac works with recycling vendors with the highest standards for protecting our environment, ensuring worker safety, and complying with global environmental laws. Our commitment to recycling our old equipment grows out of our work to protect the environment in many ways. For more information, see the Getac Web site at <https://www.getac.com/us/environmental-certifications/>.

Please see the product type below for information on Getac product, battery and packaging recycling in USA and Canada.

- For Product Recycling:
If you have a Getac computer that needs to go to a recycling house, Getac can help you. Just contact us at (866) 394 – 3822 or by email at GUSA.RecycleProgram@getac.com to obtain a prepaid shipping label at no charge to you, pack up your equipment in a box of your choice and send it off.
- For Battery Recycling:
The batteries used to power your portable Getac products contain hazardous materials. While they pose no risk to you during normal use, they should never be disposed with other wastes. Getac provides a free take-back service for recycling your batteries from Getac products. To recycle the battery, please contact us at (866) 394 – 3822 or by email at GUSA.RecycleProgram@getac.com.
- For Packaging Recycling:
Getac has chosen the packaging materials used to transport our products carefully, to balance the requirements of shipping the product to you safely while minimizing the amount of material used. Our packaging for notebooks and tablets is recyclable and manufactured using elemental chlorine-free processes. They contain 90 percent (by weight) recycled content. Your packaging materials can be recycled at your local recycling center. Or, if you would like Getac to recycle your packaging, please contact us at (866) 394 – 3822 and we will make arrangements for you.

If you have the above for recycling, please visit our website <https://www.getac.com/us/environmental-certifications/>

Europe Marking and Compliance Notices

Statements of Compliance

EU

English

Getac hereby declares that this product complies with the EU Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at:

<https://support.getac.com/Portal/Page/809>

Deutsch

Getac erklärt hiermit, dass Gerät mit den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 2014/53/EU übereinstimmt. Der gesamte Text der EU Konformitätserklärung ist verfügbar unter:

<https://support.getac.com/Portal/Page/846>

Español

Por la presente, Getac declara que el producto cumple con la Directiva de la UE 2014/53/UE. El texto completo de la declaración UE de conformidad se encuentra a continuación.

<https://support.getac.com/Portal/Page/866>

Français

Getac déclare par la présente que cet appareil est conforme aux critères essentiels et autres clauses pertinentes de la directive 2014/53/EU. La déclaration de conformité de l'UE peut être téléchargée à partir du site internet suivant :

<https://support.getac.com/Portal/Page/879>

Italiano

Getac con la presente dichiara che questo dispositivo è conforme ai requisiti essenziali e alle altre disposizioni pertinenti con la direttiva 2014/53/EU. Il testo completo della dichiarazione di conformità UE è disponibile all'indirizzo:

<https://support.getac.com/Portal/Page/892>

UK

This product is in compliance with Radio Equipment Regulations 2017.

Notices

Max power:
WWAN: 24 dBm
WLAN 2.4G: 17 dBm
WLAN 5G: 18 dBm
WLAN 6E : 17.5 dBm
BT: 10.5 dBm
RFID: -11.05 dBuA/m at 10m

RF Exposure Information:
This device has been tested and meets applicable limits for Radio Frequency (RF) exposure. This equipment should be installed and operated to ensure a minimum of 20 cm spacing to any person at all times.

The device is restricted to indoor use only when operating in the 5150 to 5350 and 5945 to 6245MHz MHz frequency range.

	BE	BG	CZ	DK	DE	EE
	IE	EL	ES	FR	HR	IT
	CY	LV	LT	LU	HU	MT
	NL	AT	PL	PT	RO	SI
	SK	FI	SE	NO	IS	LI
	CH	TR	UK (NI)			

Restriction or Requirement in the UK: 5150 - 5350MHz and 5945 - 6245MHz indoor use only.

	UK
--	----

	Waste Electrical and Electronic Equipment (WEEE) This symbol means that according to local laws and regulations your product shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Proper recycling of your product will protect human health and the environment.
---	--

	Battery Directive — Information for Users In the European Union, this label indicates that the batteries in this product should be collected separately and not be disposed of with household waste. Substances in batteries can have a potential impact on health and environment and you have a role in recycling waste batteries thus contributing to the protection, preservation, and improvement of the quality of the environment.
--	--

Restriction of Hazardous Substances (RoHS) Directive

EU RoHS

Getac products meet the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment. For more information about RoHS, go to: <https://www.getac.com/us/environment/>



Company name	Getac Technology GmbH.
Address	Kanzlerstrasse 4 40472 Dusseldorf, Germany
Phone	+49 (0) 211-984819-0



Company name	Getac UK Ltd.
Address	Getac House, Stafford Park 12, Telford, Shropshire, TF3 3BJ, UK
Phone	+44 (0) 1952-207-222

Declaration of Conformity

See the CE/UK Declaration of Conformity document supplied in the package of your product.

ENERGY STAR



ENERGY STAR® is a government program that offers businesses and consumers energy-efficient solutions, making it easy to save money while protecting the environment for future generations.

Please reference ENERGY STAR® related information from <http://www.energystar.gov>.

As an ENERGY STAR® Partner, Getac Technology Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

All Getac products with ENERGY STAR® logo comply with the ENERGY STAR® standard, and the power management feature is enabled by default. Getac's ENERGY STAR® qualified products are listed on the EPA website.

<https://www.energystar.gov/products>

About Battery and External Enclosure Replacement

Battery

The batteries of your product include two or more battery packs and a button cell (or called RTC battery). All batteries are available from Getac authorized service centers.

The battery pack is user-replaceable. Replacement instructions can be found in “Replacing the Battery Pack” in Chapter 3. The bridge battery and button cell must be replaced by Getac authorized service centers.

Visit the website at <http://us.getac.com/support/support-select.html> for authorized service center information.

External Enclosure

The external enclosure of the product can be removed using screwdrivers. The external enclosure can then be reused or refurbished.

Manufacture Date and Labels

The manufacture date is identified by the second and third digits of the product’s serial number.

Example:

R

M

4

0

3

V

0

0

0

1

Year

Month

Code	Year
M	2021
N	2022
P	2023
Q	2024
R	2025
S	2026
T	2027
U	2028
V	2029
W	2030
X	2031
Y	2032


Code	Month
1	Jan.
2	Feb.
3	Mar.
4	Apr.
5	May
6	Jun.
7	Jul.
8	Aug.
9	Sep.
A	Oct.
B	Nov.
C	Dec.

See the next pages for the label information.

B360



LASER LIGHT- DO NOT STARE INTO BEAM CLASS 2 LASER PRODUCT.
RAYONNEMENT LASER NE PAS REGARDER DANS LE FAISCEAU. APPAREIL
A LASER DE CLASSE 2. MAX. 1 mW; 650 nm. IEC 60825-1:2007 and IEC
60825-1:2014. Pulse duration of 16.8 mSec. Complies with 21CFR 1040.10 and
1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

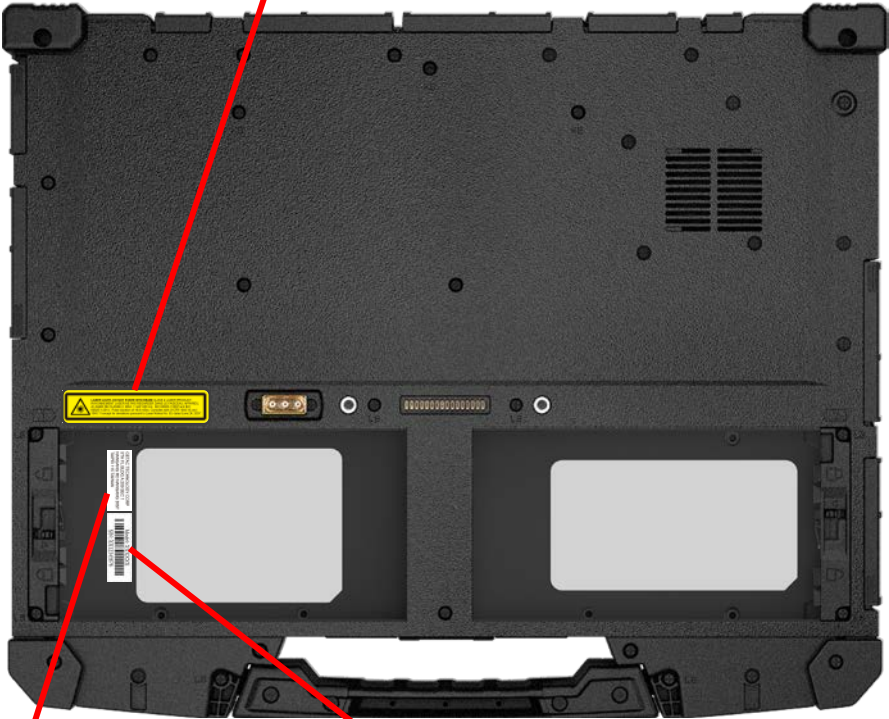

GETAC TECHNOLOGY CORP
5TH FL BLDG A 209 SEC 1
NANGANG RD NANGANG DIST
TAIPEI 115 TAIWAN


Model: XXXXXX

S/N: XX12345678

B360 Pro



LASER LIGHT- DO NOT STARE INTO BEAM CLASS 2 LASER PRODUCT.
RAYONNEMENT LASER NE PAS REGARDER DANS LE FAISCEAU. APPAREIL
A LASER DE CLASSE 2. MAX. 1 mW: 650 nm. IEC 60825-1:2007 and IEC
60825-1:2014. Pulse duration of 16.8 mSec. Complies with 21CFR 1040.10 and
1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

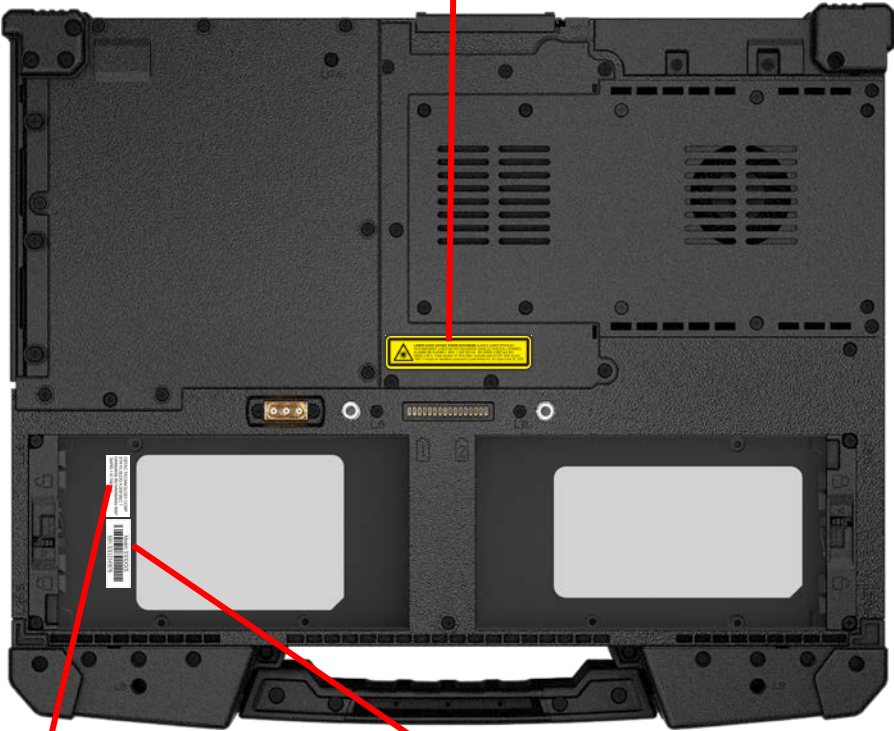

GETAC TECHNOLOGY CORP
5TH FL BLDG A 209 SEC 1
NANGANG RD NANGANG DIST
TAIPEI 115 TAIWAN

Model: XXXXXX

S/N: XX12345678