

NEW ENTERTAINMENT SYSTEM

AI in One Machine

PLAY vs TV

Warnings and Precautions

A very small portion of the population have a condition which may cause them to experience epileptic seizures or have momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. These persons may experience seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), immediately consult your physician before using any video games.

We recommend that parents observe their children while they play the games. If you do not observe your child for the following symptoms, discontinue playing the game immediately: blurred vision, loss of awareness, disorientation or convulsions. DISCONTINUE USE IMMEDIATELY and consult your physician.

FOLLOW THE BELOWING PRECAUTIONS WHENEVER USING MOTO :

- > When using your Moto do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- > Do not play if you are tired or need sleep.
- > Always play in a well lit room.
- > Be sure to take a 10 to 15 minutes break every hour while playing.

REPETITIVE STRAIN WARNING

Some people may experience fatigue or discomfort after playing for a long time. Regardless of how you feel, you should ALWAYS take a 10 to 15 minutes break every hour while playing. If your hands or arms become tired or uncomfortable while playing, stop and rest. If you continue to experience soreness or discomfort during or after play, listen to the signals that your body is giving you. Stop playing and consult a doctor. Failure to do so could result in long term injury. If your hands, wrists or arms have been injured or strained in other activities, use of this system could aggravate the condition. Before playing, consult a doctor.

HARDWARE PRECAUTIONS / MAINTENANCE

1. Do not disassemble or try to repair the Moto or any of its components. Doing so voids your warranty.
2. Always disconnect the Moto before connecting to TV.
3. Do not store the Moto in a humid place, on the floor or in any location there it may collect dirt, dust, lint, etc.
4. Do not drop, hit or otherwise abuse the Moto or its components.
5. Make sure all connections to the Moto are made carefully and inserted into the correct locations only. Hold plugs straight when inserting them into the sockets.
6. When disconnecting any plugs from the Moto, first turn the Moto off. Then carefully pull out by the plug itself rather than by the cord. Do not step on, sharply pull or bend any wires and cables.
7. Do not expose the Moto or any of the components to extreme heat or cold. Your Moto may not work when the temperature is too high. Take care not to expose your Moto to direct sunlight for extended periods of time.
8. Do not spill liquids on the Moto or its components. To clean, use a soft slightly damp cloth. Allow the component to dry completely before using again.
9. Do not rapidly turn the power switch on and off, as this may shorten the life of the console.
10. For the best game image, look directly at the Moto display from the front and operate only in a good light.

INSTALLATION MANUAL

Warning: Please read this instruction manual carefully before installing and using your Moto.

| SECTION 1 | Table of contents |
|-----------|-----------------------------|
| SECTION 2 | MOTO COMPONENTS |
| SECTION 3 | CONNECTING AND INSTALLATION |
| | TROUBLESHOOTING |

MOTO INSTRUCTION MANUAL

Thank you for purchasing the Moto. The product consists of a main motobike body with built-in software and a receiver. Please read the setup instruction and precautions before attempting to connect the Moto.

Side View of Moto



Accessories Description



Installing Batteries

Please install batteries in the Control Panel and the Receiver. Remove the cover of the battery case and insert the four "AA" size batteries as shown below.


For Best results please use fresh, high quality alkaline batteries.




Handlebar Installation




Windshield Installation

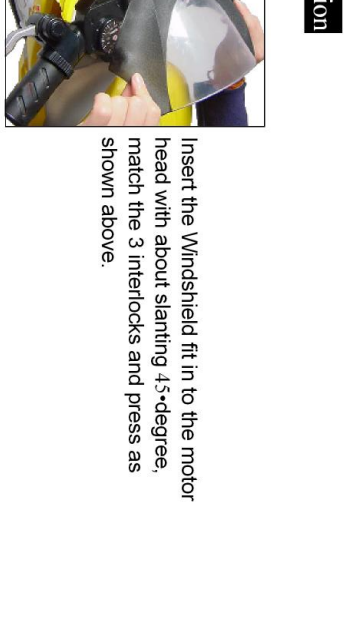

Audio/Video Input

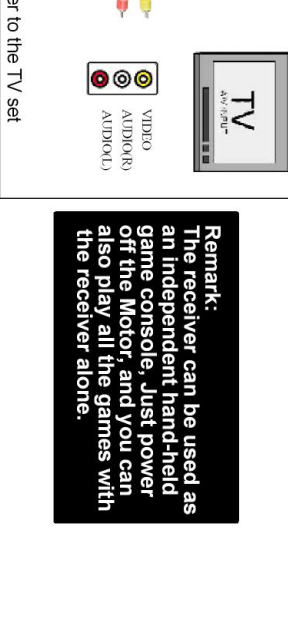

Receiver Description


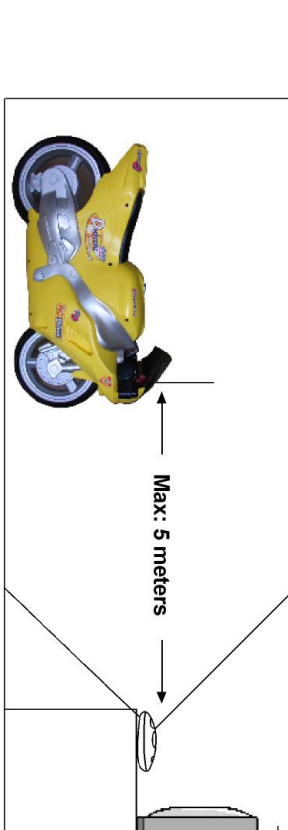


Function Description :



| Hand Brake (Left Handgrip) | Please refer to Software Manual for more details. |
|------------------------------|---|
| Accelerator (Right Handgrip) | Power ----- Power On / Off |
| Control Panel | Reset ----- Setting again |
| Indicator LED | Start ----- Start / Pause the play |
| | Indicator ----- Left Right, Power & Brake |


Direction Control Description:

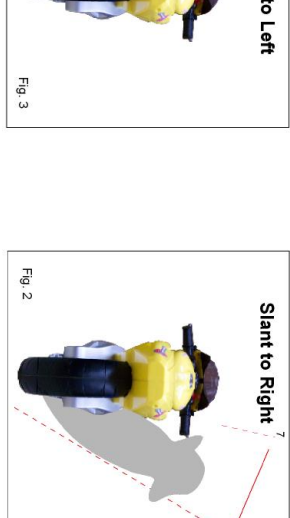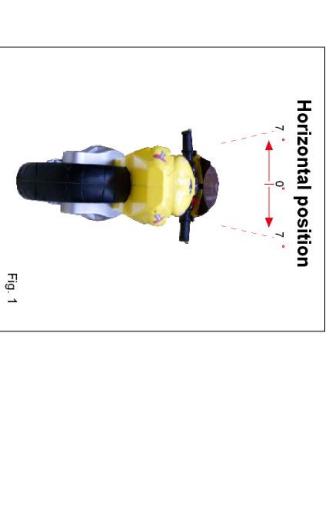

Important Note:

- 1) Before using your Moto, make sure the Receiver and Handlebar are turned on.
- 2) Low power of either Receiver or Handlebar may result in abnormal operation or system non-working.
- 3) In order to maintain normal performance please use standard alkaline "AA" size battery.
- 4) When the batteries begin to lose their charge, the Power indicator LED will begin to dim, and the Moto will turn itself off.
- 5) Remember to take out batteries when Moto is not going to be used for a long time.

SIDEVIEW OF CONSOLE

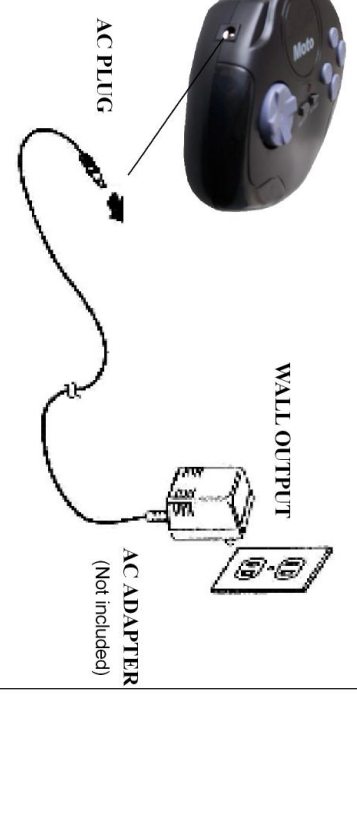

SECTION 3

TROUBLESHOOTING (for AV input system)

| Problem | Before requesting repair, check the following items |
|---|--|
| No picture on the screen | * Is the Moto & Receiver turned on? * Is the TV turned on? * Is the TV on AV channel? * Is the AV output connected properly? * Check whether the battery capacity is too low. * Are batteries being properly installed? |
| Screen flickers or no color | * Are the TV color controls set properly? * Are the TV channel fine adjustments set properly? |
| No game sound | * Is the TV volume too low or off? * Has any of the cables become loose or disconnected? |
| Picture on TV screen is uneasy | * Adjust the vertical and horizontal hold controls on your television until the picture becomes steady |
| Fingers appear on TV during a broadcast | * Is the audio cable connected properly? * Is the battery capacity too low? * Adjust the manual fine tuning adjustment controls on the TV. |
| Picture is blinking or distorted | * Try pushing the reset button. If there is no improvement, power off Moto and try again. |
| No power | * Check whether batteries are being installed or correctly installed. |

SECTION 2

MOTO OPERATION

1. Connect the Receiver to the television
2. Turn your television ON and switch to the AV Channel.
3. Turn ON the Control Panel and the Receiver. After a moment, the menu screen should appear on the TV.
4. Once select the game, press "START" to start playing.

How to turn off the Moto:

1. Turn OFF the Control Panel and the Receiver.
2. Disconnect the Receiver from the television and set your television back to TV channel to view regular TV programs.

CAUTION:

- * All batteries in the Receiver can be replaced by an adult.
- * Do not mix old and new batteries.
- * Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- * Different types of batteries or new and used batteries are not to be mixed.
- * Please use the batteries of the same or equivalent type as recommended.
- * Exhausted batteries are to be removed from the product.
- * The supply terminals are not to be short-circuited.
- * Do not use rechargeable batteries.
- * Non-rechargeable batteries are not to be recharged.
- * The packaging has to be kept since it contains important information.

Note:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.



NOTE:

**THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY
TO OPERATE THE EQUIPMENT.**