

4) Follow all instructions. All operating and use instructions should be followed.

consult an electrician for replacement of the obsolete outlet.

An appliance and cart combination should be moved with care.

for long periods of time, unplug it from the wall outlet and disconnect the antenna o

6) Clean only with dry cloth.

nay generate or use radio frequency energy. Changes or modifications nay cause harmful interference unless the mountcations are captessiy instruction manual. Modifications not authorized by the manufacturer 9) Do not defeat the safety purpose of the polarized or grounding-type plug

10) Protect the power cord from being walked on or pinched particularly at plugs convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. aution when moving the cart/apparatus combination to avoid

3) Unplug this apparatus during lightning storms or when unused for long periods

Consult the dealer or an experienced radio/TV technician for help. To protect your product from a lightning storm, or when it is left unattended and unused

Quick stops, excessive force and uneven surfaces may cause the appliance and cart

14) Refer all servicing to qualified service personnel. Servicing is required when t apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the

> This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

that these are general precautions and may not pertain to your unit.

All the safety and operating instructions should be read before the product is operated.

All warnings on the product and in the operating instructions should be adhered to

5) Do not use this apparatus near water.

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or

aerosol cleaners. Use a dry cloth for cleaning. Do not block any ventilation openings. Install in accordance with the

to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be

om the wall outlet and refer service to qualified service personnel

efore using the unit, be sure to read all operating instructions carefully. Please note

circuits. When installing an outside antenna system, extreme care should be taken t keep from touching such power lines or circuits as contact with them might be fatal.

Never spill or spray any type of liquid on the product.

protection against voltage surges and built up static

to dangerous voltage or other hazards. Refer all servicing to qualified

A polarized plug has two blades with one wider than the other. A grounding ty ug has two blades and a third grounding prong. The wide blade or the th

Do not overload wall outlets and extension cords as this can result in a risk of fire or

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock.

s. Section 810 of the National Electric Code

NSI/NFPA 70 provides information with respect to roper to grounding of the mast and supporting

cture, grounding of the lead-in wire to an antenna antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

ginal parts. Unauthorized substitutions may result in fire or electric shock or other

as been spilled or objects have fallen into the product.

16) Power lines

AC/DC adaptor to a wall outlet having AC 100-240V~,

2. Wooden Base

perform safety checks to determine that the product is in proper operation condition.

23) Wall or ceiling mounting

cable system. This will prevent damage to the product due to lightning and power-line

apparatus has been exposed to rain or moisture does not operate normally, or has

NOTE: This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

duct should be mounted to a wall or ceiling only as recommended by the

When the product exhibits a distinct change in performance-this indicates a need for

INSTALLATION

5. Lighting Loud Speakers 6. Lighting Passive Speakers Remote Sensor

1. The speaker net can take out and reassemble as the figures above


e product does not operate normally by following the operating instructions.

to CATV system installer
s reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required whe

the unit has been damaged in any way such as the following: the power-supply cord

LOCATION OF CONTROLS

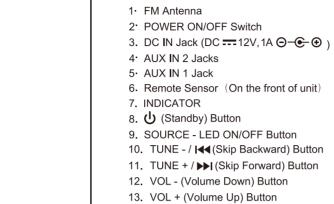

Supplied screwdriver


1. Assembly the two wooden bases to the bottom of unit by the supplied assembly

screws and screwdriver as the figure above.

14. LED Display

7 14 8

3 4 5

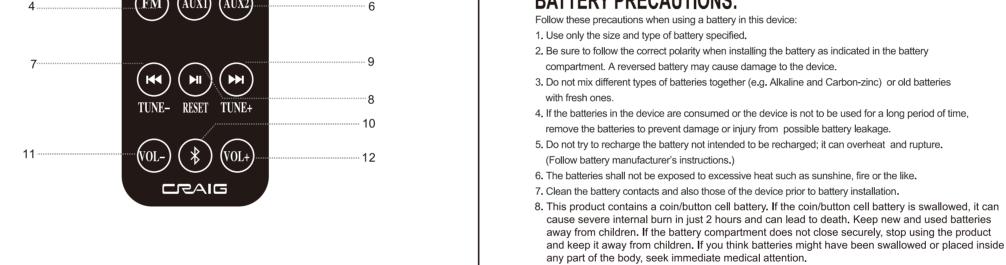

When there is an obstacle between the unit and the transmitter, the transmitter may not operate. When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

Connect to External Video/Audio Device with RCA Jacks:

Connect to External Audio Device with 3.5mm Jack:

Indicator on the top will illuminate.

6. When finished, press and hold the (b) (Standby) Button on the unit or press the (b) (Standby)

. If long period of time will not use the unit. Turn off the unit by slide the POWER ON/OFF Switch n the rear of unit to OFF position, then unplug the AC/DC Adaptor from wall outlet. All the

To turn On / Off the Decorative LED, press and hold the SOURCE -- LED ON/OFF Button on the

unit or press the LED ON/OFF Button on the remote control.

. Press the SOURCE -- LED ON/OFF Button on the unit repeatedly until the FM Frequency appear on the display. (Or press the FM Button on the Remote Control to go to radio FM mode

ss the TUNE+/ ▶► or TUNE -/ ◄ Buttons until the frequency on the display start running to Audio Out Jacks

Repeat the same procedures until the desired station was found and play.

. To start search from the beginning, press the ►II /RESET Button on the Remote Control. 6. If the reception is no good, press and release the TUNE -/ ◄ or TUNE +/ ▶ Buttons repeatedly to fine tune.

The Antenna wire on the rear of unit is for radio reception. If reception is weak, unwound and

extended the wire or relocation the wire to improve the radio reception.

Press the SOURCE -- LED ON/OFF Button on the unit repeatedly until the Blue Indicator is illuminate and blinking. (Or press the \$\frac{1}{2}\$ Blue Tooth Button on the Remote Control to go to BT mode directly.)

please refer to the user s manual of your BT Device.).

1. Slide the POWER ON/OFF Switch on the rear of unit to ON position to power on the unit. Red

3. Wait a few seconds until the unit paired to the external BT Device automatically. (The Blue 2. Press and hold the $oldsymbol{\psi}$ (Standby) Button on the unit approx 1 second or press the $oldsymbol{\psi}$ (Standby) Button on the Remote Control to turn the unit ON from standby mode. ndicator will illuminate and stop blinking

. Press the SOURCE - LED ON/OFF Button on the unit repeatedly or the correspondence I. Plays the music in the paired BT Device as usual.


Press and release the $oldsymbol{\psi}$ (Standby) Button on the unit or press the lacktriangleI /RESET Button on the Remot 5. Press the
(MUTE) Button on the Remote Control to turn off the sound temporary, press again Control to pause. Press and release again to resume normal playback.

Press the ◄ /TUNE – or ► /TUNE + Button repeatedly to skip tracks.

Button on the Remote Control to turn the unit off (standby mode). Connect the external Audio Player to the unit as the figure below.

Normal operation after paired:

Audio Player is set to high level. Otherwise, sound from the unit is weak.)



4. Plays the music in the connected Audio Player as usual. (Make sure the sound level of the connected

When the external BT Device searched the unit, our model number "CHT941DG" will appear on

This equipment complies with FCC RF radiation exposure limits Connect the external Video/Audio Player to the unit as the figure below set forth for an uncontrolled environment. This equipment

between the radiator and your body. 4. Plays the music in the connected Video/Audio Player as usual. (Make sure the sound level of the

> may not cause harmful interference, and (2) this device must accept any interference received, including interference that

FCC RF Exposure Information and Statement

GENERAL SPECIFICATIONS

Radio Coverage -----FM 87.5 - 108 MHz

Audio Power: ----- 5W x 2 ((Total 10W, RMS))

1 x AC/DC Adaptor (Input: AC 100-240V~, 50/60Hz 1A; Output DC== 12V, 1A, ⊖-€-⊕)

Impedance of Speakers: 2 x 8 Ohms, 6 W

1 x Remote Control (Uses 1 x CR 2025 button cell, included)

1 x Audio Connection Cable with 3.5mm Stereo plugs

Craig warrants this product to be free from manufacturing defects in material and

workmanship under normal use for a period of 90 days from date of purchase. If service

ot be repaired or replaced, a refund will be forwarded to you within four weeks of recei

This warranty is void if the product has been: a) Used in a commercial application

LIMITED WARRANTY

is required, please return the product to the store where it was purchased for exchan $\sigma_{
m c}$, pack the unit in the original packing material with all accessories if applicable, a co Power Source of Remote Control: DC = 3V, 1 x CR 2025 button cell (Included your sales receipt and a Cashier's check or Money Order for \$12.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, pleas make sure that the cashier check or money order is redeemable through a U.S. ba Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can

> 1160 NW 163 Drive Miami, FI 33169

of your unit. Please ship your unit to:

rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired anyone other than an authorized Craig service center. d) Damaged because it improperly connected to any other equipment.

Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. Damage to the product not used in the USA.

warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to

Under no circumstance shall Craig be liable for any loss or consequential damage arising | This device complies with part 15 of the FCC rules. Operation | out of the use of this product. This warranty gives specific legal rights. However, you may is subject to the following two conditions: (1) this device | have other rights which may vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damage. Therefore, these


email:service@craigelectronics.com

CHT941DG WC E0FG1 V0U



2. 🔯 (Mute) Button

AUX 2 Button

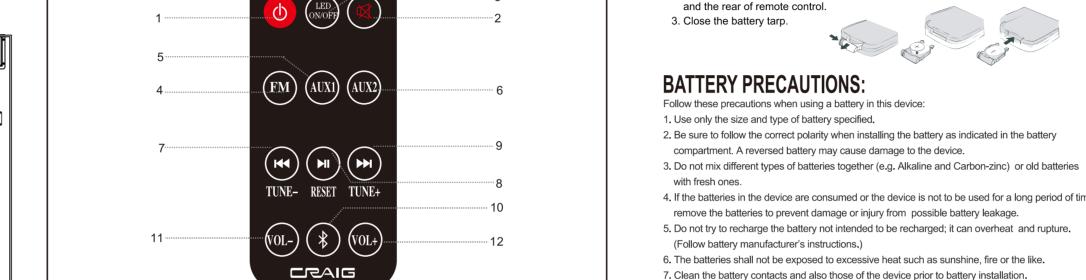

VOL (Volume) - Buttor VOL (Volume) + Button

7. TUNE -/I◀◀ (Skip Backward) But EFFECTIVE DISTANCE OF REMOTE TRANSMITT 8. TUNE+/▶► (Skip Forward) Butto 9. ► (Play - Pause)/RESET Butto

BATTERIES INSTALLATION (REMOTE CONTROL

2. Replace the battery by a new CR2025 button cell with the polarity "+" face up as the figure below

Replacing battery for the remote control

. Push and slide out the battery tray as the figure below.

(Connection cables not included)

In first time use or re-pairing the unit to new BT Device, pairing the unit to external BT Device as

BT Device. After paired, the Blue Indicator will stop blinking. (For details pairing procedures

Pairing code "0000" or "1234" may need to enter.

should be installed and operated with minimum distance of 20

connected Video/Audio Player is set to high level. Otherwise, sound from this unit is weak.)

1 x User's Manual

6 x Assembly Screws

2 x Wooden Stand

1 x Screwdriver

may cause undesired operation.

interference caused by unauthorized modifications to thi equipment. Such modifications could void the user's authority

to operate the equipment.

Size: 148 W() x 210(H)mm (A5)

NOTE: The manufacturer is not responsible for any radio or TV

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner

To Obtain Service on your Product