

## CAUTIONS & WARNINGS

9

**Do not recharge the Battery Pack if it is warm to the touch. Allow the Battery Pack to cool before recharging. Recharging a warm Battery Pack will shorten the life of the Pack.**

**Recharging batteries should be done by an adult.**

**Do not charge a damaged, leaking, hot or wet Battery Pack.**

**When not in use, remove Battery from its compartment.**

**When not in use, Transformer should be unplugged from the electrical outlet.**

**Under no circumstance should the Battery Pack be disposed of in fire. This may cause injury, leakage or explosion.**

**Please dispose of Ni-Cd Battery cells properly.**

**Do not break open or disassemble the Battery Pack.**

**Do not use the Battery Pack or Charger for any other reason than charging and running a MACK® Radio Control Vehicle.**

**Do not stall the motor during use.**

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

**ATTENTION PARENTS: The Battery Charger & Battery Pack need to be periodically examined for potential hazards and any potential hazardous parts be repaired or replaced.**

ITEM NO. 3615



Full-Function 9.6V Ni-Cd Radio Control Vehicle

## OPERATING INSTRUCTIONS

**\* IMPORTANT: IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE 9.6V NI-CD BATTERY PACK.**

**CAUTION: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

**PLEASE DO NOT RETURN TO STORE**  
For more information or questions, please call  
Consumer Services:  
**1-877-FUN-TOYS**  
(1-877-386-8697)

Colors and decorations may vary.  
Keep content details for future reference.



Manufactured & Distributed by  
© 2005 Planet Toys Inc.  
NY, NY 10010  
All Rights Reserved  
MADE IN CHINA

[www.planettoysltd.com](http://www.planettoysltd.com)


**CAUTION-ELECTRICALLY OPERATED PRODUCT:**  
NOT RECOMMENDED FOR CHILDREN UNDER 16 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. INPUT: 120V AC 60Hz 7W. OUTPUT: 12V DC 200mA.

092705

## CONTROLLER BATTERY INSTALLATION

1. On the bottom of the Controller, locate the Battery Compartment.
2. Pull off the Battery Compartment Cover.
3. Insert 1 "9V" size batteries.  
Make sure the plus (+) and minus (-) markings on the battery match up with the plus (+) and minus (-) markings inside the Battery Compartment.
4. Replace the Battery Compartment Cover

### Battery Compartment

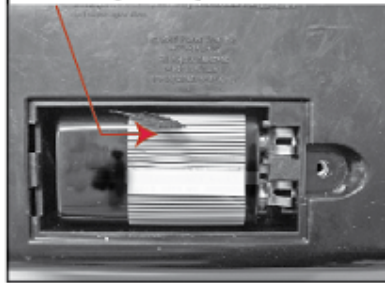

#### CAUTIONS

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard or rechargeable batteries.
3. Use Alkaline batteries only.

**NOTE:** Replace with Alkaline Batteries for longest life and best performance. Remember to take out all the batteries from the vehicle and the controller if the vehicle will not be used for a long time.

## POWER ON/OFF BAND A,B,C,D

### Power On/Off




### Band A,B,C,D

Ensure that the band selector switch on remote & car are set to the same alphabet letter.  
(The car has 4 selectable bandwidths)

## ALIGNMENT CONTROL SWITCH

### Alignment Control Dial

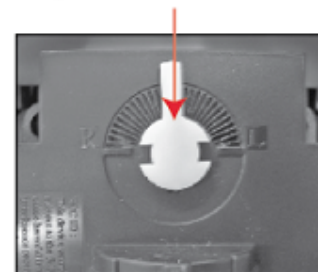

### Alignment Control

The Alignment Control Dial is located between the front wheels. If the vehicle begins to pull to the left, adjust the trim control towards the "R" marking. If the vehicle pulls to the right while driving, adjust the trim control towards the "L" markings.

## 5 CONTROLLER BATTERY INSTALLATION

## 6 POWER ON/OFF BAND A,B,C,D

### 7 OPERATING THE VEHICLE

1. On  
Bat

2. Pull

3. Insr  
Ma  
on  
min

4. Rep

CAUTION  
1. Do  
2. Do  
3. Use

NOTE:  
take o  
for a l



### PROPER USE, PRECAUTIONS & CARE

1. The Toy can perform better on a vinyl floor. Thick carpets are not recommended since carpet does not provide suitable traction and lint from the carpet may damage vehicle.

2. Operating multiple vehicles with the same frequency in close proximity will cause interference and poor performance.

#### FCC CAUTION:

The manufacturer is not responsible for the radio interference caused by unauthorized frequency modification to this equipment. Such modifications could void the user's authority to operate the equipment.

3. Works best away from high voltage power lines, large buildings and walls.

4. Hold the controller antenna up for the best performance.

### PLEASE NOTE & TROUBLESHOOTING

#### PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, you can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

#### TROUBLE SHOOTING

Problems	Reasons	Solutions
Running problems	The batteries inside the radio control are too weak.	Replace with new alkaline batteries inside the control unit.
	There is a weak or low reception for the radio control.	
	The rechargeable battery inside the vehicle is too weak.	Recharge the 9.6V Ni-Cd Battery Pack.
Operation problems	A small object obstructs movement of the tire or axle.	Use tweezers or a paper clip to remove obstruction.
	The vehicle was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off other equipment.