

R2821

USER MANUAL

Declaration:

Read this Manual carefully before using your mobile phone. E28 Limited will not undertake any responsibility or liability for any direct or indirect damage caused by users who fail to comply with this operational manual strictly.

For the update of the software/hardware or the difference of the mobile networks, the information and pictures in this manual may be different from the actual condition of the mobile phone, so E28 tries its best, but will not guarantee to eliminate this difference completely. At the same time, E28 reserves the rights to revise or modify the manual without prior notification or replacement with updated version. The mobile phones, accessories and manual may vary depending on the release areas and time.

The copyright of this manual is reserved by E28. Without prior written permission of E28, all or part of the content for this manual should not be reproduced, propagated or distributed in any manner.

Copyright ©2005 E28. All rights reserved. Reproduction shall be punished.

E28 is the registered trademark of E28.

Java is the registered trademark of Sun Microsystems.



Declaration of Conformity

I hereby declare that the product

Model no: E28 R2821

(Name of product, type or model, batch or serial number)

Satisfies all the technical regulations applicable to the product within the scope of Council Directives 73/23/EEC, 89/336/EEC and 99/5/EC:
EN 301 489-1 & 7

EN301 489-17

EN 301 511

EN 300 328

EN 60950-1

EN 50360, EN 50361

(Title(s) of regulations, standards, etc.)

All essential radio test suites have been carried out.

NOTIFIED BODY:

- Address:

BABT

Balfour House, Churchfield Road, Walton-on-

Thames, Surrey, KT12 2TD, UK

Identification number : 0168

MANUFACTURER or AUTHORISED REPRESENTATIVE:

- Address:

E28 LTD.

689 BEIJING EAST ROAD, 2nd FLOOR

SHANGHAI, 200001

This declaration is issued under the sole responsibility of the manufacturer and, if applicable, his authorised representative.

Point of contact:

E28 LTD. Tel : +86 (0) 21 23060088 Fax: +86 (0)2123060011
(Name, telephone and fax number)

Shanghai, 2006. 6.26

(Place, date of issue)

Tony Cheung

(Signature)

TONY CHEUNG

(Name and title in block letters)

上海穆仁信息科技有限公司

● 地址：上海市北京东路69号东银大厦2楼

● 邮政编码：200001

● 电话：(86)021-23060088

● 传真：(86)021-23060011 23060022 23060033

E28 Limited

● 地址：2nd Floor, Dong Yin Tower, No.688,

East Beijing Road, Shanghai China,200001

● 电话：(86)021-23060088

● 传真：(86)021-23060011 23060022 23060033


Declaration of product

"We E26 Limited, the applicant of model R2821 declare that the dual mode phone works only one mode at a time. That mean: when it is being connected to the VoIP call, it will not be activated by a GSM incoming call at the same moment. The operation characteristic as below:

- 1) VoIP is established – When VoIP is established, the GSM module is still on and it is able to receive RING message from GSM. However, if RING receives, the phone will reject the call automatically as VoIP call is on.
- 2) GSM call is established – When GSM call is established, the phone can receive SIP call request. However, when this request is received, the phone will reject the call automatically as GSM call is on."

Sincerely yours,

Address: 2nd floor 689 Beijing East Road
Tel: Shanghai, P.R. China, 200001
Fax: (86)021—23060088
(86)021—23060011


Tony Cheung

Date: 2006-5-16

Safety Precautions:

	Comply with the rules and regulations of airliners strictly, power off your mobile phone when on air plane to avoid any interference with equipments. Use of the mobile phone on airplane is illegal.
	The mobile phone may interfere with medical devices such as hearing aids and pacemakers. Power off your mobile phone in hospitals or other healthcare site with explicit stipulations. The patient who uses the pacemakers should keep his mobile phone away from the pacemaker.
	Do not disassemble the mobile phone or its accessories by yourself.
	Do not use the mobile phone at gas station, oil depot and area with chemical product or other flammable and explosive substance, to prevent fire hazard or explosion.
	Do not discard waste batteries randomly. Do not put the battery into fire, water or contact it with metal conductor, to prevent explosion or short circuit.
	Use certificated power supply and charger.
	Use the earphone or hands-free device when driving to prevent accident. Comply with local rule and regulation about the usage of mobile phone strictly.
	Note that the mobile phone may interfere with computer, TV, radio and other electronic devices.
	Keep the mobile phone away from children to prevent that the SIM card is swallowed or the mobile phone is fallen off.
SAR	The highest SAR value for this model phone when tested is 0.576 W/kg for use at the ear and 0.569 W/kg for use close to the body. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

1 Quick Reference **10**

1.1 MOBILE OUTLINE	10
1.2 SIM CARD INSTALLATION	10
1.3 BATTERY INSTALLATION.....	11
1.4 INSTALLATION OF EXTENDED MEMORY	13
1.5 CHARGE	14
1.6 IDLE SCREEN.....	15
1.7 KEYPAD USAGE	17
1.8 SPECIFICATION	18
1.9 ACCESSORY	20

2 Telephone **21**

2.1 TELEPHONE FUNCTIONS	21
2.1.1 <i>Dialing</i>	21
2.1.2 <i>Photo dial</i>	23
2.1.3 <i>Quick dial numbers in SIM card</i>	24
2.1.4 <i>Answer Call</i>	24
2.2 CONTACTS	25
2.2.1 <i>New contact</i>	26

2.2.2 View contact	27
2.2.3 Search contact	28
2.2.4 Delete contact	29
2.2.5 Groups and Categories	29
2.2.6 Manage Categories	29
2.2.7 Manage groups	30
2.3 CALL LOG	32
3 Message	33
3.1 INBOX	34
3.2 READ MESSAGE	35
3.3 SEND MESSAGE	35
3.4 DELETE MESSAGE	37
4 Calendar	37
4.1 VIEW CALENDAR	38
4.2 NEW EVENT	39
5 Application	40
5.1 EMAIL	41
5.1.1 Setup email account	41
5.1.2 Mailbox folder	43
5.1.3 Read email	43
5.1.4 Send email	44
5.1.5 Delete email	44
5.2 MEMO	45
5.3 DICTIONARY	45
5.4 WORLD CLOCK	45
5.5 ALARM CLOCK	46
5.6 CALCULATOR	47
5.7 JAVA	47
6 Sight & Sound	48
6.1 PHOTO CAMERA	49
6.1.1 Take photos	49
6.1.2 Review Photo	50
6.1.3 Edit Photo	51
6.2 VIDEO CAMERA	51
6.3 MP3 PLAYER	52
6.3.1 Play Music	52
6.3.2 Play list	53

6.4 GALLERY	54
6.5 PLAY VIDEO	54
7 Internet.....	55
7.1 STK SERVICE	57
7.2 BROWSER	57
7.3 BOOKMARKS.....	58
7.4 WEB HISTORY.....	58
7.5 SAVED PAGES.....	58
7.6 DATA METERS	58
8 Tools & Setup.....	59
8.1 MEMORY USAGE	60
8.2 CONNECT PC.....	60
8.3 MODEM	61
8.4 ALERTS	62
8.5 DEVICE.....	62
8.5.1 Date and Time.....	62
8.5.2 Theme and Sounds.....	62
8.5.3 Auto Power On/Off.....	63
8.5.4 Security.....	63
8.5.5 Calibrate Screen	63
8.5.6 Power Save Mode.....	64
8.5.7 Screen Brightness.....	64
8.5.8 Backlight & Auto Lock.....	64
8.5.9 English (SC Input).....	64
8.5.10 Reset Factory Settings.....	64
8.5.11 User Information	64
8.6 WLAN	64
8.6.1 WLAN setting.....	64
8.6.2 WLAN Connect Status.....	65
8.6.3 VoIP setting.....	65
8.7 CALLS	66
8.7.1 Network	66
8.7.2 Incoming Calls.....	66
8.7.3 Outgoing Calls.....	66
8.8 MESSAGE	67
8.8.1 SMS	67
8.8.2 MMS.....	67
8.8.3 Cell Broadcast.....	68
8.8.4 Quick Message.....	68
8.8.5 Signature.....	68
8.9 INTERNET	68

9*Input operation*.....69

10*FAQ*73

10.1	HOW TO MAKE A DIAL?	73
10.2	HOW TO SET TIME AND DATE	73
10.3	HOW TO SET ALARM	73
10.4	HOW TO TURN ON OR OFF THE ANTENNA?	73
10.5	HOW TO TAKE PHOTOS AND SET AS WALLPAPER?	73
10.6	HOW TO CHANGE THE WALLPAPER?	74
10.7	HOW TO SEND A MMS?	74
10.8	HOW TO ACCESS THE INTERNET?	74
10.9	HOW TO DOWNLOAD AND PLAY MP3?	74
10.10	HOW TO CHANGE THE RING TONES?	74
10.11	HOW TO DOWNLOAD VIDEOS AND PICTURES?	74

11*Troubleshooting*75

1 Quick Reference

1.1 Mobile outline



Note: The color of the pictures in this manual may be different from that of actual mobile phone.

1.2 SIM card Installation



Caution

1. R2821 supports latest 3V SIM card. Apply for a new from the mobile operator if the old 5V SIM card is used. Most of mobile operators will replace it with a new without change of the phone number.

2. Do not bend or scratch on SIM card or contact it with electrostatic, dust or water.



Insert the SIM card

Power off the mobile phone before removing the battery, and insert SIM card, whose side with the cut off corner should be upward.



Take out the SIM card


Power off the mobile phone before removing the battery, and then take out the SIM card.

1.3 Battery Installation



Warning

1. DO NOT remove the battery or switch the power off abnormally when the mobile phone is power-on or in the charge status, to prevent the mobile phone from damaging or the data from losing.
2. DO NOT contact the battery with conductor, to prevent damage from short circuit.
3. DO NOT use battery which is not from original manufacturers or is not specified model.

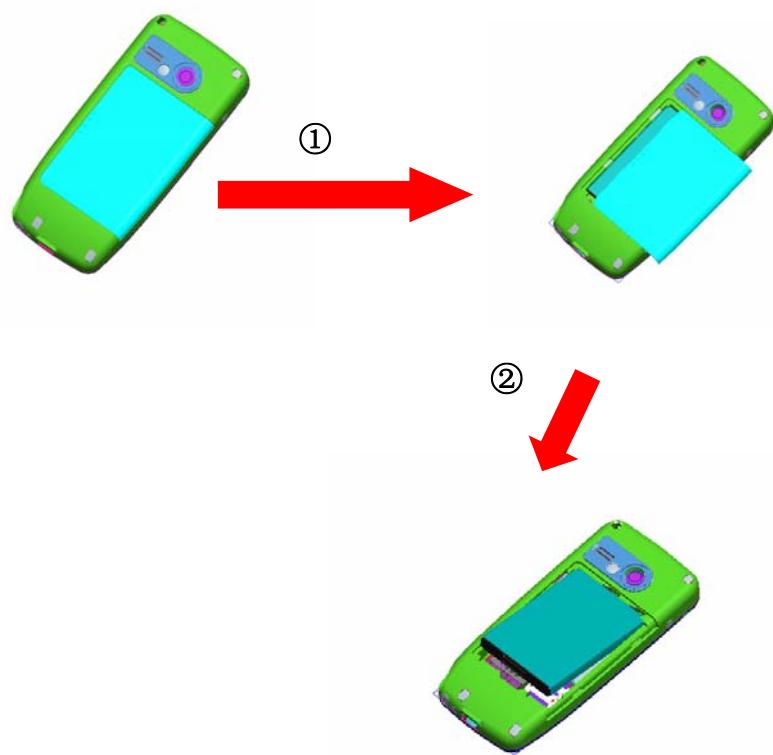

1.4 Installation of Extended Memory



Caution

1. For some T-Flash with poor compatibility, note to purchase and use certificated memory.
2. Pull down and turn the cover of T-Flash over before taking out the T-Flash. Don't pull out it by force.



Install the T-Flash card

Power off the mobile phone before removing the battery, and then insert the T-Flash card.



Take out the T-Flash card

Power off the mobile phone before removing the battery, pull down and turn over the cover, and then take out the T-Flash.

1.5 Charge



If the battery is discharged completely, the charge indicator will not appear after the charger is plugged in and the mobile phone can not be power on immediately. It is necessary to wait for about 10 minutes until the charge indicator appears.

Caution



删除的内容:



USAGE OF TRAVEL CHARGER:

1. Connect the tap of the charger to the Mini USB connector at the bottom of the mobile phone.
2. Plug the power supply of the charger into the socket of the main power supply.
3. The battery meter will flash when charging. It will be normal if the charger is hot for the long charge time.
4. The indicator LED will turn into yellow when the battery is full.
5. Switch the power supply off before the mobile phone is disconnected from the charger.
6. If the battery is discharged completely, the charge indicator will not appear after the charger is plugged in, and the mobile phone can not power on immediately. It is necessary

to wait for about 10 minutes until the charge indicator appears.

USAGE OF USB CHARGER:

R2821 provides users with the USB charge function, and it only needs to connect the USB data cable with the computer for charging. Although the USB data cable can be used to charge, the battery may not be charged fully for low current supply or it will shorten the life of the battery, so the USB charger should be used as few as possible unless it is necessary.


1.6 Idle Screen

The idle screen is the start screen of the mobile, from which to enter into various applications. Press “” key in face of the mobile phone to return to the main screen in any application.



Status icons

The state bar is at the top and bottom of the main screen, of which several icons indicate current status of the mobile phone.

	New message (SMS/MMS)
	Clock
	Battery is full
	Battery is empty
	With GSM service, no GPRS service
	With GSM service, GPRS available
	Roaming
	Call active
	Call on hold
	Mute mode, no ringing or vibrating
	Ringing mode
	Vibrating+ ringing mode
	Vibrating only mode
	Vibrating before Ringing
	With alert
	No alert

	WLAN service disabled
	WLAN service enabled, but without WLAN connection
	WLAN ready to serve
	WLAN and VoIP service ready to serve

The idle screen of R2821 provides several views such as calendar, clock, shortcut and none. Press  to select the view mode, and press  to configure the display content of current view.

1.7 Keypad usage

Keypad usage :

You can discard operations and return to idle screen by pressing "Home" key in most cases except for some critical operations such as making phone call.

You can come up with dialing pad and input telephone numbers by pressing the number key on idle screen.

Operating on pull-down menu, you can:

1. Move up in menu item by pushing Up/down key upward.
2. Move down in menu item by pushing Up/down key downward.
3. Return to upper level menus by pressing "C" key.

Screen lock/unlock key usage:

To prevent from pressing keyboard or screen unintentionally, press "Screen Lock" key to lock keypad and touch screen. Press "Screen Lock" key again to unlock.

You cannot operate the mobile phone while the screen locked. Please press "Screen lock" key to unlock mobile phone before further operations.

All application except MP3 player will quit to idle screen if the screen is locked.,

You need to unlock mobile before you can long press "Screen lock" key to power off mobile

(Other special functions will be described in the later section)

1.8 Specification

Hardware:

GSM band: dual band (900/1800MHz),support tri band

GPRS: Class 10

Built-in flash: 64MB

Built-in RAM: 64MB

Extended memory: T-Flash, maximum 2GB

Display screen: 2.2 inch, 240x320 pixels, TFT-LCD, 260 thousand colors

Touch screen

Camera: CMOS, 2 million pixels, maximum 4x digit zoom

Ring tone: Midi/MP3

Port: standard Mini USB port, support USB charging

Size: 106.5x48.5x16.5mm

Weight: about 100gramme (include standard battery)

Phone factor: Candy bar

Antenna: internal

Battery capacity: 980mAH

Standby time: 75-130 hours (Vary with network state)

Talking time: 120-300 minutes (Vary with network state)

Software

Operating system: Linux

Language: English/French/German/Italian/Spanish

Input method: keypad, QWERTY soft keyboard

Symbol Input method: Soft keyboard

Digit camera: 4xdigit zoom, 2M pixels

Contacts book: Max. 1000 contacts

Support group and category management: maximum 50 groups, maximum 50 categories, maximum 100 contacts in one group.

Support photo caller ID.

Support ring tone customization: ring tone customizable by individual contact or by category

Max. Length of telephone number in contacts: 32 digits

Max. Length of telephone number in dial pad: 50 digit

Ring tone mute by single key press

Photo dialing (4groupsx9person/group)

Auto dialed phone number recall

Short Messages (SMS)

- Group sending: Max. 100 contacts
- Concatenated messages: 10piece \times 140bytes/piece

Multi-Media Messages (MMS)

- Group sending: Max. 100 contacts
- Support picture/ring tone /text
- Max. Pages: 20pages

STK

Calendar

Calculator

Memo

World clock

E-mail

Enable alarm clock in power-off mode

JAVA MIDP 2.0

Call log: 4x100 records
Browser: WAP 2.0&WWW
Encrypting privacy: Contacts/Messages/ gallery /calendar
Picture editing
Modem: CSD, GPRS
Automatic GSM operator profile selection by SIM card
Support flight mode
Scheduled power on/off
Emergency call without SIM card: Emergency call number112
Audio recording: AMR, maximum capacity 1 hour
Audio playback: MP3 / AMR / MIDI
Video recording: 3GP (H.263+AMR), QCIF
Video playback: 3GP (H.263+AMR), QCIF
MP4 (MPEG4+AAC), QCIF
MP4 (MPEG4+AAC), QVGA
Photo style: JPG, full color/sepia /black & white
- (240*240)
- (320*240)
- (480x480)
- (640x480)
- (1280*960)
- (1600*1200)
Picture format supported : JPG/GIF/GIFa/PNG
MP3 format supported
- 64K/128K/192K CBR
- VBR
- Dynamic display effect

1.9 Accessory

One battery;
One battery charger;
One Earphone;

One Mini USB Cable.

2 Telephone

R2821 provides a lot of ways for dealing with telephone, which makes it at your greatest convenience to dial or answer a phone call, do call diverting and do call waiting.

R2821 provides 400 records of call logs including 100 records of missed calls, 100 records of answered calls, 100 records of outgoing calls and records of rejected calls.

It is most worthy to mention about the super high capacity of contact book of R2821. It can store 1000 items of contacts; each contact can present information such as mobile phone number, home phone number, business phone number and so on. Furthermore, the photo and ring tone can be set individually for each contact. Contacts can be sorted by groups or categories for easy management.

Note: Above capacity is the recommended upper limit. The large capacity will affect the use performance to some extent.

2.1 Telephone functions




You can only dial emergency call number 112 without SIM card inserted.

Caution

2.1.1 Dialing

R2821 provides vary of manners for dialing. You can dial directly by clicking dial pad on touch screen, inputting phone number by keypad, dialing out from contacts book, photo dial or call log.

1. Press desktop wallpaper area on idle screen to dial pad.

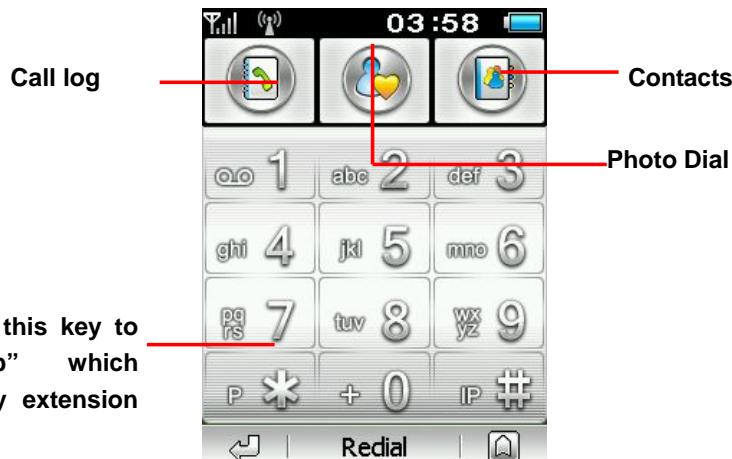

(1)

2. Press number key to input the phone number which will be displayed in the number box.

Press  to delete a digit before cursor.



(2)




Tips

R2821 provides unique intelligent auto fill-up function to help call the dialed number quickly. When the first several digits are matched with that dialed, the mobile phone will make up the rest digits automatically. If the filled result is not what you want, you can just continue to input the rest digits and the auto filled digits will disappear.

3. Click **Dial** button to dial the phone number shown in phone number box. If the number

matches with that in contact book, the corresponding name, photo and phone number will be displayed. Otherwise, the phone number with default picture will be displayed.

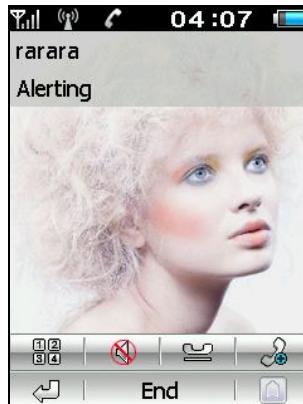

(3)

Press  to dial extension or input digits (for example, input your account or password)

Press  to switch mute.

Press  to hold current call (need operator service)

Press  to do third party call and conference call (need operator service)..

Press **【VOIP】** to make VOIP call. (Please refer to section 8.6 WLAN & VOIP settings to configure your VOIP settings).

4. You can also input telephone number by keypad and dial out by "send" key.

5. Press **【End】** on screen or press "End" key to end the call

2.1.2 Photo dial



Click  at dial pad to access photo dial.

Photo dial makes the phone dialing easier and more directly. You can simply press the photo of the contact to dial corresponding phone. It is easy to set up photo dial. Press Blank to select a contact person from the Phonebook. A zoomed photo of the selected

contact will appear after the photo dial is set up. If the contact not includes a photo, a default picture is displayed.



(4)

If replacement required, press **【Delete】** to delete this person contact, and then press Blank to set it again.

In order to facilitate the contact searching, there're four groups of photo dial contacts, which is different in background color. Each group contains 9 photo dial contacts.

2.1.3 Quick dial numbers in SIM card

You can dial the number stored in SIM card by storage index on dial pad. Input the storage index of the contact of your SIM card and then click “#” button, the corresponding phone number will be shown in the number box. Click **【Dial】** button to dial out.

2.1.4 Answer Call

Caller ID will be matched during an incoming call. The name and photo will be displayed if caller ID matches any contact. Otherwise, only caller ID and default photo will be displayed. You can answer or reject call, or set phone busy.



(5)

keypad usage:

1. Press "Send" key to answer call.
2. Press "End" key to reject call.



Tips

You can return to idle screen to access contact and message while on a phone call.
While phone call screen is hiding background, it can be brought to front again by pressing "Phone" icon in shortcut view mode or by pressing wallpaper in other view modes.

You can push up (down) the Up/down key to turn up (down) the volume the vduring the call.

2.2 Contacts


R2821 provides contact book with super high capacity. Each contact is a big social database which contains name, mobile phone number, home phone number, business phone number, FAX number, address, birthday, etc.

R2821 contact book can be managed by groups and categories. Contacts can be sorted into categories such as family, friends, colleague, etc. And you can define groups as well.

R2821 contacts book also provides custom function to set the phone for the contact person, which will be displayed as the caller ID on incoming call. What's more, each contact can be specified to use the unique ring tone.

【Menu】 → 【Contacts】

Select view manner (View by List/View by Thumb) and sort manner (View by Last Name / View by First Name)

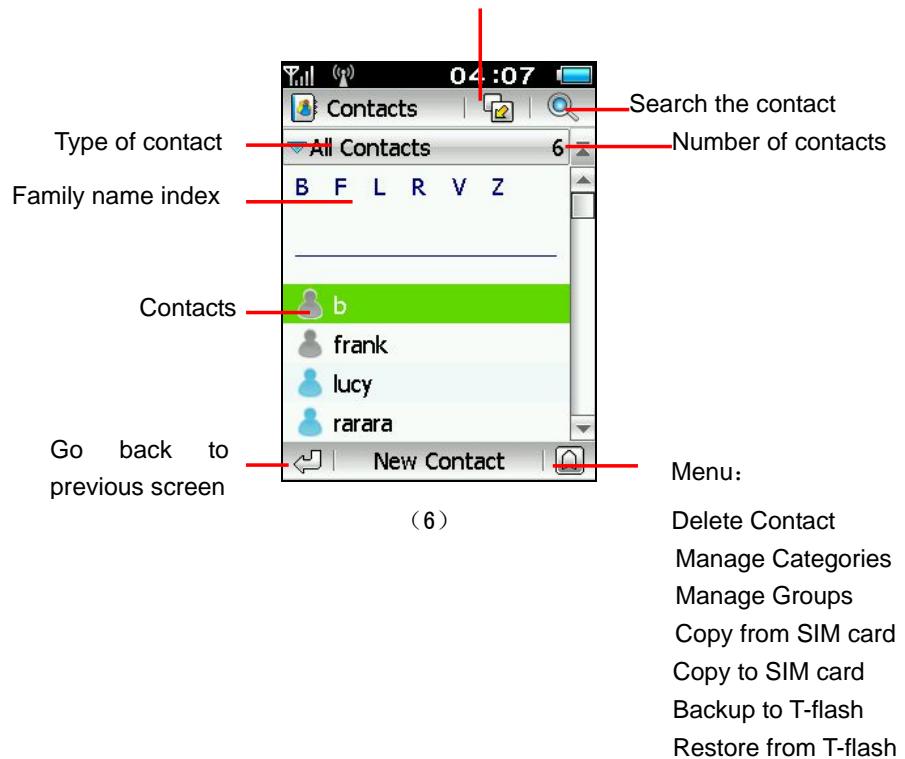

2.2.1 New contact

Press 【New Contact】 can add a new contact on contact list screen(6).

Each contact contains name, mobile number, business phone number, home phone number, and FAX number, and multimedia data such as photo and ring tone.



(7)

2.2.2 View contact

Press a contact on contact list screen (6), a detail view screen will come up.



Menu:

(8)

Copy to SIM card/Phone

Delete

Press  to view events related to this contact and add new event for this contact.

Press  to send Vcard of this contact to other by SMS

A pop-up menu will come up while hold a contact for a period of time by stylus (9), It has following menu items: View details, Dial Number, Prepend Dial, Send SMS and Send MMS.



(9)

A pop-up menu will come up while hold a contact number for a period of time by stylus (10). It has following menu items: Dial Number, Prepend Dial, Send SMS and Send MMS.



(10)




Caution

Usually it only contains names and one telephone number in SIM card contact because of short of storage memory, while contact stored in mobile phone contains much more information. Therefore, the device will ask user to selectively store information while copy contact from mobile phone to SIM card since there's no enough storage space. On the contrary, user need to specify which item in mobile contact will store the information copied from SIM card.

2.2.3 Search contact

On screen (6), you can press  to search contact.

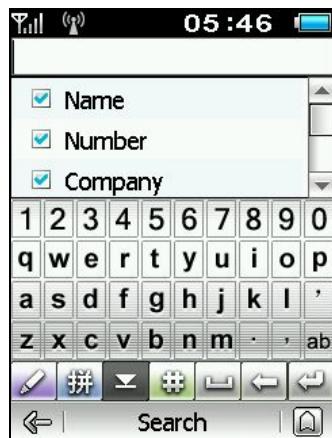

(11)

You can search the contact by name, number, company or notes.

To search by name, input any word matched with the name.

To search by string or digits, it can match with any part of the material for the contact.

2.2.4 Delete contact

Select to **delete contact** from menu on the contact listing screen (6).

2.2.5 Groups and Categories


Categories are usually used to category management. For instance, you can quickly search contact by selecting to display only some category, or specify different ring tone for different category.

Groups are usually used to send group message (SMS/MMS included).

One contact can only be of a category, but it can be of different groups.

2.2.6 Manage Categories

Select **Manage Categories** from menu on the contact list screen (6). R2821 will list existing editable categories in the phone.

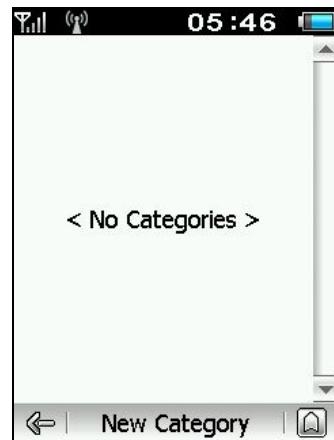

(12)

Press **【New Category】** to add new category:




(13)

In the new category, you need to:

- ◆ Input category name.
- ◆ Select ring tone of the category.
- ◆ Select led alert color of incoming call of the category.
- ◆ Whether or not to private the category.

2.2.7 Manage groups

Select **Manage Groups** from menu on the contact list screen (6) to enter into groups management screen as following figure:

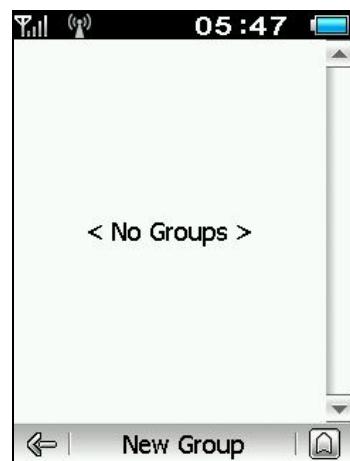

(14)

Press **【New Group】** to add new group:



(15)

In the new group, you need:

- ◆ Input group name.
- ◆ Select the type of the group: SMS/MMS, E-mail.
- ◆ Press  to select members of groups from the contacts.
- ◆ Whether or not to private the group.

2.3 Call Log

R2821 provides 400 records of call log including 100 records of missed calls, 100 records of answered calls, 100 records of outgoing calls and 100 records of rejected calls.

【Menu】 → 【Call Log】

View by Date/ View by Name / View by Call Meters



(16)

Click pull-down box to select the type of record:

- All calls
- Outgoing Calls
- Answered Calls
- Missed Calls
- Rejected Calls

Click to select: View by Date/ View by Name / View by Call Meters

A pop-up menu will come up while hold a contact for a period of time by stylus

(17). It has following menu items: View details, Dial Number, Prepend Dial, Send Message, Save Number to and Delete Record.

Press a record to view details.



(18)

Press  to save the number to existing contact/new contact

Press  to send SMS/MMS to the number.

3 Message

R2821 supports both common Short Message Service (SMS) and Multi-Media Message Service (MMS). You can send photos and music to your friends. With the super big multicolor touch screen and the writing recognition function, you can manage your information readily.

【Menu】 → 【Message】

SMS AND MMS

SMS (Short Message Service): common Short Message Service is a basic simple text message service of GSM network, and **is sent directly from one side to the other by point to point mode.**



Related knowledge

MMS (Multi-Media Messaging Service): Multi-Media Messaging Service is a great evolution of existed SMS and can be used to edit and real-time send the picture, audio and text information, to implement the information transmission among mobile phones and from the mobile phone to the network readily, by which to bring you into a vivid and dramatic mobile multi-media world.


Both types are supported by R2821.

3.1 Inbox

Information such as SMS, MMS and cell broadcasting messages can be managed in the inbox readily.

【Menu】 → 【Message】

View All/View New Messages

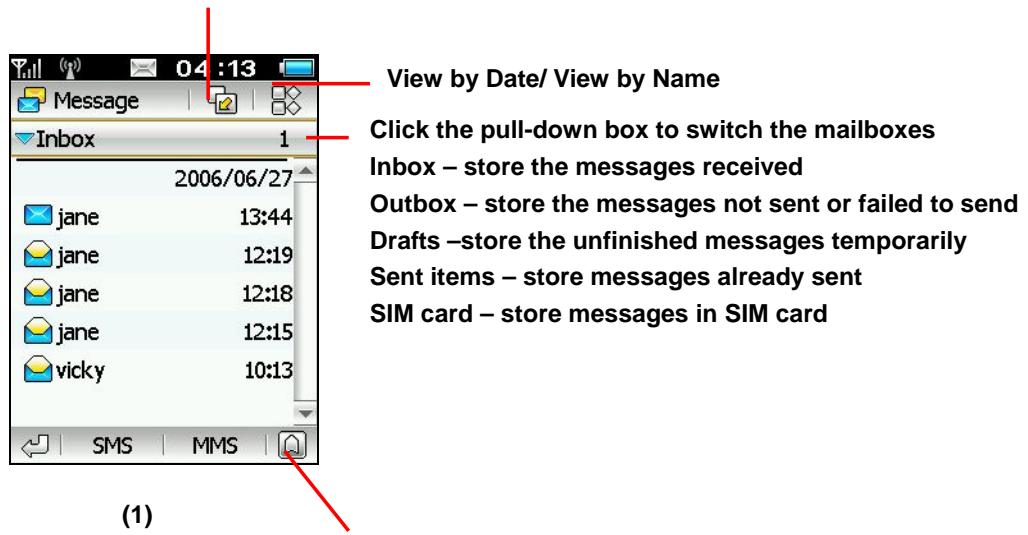

View by Date/ View by Name

Click the pull-down box to switch the mailboxes

Inbox – store the messages received

Outbox – store the messages not sent or failed to send

Drafts – store the unfinished messages temporarily

Sent items – store messages already sent

SIM card – store messages in SIM card

Menu:

Move Messages- between folders or between
SIM card and phone

Delete Message- delete the message

Manage Folders- set/delete folders

Setup- set message function

Press **【SMS】** to enter into the SMS editing screen

Press **【MMS】** to enter into the MMS editing screen.

Meanings of the icons in front of the messages:

 : SMS to be read


 : SMS already read

 : MMS to be read

 : MMS already read

3.2 Read message

Press Message Record in the inbox to read this message directly.

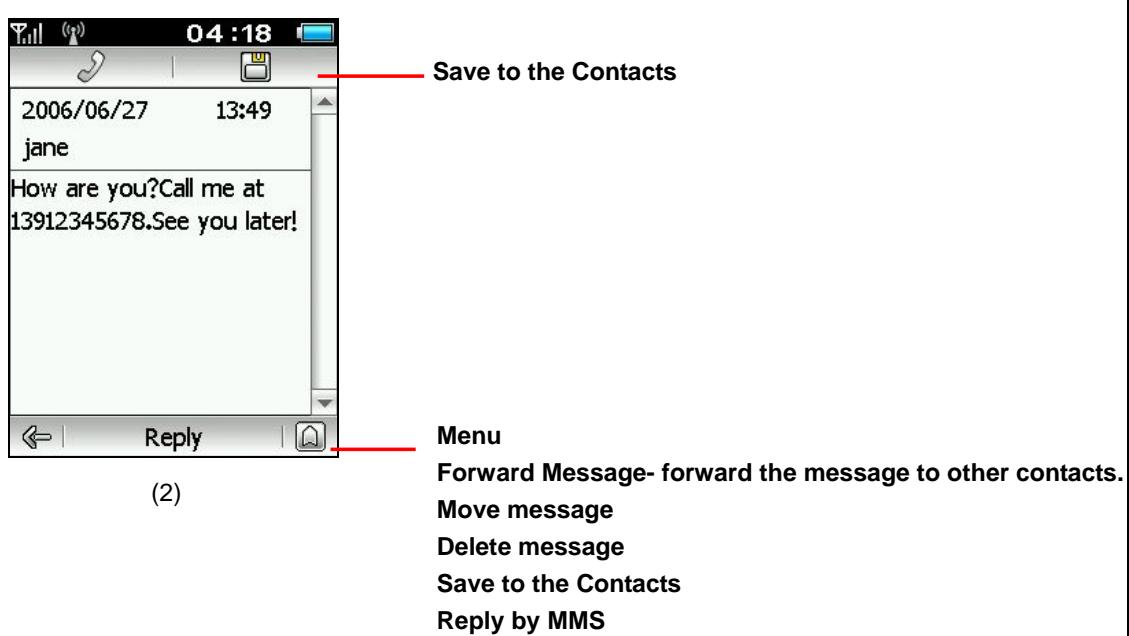

Press  to call back to the message sender


Press  to save the number/electron business card of the sender to Contracts

Press **【Reply】** to reply the sender by SMS

3.3 Send message

【Menu】 → **【Message】**, then press **【SMS】** or **【MMS】** to add a new message. If there is only text in the message, it should be sent as an SMS; if pictures or music is inserted

into the message, it should be sent as an MMS.

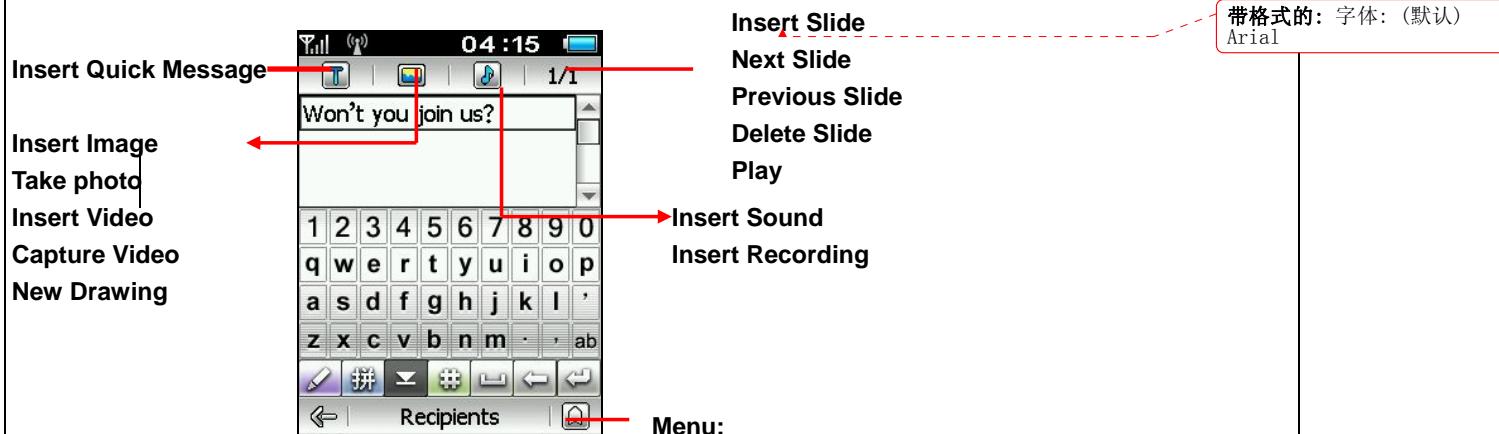

(3)

Save to Drafts-Save the SMS in edit to Drafts

Cut

Copy


Paste

Press to insert quick message

Press to insert Image/take photo/insert Video/capture video/new drawing

Press to insert sounds/ insert recording


Press **【Recipients】** to input the number of a recipient

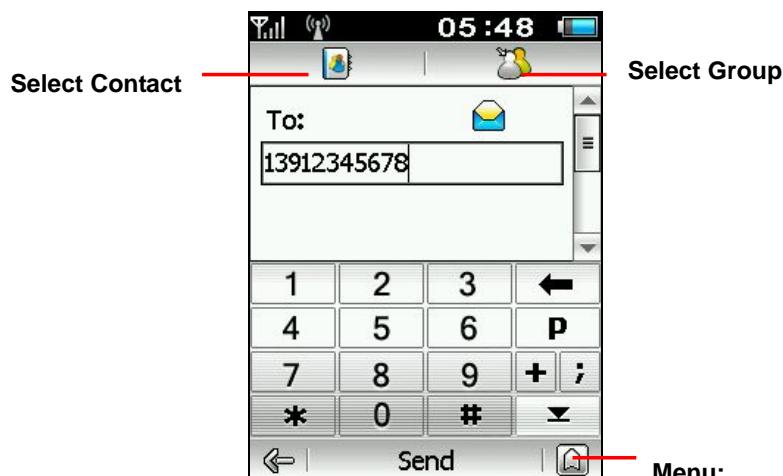

(4)

Select Contact
Select Group
Menu:
Save to Drafts

Press **【contact】** to select the recipient from the contacts book. Press the top and right corner of screen (5) to retrieve it by the family name.

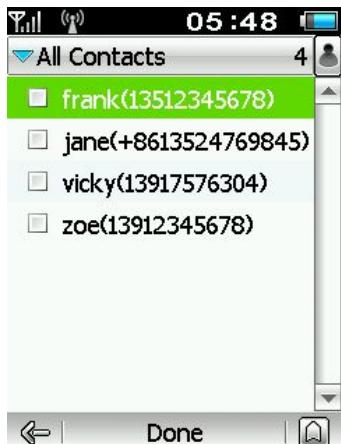

(5)

3.4 Delete message

Select the **delete message** from the menu of screen (1).

4 Calendar

In calendar, you can arrange your daily schedule to make the trivial affairs easier.

【Menu】 → 【Calendar】



(1)

Menu:

Delete Month's Events

Delete all Events

Setup- Set the week begins on/day begins at/retention period

带格式的: 字体: (中文)
黑体, 加粗


4.1 View calendar



(2)

Press  to select: View Month / View Week

Press  to search your event. You can search the event by subjection, location, notes or attendees.

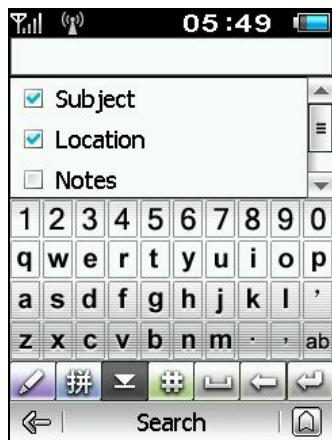

(3)

4.2 New event

Press **【New Event】** to add a new event on the calendar screen (1), .

You can set: Subject

Location

Note

All day event or not

The begin and end time of the event,


Whether set recurrence

Free/Busy/Tentative/Out of office

Important/Business/Personnel/Vacation/Must attend/Travel Required


Private or not

Press  to set the prompt time of the event

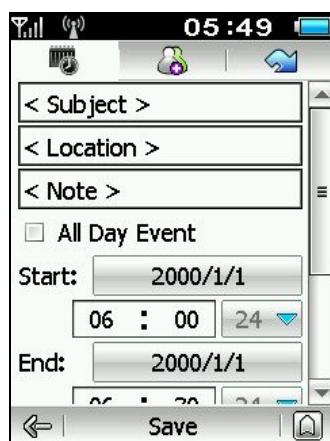


(4)

Press  to add the attendees of the event

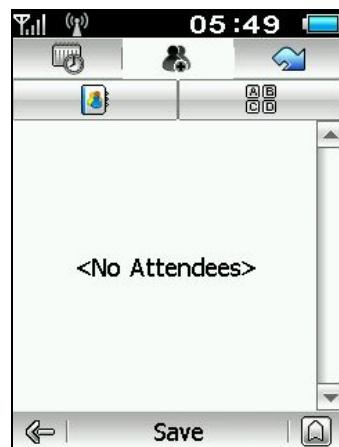

(5)

Press  to set the remind mode of the event

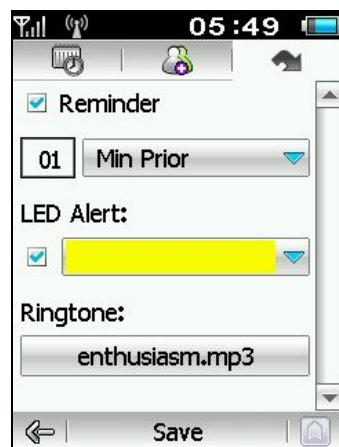

(6)

5 Application

R2821 builds in such applications as eMail, Memo, World Clock, Alarm Clock, Calculator, and Java

【Menu】 → 【Application】



(1)

5.1 eMail

【Menu】 → 【Application】 → 【eMail】



(2)

5.1.1 Setup email account

Press **setup** or a email account (for initial use) to enter email account setup



(3)

In account setup, following items can be set:

- ◆ Data Service 【GPRS/CSD】 :Receive and send email by GPRS or CSD
- ◆ eMail Address
- ◆ eMail Account
- ◆ Account password
- ◆ Configure POP3 Server
- ◆ Whether to retrieve only email headed
- ◆ The maximum Mail size
- ◆ Whether to save on server
- ◆ Configure SMTP server
- ◆ Cell broadcast on or off
- ◆ View quick message or set new quick message
- ◆ Set the signature in Emails

5.1.2 Mailbox folder



(4)



: Emails to be read



: Emails already read

5.1.3 Read email

Press email record in the inbox to read this email directly.




(5)

Press **【Reply】** to respond email to the sender.

5.1.4 Send email

Press **【New Email】** to enter the email edit screen (6). You can input subject and message.
Press **【Recipient】** to input the recipient's address.

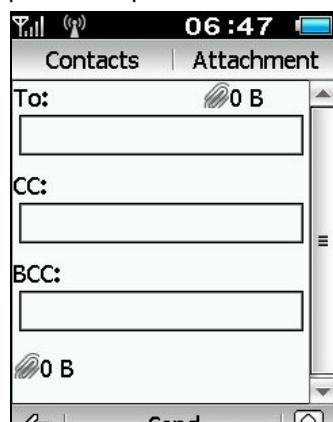

(6)

Press **【Contacts】** to select email address of contract to "Recipient" edit box, or click "To/CC/BCC" edit box to input the email address.

5.1.5 Delete email

Select **delete emails** from the menu of inbox screen (4).



(7)

5.2 Memo


R2821 provides three memo types: note, drawing and voice recording

Note: input text memo

Drawing: casually draw pictures as memo

Voice Recording: keep a voice recording as memo

【Menu】 → 【Application】 → 【Memo】

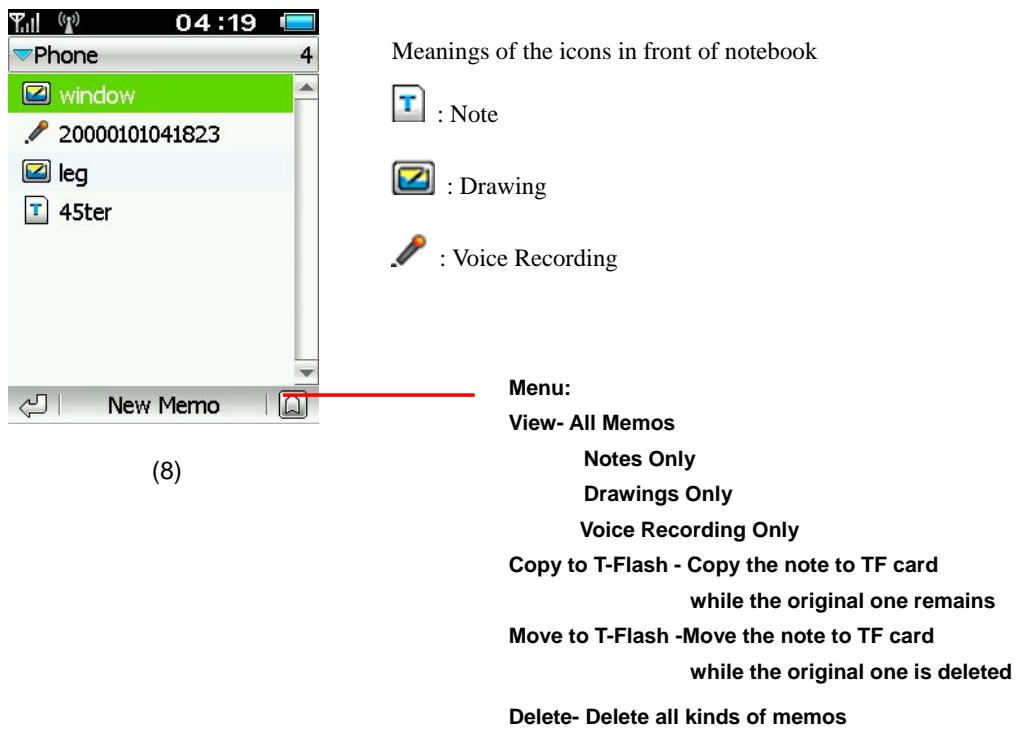

Press **【New Memo】** to select Note/ Drawing/voice Recording to add.

5.3 Dictionary

R2821 builds in English - Chinese dictionary/Chinese - English dictionary with super high capacity which may help you in time.

5.4 World Clock

R2821 builds in world clock to facilitate to contact with remote friends and business partners.

【Menu】 → 【Application】 → 【World Clock】



(9)

Both the time for local city and that for the world city will be displayed at the same time.

5.5 Alarm Clock

Three sets of alarm clock are allowed to set and each of which can present its own repetition cycle.

【Menu】 → 【Application】 → 【Alarm Clock】



(10)



(11)

You can set:

- Whether enable alarm clock
- Alarm time
- Repeat cycle
- Alert music
- Whether vibrate
- Snooze time

(11)

5.6 Calculator

【Menu】→【Application】→【Calculator】



(12)

5.7 Java

【Menu】→【Application】→【Java】

R2821 can run the Java program.

JAVA



Related knowledge Java is an open and safe computer programming language, of which the platform that fits for the mobile phone is referred to as K-Java. The Java games and applications can be downloaded from the internet or ISPs to turn your mobile phone into a game computer or a stock machine.

6 Sight & Sound

R2821 provides abundant image functions and integrates with digital camera function, so the exciting moments can be recorded at any time and everywhere, and the photos can be saved to the phone or the T-Flash. Furthermore, it can be set as wallpaper or a face picture with incoming call. The photos also can be sent to your relatives and friends by MMS.

R2821 supports various picture formats such as JPG, PNG which can be set as the wallpaper to present your unique personality.

【Menu】 -> 【Sight & Sound】



(1)

- Photo Camera –Enable digital camera to take photos
- Video Camera– Record video clips
- MP3 Player – Play MP3, MIDI
- Gallery – Display Pictures
- Video Player – Play video clips

6.1 Photo camera

R2821 builds in CMOS digital camera and can support up to 4 times of digital zoom. Furthermore, it can provide many environmental modes and capture delays. The photos can be saved to the mobile phone or T-Flash. What's more, it can be set as a desktop or a face picture with incoming call.

6.1.1 Take photos

【Menu】 -> 【Sight & Sound】 -> 【Photo Camera】 to activate the digital camera



Menu:

- Show Information
- Mode (Indoor/Outdoor/Evening)
- Effects: Full Color/ Sepia/ Black & White
- Flicker Control: 50 Hertz/60 Hertz
- Show Date/Hide Date
- Add frame (only for 240X240 photos)
- Save to phone/T-Flash

Press to select the resolution of the photos

Press to digitalize the zooming

Press to adjust the lightness

Press to set the capturing delay time (0/5/10/15 seconds)

Press 【Capture】 to take photos

Press **【Review】** to review the photo just taken

Keypad usage


1. Push the Up/down key upwards to zoom in the pictures
2. Push the Up/down key downwards to zoom out the pictures



Tips

Digital zooming varies depending on the size of the photo. For the resolution 240×240, up to four times of zooming can be achieved. For the resolution 1600×1200, the digital zooming will not take into effect.

6.1.2 Review Photo

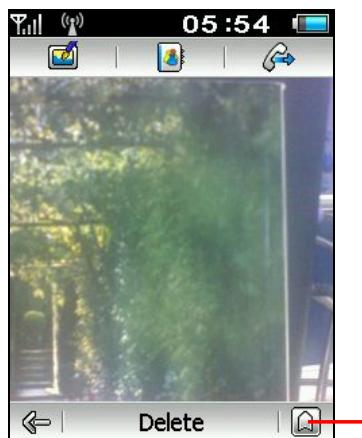

(3)

Menu:

Original size

Set as Wallpaper—Set the picture as wallpaper

Copy to T-Flash /phone

Move to T-Flash /phone

Privacy On/Off

Press to edit the photo

Press to set it as the face picture of the incoming call

Press to send it by MMS

6.1.3 Edit Photo



(4)

Press  to draw on the picture

Press  to add glasses and mask to the picture

Press  to select the color of drawing

Press  to view the entire picture and then return by pressing the photo.

6.2 Video Camera

R2821 can record wonderful video clips and save them to the phone or T-Flash.

【Menu】 -> 【Sight & Sound】 -> 【Video Camera】



(5)

Press  to select the resolution and the quality of sampling. Once the resolution is selected, the system will be switched to the digital camera. For the sampling quality, Video HQ means 256k high quality recording and Video MMS means 64k standard quality recording.

Press  to save it to the Phone/T-Flash

You can also press the menu on lower right corner of the screen to save it to the Phone/T-Flash.

6.3 MP3 player

R2821 not only provides MP3, MIDI and AMR music playing function, but also supports various dynamic playing effects, which will make you enjoy wonderful music as much as you like in the spare time.

【Menu】 -> 【Sight & Sound】 -> 【MP3 player】

6.3.1 Play Music



(6)

Menu:

Switch Display

Set as Ring Tone

The player will display the name, the current playing time, and the total length of the playing track.





: Previous track/Next track



: No repetition /Single repetition /toggle repetition



: Cancel Random playing/ Random playing




: Mute on / off

Keypad usage:

1. Push the Up/down key upwards to turn up the volume
2. Push the Up/down key downwards to turn down the volume

6.3.2 Play list

Press **【View Play List】** to list all music in the phone or T-Flash on the music playing screen (6). The music with a tick is that in the play list. Press some music to add into or delete them from the play list.

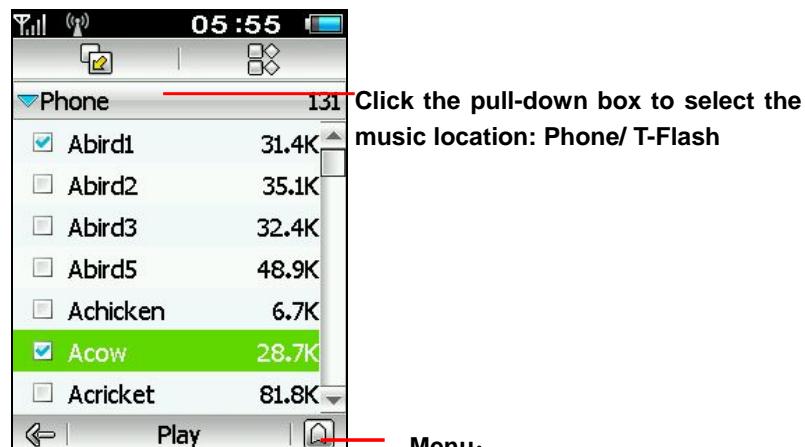

(7)


Press to select: Hide Unselected /Show All

Press  to select the sorting method: Sort by Type/Sort by Filesize

6.4 Gallery

The gallery holds some collected pictures and animations. Besides the built-in pictures, and the photos you take, you can also download the pictures and videos by R2821 PC tool software.

【Menu】 -> 【Sight & Sound】 -> 【Gallery】

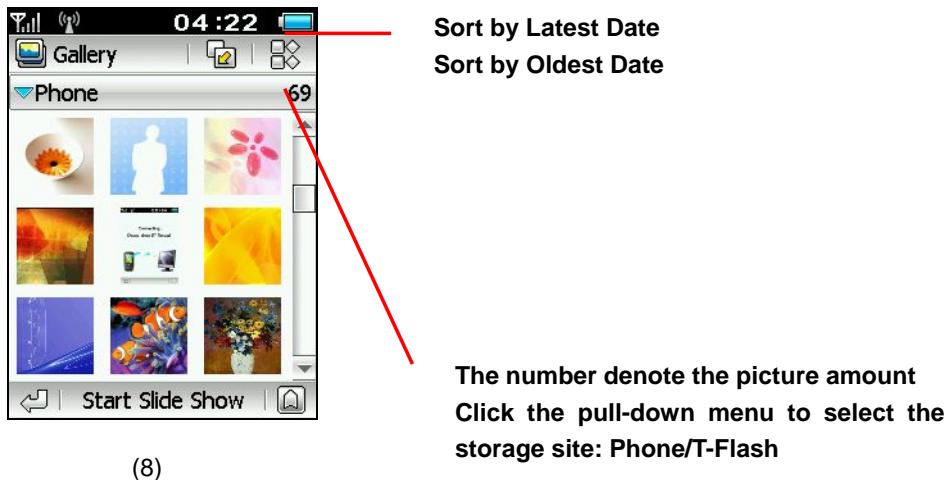


Press  to select the display mode: View Thumb/View List

Press 【Start Slide Show】 to display all the pictures in the gallery automatically and set the switching speed of the slides and the background music. Press the picture to stop playing during the playing.

6.5 Play Video

R2821 can play MPEG4 (with postfix MP4) or H.263 (with postfix 3GP) video files and play with horizontal full screen to achieve the striking visual effects. Press video clips to play directly.

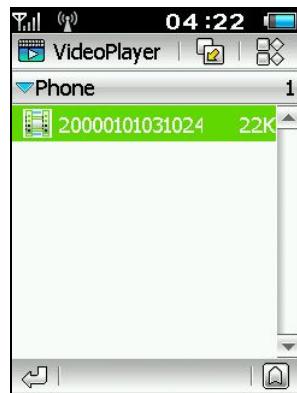

(9)



(10)

Click screen to switch between horizontal and vertical full screen playing mode.

Playing schedule

Return

Play/Pause Stop

Menu:

Send by MMS
Delete
Move to the T-Flash /Phone
Copy to the T-Flash/Phone
Privacy On/Off

7 Internet

R2821 supports GPRS network and builds in browser to make you enjoy the fun brought by the wireless communications as much as you like.

【Menu】 -> 【Internet】



(1)

STK Services – open the STK services menu

Browser – open the browser

Bookmarks –view website bookmark records

Web history – view the logging record

Saved Pages-view the saved pages

Data Meters – view the data meters



To employ the network functions, not only need you to order the data service from ISP, but also set the internet settings correctly (refer to Internet settings for more details)

Caution

GPRS connection




Related knowledge

GPRS is the abbreviation of General Packet Ratio Service, which is upgraded from the GSM, so it is referred to as the 2.5G mobile communication technology. GPRS provides such features as always-online, charging by meters, freely switch between audio and data service.

7.1 STK Service

【Menu】->【Internet】->【STK Services】

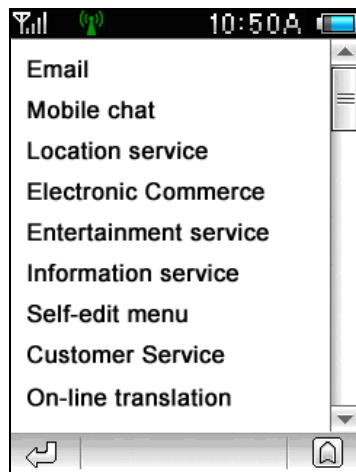

(2)



Caution

VAS requires the SIM card with STK function. Only when the SIM card with STK function is inserted, this function will be presented. The concrete VAS application varies depending on the service operator.

7.2 Browser

【Menu】->【Internet】->【Browser】



(3)

Menu:

Refresh Page- Refresh the current page
Set Home Page
Bookmark- Save URL/Open URL
Saved Pages-Save page/Open page
Clear Cache memory-Clear data memory

Setup

Press  to stop website loading

Press  to open the soft keyboard to input letters



Once the browser is opened, R2821 will start with the corresponding website if the homepage has been set; or else, it will wait users to enter the web site

Tips

7.3 Bookmarks

【Menu】 -> 【Internet】 -> 【Bookmarks】

The websites frequently access can be saved to bookmarks so as to facilitate the network operation.

7.4 Web History

【Menu】 -> 【Internet】 -> 【Web History】

The recent logging records such as website address, logging time can be viewed. Press a record to view the detailed information of each item.

7.5 Saved Pages


【Menu】 -> 【Internet】 -> 【Saved Pages】

Some web sites can be saved to browse offline.

7.6 Data Meters

【Menu】 -> 【Internet】 -> 【Data Meters】

You can view the data received, data sent and total data.

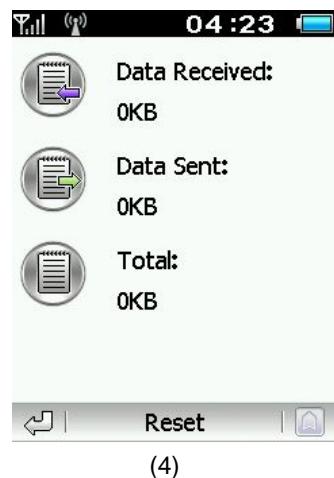

8 Tools & Setup

R2821 provides overall and effective system management to set various parameters conveniently or individualize the phone.

【Menu】 -> 【Tools & Setup】



(1)

Memory Usage - View the use status of phone memory and T-Flash card memory

Connect PC – Connect the phone to a computer by the USB cable

MODEM – Take the phone as a modem to access to wireless Internet

Alerts – Set the alert of the incoming call/SMS/event, etc.

Device – Set the date and time, the theme and Sounds, auto power on/off, security settings, and the screen brightness, etc.

WLAN & VOIP – Set the WLAN connection to implement the wireless Internet function

Calls – Set the network settings, incoming and outgoing call settings

Message –SMS setup, MMS setup, signatures and etc

Internet– connection setup and internet setup

8.1 Memory Usage

【Menu】 -> 【Tools & Setup】 -> 【Memory Usage】

View the use status of phone memory and T-flash memory card. For this function, T-Flash card can be formatted by pressing **Format T-Flash** in the menu of the memory usage screen.

8.2 Connect PC

【Menu】 -> 【Tools & Setup】 -> 【Connect PC】



(2)

Connect the phone to the computer by USB cable to complete material synchronization, picture, video clips and music transmission.



Tips

The PC must be installed with **R2821 PC tool software**: R2821 PC tool software is accompanied with the R2821 and provides the information exchange function between the mobile phone and the computer. Furthermore, it can provide the GPRS and CSD dial-up service. For the installation and use, refer to the user manual.

8.3 Modem

【Menu】->【Tools & Setup】->【Modem】

R2821 can be used as a wireless modem. USB cable can be used to connect the R2821 with the computer, and then access the wireless network by GPRS/CSD.



(3)

)



(4)



(5)



The PC must be installed with **R2821 PC tool software** and the modem driver.

Tips

8.4 Alerts

【Menu】->【Tools & Setup】->【Alerts】

Set the alert type (Ring only/Vibrate only/Vibrate then Ring/Vibrate and Ring/Mute) and volume

Set the ring tone and led color of call alert, message alert and calendar alert.

8.5 Device

【Menu】->【Tools & Setup】->【Device】

In the device settings , date and time, theme and sounds, auto power on /off, security, power save mode, screen brightness, backlight & auto lock, language, reset factory settings, user information an be set.



(6)

8.5.1 Date and Time

In the date and time settings, following function can be implemented:

- ◆ Select the display order of year, month and day
- ◆ set the date
- ◆ set the time
- ◆ set the time format :am/pm/24
- ◆ whether daylight savings
- ◆ Set the first day of week
- ◆ Set the location

8.5.2 Theme and Sounds

In this setting, following function can be implemented:

- ◆ Change the style of the theme
- ◆ Select touch screen sound

8.5.3 Auto Power On/Off

In auto power on/off settings, you can set:

- ◆ Power on: Every Day / Weekday Only / Weekend Only / Only Once
 - Specific time and time format
 - Select mute sound
 - Whether prompt for Antenna
- ◆ Power off: every day / week day / weekends / single time
 - Specific time and time format
 - Select mute sound

8.5.4 Security

In security settings, you can do followings:

- ◆ Privacy activation
- ◆ Power on (whether request SIM PIN, whether request lock code. The default lock code of the phone is 000000, and the default privacy code is 000000).
- ◆ Change password (SIM PIN, SIM PIN2, Lock Code, Privacy Code.)



SIM PIN code can protect your SIM card from being stolen. When the PIN code protection is activated, you will be asked to enter PIN code every time the mobile phone is power on. SIM PIN2 code can protect some important settings from changing arbitrarily. If the PIN is entered incorrectly for three times successively,, SIM card will be locked and can only be unlocked by mobile operators.

Caution

Only when the PIN protection is activated, the PIN code can be changed. PIN code should be is 4 bit at least.

8.5.5 Calibrate Screen

R2821 supports screen calibrate function which let you adjust the writing accuracy on the touch screen. Press OK key to enter into calibrate screen function directly when the deflection of the touch screen is great.

8.5.6 Power Save Mode

Power save mode can be selected to save the battery power.

8.5.7 Screen Brightness

The brightness can be set to by adjusting the bar number of screen brightness.

8.5.8 Backlight & Auto Lock

5Minutes, 1minutes, 30seconds or 20seconds can be selected from the pull-down menu to determine the time when the backlight is off automatically.

8.5.9 English (SC Input)

English (TC Input), English (SC Input), French or German can be selected from the pull-down menu to set the type of language the mobile phone displays.


8.5.10 Reset Factory Settings

All options are reset to original factory settings once this item is selected. After the factory settings are restored, the mobile phone will be power off automatically and all information the mobile phone saved will be cleared.

8.5.11 User Information


Your name and contact can be stored to your mobile phone or SIM card.

8.6 WLAN

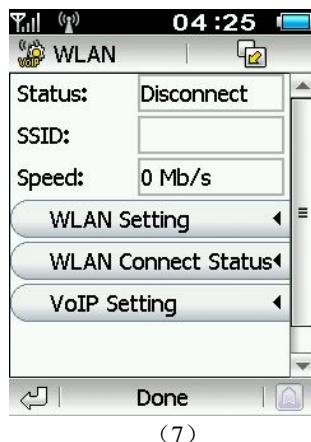

8.6.1 WLAN setting


Appropriated AP address can be selected and password is entered to access to Internet, by which to implement the wireless network function.

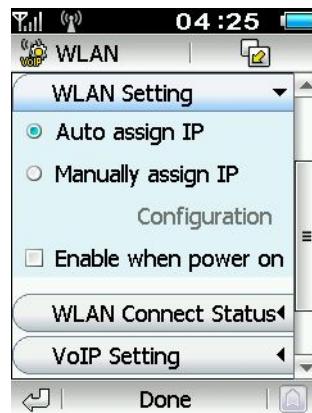

(8)

8.6.2 WLAN Connect Status

The connection status of WLAN can be viewed.

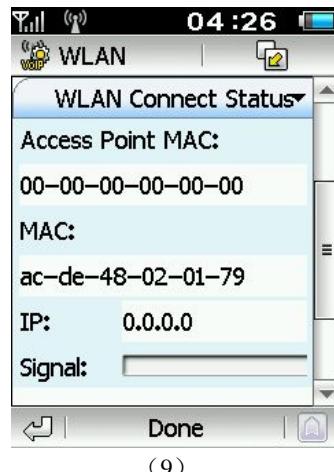

(9)

8.6.3 VoIP setting

The default VOIP settings can be implemented and new VOIP settings can be added.



For the material needed for concrete VOIP setting, you need to request for it from specific operators.

Tips

8.7 Calls

【Menu】->【Tools & Setup】->【Calls】

8.7.1 Network

In the network settings, you can set the items as follows:

- ◆ Search: automatic/manual
- ◆ Preferred List: specify the prefer network for the phone to search for.
- ◆ Select Network: select the network used manually.

8.7.2 Incoming Calls

In the Incoming Calls settings, you can set:

- ◆ Auto Answer
- ◆ After **2 seconds** ▾
- ◆ Call waiting
- ◆ Call Divert: when it is inconvenient for you to answer a call, it can be diverted to another phone. You can divert all of your voice calls, data calls and fax calls to the number you choose; divert when unavailable, when busy and when no response; cancel all divert.
- ◆ Call Barring: Bar all incoming calls, when roaming

Cancel All Barring

Change Passwords



Auto answer settings will become effect only when the earphone is inserted.

Caution

8.7.3 Outgoing Calls

In the outgoing calls settings, you can set:

- ◆ Auto Redial: It auto redials when the number you dial is busy.

- ◆ Show my number. It should be noticed that some mobile operators forbid this function. So the phone can not be dialed if users set not to display his number.
- ◆ Prepend: It is often needed to add the area code, national code or IP Tel ahead of the number before you dial the number in the contacts book or call log. So turning on this prepend option will give you the chance to enter the area code or national code before dialing. You will dial the number directly if you turn off the prepend option,
- ◆ IP Call: press the number key to enter the IP number and then press **【Done】** to store the IP number.
- ◆ Voice Mail Center Nbr: Press the number key to enter the voice mail center number and then press **【Done】** to store the number.
- ◆ Call Barring: Bar all outgoing calls, international calls , int'l calls except to home
 - Cancel All Barring
 - Change Passwords

8.8 Message

【Menu】 -> 【Tools & Setup】 -> 【Message】

8.8.1 SMS

In the SMS settings, you can set the items as follows:

- ◆ Service Center Number (Query from the mobile SP)
- ◆ Save incoming message/outgoing message to: SIM card memory /phone memory
- ◆ Validity Period: the valid period of the outgoing messages saved in the SMS center.
- ◆ Type:Text/Fax/eMail/Pager/X400

8.8.2 MMS

In the MMS settings, the following items can be set:

- ◆ Data Service: GPRS/CSD
- ◆ MMS Access: Always On/Always Off/When on network
- ◆ Incoming Messages: Retrieve at once/ Retrieve later/ Do Not Retrieve
 - Accept Anonymous
 - Accept Adverts
- ◆ Outgoing messages: Validity Period: the valid period of the outgoing message saved in the MMS center.

8.8.3 Cell Broadcast

Cell broadcast is a kind of broadcasting short message service. You can automatically receive the broadcasting short message when in a network with broadcasting service, if you turn it on and set a correct receiving channel.

8.8.4 Quick Message

You can edit some common phrase for the convenience of input. Choose **【Quick Message】** on the **【Message】** screen, and then press **【New Message】** to enter the edit screen.

8.8.5 Signature

Your own signature can be stored and appended to the message. Choose **【Signature】** on the **【Message】** screen, then press the signature box to input the signature.

8.9 Internet

【Menu】 -> 【Tools & Setup】 -> 【Internet】

In the internet settings, you can do the following settings:

- ◆ Connection setup – connection setup is the base of all the network service, including WAP network access, MMS and etc functions, which all depend on the correct connection setup. R2821 can provide the automatic configuration function and select appropriately configuration from the configuration file according to the SIM card of users.
- ◆ Internet setup
 - Choose HTTP or WAP
 - Data service: GPRS/CSD
 - Auto offline and time to auto offline
 - Display Images
 - Home Page
 - DNS server
 - Whether employ a proxy server
 - The address of the proxy server and the port ,username, password

9 Input operation

R2821 is equipped with a large-size touch screen and intelligent handwriting recognition. You can write on the screen directly or use the stimulant soft keyboard on the screen to input. The input area will automatically pop up while required.



Handwriting input mode



Spelling input mode



Western letter input mode



Symbol input mode



Hide the keyboard



Spacebar



Backspace



Enter

Handwriting input mode



The recognized character will be added to the cursor automatically after input, and the similar characters will be shown on the left grids, press to replace that at cursor. You can press corresponding character in the top bar to enter the associate characters directly

Spelling input mode



Input the spelling of the Chinese Character, and corresponding Chinese Character will be displayed in the bar. Then press needed character to finish it.

I

Western letter input mode



The symbol highlighted by the blue circle denotes the status of switching between uppercase and lowercase.

ab denote lowercase.

Ab denotes that the uppercase lock is effective only to one letter. Namely, after an uppercase western letter is entered, it will be switched to lowercase automatically.

AB denotes uppercase lock

Symbol input mode



Press the lock symbol highlighted by blue circle to switch the symbol lock status.



: After one letter is entered, it will be switched to other input method automatically.



: The symbol can be entered continually.

Keyboard input mode



Keyboard can be used to select input mode:

Definition of key-press: : “0” is used to input space; “1” is used to switch between uppercase and lowercase in English input method; “#” is used to switch the input mode among Spelling, ABC, Eng, 123, stroke sequence; “*” is used to input punctuations.

English input:

- ◆ **Intelligent English (Eng) input mode** :Switch to “Eng” input mode by pressing “#” key, then press the corresponding key of the letter, and system will automatically chooses the most matching words according to the context, which can be picked by pushing downwards/ right/ pressing the **Up/down key** or the number key. Press “1” to switch between capitalization and lowercase (among three modes: abc, Abc, ABC)
- ◆ **abc enter mode:** Switch to “abc” input mode by pressing “#” key, then press the corresponding key of the letter. System will select matching words automatically.

Press “1” to switch between uppercase and lowercase (among three modes: abc, Abc, ABC)

Number input:

- ◆ Switch to “123” input mode by pressing “#” key, then press the corresponding key of the number. System will select the matching digits automatically.

Symbol input:

- ◆ Press “*” key to switch to “symbol” input mode, and choose the corresponding symbol by the **Up/down key**.

10 FAQ

10.1 How to make a dial?

There are several methods to dial:

1. Dial the number directly: press the wallpaper area on the main screen to enter the dial screen



2. Dial from the contacts: **【Menu】->【Contacts】**, or in the dial screen press icon on the dial screen.



3. Dial from call log: **【Menu】->【Call Log】**, or press icon on the dial screen.



4. Photo dial: press on the dial screen, you can press the photo of the contact to dial directly.
5. Quick dial the number in STM card: enter the index of the number in STM card directly, and then press # to dial corresponding number.

10.2 How to set time and date

【Menu】->【Tools & Setup】->【Device】->【 Date and Time】

10.3 How to set alarm

【Menu】->【Application】->【Alarm Clock】

10.4 How to turn on or off the antenna?

Press the network name in the bottom center of the idle screen to turn on or off the antenna. Press the network signal in the top left corner to enable or disable phone.

10.5 How to take photos and set as wallpaper?

1. **【Menu】->【Sight & Sound】->【Photo Camera】** to activate the digital camera
2. Press **【Capture】** to take photos and store it to the gallery of the phone automatically. The kluck means this photo-taking succeeds.
3. Press **【Review】** to view the photo just taken. Press **【Return】** to quit the capture mode.

4. You can set the photo as the wallpaper on the photo review screen.

10.6 How to change the wallpaper?

【Menu】->【Sight & Sound】->【Gallery】 , you can select **【set as wallpaper】** in the menu.

10.7 How to send a MMS?

【Menu】->【Message】 , then click **【MMS】** to create a MMS.

10.8 How to access the Internet?

Select **【Menu】->【Internet】->【Browser】** to access the network.

10.9 How to download and play MP3?

R2821 supports the music file in MP3, MIDI and AMR format, which can be stored in the phone or T-Flash. Following measures can be taken to download the music file to the mobile phone.

R2821 PC tool software is used to download from PC.

1. Connect R2821 with PC by USB data cable;
2. Select **【Menu】->【Tools & Setup】->【Connect PC】** to wait R2821 PC to set up the connection.
3. Activate the R2821 PC tool software from the PC and connect it with R2821. Press **【Music】** button to copy the music files to phone or T-Flash card.

Card writer is used to write the file to T-Flash directly

If you have a T-Flash card writer, there is no need to install other software. The card writer can be used to copy the music files to the "sound" directory of the T-Flash card from PC directly, and then T-Flash is inserted into the phone.

10.10 How to change the ring tones?

【Menu】->【Tools & Setup】->【Alerts】 , press the scene mode in use to change the ring tone.

10.11 How to download videos and pictures?

R2821 supports following video format:

3GP (H.263+AMR), QCIF

MP4 (MPEG4+AAC), QCIF

MP4 (MPEG4+AAC), QVGA

The R2821 PC tool software can be used to download the supported videos and pictures to the phone.

R2821 PC tool software is used to download from the PC

1. Connect the R2821 with the computer by USB data cable
2. Select **【Menu】->【Tools & Setup】->【Connect PC】** from R2821 to wait for R2821 to set up connection with PC..
3. Activate the R2821 PC tool software from PC to connect with the R2821. Press **【Gallery】** to copy the video file to the phone or T-Flash.

Card writer is used to write the file to T-Flash directly

If you have a T-Flash card writer, there is no need to install other software. The card writer can be used to copy the music files to the “sights” directory of the T-Flash from PC directly, and then T-Flash is inserted into the phone.

Note: if some improper files are copied to the directory, it will cause the video player and the gallery software is not available.

11 Troubleshooting

**Caution**

If there is any problem when you use the mobile phone, try to implement troubleshooting by following the contents of this section. If it fails to be solved, contact your network operator or contractual maintenance center or manufacturer by the hotline.

Problem	Possible Reason	Solution
Cannot power on	Press the power button too shortly	Press the power button, and keep for about 3 seconds.
	The power of battery is depleted.	Plug into the charger to charge. If the battery is fully discharged, the charge indicator will not appear after the charger is plugged in and the mobile phone can not be power on immediately. It is necessary to wait for about 10min until the charge indicator appears.
	Poor battery contact	Take out the battery, clean the dirt in the contact point and reinstall it.
Cannot charge	The battery is fully discharged, and needs to be reactivated.	Plug in the charger and wait for about 10 minutes until the charge indicator appears. Then go on charging till the battery is full.
	Poor battery contact	Take out the battery, clean the dirt in the contact point and reinstall it.
Cannot make a call.	Without SIM card	Insert a valid SIM card.
	Poor SIM card contact	Take out the SIM card, clean the dirt in the contact point, and then reinstall it again.
	Use an outdated 5V SIM card.	Only an up-to-date 3V SIM card can be used.
	SIM card is invalid.	Check whether the SIM card is damaged by your network service provider.
	Owe or pre-paid has expired or been used out	Contact your network operator and recharge the money.

	Signal is too weak or there is no signal	Network coverage is inadequate or network fails. Move to a wide area and retry.
Cannot change the function settings.	The setting function is not supported by the Network.	Contact your network operator to make sure whether this function is supported.
	SIM PIN2 code is wrong.	Enter the correct SIM PIN2 code. If you don't know SIM PIN2 code, you can contact your network operator.
The screen cannot be lightened.	Temperature is too high or too low.	Use the mobile phone with the ambient temperature between 5 ⁰ C and 40 ⁰ C.
	The mobile phone is power off.	Power on the mobile phone.
The phone is power off suddenly.	The battery looses.	Reinstall the battery.
The standby time is too short	The power of the battery is not enough.	Recharge the battery for 12 hours, ignoring the fully charged signal.
	The mobile phone is used too frequent.	Use it as needed.
	Press the button unconsciously.	Keep your mobile phone carefully and avoid pressing the button.
	The battery is aging.	Replace a new one.
	Temperature is too high or too low.	Please use it with the ambient temperature between 5 ⁰ C and 40 ⁰ C.
PIN cord errors	PIN code is entered incorrectly for three times.	Take the SIM card to the network operator to unlock it.
Cannot send or receive SMS.	SMS is set incorrectly.	Contact your network operator and get the correct settings.
	SMS overflows	Delete some short messages.

	The mobile phone of the receiver fails to support SMS or is set incorrectly.	Inform the receiver to take a corresponding measure.
	Network overloads.	Send it later.
	Poor SIM card contacts.	Take out the SIM card and clean the dirt in the contact point, and then place back it again.
	Use an outdated 5V SIM card.	Only an up-to-date 3V SIM card can be used.
	SIM card doesn't work.	Check whether the SIM card is damaged by your network service provider.
	Owe or pre-paid has expired or been used out	Contact your network service provider and recharge it.
	Signal is too weak or there is no signal.	Network coverage is not enough or network fails. Move to a wide area and retry.
Cannot send or receive MMS.	MMS is set incorrectly.	Contact your network operator and get correct settings.
	Data service is not run.	Apply for GPRS service from your network operator.
	Storage space is full	Delete part of MMS.
	The mobile phone of the receiver fails to support MMS or is set incorrectly.	Inform the receiver to take the corresponding measure.
	Network overloads.	Send it later.
	Poor SIM card contacts.	Take out the SIM card and clean the dirt in the contact point, and then place back it again.
	Use an outdated 5V SIM card.	Only an up-to-date 3V SIM card can be used.
	SIM card doesn't work.	Check whether the SIM card is damaged by your network service provider.
	Owe or pre-paid has expired or been used out	Contact your network service provider and recharge it.

	Signal is too weak or there is no signal.	Network coverage is not enough or network fails. Move to a wide area and retry.
Cannot access network.	The network is set incorrectly	Contact your network operator to get correct settings.
	The data service is not run.	Apply for GPRS service from your network operator.
	Network fails to provide data service.	Confirm it from your network operator.
	SIM card is not inserted	Insert a valid SIM card.
	Poor SIM card contacts	Take out the SIM card and clean the dirt in the contact point, and then reinstall it.
	Use an outdated 5V SIM card.	Only an up-to-date 3V SIM card can be used.
	SIM card does not work.	Check whether the SIM card is damaged by your network service provider.
	Owe or pre-paid has expired or been used out	Contact your network service provider and recharge it.
	Signal is too weak or there is no signal.	Network coverage is not enough or network fails. Move to a wide area and retry.
Fierce vibration	It may cause this phenomenon if the battery is recharged when it is nearly depleted.	Pull out the charger and take out the battery, reinstall the battery and replace with a backup battery and retry. Do not take out the battery with the charger plugged in. Do not disassemble the mobile phone by yourself.
Mobile phone wets	Rain, sweating or damp environment	Take out the battery and SIM card, wipe up the mobile phone with a dry soft cloth, put it in a dry ventilate place, and then replace the SIM card and battery. If it still does not work or works unstably, contact the Maintenance contractor. Do not disassemble the phone by yourself.