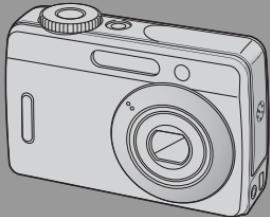


SONY®

Cyber-shot

Digital Still Camera

Cyber-shot Handbook

**DSC-S500****"Instruction Manual" (separate volume)**

Explains the set-up and basic operations for shooting/playback with your camera.

Handbook

Before operating the unit, please read this handbook and "Instruction Manual" (separate volume) thoroughly, and retain it for future reference.

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-S500


Serial No. _____

**Enjoying the camera****Using the menu****Using the Setup screen****Using your computer****Printing still images****Connecting your camera to your TV****Troubleshooting****Others****Index**

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

For Customers in the U.S.A.

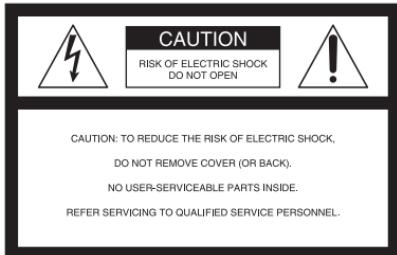

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

Use

Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

Installation

Water and Moisture

Do not use power-line operated sets near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface.
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance – this indicates a need for service.

Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Read this first

For Customers in the U.S.A.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For Customers in Europe

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this camera.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notes on using your camera

Types of "Memory Stick" that can be used (not supplied)

The IC recording medium used by this camera is a "Memory Stick Duo". There are two types of "Memory Stick".

"Memory Stick Duo": you can use a "Memory Stick Duo" with your camera.



"Memory Stick": you cannot use a "Memory Stick" with your camera.



Other memory cards cannot be used.

- For details on "Memory Stick Duo", see page 86.

When using a "Memory Stick Duo" with "Memory Stick" compatible equipment

You can use the "Memory Stick Duo" by inserting it into the Memory Stick Duo Adaptor (not supplied).



Memory Stick Duo Adaptor

No compensation for contents of the recording

- The contents of the recording cannot be compensated for if recording or playback is not possible due to a malfunction of your camera or recording media, etc.

Internal memory and "Memory Stick Duo" back up

- Do not turn off the camera or remove the batteries or "Memory Stick Duo" while the access lamp is lighted, as the internal memory data or "Memory Stick Duo" data may be destroyed. Always protect your data by making a back up copy. See page 24 for the data back up method.

Notes on recording/playback

- This camera is neither dust-proof, nor splash-proof, nor water-proof. Read "Precautions" (page 90) before operating the camera.
- Before you record one-time events, make a trial recording to make sure that the camera is working correctly.
- Be careful not to get the camera wet. Water entering the inside of the camera may cause malfunctions which in some cases may not be repairable.
- Do not aim the camera at the sun or other bright light. This may cause irrecoverable damage to your eyes. Or it may cause the malfunction of your camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. The camera may not be able to record or play back properly.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera (page 90).
- Do not shake or strike the camera. In addition to malfunctions and an inability to record images, this may render the recording medium unusable, or cause image data breakdown, damage or loss.
- Clean the flash surface before use. The heat of flash emission may cause dirt on the flash surface to become discolored or to stick to the flash surface, resulting in insufficient light emission.

Notes on the LCD screen and lens

- The LCD screen is manufactured using extremely high-precision technology so over 99.4% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue or green in color) that constantly appear on the LCD screen. These points are normal in the manufacturing process and do not affect the recording in any way.



Black, white, red,
blue and green
points

- Exposing the LCD screen or the lens to direct sunlight for long periods may cause malfunctions. Be careful when placing the camera near a window or outdoors.
- Do not press against the LCD screen. The screen may be discolored and that may cause a malfunction.
- Images may trail across on the LCD screen in a cold location. This is not a malfunction.
- This camera is equipped with a power zoom lens. Be careful not to bump the lens, and be careful not to apply force to it.

On image data compatibility

- This camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Playback of images recorded with your camera on other equipment and playback of images recorded or edited with other equipment on your camera are not guaranteed.

Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

The pictures used in this manual

The photographs used as examples of pictures in this manual are reproduced images, and are not actual images shot using this camera.

For full use of the digital still camera

Prepare the camera and shoot images easily



"Instruction Manual" (separate volume)

Preparation

Shoot images easily


View/delete/print images

Troubleshooting

Supplement

Get more friendly with your camera

This manual

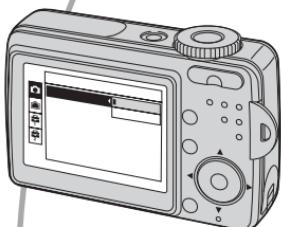

- Shoot with your favorite settings (Program auto shooting) → page 26
- Enjoy various shooting/playback using the menu → page 28
- Change the default settings → page 39

Connect your camera to a PC or a printer

This manual



- Copy your images to a computer and enjoy editing them in various ways → page 48
- Print images by connecting your camera directly to a printer (PictBridge compliant printers only) → page 65

Table of contents

Read this first	5
Notes on using your camera	6



Enjoying the camera

Basic techniques for better images	12
Focus – Focusing on a subject successfully.....	12
Exposure – Adjusting the light intensity	13
Color – On the effects of lighting.....	14
Quality – On “image quality” and “image size”	15
Identifying parts.....	16
Indicators on the screen	18
Changing the screen display	22
Number of still images and recording time of movies.....	23
When you do not have a “Memory Stick Duo” (Recording with the internal memory)	24
Battery life and number of images that can be recorded/viewed	25
Using the mode dial.....	26

Using the menu

<i>Using menu items</i>	28
<i>Menu items</i>	29
Shooting menu	30
☒ (EV)	
☒ (Metering Mode)	
WB (White Bal)	
ISO	
◀▶ (P.Quality)	
Mode (REC Mode)	
PFX (P.Effect)	
◎ (Saturation)	
□ (Sharpness)	
☒ (Setup)	

Viewing menu	34
 (Folder)	
 (Protect)	
DPOF	
 (Print)	
 (Slide)	
 (Resize)	
 (Rotate)	
 (Setup)	

Using the Setup screen

Using Setup items.....	39
 Camera.....	40
Digital Zoom	
Date/Time	
Red Eye Reduction	
Auto Review	
 Internal Memory Tool.....	42
Format	
 Memory Stick Tool.....	43
Format	
Create REC. Folder	
Change REC. Folder	
Copy	
 Setup 1.....	45
LCD Backlight	
Beep	
 Language	
Initialize	
 Setup 2.....	46
File Number	
USB Connect	
Video Out	
Clock Set	

Using your computer

Enjoying your Windows computer	48
Installing the software (supplied).....	50
Copying images to your computer.....	51
Viewing image files stored on a computer with your camera (using a “Memory Stick Duo”)	57
Using the “Cyber-shot Viewer” (supplied)	58
Using your Macintosh computer.....	62

Printing still images

How to print still images	64
Printing images directly using a PictBridge compliant printer	65
Printing at a shop	68

Connecting your camera to your TV

Viewing images on a TV screen.....	70
------------------------------------	----

Troubleshooting

Troubleshooting	72
Warning messages.....	84

Others

On the “Memory Stick”	86
On the batteries.....	88
Precautions	90



Index.....	91
-------------------	----




Basic techniques for better images

Focus

Exposure

Color

Quality

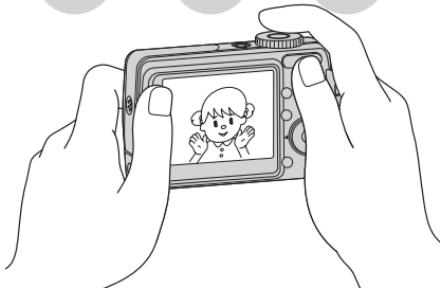


This section describes the basics so you can enjoy your camera. It tells you how to use various camera functions such as the mode dial (page 26), the menus (page 28), and so on.

Focus


Focusing on a subject successfully

When you press the shutter button halfway down, the camera adjusts the focus automatically (Auto Focus). Remember to press the shutter button only halfway down.

Press the shutter button fully down straight away.

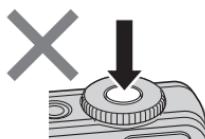


Press the shutter button halfway down.

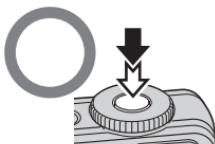

AE/AF lock indicator
Flashing → lit/beeps



Then press the shutter button fully down.

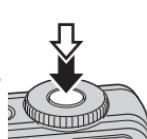

If the image looks blurred even after focusing, it may be because of camera shake. → See “Hints for preventing blur” (as follows).

Hints for preventing blur

Hold the camera steadily, keeping your arms at your side. Also, you can stabilize the camera by leaning against a tree or a building beside you. Using a tripod may be effective. Also, using the flash in dark places is also recommended.



Exposure *Adjusting the light intensity*

You can create various images by adjusting the exposure and the ISO sensitivity. Exposure is the amount of light that the camera will receive when you release the shutter.



Exposure:

Shutter speed = Length of time the camera receives light

Aperture = Size of the opening allowing light to pass through

ISO = Recording sensitivity



Overexposure
= too much light
Whitish image



Correct exposure



Underexposure
= too little light
Darker image

The exposure is automatically set to the proper value in the auto adjustment mode. However, you can adjust it manually using the functions below.

Adjusting EV:

Allows you to adjust the exposure that has been determined by the camera.

→ page 30

Metering Mode:

Allows you to change the part of the subject to be measured to determine the exposure. → page 30

Adjusting the ISO sensitivity

ISO is unit of measurement (sensitivity), estimating how much light an image pickup device (equivalent to photo films) receives. Even when the exposure is the same, images differ depending on the ISO sensitivity.

To adjust the ISO sensitivity → page 31



High ISO sensitivity

Records a bright image even when shooting in a dark location.
However, the image tends to become noisy.



Low ISO sensitivity

Records a smoother image.
However, the image may become darker.

Color

On the effects of lighting

The apparent color of the subject is affected by the lighting conditions.

Example: The color of an image affected by light sources

Weather/lighting	Daylight	Cloudy	Fluorescent	Incandescent
Characteristics of light	White (standard)	Bluish	Blue-tinged	Reddish


The color tones are adjusted automatically in the auto adjustment mode.
However, you can adjust color tones manually with [White Bal] (page 31).

Quality**On “image quality” and “image size”**


A digital image is made up of a collection of small dots called pixels.

If it contains a large number of pixels, the picture becomes large, it takes up more memory, and the image is displayed in fine detail. “Image size” is shown by the number of pixels.

Although you cannot see the differences on the screen of the camera, the fine detail and data processing time differ when the image is printed or displayed on a computer screen.

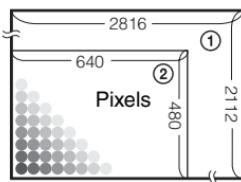Description of the pixels and the image size

- ① Image size: 6M
2,816 pixels × 2,112 pixels = 5,947,392 pixels
- ② Image size: VGA (E-mail)
640 pixels × 480 pixels = 307,200 pixels

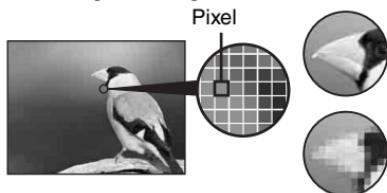Selecting the image size for use

Many pixels (Fine image quality and large file size)

Example: Printing in up to A4 size

Few pixels (Rough image quality but small file size)

Example: An attached image to be sent by e-mail

The default settings are marked with .

	Image size	Usage guidelines
	6M (2816×2112)	Larger
	3:2 (2816×1872)*	
	3M (2048×1536)	
	2M (1632×1224)	
	VGA (E-mail) (640×480)	

Spec為 4M (2272 x 1704), 請確認

Spec為 2M (1600 x 1200), 請確認



* Images are recorded in the same 3:2 aspect ratio as photograph printing paper or postcards, etc.

Selecting the image quality (compression ratio) in combination (page 32)

You can select the compression ratio when digital images are saved. When you select a high compression ratio, the image lacks the fineness of detail, but has a smaller file size.

Identifying parts



See the pages in parentheses for details of operation.

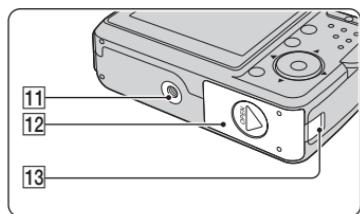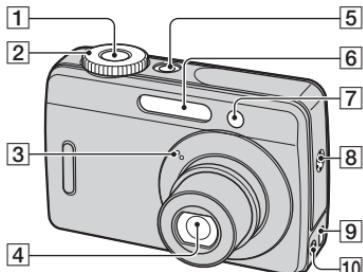


- 1** Shutter button
- 2** Mode dial (26)
- 3** Microphone
- 4** Lens
- 5** POWER button/POWER lamp
- 6** Flash
- 7** Self-timer lamp
- 8** Buzzer
- 9** Ψ USB jack
- 10** A/V OUT jack
- 11** Tripod receptacle
 - Use a tripod with a screw length of less than 5.5 mm (7/32 inch). You will be unable to firmly secure the camera to tripods having screws longer than 5.5 mm (7/32 inch), and may damage the camera.
- 12** Battery/"Memory Stick Duo" cover

13 AC Adaptor cord cover

To use the AC-LS5K AC Adaptor (not supplied)

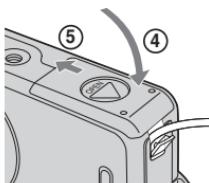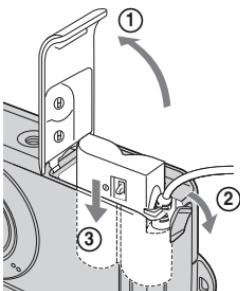

Do not pinch the cord when you close the cover.

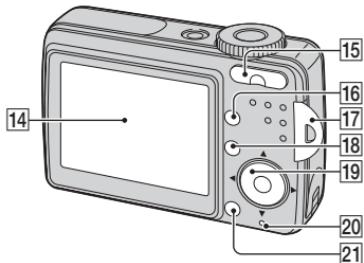

[14] LCD screen (22)

[15] For shooting: Zoom (W/T) button

For viewing: \ominus/\oplus (Playback zoom)
button/ \blacksquare (Index) button

[16] \blacksquare Screen status button (22)

[17] Hook for wrist strap

[18] MENU button (28)

[19] Control button

Menu on: $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright/\bullet$

Menu off: $\sharp/\odot/\odot/\sharp$


[20] Access lamp

[21] / (Image Size/Delete) button


Indicators on the screen

See the pages in parentheses for details of operation.

When shooting still images

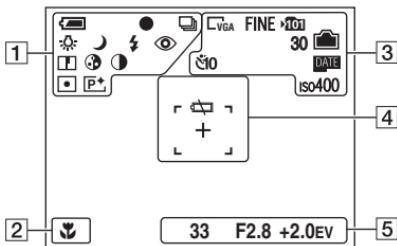

When shooting movies

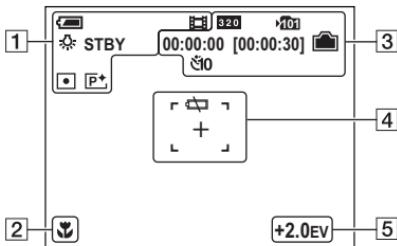

1

Display	Indication
	Battery remaining
	AE/AF lock
	Recording mode (26, 32)
	White balance (31)
	Standby/Recording a movie
	Mode dial (Scene Selection)
	Mode dial (26)
	Flash mode
	Flash charging
	Red-eye reduction (41)
	Sharpness (33)
	Saturation (33)
	Metering mode (30)
	Picture effect (33)

2

Display	Indication
	Macro

3

Spec 為 4M, 請確認

Display	
	Image size
	Image quality (32)
	Recording folder (43) • This does not appear when using internal memory.
	Remaining internal memory capacity (23)
	Remaining "Memory Stick Duo" capacity (23)
00:00:00 [00:00:30]	Recording time [maximum recordable time] (23)
30	Remaining number of recordable images (23)
	Self-timer
	Date/Time (41)
ISO400	ISO number (31)


4

Display	Indication
	Low battery warning (25, 84)
	Spot metering cross hair (30)
	AF range finder frame


5

Display	Indication
33	Shutter speed
F2.8	Aperture value
+2.0EV	EV level value (30)
	Menu (28) (not displayed on the screen on the previous page)

When playing back still images

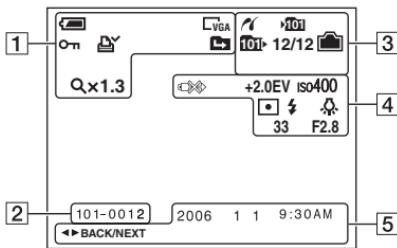

When playing back movies

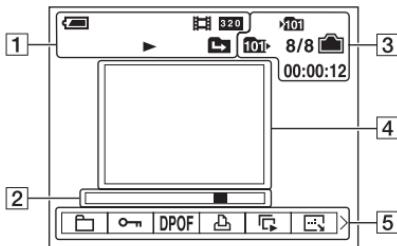

1

Display	Indication
	Spec為4M, 請確認
	Image size
	Recording mode (26, 32)
	Playback
	Protect (35)
	Print order (DPOF) mark (68)
	Change folder (34) <ul style="list-style-type: none"> • This does not appear when using internal memory.
	Zoom scaling

2

Display	Indication
101-0012	Folder-file number (34)
	Playback bar

3

Display	Indication	65
	PictBridge connecting (66)	
	Recording folder (43) <ul style="list-style-type: none"> • This does not appear when using internal memory. 	
	Playback folder (34) <ul style="list-style-type: none"> • This does not appear when using internal memory. 	
	Remaining internal memory capacity (23)	
	Remaining "Memory Stick Duo" capacity (23)	
8/8 12/12	Image number/Number of images recorded in selected folder	
00:00:12	Counter	

4


Display	Indication
	PictBridge connecting (67) • Do not disconnect the USB cable, while the icon is displayed.
+2.0EV	EV level value (30)
ISO400	ISO number (31)
	Metering mode (30)
	Flash
	White balance (31)
33	Shutter speed
F2.8	Aperture value
	Playback image

5

Display	Indication
2006 1 1 9:30 AM	Recorded date/time of the playback image
	Menu (28)
	Select images

Changing the screen display

Each time you press the  Screen status button, the display changes as follows.

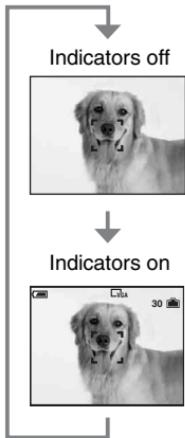

Number of still images and recording time of movies

The tables show the approximate number of still images and the length of time for movies that can be recorded on a "Memory Stick Duo" and internal memory (26 MB) formatted with this camera. The values may vary depending on the shooting conditions. For image size and image quality, see page 15.

The number of still images (The image quality is [Fine] on the upper line and [Standard] on the lower line.)

(Units: Images)

Capacity Size	Internal memory	32MB	64MB	128MB	256MB	512MB	1GB	2GB
6M	xx	xx	xx	xx	xx	xx	xx	xx
	xx	xx	xx	xx	xx	xx	xx	xx
3:2	xx	12	24	50	96	191	391	797
	xx	23	46	95	182	360	736	1501
3M	xx	19	39	81	155	308	629	1282
	xx	35	72	148	283	560	1143	2330
2M	xx	48	98	201	384	759	1550	3159
	xx	91	184	375	715	1414	2886	5880
VGA (E-mail)	xx	191	387	789	1503	2972	6065	12355
	xx	463	935	1879	3630	7167	14643	29830

- The number of images listed is for when [Mode] is set to [Normal].
- When the number of remaining shootable images is greater than 9,999, the ">9999" indicator appears.
- You can resize the images later ([Resize], page 37).

The recording time of movies


(Units: hour : minute : second)

Capacity Size	Internal memory	32MB	64MB	128MB	256MB	512MB	1GB	2GB
340×240	xx	0:01:37	0:03:17	0:06:38	0:12:50	0:25:24	0:51:50	1:45:38

- When images recorded using earlier Sony models are played back on this camera, the display may differ from the actual image size.

When you do not have a “Memory Stick Duo” (Recording, playback, menu, etc. using internal memory)

The camera has **26 MB of internal memory**. This memory is not removable. Even when there is no “Memory Stick Duo” inserted in the camera, you can record images using this internal memory.

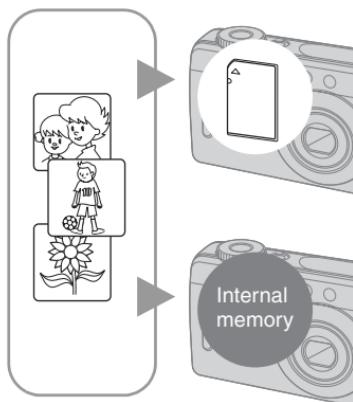

When a “Memory Stick Duo” is inserted

[Recording]: Images are recorded on the “Memory Stick Duo”.

[Playback]: Images on the “Memory Stick Duo” are played back.

[Menu, Setup, etc.]: Various functions can be performed on images on the “Memory Stick Duo”.

When there is no “Memory Stick Duo” inserted

[Recording]: Images are recorded using the internal memory.

[Playback]: Images stored in the internal memory are played back.

[Menu, Setup, etc.]: Various functions can be performed on images in the internal memory.

On image data stored in the internal memory

We recommend that you copy (back up) data without fail using one of the following methods.

To copy (back up) data on a “Memory Stick Duo”

Prepare a “Memory Stick Duo” with a capacity of 32 MB or more, then perform the procedure explained in [Copy] (page 44).

To copy (back up) data on a **51 to 55** of your computer

Perform the procedure on pages **51 to 54** without a “Memory Stick Duo” inserted in the camera.

- You cannot move image data on a “Memory Stick Duo” to the internal memory.
- You can copy data stored in the internal memory to a computer via a USB connection between a computer and your camera, but you cannot copy data on a computer to the internal memory.

Battery life and number of images that can be recorded/viewed

The tables show the approximate number of images that can be recorded/viewed and the battery life when you shoot images in [Normal] mode with batteries at full capacity and at an ambient temperature of 25°C (77°F). The numbers of images that can be recorded or viewed take into account changing the "Memory Stick Duo" as necessary.

Note that the actual numbers may be less than those indicated depending on the conditions of use.

- The battery capacity decreases as the number of uses increases and also over time (page 88).
- The number of images that can be recorded/viewed and the battery life are decreased under the following conditions:
 - The surrounding temperature is low.
 - The flash is used frequently.
 - The camera has been turned on and off many times.
 - The zoom is used frequently.
 - [LCD Backlight] is set to [Bright].
 - The battery power is low.

When shooting still images

Battery	No. of images	Battery life (min.)
Alkaline	Approx. 90	Approx. 45
NH-AA-DB (Ni-MH)	Approx. 350	Approx. 170

- Shooting in the following situations:
 -  (P.Quality) is set to [Fine].
 - Shooting once every 30 seconds.
 - The zoom is switched alternately between the W and T ends.
 - The flash strobos once every two times.
 - The power turns on and off once every ten times.
- The measurement method is based on the CIPA standard.
(CIPA: Camera & Imaging Products Association)
- The number of shooting images/battery life does not change, regardless of image size.

When viewing still images

Battery	No. of images	Battery life (min.)
Alkaline	Approx. 1800	Approx. 90
NH-AA-DB (Ni-MH)	Approx. 4800	Approx. 240

- Viewing single images in order at about three second intervals


When shooting movies

Battery	Battery life (min.)
Alkaline	Approx. 40
NH-AA-DB (Ni-MH)	Approx. 120

- Shooting movies continuously with an image size of [320]

Using the mode dial

Set the mode dial to the desired function.

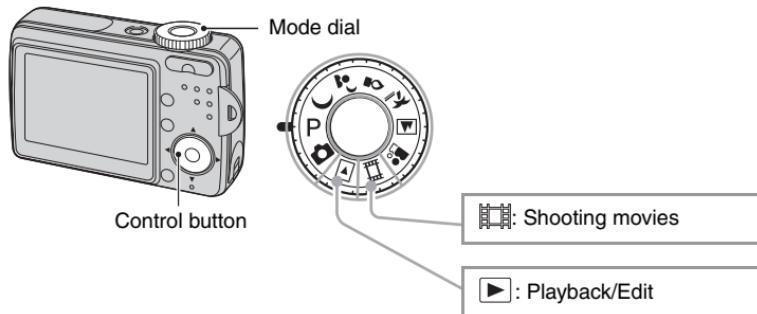

Still image shooting modes

Auto Adjustment mode

Allows easy shooting with the settings adjusted automatically.

Scene Selection mode

Allows you to shoot with preset settings according to the scene.

Program auto shooting mode

Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). Also you can select various settings using the menu.

(For details on the functions available → page 29)

In this Cyber-shot Handbook, the available mode dial setting is shown as follows.



Scene Selection


For shooting an image appropriately according to the scene condition, a combination of functions is determined by the camera.

(✓: you can select the desired setting)

	Macro	Flash	White Balance	Burst
🌙	—	⌚	✓	—
🌙	✓	⌚SL	Auto	—
🔥	—	⌚	☀	—
🌴	✓	⌚ / ⌚	✓	✓
⛰	—	⌚ / ⌚	✓	✓
👤	✓	✓	✓	✓



Using menu items

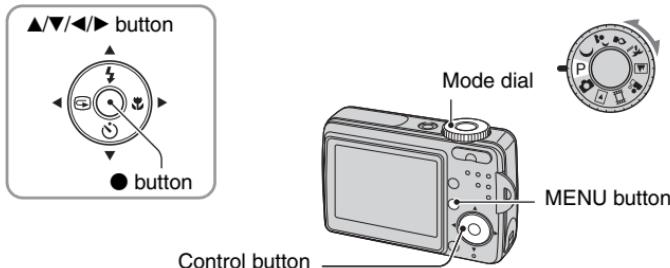


1 Turn on the power and set the mode dial.

Different items are available depending on the position of the mode dial.

2 Press MENU to display the menu.

3 Select the desired menu item with **◀/▶** on the control button.

- If the desired item is invisible, keep pressing **◀/▶** until the item appears on the screen.
- Press **●** after selecting an item when the mode dial is set to **►**.

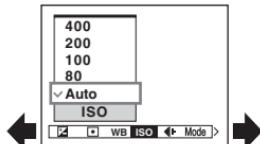

4 Select the setting with **▲/▼**.

The setting you select is zoomed and is set.

5 Press MENU to turn off the menu.

- If there is an item that is not displayed, an **▲/▼** mark appears on the edges of the location where menu items usually appear. To display an item that is not displayed, select the mark with the control button.
- You cannot set items that are not available to select.

The menu items available vary depending on the mode dial position. Only the available items are displayed on the screen.

( : available)

Mode dial position:		P	Scene		
---------------------	---	---	-------	---	---

Menu for shooting (page 30)

 (EV)	—				—
 (Metering Mode)	—				—
WB (White Bal)	—				—
ISO	—			—	—
 (P.Quality)	—			—	—
Mode (REC Mode)				—	—
PFX (PEffect)	—				—
 (Saturation)	—		—	—	—
 (Sharpness)	—		—	—	—
 (Setup)					—

Menu for viewing (page 34)

 (Folder)	—	—	—	—	
 (Protect)	—	—	—	—	
DPOF	—	—	—	—	
 (Print)	—	—	—	—	
 (Slide)	—	—	—	—	
 (Resize)	—	—	—	—	
 (Rotate)	—	—	—	—	
 (Setup)	—	—	—	—	

The default settings are marked with .




Manually adjusts the exposure.

	+2.0EV	Toward +: Brightens an image.
	0EV	The exposure is determined automatically by the camera.
	-2.0EV	Toward -: Darkens an image.

- For details on the exposure → page 13
- The compensation value can be set in 1/3EV increments.
- If a subject is being shot in extremely bright or dark conditions, or the flash is used, the exposure adjustment may not be effective.



Selects the metering mode that sets which part of the subject to measure to determine the exposure.

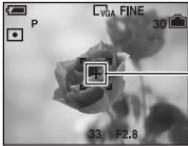	Spot (Spot metering) ()	Measures only a part of the subject. <ul style="list-style-type: none">• This function is useful when the subject is backlit or when there is strong contrast between the subject and the background.  A camera viewfinder display showing a rose flower. A small square crosshair is positioned on the flower, with a callout line pointing to it labeled "Spot metering cross hairs Positions on the subject". <p>LvGA FINE 30 33 F2.8</p>
	Multi (Multi-pattern metering)	Divides into multiple regions and measures each region. The camera determines a well-balanced exposure.

- For details on the exposure → page 13

WB (White Bal)

Adjusts the color tones according to the lighting condition in a situation, for example, when the colors of an image look strange.

 (Incandescent)	Adjusts for places where the lighting conditions change quickly such as at a party hall, or under bright lighting such as at photography studios.
 (Fluorescent)	Adjusts for fluorescent lighting.
 (Cloudy)	Adjusts for a cloudy sky.
 (Daylight)	Adjusts for outdoors, shooting night scenes, neon signs, fireworks, or sunrise, or conditions before and after sundown.
<input checked="" type="checkbox"/> Auto	Adjusts the White Balance automatically.

- For details on the white balance → page 14
- Under fluorescent lights that flicker, the white balance function may not work correctly even though you select  (Fluorescent).
- Some options are not available depending on the Scene mode (page 27).

ISO

Selects a luminous sensitivity with units of ISO. The larger the number, the higher the sensitivity.

400	Select a large number when shooting in dark locations or shooting a subject moving at high speed, or select a small number to obtain high image quality.
200	
100	
80	
<input checked="" type="checkbox"/> Auto	

- For details on the ISO sensitivity → page 14
- Note that the image tends to become noisier as the ISO sensitivity number increases.
- [ISO] is set to [Auto] in the Scene mode.

 (P.Quality)

Selects the still image quality.

<input checked="" type="checkbox"/> Fine (FINE)	Records with high quality (low compression).
<input type="checkbox"/> Standard (STD)	Records with standard quality (high compression).

- For details on the image quality → page 15

Mode (REC Mode)



Selects whether the camera performs continuous shooting or not when you press the shutter button.

<input type="checkbox"/> Burst (多重)	Records the maximum number of images in succession (refer to the following table) when you press and hold down the shutter button. • When “Recording” disappears, you can shoot the next image.
<input checked="" type="checkbox"/> Normal	Does not shoot continuously.

On the [Burst]

- The flash is set to  (Flash forced off).
- When recording with the self timer, a series of a maximum of three images is recorded.
- When the battery level is low, or when the internal memory or “Memory Stick Duo” is full, the Burst stops.
- You may not be able to shoot images in the Burst mode depending on the Scene mode (page 27).
- The recording interval is approximately 2.0 seconds.

The maximum number of continuous shots

(Units: images)

Quality	Fine	Standard
6M	3	3
3M	3	3
2M	3	3
VGA (E-mail)	3	3

數據未確認

Spec為4M

PFX (P.Effect)

Allows you to shoot an image with special effects.

B & W ()	Records the image in monochrome (black and white).
Sepia ()	Records the image in sepia (like an old photograph).
<input checked="" type="checkbox"/> Off	No effect.

- This setting is not maintained when the power is turned off.

④ (Saturation)

Adjusts the saturation of the image.

+ ()	Toward +: Brightens the color.
<input checked="" type="checkbox"/> Normal	
- ()	Toward -: Darkens the color.

□ (Sharpness)

Adjusts the sharpness of the image.

+ ()	Toward +: Sharpens the image.
<input checked="" type="checkbox"/> Normal	
- ()	Toward -: Softens the image.

■ (Setup)

See page 39.

The default settings are marked with .


 (Folder)



Selects the folder containing the image you want to play back when using the camera with “Memory Stick Duo”.

OK	See the following procedure.
 Cancel	Cancels the selection.

① Select the desired folder with / on the control button.

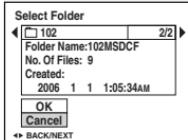

② Select [OK] with , then press .

On the folder

The camera stores images in a specified folder of a “Memory Stick Duo” (page 43). You can change the folder or create a new one.

- To create a new folder → [Create REC. Folder] (page 43)
- To change the folder for recording images → [Change REC. Folder] (page 44)
- When multiple folders are created in the “Memory Stick Duo” and the first or last image in the folder is displayed, the following indicators appear.

: Moves to the previous folder.

: Moves to the next folder.

: Moves to either the previous and next folders.

○-n (Protect)

Protects images against accidental erasure.

<input checked="" type="checkbox"/>	Protect (○-n)	See the following procedure.
	Exit	Exits the Protection function.

To protect images in single-image mode


- ① Display the image you want to protect.
- ② Press MENU to display the menu.
- ③ Select [○-n] (Protect) with **◀/▶** on the control button, then press **●**.
The image is protected and the ○-n (protect) indicator appears on the image.



- ④ To protect other images, select the desired image with **◀/▶**, then press **●**.

To protect images in index mode

- ① Press  (Index) to display the index screen.
- ② Press MENU to display the menu.
- ③ Select [○-n] (Protect) with **◀/▶** on the control button, then press **●**.
- ④ Select [Select] with **▲/▼**, then press **●**.
- ⑤ Select the image you want to protect with **▲/▼/◀/▶**, then press **●**.
A green ○-n indicator appears on the selected image.

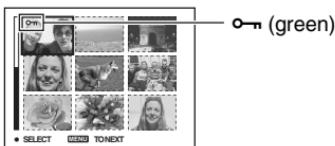

- ⑥ Repeat step ⑤ to protect other images.
- ⑦ Press MENU.
- ⑧ Select [OK] with **▶**, then press **●**.
The ○-n indicator turns white. The selected images are protected.

- To protect all images in the folder, select [All In This Folder] in step ④, and press **●**. Select [On] with **▶**, then press **●**.

To cancel the protection

In single-image mode

Press  in step ③ or ④ of “To protect images in single-image mode.”

In index mode

- ① Select the image for which you want to remove protection in step ⑤ of “To protect images in index mode.”
- ② Press  to turn the  indicator gray.
- ③ Repeat the operation above for all images to be unprotected.
- ④ Press MENU, select [OK] with , and then press .

To cancel protection of all images in the folder

Select [All In This Folder] in step ④ of “To protect images in index mode,” and press .

Select [Off] with , then press .

- Note that formatting the internal memory or “Memory Stick Duo” erases all the data stored on the recording media, even if images are protected, and these images cannot be recovered.
- It may take some time to protect an image.

DPOF



Adds a  (Print order) mark to images you want to print (page 68).

(Print)



See page 65.

(Slide)



Plays back recorded images in order (Slide show).

Interval

<input checked="" type="checkbox"/>	3 sec		Sets the slide show interval.
	5 sec		
	10 sec		
	30 sec		
	1 min		

Image

<input checked="" type="checkbox"/>	Folder	Plays back all images in the selected folder.
<input type="checkbox"/>	All	Plays back all images stored on the "Memory Stick Duo".

Repeat

<input checked="" type="checkbox"/>	On	Plays back images in a continuous loop.
<input type="checkbox"/>	Off	After all the images have been played back, the slide show ends.

<input type="checkbox"/>	Start	See the following procedure.
<input checked="" type="checkbox"/>	Cancel	Cancels the slide show.

① Select [Interval], [Image] and [Repeat] with **▲/▼/◀/▶** on the control button.

② Select [Start] with **▼/▶**, then press **●**.

The slide show starts.

To end the slide show, press **●**, select [Exit] with **▶**, then press **●**.

- When pausing during the slide show, you can display the previous/next image with **◀/▶**.

- The interval time is just a guideline, so it may vary depending on the image size, etc.



You can change the image size of a recorded image (Resize), and save it as a new file. The original image is retained even after resizing.

<input type="checkbox"/>	6M	The setting size is just a guideline (page 15).
<input checked="" type="checkbox"/>	3M	Spec為 4M
<input type="checkbox"/>	2M	
<input type="checkbox"/>	VGA	
<input checked="" type="checkbox"/>	Cancel	Cancels resizing.

① Display the image you want to resize.

② Press MENU to display the menu.

③ Select **[] (Resize)** with **◀/▶** on the control button, then press **●**.

④ Select the desired size with **▲/▼**, then press **●**.

The resized image is recorded in the recording folder as the newest file.

- For details on [Image Size], see page 15.

- You cannot change the size of movies.

- When you change from a small size to a large size, the image quality deteriorates.

- You cannot resize the image size to [3:2].

 (Rotate)

Rotates a still image.

	Rotates an image. See the following procedure.
OK	Determines the rotation. See the following procedure.
	Cancels rotation.

- ① Display the image to be rotated.
- ② Press MENU to display the menu.
- ③ Select (Rotate) with / on the control button, then press .
- ④ Select with , then rotate the image with /.
- ⑤ Select [OK] with /, then press .

- You cannot rotate protected images or movies.
- You may not be able to rotate images shot with other cameras.
- When viewing images on a computer, the image rotation information may not be reflected depending on the software.


 (Setup)

See page 39.



Using Setup items

You can change the default settings using the Setup screen.

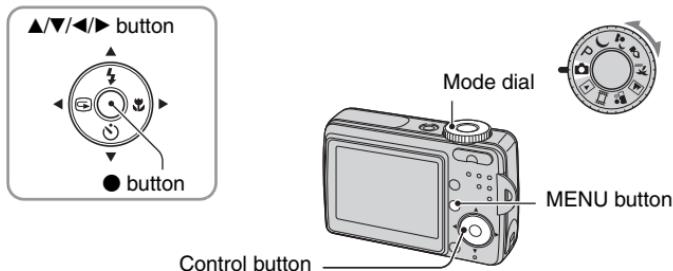

1 Turn on the camera.


2 Press MENU to display the menu.

3 After pressing ▶ on the control button, go to the  (Setup) setting, then press ▶ again.

4 Press  on the control button to select the item you want to set.

The frame of the selected item turns yellow.

5 Press ● to enter the setting.

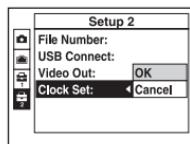

To turn off the  (Setup) screen, press MENU.

To return to the menu from the  (Setup) screen, press ◀ on the control button repeatedly.

To cancel the (Setup) setting

Select [Cancel] if it appears, then press ● on the control button. If it does not appear, select the previous setting again.

- This setting is maintained even when the power is turned off.

The default settings are marked with .

Digital Zoom

Selects the digital zoom mode. The camera enlarges the image using optical zoom (up to 3x). When the zoom scale exceeds 3x, the camera uses either smart or precision digital zoom.


 Smart (Smart zoom) 	Enlarges the image digitally with almost no distortion. This is not available when the image size is set to [6M] or [3:2]. • The maximum zoom scale of Smart zoom is shown in the following table.
Precision (Precision digital zoom) 	Enlarges all image sizes up to a maximum of 6x, but the image quality deteriorates.
Off	Does not use the digital zoom.

Image size and maximum zoom scale using Smart zoom

Size	Maximum zoom scale
3M	Approx. 4.8x
2M	Approx. 6x
VGA (E-mail)	Approx. 12.0x

Spec為 3M-3.7x,
1M-6x, VGA-12x, 請確認

- If you press the zoom button, the zoom scale is displayed.

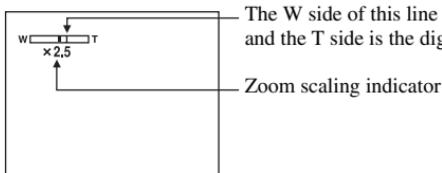

- The maximum zoom scale of smart zoom/precision zoom includes the scale of the optical zoom.
- When using the smart zoom, the image on the screen may look rough. However, this phenomenon has no effect on the recorded image.

Date/Time

Selects how to superimpose the date or time onto the image. Select this before shooting.

- The date and time do not appear during shooting, instead, the **DATE** indicator appears. The date and time appear in red on the lower-right corner of the screen during playback only.

	Day&Time	Superimposes the date, hour, and minute.
	Date	Superimposes the year, month and day. <ul style="list-style-type: none"> The date is inserted in the order you select.
<input checked="" type="checkbox"/>	Off	Does not superimpose the date and time.

- You cannot insert the data and time into movies.
- The date and time superimposed cannot be removed later.

Red Eye Reduction



Reduces the red-eye phenomenon when using the flash. Select this before shooting.

	On (⌚)	Reduces the red-eye phenomenon. <ul style="list-style-type: none"> The flash pre-strobes twice or more before shooting.
<input checked="" type="checkbox"/>	Off	Does not use Red Eye Reduction.

- Because it takes about a second until the shutter clicks, hold the camera firmly to prevent the effects of vibration. Also, do not let the subject move.
- Red-eye reduction may not produce the desired effects depending on individual differences, the distance to the subject, if the subject does not see the pre-strobe, or other conditions.

Auto Review

Displays the recorded image on the screen for approximately two seconds immediately after shooting a still image.

<input checked="" type="checkbox"/>	On	Use the Auto Review.
	Off	Does not use Auto Review.

- You cannot shoot the next image during the Auto Review display. If you press the shutter button halfway down during this period, the recorded image display disappears and you can immediately shoot the next image.



This item does not appear when a “Memory Stick Duo” is inserted in the camera.
The default settings are marked with .

Format

Formats the internal memory.

- Note that formatting irrevocably erases all data in the internal memory, including even protected images.

	OK	See the following procedure.
	Cancel	Cancels the formatting.

① Select [OK] with  on the control button, then press .
The message “All data in internal memory will be erased Ready?” appears.

② Select [OK] with , then press .
The format is complete.

This item appears only when a “Memory Stick Duo” is inserted in the camera.
The default settings are marked with .

Format

Formats the “Memory Stick Duo”. A commercially available “Memory Stick Duo” is already formatted, and can be used immediately.

- Note that formatting irrevocably erases all data on a “Memory Stick Duo”, including even protected images.

	OK	See the following procedure.
	Cancel	Cancels the formatting.


- ① Select [OK] with  on the control button, then press .
The message “All data in Memory Stick will be erased Ready?” appears.
- ② Select [OK] with , then press .
The format is complete.

Create REC. Folder

Creates a folder in a “Memory Stick Duo” for recording images.

	OK	See the following procedure.
	Cancel	Cancels folder creation.

- ① Select [OK] with  on the control button, then press .
The folder creation screen appears.

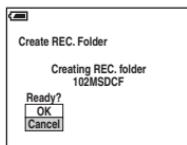

- ② Select [OK] with , then press .
A new folder is created with a number incremented one higher than the largest number, and the folder becomes the current recording folder.

- For details on the folder, see page 34.
- When not creating a new folder, the “101MSDCF” folder is selected as the recording folder.
- You can create folders designated up to “999MSDCF.”
- Images are recorded in the newly created folder until a different folder is created or selected.
- You cannot delete a folder with the camera. To delete a folder, use your computer, etc.
- Up to 4,000 images can be stored in one folder. When the folder capacity is exceeded, a new folder is automatically created.
- For details, see “Image file storage destinations and file names” (page 56).

Change REC. Folder

Changes the folder currently used for recording images.

<input type="checkbox"/> OK	See the following procedure.
<input checked="" type="checkbox"/> Cancel	Cancels changing the recording folder.

① Select [OK] with **▲** on the control button, then press **●**.
The folder selection screen appears.



② Select the desired folder with **◀/▶**, and [OK] with **▲**, then press **●**.


- You cannot select the “100MSDCF” folder as a recording folder.
- You cannot move recorded images to a different folder.

Copy

Copies all images in the internal memory to a “Memory Stick Duo”.

<input type="checkbox"/> OK	See the following procedure.
<input checked="" type="checkbox"/> Cancel	Cancels the copying.

① Insert a “Memory Stick Duo” having 32 MB or larger capacity.
② Select [OK] with **▲** on the control button, then press **●**.
The message “All data in internal memory will be copied Ready?” appears.
③ Select [OK] with **▲**, then press **●**.
Copying starts.

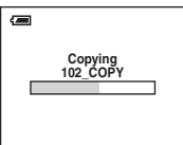

- Use batteries with enough capacity or the AC Adaptor (not supplied). If you attempt to copy image files using batteries with little remaining charge, the batteries may run out, causing copying to fail or possibly corrupting the data.
- You cannot copy individual images.
- The original images in the internal memory are retained even after copying. To delete the contents of the internal memory, remove the “Memory Stick Duo” after copying, then execute the [Format] command in  (Internal Memory Tool) (page 42).
- You cannot select a folder copied on a “Memory Stick Duo”.
- Even if you copy data, a  (Print order) mark is not copied.

The default settings are marked with .

LCD Backlight

Selects the brightness of the LCD backlight when using the camera with batteries.

	Bright	Brightens.
	Normal	

- Selecting [Bright] uses up the battery charge faster.

Beep

Selects the sound produced when you operate the camera.

	Shutter	Turns on the shutter sound when you press the shutter button.
	On	Turns on the beep/shutter sound when you press the control button/ press the shutter button.
	Off	Turns off the beep/shutter sound.

Language

Selects the language to be used to display the menu items, warnings, and messages.

Initialize

Initializes the setting to the default setting.

	OK	See the following procedure.
	Cancel	Cancels the resetting.

- ① Select [OK] with  on the control button, then press . The message “Initialize all settings Ready?” appears.
- ② Select [OK] with , then press . The settings are reset to the default setting.

- Make sure that the power is not disconnected during resetting.

The default settings are marked with .

File Number

Selects the method used to assign file numbers to images.

<input checked="" type="checkbox"/>	Series	Assigns numbers to files in sequence even if the recording folder or the “Memory Stick Duo” is changed. (When the replaced “Memory Stick Duo” contains a file with a number higher than the last assigned number, a number one higher than the largest number is assigned.)
	Reset	Starts from 0001 each time the folder is changed. (When the recording folder contains a file, a number one higher than the largest number is assigned.)

USB Connect

Selects the USB mode to be used when connecting the camera to a computer or a PictBridge compliant printer using the USB cable.

	PictBridge	Connects the camera to a PictBridge compliant printer (page 65).
	PTP	When [PTP] (Picture Transfer Protocol) is set and the camera is connected to a computer, the images in the recording folder on the camera are copied to the computer. (Compatible with Windows XP and Mac OS X.)
	Mass Storage	Establishes a Mass Storage connection between the camera and a computer or other USB device (page 52).
<input checked="" type="checkbox"/>	Auto	<p>The camera recognizes automatically and sets up communication with a computer or PictBridge compliant printer (pages 52 and 65).</p> <ul style="list-style-type: none">• If the camera and a PictBridge compliant printer cannot be connected when set to [Auto], change the setting to [PictBridge].• If the camera and a computer or other USB device cannot be connected when set to [Auto], change the setting to [Mass Storage].

Video Out

Sets the video signal output according to the TV color system of the connected video equipment. Different countries and regions use different TV color systems. If you want to view images on a TV screen, check page 71 for the TV color system of the country or region where the camera is used.

NTSC	Sets the video output signal to NTSC mode (e.g., for the USA, Japan).
PAL	Sets the video output signal to PAL mode (e.g., for Europe).

Clock Set

Sets the date and time.

	OK	Select [OK] with  on the control button, and press  . Then, perform the procedure explained in "Set the clock."
	Cancel	Cancels setting the clock.



Enjoying your Windows computer

For details on using a Macintosh computer, refer to “Using your Macintosh computer” (page 62).

This section describes the English version screen contents.



Install the software (supplied) first (page 50)



Copying images to your computer (page 51)



Viewing images on your computer

Enjoying images using the “Cyber-shot Viewer” (page 58)



- Viewing images saved on your computer
- Viewing photos organized by date
- Editing images



Printing images

Recommended computer environment

The following environment is recommended for a computer connected to the camera.

Recommended environment for copying images

OS (pre-installed): Microsoft Windows 2000 Professional, Windows Millennium Edition, Windows XP Home Edition or Windows XP Professional

- Operation is not assured in an environment based on an upgrade of the operating systems described above or in a multi-boot environment.

USB jack: Provided as standard

Recommended environment for using "Cyber-shot Viewer"

OS (pre-installed): Microsoft Windows 2000 Professional, Windows Millennium Edition, Windows XP Home Edition or Windows XP Professional

Sound card: 16-bit stereo sound card with speakers

Processor/Memory: Pentium III 500 MHz or faster, 128 MB of RAM or more
(Recommended: Pentium III 800 MHz or faster and 256 MB of RAM or more)

Software: DirectX 9.0c or later

Hard Disk: Disk space required for installation—200 MB or more

Display: Screen resolution; 800 × 600 dots or more
Colors; High Color (16-bit color, 65,000 colors) or more

- This software is compatible with DirectX technology. DirectX must be installed for use.

Notes on connecting your camera to a computer

- Operations are not guaranteed for all the recommended computer environments mentioned above.
- If you connect two or more USB devices to a single computer at the same time, some devices, including your camera, may not operate, depending on the types of USB devices you are using.
- Operations are not guaranteed when using a USB hub.
- There are three modes for a USB connection when connecting a computer, [Auto] (default setting), [Mass Storage] and [PTP] modes. This section describes the [Auto] and [Mass Storage] as examples. For details on [PTP], see page 46.
- When your computer resumes from a suspend or sleep mode, communication between your camera and your computer may not recover at the same time.

Installing the software (supplied)

You can install the software (supplied) using the following procedure.

- When using Windows 2000/Me, do not connect the camera to the computer before installation.
- In Windows 2000/XP, log on as Administrator.
- When the supplied software is installed, the USB driver is installed automatically.

1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.

The installation menu screen appears.



- If it does not appear, double-click  (My Computer) →  (CYBERSHOTSOFT).

2 Click [Install].

The “Choose Setup Language” screen appears.

3 Select the desired language, then click [Next].

The “License Agreement” screen appears.

Read the agreement carefully. If you accept the terms of the agreement, click the radio button next to [I accept the terms of the license agreement] and then click [Next].

4 Follow the instructions on the screen to complete the installation.

- When the restarting confirmation message appears, restart the computer following the instructions on the screen.
- DirectX will be installed if you have not yet installed them.

5 Remove the CD-ROM after the installation is complete.

Copying images to your computer

This section describes the process using a Windows computer as an example. You can copy images from the camera to your computer as follows.

For a computer with a Memory Stick slot

Remove the “Memory Stick Duo” from the camera and insert it in the Memory Stick Duo Adaptor. Insert the Memory Stick Duo Adaptor in the computer and copy the images.

If the “Memory Stick PRO Duo” is not recognized, see page 80.

For a computer without a Memory Stick slot

Follow Stages 1 through 4 on pages 51 to 55 to copy images.


- When using Windows 2000/Me, install the supplied software before proceeding. With Windows XP, the installation is unnecessary.
- The screen displays shown in this section are the examples for copying images from “Memory Stick Duo”.

Stage 1: Preparing the camera and the computer

1 Insert a “Memory Stick Duo” with recorded images into the camera.


- When copying images in the internal memory, this step is unnecessary.

2 Insert the batteries with enough capacity in the camera, or connect the camera to a wall outlet (wall socket) with the AC Adaptor (not supplied).

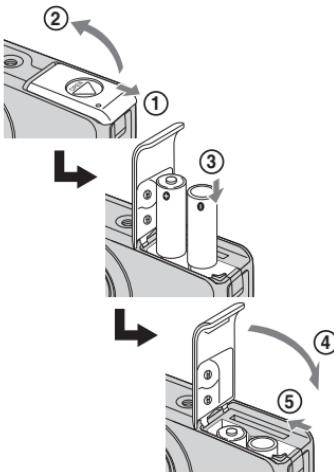


- When you copy images to your computer using the batteries with little remaining charge, copying may fail or image data may become corrupted if the batteries shut down too soon.

3 Set the mode dial to , then press POWER to turn on the camera and the computer.

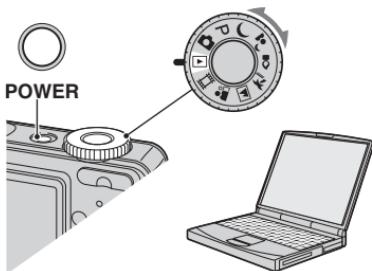


Stage 2: Connecting the camera and your computer

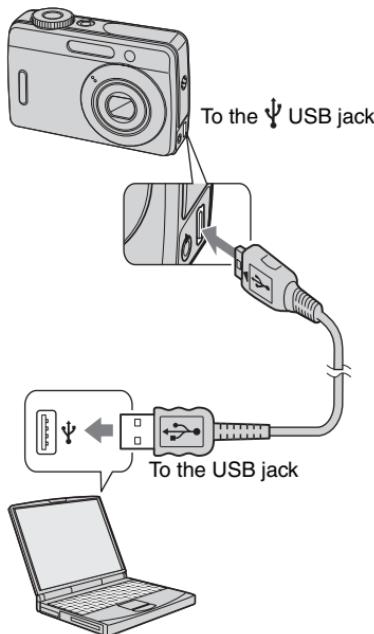

- With Windows XP, the AutoPlay wizard appears on the desktop.

“USB Mode Mass Storage” appears on the screen of the camera.

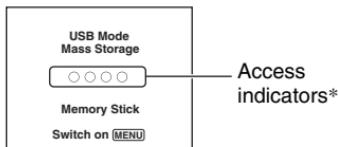

When a USB connection is established for the first time, your computer automatically runs a program to recognize the camera. Wait for a while.

- During communication, the access indicators turn red. Do not operate the computer until the indicators turn white.
- If “USB Mode Mass Storage” does not appear, set [USB Connect] to [Mass Storage] (page 46).


Stage 3-A: Copying images to a computer

XP

- For Windows 2000/Me, follow the procedure explained in “Stage 3-B: Copying images to a Computer” on page 54.
- For Windows XP, when the wizard screen does not appear automatically, follow the procedure explained in “Stage 3-B: Copying images to a Computer” on page 54.

This section describes an example of copying images to a “My Documents” folder.

1 After making a USB connection in Stage 2, click [Copy pictures to a folder on my computer using Microsoft Scanner and Camera Wizard] → [OK] as the wizard screen appears automatically on the desktop.

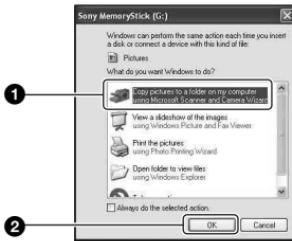

The “Scanner and Camera Wizard” screen appears.

2 Click [Next].

The images saved on the “Memory Stick Duo” of the camera appear.

- If no “Memory Stick Duo” is inserted, images in the internal memory appear.

3 Click the check box of unwanted images to remove the checkmark so they are not copied, then click [Next].



The “Picture Name and Destination” screen appears.

4 Select a name and destination for the images, then click [Next].

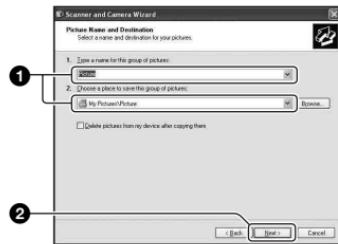


Image copying starts. When the copying is completed, the “Other Options” screen appears.

- This section describes an example of copying images to the “My Documents” folder.

5 Click the radio button next to [Nothing. I'm finished working with these pictures] to select it, then click [Next].



The “Completing the Scanner and Camera Wizard” screen appears.

6 Click [Finish].

The wizard screen closes.

- To continue copying other images, disconnect the USB cable. Then follow the procedure explained in “Stage 2: Connecting the camera and your computer” on page 52.


Stage 3-B: Copying images to a Computer

2000 | Me

- For Windows XP, follow the procedure explained in “Stage 3-A: Copying images to a computer” on page 52.

This section describes an example of copying images to the “My Documents” folder.


1 Double-click [My Computer] → [Removable Disk] → [DCIM].

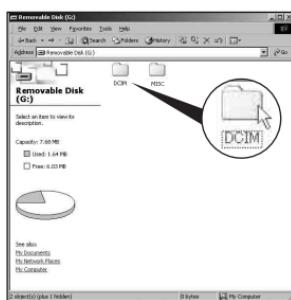

- If the “Removable Disk” icon is not displayed, see page 78.


2 Double-click the folder where the image files you want to copy are stored.

Then, right-click an image file to display the menu and click [Copy].

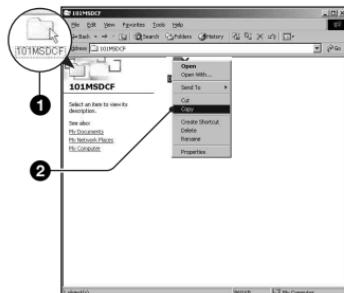

- On the storage destination of the image files, see page 56.

3 Double-click the [My Documents] folder. Then, right-click on the “My Documents” window to display the menu and click [Paste].

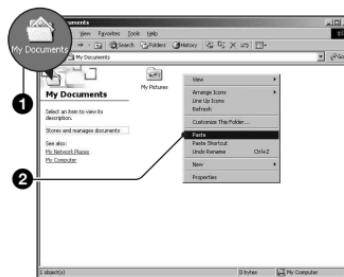

The image files are copied to the “My Documents” folder.

- When an image with the same file name exists in the copy destination folder, the overwrite confirmation message appears. When you overwrite an existing image with a new one, the original file data is deleted. To copy an image file to the computer without overwriting, change the file name to a different name and then copy the image file. However, note that if you change the file name (page 57), you may not be able to play back that image with your camera.

Stage 4: Viewing images on your computer

This section describes the procedure for viewing copied images in the “My Documents” folder.

1 Click [Start] → [My Documents].



The contents of the “My Documents” folder are displayed.

- If you are not using Windows XP, double-click [My Documents] on the desktop.

2 Double-click the desired image file.



The image is displayed.

To delete the USB connection

Perform the procedures listed below beforehand when:

- Disconnecting the USB cable
- Removing a “Memory Stick Duo”
- Inserting a “Memory Stick Duo” into the camera after copying images from the internal memory
- Turning off the camera

■ For Windows 2000/Me/XP

① Double-click  on the tasktray.



② Click  (Sony DSC) → [Stop].


③ Confirm the device on the confirmation window, then click [OK].

④ Click [OK].
The device is disconnected.
• Step 4 is unnecessary for Windows XP.

Image file storage destinations and file names

The image files recorded with your camera are grouped as folders on the “Memory Stick Duo”.

Example: viewing folders on Windows XP

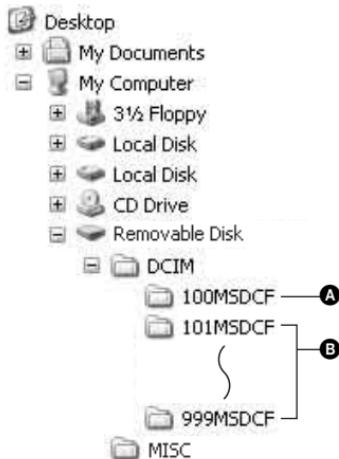

- Image files are named as follows. □□□□ stands for any number within the range from 0001 to 9999. The numerical portions of the name of a movie file recorded in movie mode and its corresponding index image file are the same.
 - Still image files: DSC0□□□□.JPG
 - Movie files: MOV0□□□□.AVI
 - Index image files that are recorded when you record movies: MOV0□□□□.THM
- For more information about folders, see pages 34 and 43.

A Folder containing image data recorded using a camera not equipped with the folder creating function

B Folder containing image data recorded using this camera

When no new folders are created, there are folders as follows:

- “Memory Stick Duo”; “101MSDCF” only
- Internal memory; “101_SONY” only

- You cannot record any images to the “100MSDCF” folder. The images in these folders are available only for viewing.
- You cannot record/playback any images to the “MISC” folder.

Viewing image files stored on a computer with your camera (using a “Memory Stick Duo”)

This section describes the process using a Windows computer as an example.

When an image file copied to a computer no longer remains on a “Memory Stick Duo”, you can view that image again on the camera by copying the image file on the computer to a “Memory Stick Duo”.

- Step 1 is not necessary if the file name set with your camera has not been changed.
- You may be unable to play back some images depending on the image size.
- When an image file has been processed by a computer or when the image file was recorded using a model other than that of your camera, playback on your camera is not guaranteed.
- When there is no folder, first create a folder with your camera (page 43) and then copy the image file.

1 Right-click the image file, then click [Rename]. Change the file name to “DSC0□□□□□”.


Enter a number from 0001 to 9999 for □□□□.



- If the overwrite confirmation message appears, enter a different number.
- An extension may be displayed depending on the computer settings. The extension for still images is JPG, and the extension for movies is AVI. Do not change the extension.

2 Copy the image file to the “Memory Stick Duo” folder in the following order.

- ① Right-click the image file, then click [Copy].
- ② Double-click [Removable Disk] or [Sony MemoryStick] in [My Computer].
- ③ Right-click the [□□□MSDCF] folder in the [DCIM] folder, then click [Paste].
 - □□□ stands for any number within the range from 100 to 999.

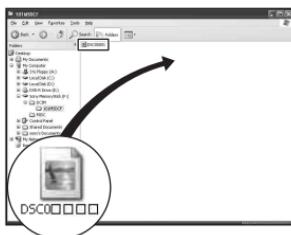

Using the “Cyber-shot Viewer” (supplied)

You can use still images and movies from the camera more than ever by taking advantage of the software.

This section summarizes the “Cyber-shot Viewer” and gives basic instructions.

“Cyber-shot Viewer” overview

With the “Cyber-shot Viewer” you can:

- Import images shot with the camera and display them on the monitor.
- Organize images on the computer on a calendar by shooting date to view them.
- Retouch, print, and send still images as e-mail attachments, change the shooting date, and more.
- For details on the “Cyber-shot Viewer,” refer to the Help.

To access the Help, click [Start] → [Programs] (in Windows XP, [All Programs]) → [Sony Picture Utility] → [Help] → [Cyber-shot Viewer].

Starting and exiting the “Cyber-shot Viewer”

Starting the “Cyber-shot Viewer”

Double-click the (Cyber-shot Viewer) icon on the desktop.

Or, from the Start menu: Click [Start] → [Programs] (in Windows XP, [All Programs]) → [Sony Picture Utility] → [Cyber-shot Viewer].

Exiting the “Cyber-shot Viewer”

Click  button in the top right corner of the screen.

Basic instructions

Follow these steps to import and view images from the camera.

Importing images

1 Make sure “Media Check Tool”* is running.


* “Media Check Tool” is a program that automatically detects and imports images when a “Memory Stick” is inserted or when the camera is connected.

Look for a (Media Check Tool) icon in the taskbar.

- If there is no icon: Click [Start] → [Programs] (in Windows XP, [All Programs]) → [Sony Picture Utility] → [Cyber-shot Viewer] → [Tools] → [Media Check Tool].

2 Connect the camera to your computer with the USB cable.


After the camera is automatically detected, the [Import Images] screen is displayed.

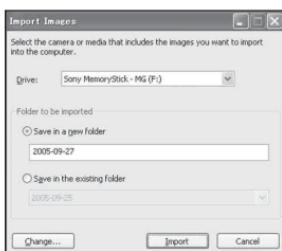

- If you will use the Memory Stick slot, first refer to page 51.
- In Windows XP, if the AutoPlay Wizard appears, close it.

3 Import the images.

To start importing images, click the [Import] button.




By default, images are imported into a folder created in "My Pictures" that is named with the date of importing.

- For instructions on changing the "Folder to be imported", refer to page 61.

Viewing images

1 Checking imported images

When importing is complete, the "Cyber-shot Viewer" starts. Thumbnails of the imported images are displayed.

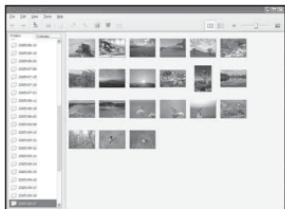

- The "My Pictures" folder is set as the default folder in "Viewed folders".
- You can double-click a thumbnail to display the image by itself.

2 Viewing images in "Viewed folders" arranged by shooting date on a calendar

- ① Click the [Calendar] tab.

Years when images were shot are listed.

- ② Click the year.

Images shot that year are displayed, arranged on the calendar by shooting date.


- ③ To display images by month, click the desired month.

Thumbnails of images shot that month are displayed.


- ④ To display images by time, click the desired date.

Thumbnails of images shot that day are displayed, arranged by hour.


Year display screen

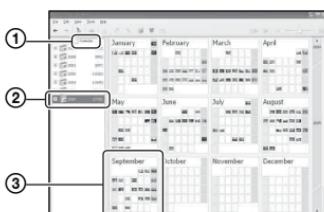

Month display screen

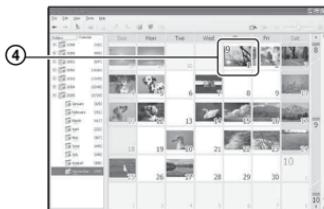

Hour display screen

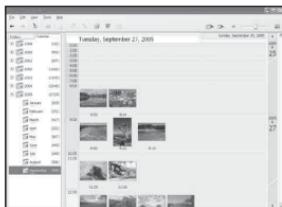

- To list images from a particular year or month, click that period on the left of the screen.

3 Displaying individual images


On the hour display screen, double-click a thumbnail to display the image by itself in a separate window.



- You can edit displayed images by clicking the toolbar button.

Displaying images in full-screen mode

To display a slide show of current images in full-screen mode, click the button.

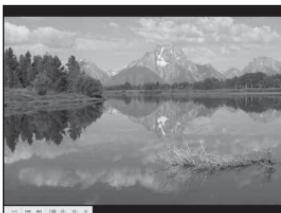


- To play or pause the slide show, click the button on the lower left of the screen.
- To stop the slide show, click the button on the lower left of the screen.

Other functions

Preparing images stored on the computer for viewing

To view them, register the folder that contains the images as one of the “Viewed folders”.

From the [File] menu, choose [Register Viewed Folders...] to display the settings screen for “Viewed folders” registration.

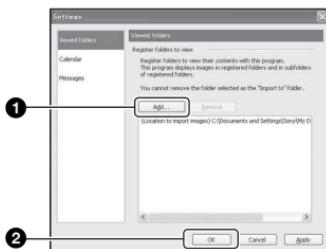


Click the [Add...] button, and then specify the folder with images for importing to register the folder as a “Viewed folder.”

- Images in any subfolders of “Viewed folders” are also registered.

Changing the “Folder to be imported”

To change the “Folder to be imported”, access the “Import Settings” screen.

To display the “Import Settings” screen, choose [Image Import Settings...] from the [File] menu.

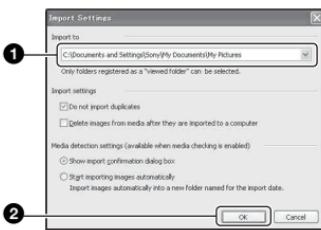

Choose the “Folder to be imported”.

- You can specify the “Folder to be imported” from folders registered as “Viewed folders.”

Updating image registration information

To update image information, choose [Update Database] from the [Tools] menu.

- Updating the database may take a while.
- If you rename image files or folders in “Viewed folders”, they cannot be displayed with this software. In this case, update the database.

To uninstall the “Cyber-shot Viewer”

- ① Click [Start] → [Settings] → [Control Panel]. Double-click [Add/Remove Programs]. (For Windows XP, click [start] → [Control Panel], then double-click [Add or Remove Programs].)
- ② Select [Sony Picture Utility] and click [Change/Remove] (For Windows XP, [Remove]) to execute the uninstallation.

Technical Support

Additional information on this product and answers to frequently asked questions can be found at the Sony Customer Support Website.
<http://www.sony.net/>

Using your Macintosh computer

You can copy images to your computer.

- The supplied software is not compatible with Macintosh computers.

Recommended computer environment

The following environment is recommended for a computer connected to the camera.

Recommended environment for copying images

OS (pre-installed): Mac OS 9.1, 9.2 or Mac OS X (v10.0 or later)

USB jack: Provided as standard

Notes on connecting your camera to a computer

- Operations are not guaranteed for all the recommended computer environments mentioned above.
- If you connect two or more USB devices to a single computer at the same time, some devices, including your camera, may not operate depending on the types of USB devices you are using.
- Operations are not guaranteed when using a USB hub.
- There are three modes for a USB connection when connecting a computer, [Auto] (default setting), [Mass Storage] and [PTP] modes. This section describes the [Auto] and [Mass Storage] as examples. For details on [PTP], see page 46.
- When your computer resumes from the suspend or sleep mode, communication between your camera and your computer may not recover at the same time.

Copying and viewing images on a computer

1 Prepare the camera and a Macintosh computer.

Perform the same procedure as that described in “Stage 1: Preparing the camera and the computer” on page 51.

2 Connect the USB cable.

Perform the same procedure as that described in “Stage 2: Connecting the camera and your computer” on page 52.

3 Copy image files to the Macintosh computer.

- ① Double-click the newly recognized icon → [DCIM] → the folder where the images you want to copy are stored.
- ② Drag and drop the image files to the hard disk icon.
The image files are copied to the hard disk.

- For details on the storage location of the images and file names, see page 56.

4 View images on the computer.

Double-click the hard disk icon → the desired image file in the folder containing the copied files to open that image file.

To delete the USB connection

Perform the procedures listed below beforehand when:

- Disconnecting the USB cable
- Removing a “Memory Stick Duo”
- Inserting a “Memory Stick Duo” into the camera after copying images from the internal memory
- Turning off the camera

Drag and drop the drive icon or the icon of the “Memory Stick Duo” to the “Trash” icon.

The camera is disconnected from the computer.

- If you are using Mac OS X v10.0, perform the procedure above after you have turned your computer off.

Technical Support

Additional information on this product and answers to frequently asked questions can be found at the Sony Customer Support Website.
<http://www.sony.net/>



How to print still images

Printing directly using a PictBridge compliant printer (page 65)



You can print images by connecting the camera directly to a PictBridge compliant printer.

Printing directly using a "Memory Stick" compliant printer



You can print images with a "Memory Stick" compliant printer. For details, see the operating instructions supplied with the printer.

Printing using a computer



You can copy images to a computer using the "Cyber-shot Viewer" software in the supplied CD-ROM and print the images.

Printing at a shop (page 68)



You can take a "Memory Stick Duo" containing images shot with your camera to a photo printing service shop. You can make a  (Print order) mark on images that you want to print out in advance.

Printing images directly using a PictBridge compliant printer

Even if you do not have a computer, you can print images shot using your camera by connecting the camera directly to a PictBridge compliant printer.



- "PictBridge" is based on the CIPA standard. (CIPA: Camera & Imaging Products Association)

In single-image mode


You can print a single image on a printing sheet.



In index mode

You can print several images at a reduced size on a printing sheet. You can print a set of either the same images (①) or different images (②).

①

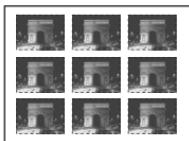

②




- An index print function may not be provided depending on the printer.
- The quantity of images that can be printed as an index image differ depending on the printer.
- You cannot print movies.
- If the  indicator flashes on the screen of the camera for about five seconds (error notification), check the connected printer.

Stage 1: Preparing the camera

Prepare the camera to connect it to the printer via a USB connection. When connecting the camera to a printer that is recognized when [USB Connect] is set to [Auto], Stage 1 is unnecessary.

MENU button

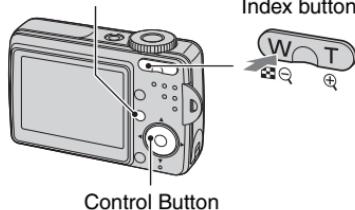


- It is recommended to use batteries with enough capacity or an AC Adaptor (not supplied) to prevent the power from turning off partway through printing.

1 Press **MENU** to display the menu.

2 Press **▶** on the control button to select  (Setup).

3 Select  (Setup2) with **▼**, then select [USB Connect] with **▲/▼/▶**.


4 Select [PictBridge] with **▶/▲**, then press **●**.

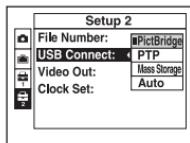

The USB mode is set.

Stage 2: Connecting the camera to the printer

- 1 Connect the ψ (USB) jack on your camera and the USB jack on the printer with the supplied USB cable.

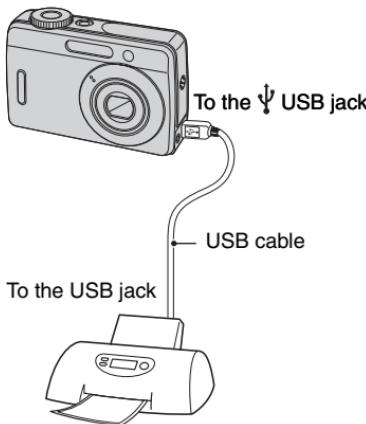

- 2 Turn on your camera and the printer.

After the connection is made, the ψ indicator appears.



The camera is set to playback mode, then an image and the print menu appear on the screen.

Stage 3: Printing

Regardless of what the mode dial is set to, the print menu appears when you complete Stage 2.

- 1 Select the desired printing method with Δ/∇ on the control button, then press \bullet .

[All In This Folder]

Prints all the images in the folder.

[DPOF image]

Prints all the images with a \checkmark (Print order) mark (page 68) regardless of the displayed image.

[Select]

Selects images and prints all the selected images.

- ① Select the image you want to print with Δ/∇ , then press \bullet .
The \checkmark mark appears on the selected image.
 - To select other images, repeat this procedure.


- ② Select [Print] with ∇ , then press \bullet .

[This image]

Prints a displayed image.

- If you select [This image] and set [Index] to [On] in step 2, you can print a set of the same images as an index image.

- 2 Select print settings with $\Delta/\nabla/\leftarrow/\rightarrow$.

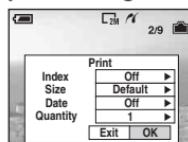

[Index]

Select [On] to print as an index image.

[Size]

Select the size of the printing sheet.

[Date]

Select [Day&Time] or [Date] to insert the date and time on images.

- When you choose [Date], the date will be inserted in the order you select. This function may not be provided depending on the printer.

[Quantity]

When [Index] is set to [Off]:

Select the number of sheets of an image that you want to print. The image will be printed as a single image.

When [Index] is set to [On]:


Select the number of sets of images that you want to print as an index image. If you selected [This image] in step 1, select the number of the same image you want to print side by side on a sheet as an index image.

- The designated number of images may not all fit onto a single sheet depending on the quantity of images.

3 Select [OK] with ▼/▶, then press ●.

The image is printed.

- If the  (PictBridge Connecting) icon appears on the screen, do not disconnect the USB cable.

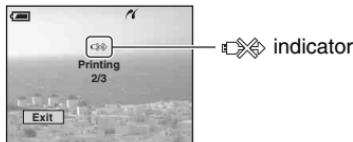**To print other images**

After step 3, select [Select] and the desired image with ▲/▼, then perform from step 1.

To print images on the index screen

Perform “Stage 1: Preparing the camera” (page 65) and “Stage 2: Connecting the camera to the printer” (page 66), then proceed with the following.

When you connect the camera to a printer, the print menu appears. Select [Cancel] to turn off the print menu, then proceed as follows.

- Press  (Index) button.
The index screen appears.
- Press MENU to display the menu.
- Select  (Print) with ▶, then press ●.
- Select the desired printing method with ▲/▼, then press ●.

**[Select]**

Selects images and prints all the selected images.

Select the image you want to print with ▲/▼/◀/▶, then press ● to display the  mark. (Repeat this procedure to select other images.) Then, press MENU.

[DPOF image]

Prints all the images with a  (Print order) mark regardless of the displayed image.

[All In This Folder]

Prints all the images in the folder.

- Perform steps 2 and 3 of “Stage 3: Printing” (page 66).

Printing at a shop

You can take a "Memory Stick Duo" containing images shot with your camera to a photo printing service shop. As long as the shop supports photo printing services conforming to the DPOF, you can make a  (Print order) mark on images in advance so that you do not need to reselect them when you print them out at the shop.

- You cannot print images stored in the internal memory at a print shop directly from the camera. Copy the images to a "Memory Stick Duo", then take the "Memory Stick Duo" to the print shop.

What is DPOF?

DPOF (Digital Print Order Format) is a function allowing you to make a  (Print order) mark on images of "Memory Stick Duo" that you want to print out later.


- You can also print the images with the  (Print order) mark using a printer that conforms to the DPOF (Digital Print Order Format) standard or using a PictBridge compliant printer.

- You cannot mark movies.

When taking a "Memory Stick Duo" to a shop

- Consult your photo printing service shop as to what types of "Memory Stick Duo" they handle.
- If a "Memory Stick Duo" is not handled by your photo printing service shop, copy the images you want to print out to other medium such as a CD-R and take it to the shop.
- Be sure to take the Memory Stick Duo Adaptor with it.
- Before you take image data to a shop, always copy (back up) your data to a disk.
- You cannot set the number of prints.

Marking in single-image mode

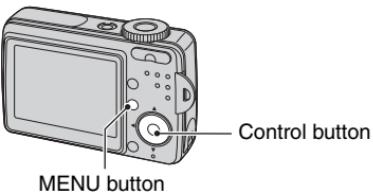


- 1 Display the image you want to print.

- 2 Press MENU to display the menu.

- 3 Select DPOF with **◀/▶**, then press **●**.

A  (Print order) mark is marked on the image.

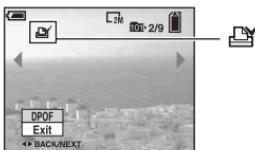

- 4 To mark other images, display the desired image with **◀/▶**, then press **●**.

To remove the mark in single-image mode

Press **●** in step 3 or 4.

Marking in index mode

- 1 Display the index screen.
- 2 Press MENU to display the menu.
- 3 Select DPOF with **◀/▶**, then press **●**.
- 4 Select [Select] with **▲/▼**, then press **●**.
 - You cannot add a  mark in [All In This Folder].
- 5 Select the image you want to mark with **▲/▼/◀/▶**, then press **●**.

A green  mark appears on the selected image.


- 6 Repeat step 5 to mark other images.
- 7 Press MENU.
- 8 Select [OK] with **▶**, then press **●**.

The  mark turns white.

To cancel, select [Cancel] in step 4 or select [Exit] in step 8, then press **●**.

To remove the mark in index mode

Select the images from which you want to remove the mark in step 5, then press **●**.

To remove all the marks in the folder

Select [All In This Folder] in step 4, then press **●**. Select [Off], then press **●**.




Viewing images on a TV screen

You can view images on a TV screen by connecting the camera to a TV.

Turn off both your camera and the TV before connecting the camera and the TV with the A/V cable.

- 1 **Connect the A/V cable (supplied) to the A/V OUT (MONO) jack of the camera and the audio/video input jacks of a TV.**

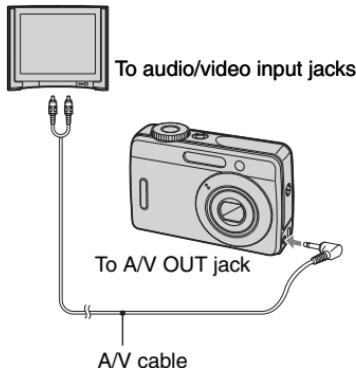


- If your TV has stereo input jacks, connect the audio plug (white) of the A/V cable to the left audio jack.

- 2 **Turn on the TV and set the TV's video input switch to "video."**

- For details, see the operating instructions supplied with the TV.

- 3 **Set the mode dial to ▶, and turn on the camera.**

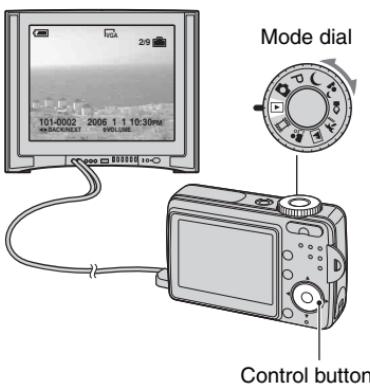

Images shot with the camera appear on the TV screen.

Press **◀/▶** on the control button to select the desired image.

- When using your camera abroad, it may be necessary to switch the video signal output to match that of your TV system (page 47).

On TV color systems

If you want to view images on a TV screen, you need a TV with a video input jack and the A/V cable. The color system of the TV must match that of your digital still camera. Check the following lists for the TV color system of the country or region where the camera is used.

NTSC system

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

PAL system

Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, United Kingdom, etc.

PAL-M system

Brazil

PAL-N system

Argentina, Paraguay, Uruguay

SECAM system

Bulgaria, France, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.



Troubleshooting

If you experience trouble with your camera, try the following solutions.

- ① Check the items on pages 73 to 83.**
- ② Remove the batteries, and insert the batteries again after about one minute, and turn on the power.**
- ③ Initialize the settings (page 45).**
- ④ Consult your Sony dealer or local authorized Sony service facility.**

Please understand that you give your consent that the contents of the internal memory may be checked when you send your camera to be repaired.

Batteries and power

The battery remaining indicator is incorrect, or sufficient battery remaining indicator is displayed but the power runs out too quickly.

- This phenomenon occurs when you use the camera in an extremely hot or cold location (page 88).
- When using alkaline batteries/Oxy Nickel Primary Battery (not supplied), the displayed time remaining may not be correctly indicated.
- The batteries are discharged. Install new batteries or charged Nickel-Metal Hydride batteries (not supplied).
- When using the Nickel-Metal Hydride batteries (not supplied), the poles of batteries or the terminals of the battery cover are dirty so the batteries are not charged sufficiently. Clean them with a cotton swab, etc. (page 88).
- When using the Nickel-Metal Hydride batteries (not supplied), the displayed time remaining differs from the current one due to the memory effect (page 88), etc. Fully discharge and then charge the batteries to correct the display.
- The batteries are dead. Replace them with new ones.

The batteries run down too quickly.

- You are using the camera in an extremely cold location (page 88).
- The batteries are dead. Replace them with new ones.
- When using the Nickel-Metal Hydride batteries (not supplied), charge them sufficiently.

Cannot turn on the camera.

- Install the batteries correctly.
- Properly connect the AC Adaptor (not supplied).
- The batteries are discharged. Install new batteries or charged Nickel-Metal Hydride batteries (not supplied).
- The batteries are dead. Replace them with new ones.

The power turns off suddenly.

- If you do not operate the camera for about three minutes while the power is on, the camera turns off automatically to prevent wearing down the batteries. Turn on the camera again.
- The batteries are discharged. Install new batteries or charged Nickel-Metal Hydride batteries (not supplied).

Shooting still images/movies

Your camera cannot record images.

- Check the free capacity of the internal memory or “Memory Stick Duo” (page 23). If it is full, do one of the following:
 - Delete unnecessary images.
 - Change the “Memory Stick Duo”.
- You are using the “Memory Stick Duo” with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position (page 86).
- You cannot record images while charging the flash.
- When shooting a still image, set the mode dial to a position other than .
- Set the mode dial to  when shooting movies.



The subject is not visible on the screen.

- Set the mode dial to an other position than  (page 26).

The image is out

Spec為: Spec: Wide: 0.05m ~ 0.5m

Tele: 0.28m ~ 0.5m 請確認

- The subject is positioned the lens  than the  shooting distance, approximately 5 cm (2 inches) (W)/35 cm (13 7/8 inches) (T), when shooting.
-  (Twilight mode) or  (Landscape mode) is selected in the Scene mode when shooting still images.

Zoom does not work.

- You cannot change the zoom scale when shooting movies.

Precision digital zoom does not function.

- Set [Digital Zoom] to [Precision] (page 40).
- This function cannot be used while shooting movies.

Smart zoom does not function.

- Set [Digital Zoom] to [Smart] (page 40).
- This function cannot be used when:
 - The image size is set to [6M] or [3:2].
 - Shooting movies.

The flash does not work.

- The flash is set to  (Flash forced off).
- You cannot use the flash when:
 - [Mode] (REC Mode) is set to [Burst] (page 32).
 -  (Twilight mode) or  (Candle mode) is selected in the Scene Selection.
 - When the mode dial is set to .
- Set the flash to  (Flash forced on) to shoot still images when  (Landscape mode) or  (Beach mode) is selected in the Scene Selection.

The close-up (Macro) function does not work.

-  (Twilight mode),  (Landscape mode) or  (Candle mode) is selected in the Scene Selection (page 27).

Fuzzy specks appear in images shot using the flash.

- Dust in the air reflected the flash light and appeared in the image. This is not a malfunction.

The date and time are not displayed.

- While shooting, the date and time are not displayed. Only during playback, the date and time are displayed.

The date and time are recorded incorrectly.

- Set the correct date and time.

The F value and shutter speed flash when you press and hold the shutter button halfway down.

- The exposure is incorrect. Correct the exposure (page 30).

The image is too dark.

- You are shooting a subject with a light source behind the subject. Select the metering mode (page 30) or adjust the exposure (page 30).
- When the brightness of the screen is too low, adjust the brightness of the LCD backlight (page 45).

The image is too bright.

- You are shooting a spotlighted subject in a dark location such as on a stage. Adjust the exposure (page 30).
- When the brightness of the screen is too high, adjust the brightness of the LCD backlight (page 45).

The image colors are not correct.

- Adjust the [P.Effect] to [Off] (page 33).

Vertical streaks appear when you are shooting a very bright subject.

- The smear phenomenon is occurring. This phenomenon is not a malfunction.

Noise appears in the image when you view the screen in a dark place.

- The camera is attempting to increase the visibility of the screen by temporarily brightening the image under conditions of low illumination. There is no effect on the recorded image.

The eyes of the subject come out red.

- Set [Red Eye Reduction] in the  (Setup) menu to [On] (page 41).
- Shoot the subject at a distance closer than the recommended shooting distance using the flash.
- Light the room and shoot the subject.

Dots appear and remain on the screen.

- This is not a malfunction. These dots are not recorded (page 7).

Cannot shoot images in succession.

- The internal memory or “Memory Stick Duo” is full. Delete unnecessary images.
- The battery level is low. Install charged batteries or replace with new ones.

Viewing images

Refer to “Computers” (page 77) in conjunction with the following items.

Your camera cannot play back images.

- Set the mode dial to  (page 26).
- The folder/file name has been changed on your computer (page 57).
- When an image file has been processed by a computer or when the image file was recorded using a model other than that of your camera, playback on your camera is not guaranteed.
- The camera is in USB mode. Delete the USB connection (page 55).

The date and time are not displayed.

- Turn on display with  Screen status button (page 22).

The image appears rough right after playback starts.

- The image may appear rough right after playback starts due to image processing. This is not a malfunction.

The image does not appear on the TV screen.

- Check [Video Out] to see if the video output signal of your camera is set to the color system of your TV (page 47).
- Check whether the connection is correct (page 70).
- The USB cable is connected to the USB jack. Disconnect it according to the correct procedure (page 55).

The image does not appear on the screen.

- If the A/V cable is connected, disconnect it (page 70).

No recorded sound is played back with movies on the camera.

- The sound recorded with movies can only be played back on TV, PC.

Deleting/Editing images**Your camera cannot delete an image.**

- Cancel the protection (page 36).
- You are using the "Memory Stick Duo" with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position (page 86).

You have deleted an image by mistake.

- Once you have deleted an image, you cannot restore it. We recommend that you protect images (page 35), or use the "Memory Stick Duo" with the write-protect switch and set the switch to the LOCK position (page 86) to prevent accidental erasure.

The resizing function does not work.

- You cannot resize movies.

You cannot display a DPOF (Print order) mark.

- You cannot display DPOF (Print order) marks on movies.

Computers**You do not know if the OS of your computer is compatible with the camera.**

- Check "Recommended computer environment" on page 49 for Windows, and page 62 for Macintosh.

Your computer does not recognize your camera.

- Turn on the camera.
- When the battery level is low, install the batteries with enough capacity, replace the batteries with new ones, or use the AC Adaptor (not supplied).

- Use the supplied USB cable.
- Disconnect the USB cable, and connect it again firmly. Make sure that “USB Mode Mass Storage” is displayed (page 52).
- Set [USB Connect] to [Mass Storage] in the  (Setup) menu (page 46).
- Disconnect all equipment other than the camera, the keyboard and the mouse from the USB jacks of your computer.
- Connect the camera directly to your computer without passing through a USB hub or other device (page 52).
- The software (supplied) is not installed. Install the software (page 50).
- Your computer does not properly recognize the device because you connected the camera and your computer with the USB cable before you installed the software (supplied). Delete the erroneously recognized device from your computer, then install the software (see the next item).

The “Removable disk” icon does not appear on the computer screen when you connect your computer to the camera.

- Follow the procedure below to install the USB driver again. The following procedure is for a Windows computer.

- 1 Right-click [My Computer] to display the menu, then click [Properties].
The “System Properties” screen appears.
- 2 Click [Hardware] → [Device Manager].
 - For Windows Me, click the [Device Manager] tab.
The “Device Manager” appears.
- 3 Right-click [ Sony DSC], then click [Uninstall] → [OK].
The device is deleted.
- 4 Install the software (page 50).
The USB driver is also installed automatically.

You cannot copy images.

- Connect the camera and your computer correctly. Make the USB connection by properly connecting the camera with your computer (page 52).
- Follow the designated copy procedure for your OS (pages 52, 62).
- When you shoot images with a “Memory Stick Duo” formatted by a computer, you may not be able to copy the images to a computer. Shoot using a “Memory Stick Duo” formatted by your camera (page 43).

After making a USB connection, “Cyber-shot Viewer” does not start automatically.

- Start “Media Check Tool” (page 58).
- Make the USB connection after the computer is turned on (page 52).

The image cannot be played back on a computer.

- If you are using “Cyber-shot Viewer,” refer to the Help.
- Consult the computer or software manufacturer.

The image and sound are interrupted by noise when you view a movie on a computer.

- You are playing back the movie directly from the internal memory or the “Memory Stick Duo”. Copy the movie to the hard disk of your computer, then play back the movie from the hard disk (page 51).

You cannot print an image.

- Check the printer settings.

Images once copied to a computer cannot be viewed on the camera.

- Copy them to a folder recognized by the camera, such as “101MSDCF” (page 56).
- Operate correctly (page 57).

“Cyber-shot Viewer”**Images are not displayed correctly.**

- Make sure the folder of the images is registered in “Viewed folders”. If the images are not displayed even if the folder is registered in “Viewed folders”, update the database (page 61).

You cannot find images imported.

- Look in the “My Pictures” folder.
- If you have changed the default settings, refer to “Changing the “Folder to be imported”” on page 61 and check what folder is used for importing.

You want to change the “Folder to be imported”.

- Access the “Import Settings” screen to change “Folder to be imported”. You can specify a different folder after using “Cyber-shot Viewer” to register it in “Viewed folders” (page 61).

All imported images are displayed on the calendar with the date January 1.

- The date has not been set on the camera. Set the date on the camera.

“Memory Stick Duo”**Cannot insert a “Memory Stick Duo”.**

- Insert it in the correct direction.

Cannot record on a “Memory Stick Duo”.

- You are using the “Memory Stick Duo” with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position (page 86).
- The “Memory Stick Duo” is full. Delete unnecessary images.

Cannot format a “Memory Stick Duo”.

- You are using the “Memory Stick Duo” with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position (page 86).

You have formatted a “Memory Stick Duo” by mistake.

- All the data on the “Memory Stick Duo” is deleted by formatting. You cannot restore it. We recommend that you set the write-protect switch on the “Memory Stick Duo” to the LOCK position to prevent accidental erasure (page 86).

“Memory Stick PRO Duo” is not recognized by a computer with a Memory Stick slot.

- Check whether the computer and the card reader support “Memory Stick PRO Duo”. Users of computers and card readers made by companies other than Sony should contact those manufacturers.
- If “Memory Stick PRO Duo” is not supported, connect the camera to the computer (page 52). The computer recognizes the “Memory Stick PRO Duo”.

Internal memory

The camera or your computer cannot play back the data in the internal memory.

- There is a “Memory Stick Duo” inserted in the camera. Remove it.

Cannot record images using the internal memory.

- There is a “Memory Stick Duo” inserted in the camera. Remove it.

The free capacity of the internal memory does not increase even when you copy the data stored in the internal memory to a “Memory Stick Duo”.

- The data is not deleted after copying. Execute the [Format] command (page 42) to format the internal memory after copying the data.

Cannot copy the data stored in the internal memory to a “Memory Stick Duo”.

- The “Memory Stick Duo” is full. Check the capacity.

Cannot copy the data on the “Memory Stick Duo” or the computer to the internal memory.

- Data on a “Memory Stick Duo” or a computer cannot be copied to the internal memory.

Printing

Also see “PictBridge compliant printer” (as follows) in conjunction with the following items.

Images are printed with both edges cut off.

- When printing images using your own printer, try canceling the trimming or borderless settings. Consult the printer manufacturer as to whether the printer provides these functions or not.
- When having images printed at a digital print shop, ask the shop whether they can print the images without cutting off both edges.

PictBridge compliant printer

A connection cannot be established.

- The camera cannot be connected directly to a printer that is not compliant with the PictBridge standard. Consult the printer manufacturer as to whether the printer is compliant with PictBridge or not.
- Check that the printer is turned on and can be connected to the camera.
- Set [USB Connect] to [PictBridge] in the  (Setup) menu (page 46).
- Disconnect the USB cable and connect it again. If an error message is indicated on the printer, refer to the operating instructions supplied with the printer.

Cannot print images.

- Check that the camera and the printer are properly connected using the USB cable.
- Turn on the printer. For further information, refer to the operating instructions supplied with the printer.
- If you select [Exit] during printing, images may not print. Disconnect and connect the USB cable again. If you still cannot print your images, disconnect the cable, turn the printer off and then on, then connect the cable again.
- Movies cannot be printed.
- Images shot using cameras other than this camera or images modified with a computer may not be printed.

Printing is canceled.

- You disconnected the USB cable before the  (PictBridge Connecting) mark disappears.

Cannot insert the date or print images in the index mode.

- The printer does not provide these functions. Consult the printer manufacturer as to whether the printer provides these functions or not.
- The date may not be inserted in the index mode depending on the printer. Consult the printer manufacturer.

“---- -- --” is printed on the date-inserted part of the image.

- Images that do not have the recording data cannot be printed with the date inserted. Set [Date] to [Off] and print the image again (page 67).

Cannot select the print size.

- Consult the printer manufacturer as to whether the printer can provide the desired size.

Cannot print the image at the size selected.

- If you have changed the paper size after having the USB cable connected, then connect the printer again.
- The print setting of the camera differs from that of the printer. Change the setting of either the camera (page 67) or the printer.

Cannot operate the camera after canceling printing.

- Wait for a while as the printer is carrying out the cancellation. It may take some time depending on the printer.

Others**Your camera does not work.**

- Use the type of batteries you can use with this camera (page 88).
- The battery level is low (The  indicator appears). Install new batteries or charged Nickel-Metal Hydride batteries (not supplied).

The power is on, but the camera does not work.

- The built-in microcomputer is not working properly. Remove the batteries, and then, after one minute, insert the batteries and turn on the camera.

Cannot identify an indicator on the screen.

- See page 18.

The lens gets fogged.

- Moisture condensation has occurred. Turn off the camera and leave it for about an hour before using it (page 90).

The camera becomes warm when you use it for a long time.

- This is not a malfunction.

The lens does not move when you turn off the camera.

- The batteries are discharged. Install new batteries or charged Nickel-Metal Hydride batteries (not supplied) or use the AC Adaptor (not supplied).

The Clock Set screen appears when you turn on the camera.

- Set the date and time again.

Camera power is turned off automatically when you open the battery/“Memory Stick Duo” cover.

- This is not a malfunction. Turn off the camera before you open the battery/“Memory Stick Duo” cover.

Warning messages

Messages

If the following messages appear, follow the instructions.

Turn the power off and on again

- A problem with the lens has caused an error.



- The battery level is low. Install new ones or charged Nickel-Metal Hydride batteries (not supplied). Depending on the conditions of use or the type of battery, the indicator may flash even though there are still 5 to 10 minutes of remaining battery time left.

System error

- Turn the power off and then on again.

Internal memory error

- Turn the power off and then on again.

Memory Stick error

- Insert the “Memory Stick Duo” correctly.
- The inserted “Memory Stick Duo” cannot be used in your camera (page 86).
- The “Memory Stick Duo” is damaged.
- The terminal section of the “Memory Stick Duo” is dirty.

Memory Stick type error

- The inserted “Memory Stick Duo” cannot be used in your camera (page 86).

Format error

- Format the media again (pages 42, 43).

Memory Stick locked

- You are using the “Memory Stick Duo” with the write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position (page 86).

No memory space in internal memory

No memory space in Memory Stick

- Delete unnecessary images or files.

Read only memory

- Your camera cannot record or delete images on this “Memory Stick Duo”.

No file

- No images have been recorded in the internal memory.

No file in this folder

- No images have been recorded in this folder.
- You did not operate correctly when copying images from your computer (page 57).

Folder error

- A folder with the same first three digit number already exists on the “Memory Stick Duo” (For example: 123MSDCF and 123ABCDE). Select another folders, or create a new folder (page 43).

Cannot create more folders

- The folder with a name beginning with “999” exists on the “Memory Stick Duo”. You cannot create any folders if this is the case.

Cannot record

- The camera cannot record images in the selected folder. Select a different folder (page 44).

File error

- An error occurred while the image was playing back.

File protect

- Release the protection (page 36).

Image size over

- You are playing back an image of a size that cannot be played back on your camera.

Invalid operation

- You are trying to play back a file that is not compatible with the camera.

Enable printer to connect

- [USB Connect] is set to [PictBridge], however the camera is connected to a non-PictBridge compliant device. Check the device.
- The connection is not established. Disconnect the USB cable, and connect it again. If an error message is indicated on the printer, refer to the operating instructions supplied with the printer.

Connect to PictBridge device

- You tried to print images before the printer connection was established. Connect to a PictBridge compliant printer.

No printable image

- You tried to execute [DPOF image] without placing a DPOF (Print order) mark on the image(s).
- You tried to execute [All In This Folder] while a folder that holds only movies was selected. You cannot print movies.

Printer busy

Paper error

No Paper

Ink error

Low Ink

No Ink

- Check the printer.

Printer error

- Check the printer.
- Check if the image you want to print is corrupted.



- The data transmission to the printer may not be completed yet. Do not disconnect the USB cable.

Processing

- The printer is canceling the current print job. You cannot print until it is finished. This may take time, depending on the printer.



On the “Memory Stick”

A “Memory Stick” is a compact, portable IC recording medium. The types of “Memory Stick” that can be used with this camera are listed in the table below. However, proper operation cannot be guaranteed for all “Memory Stick” functions.

“Memory Stick” type	Recording/ Playback
Memory Stick (without MagicGate)	—
Memory Stick (with MagicGate)	—
Memory Stick Duo (without MagicGate)	○
Memory Stick Duo (with MagicGate)	○* ¹ ²
MagicGate Memory Stick	—
MagicGate Memory Stick Duo	○ ¹
Memory Stick PRO	—
Memory Stick PRO Duo	○* ¹ ²

*¹ “Memory Stick Duo”, “MagicGate Memory Stick Duo” and “Memory Stick PRO Duo” are equipped with MagicGate functions.


MagicGate is copyright protection technology that uses encryption technology. Data recording/playback that requires MagicGate functions cannot be performed with this camera.

*² Supports high-speed data transfer using a parallel interface.

- A “Memory Stick Duo” formatted with a computer is not guaranteed to operate with this camera.
- Data read/write speeds differ depending on the combination of the “Memory Stick Duo” and the equipment used.

Notes on using a “Memory Stick Duo” (not supplied)

- You cannot record, edit or delete images if you slide the write-protect switch to LOCK with a fine-tipped object.

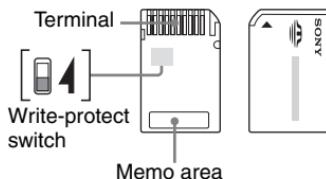

Some “Memory Stick Duo” cards do not have a write-protect switch. On “Memory Stick Duo” with this switch, the position and shape may vary depending on the “Memory Stick Duo”.

- Do not remove the “Memory Stick Duo” while reading or writing data.
- Data may be corrupted in the following cases:
 - When the “Memory Stick Duo” is removed or the camera is turned off during a read or write operation
 - When the “Memory Stick Duo” is used in locations subject to static electricity or electrical noise
- We recommend backing up important data.
- Do not press down hard when you write down on the memo area.
- Do not attach a label on the “Memory Stick Duo” itself nor on a Memory Stick Duo Adaptor.
- When you carry or store the “Memory Stick Duo”, put it in the case supplied with it.
- Do not touch the terminal section of the “Memory Stick Duo” with your hand or a metal object.
- Do not strike, bend or drop the “Memory Stick Duo”.
- Do not disassemble or modify the “Memory Stick Duo”.
- Do not expose the “Memory Stick Duo” to water.
- Do not leave the “Memory Stick Duo” within the reach of small children. They might accidentally swallow it.

- Do not use or store the “Memory Stick Duo” under the following conditions:
 - High temperature locations such as the hot interior of a car parked in direct sunlight
 - Locations exposed to direct sunlight
 - Humid locations or locations with corrosive substances present

Notes on using the Memory Stick Duo Adaptor (not supplied)

- To use a “Memory Stick Duo” with a “Memory Stick” compliant device, be sure to insert the “Memory Stick Duo” into a Memory Stick Duo Adaptor. If you insert a “Memory Stick Duo” into a “Memory Stick” compliant device without a Memory Stick Duo Adaptor, you might not be able to remove it from the device.
- When inserting a “Memory Stick Duo” into a Memory Stick Duo Adaptor, make sure the “Memory Stick Duo” is inserted facing in the correct direction, then insert it all the way in. Incorrect insertion may result in a malfunction.
- When using a “Memory Stick Duo” inserted into a Memory Stick Duo Adaptor with a “Memory Stick” compliant device, make sure that the Memory Stick Duo Adaptor is inserted facing the correct direction. Note that improper use may damage the equipment.
- Do not insert a Memory Stick Duo Adaptor into a “Memory Stick” compliant device without a “Memory Stick Duo” attached. Doing so may result in malfunction of the unit.

Notes on using “Memory Stick PRO Duo” (not supplied)

“Memory Stick PRO Duo” with a capacity up to 2 GB have been confirmed to operate properly with this camera.

On the batteries

Batteries you can and cannot use with your camera

Battery type	supplied	supported	rechargeable
R6 (size AA) alkaline batteries	○	○	—
HR 15/51:HR6 (size AA) Nickel-Metal Hydride batteries*	—	○	○
ZR6 (size AA) Oxy Nickel Primary Battery	—	○	—
Manganese batteries**	—	—	—
Lithium batteries**	—	—	—
Ni-Cd batteries**	—	—	—

* NH-AA-2DB twin pack, etc.

** Operating performance cannot be ensured if voltage drops or other problems are caused by the nature of the battery.

On alkaline batteries/Oxy Nickel Primary Battery

- Alkaline batteries/Oxy Nickel Primary Battery are not rechargeable.
- Alkaline batteries/Oxy Nickel Primary Battery have a shorter life compared to the Nickel-Metal Hydride batteries. For this reason, the power may turn off even though the battery remaining indicator shows sufficient battery life remaining.
- Battery performance differs greatly depending on the manufacturer and the type of battery, and in some cases the battery life may be extremely short. This is especially true at low temperatures, and you may not be able to shoot at temperatures below 5°C (41°F).
- Do not mix new and old batteries.
- The battery remaining indicator may not display the correct information when using alkaline batteries/Oxy Nickel Primary Battery.
- Due to characteristics of alkaline batteries/Oxy Nickel Primary Battery, there is a large difference between the available shooting time and the available playback time. For this reason, the camera may turn off with the lens portion extended when you switch the mode dial. In this case, replace the batteries with new ones. Using the Nickel-Metal Hydride batteries allows you to shoot for longer periods of time.

On Nickel-Metal Hydride batteries

- Do not peel off the external seals or damage the batteries. Never use batteries from which the seals have been partially or completely removed, or batteries that have been split in any way. These may cause leakage, explosion, or heat-up of the battery, and personal scald or injury may be caused. These may cause a malfunction of the battery charger.
- Do not carry or store the Nickel-Metal Hydride batteries with metallic objects. Since metallic objects may short the + and - ends, resulting in the risk of heating or fire.
- If the poles of the Nickel-Metal Hydride batteries are dirty, the batteries may not charge properly. Wipe them with a dry cloth, etc.
- At the time of purchase, or when the Nickel-Metal Hydride batteries have not been used for a long time, they may not full charge. This is typical of this type of battery, and is not a malfunction. If this happens, repeatedly using up the batteries fully, and then recharging them should correct the problem.
- If you recharge Nickel-Metal Hydride batteries before fully using up the existing charge, the low battery warning may be displayed sooner than expected. This is called the "memory effect."* If this problem occurs, charging the batteries only after using up the existing charge will correct it.
* The "memory effect" – the situation in which the capacity of the battery is temporarily lowered.
- To use up the batteries completely, put the camera in the slide show mode (page 36) and leave it that way until the batteries are used up.
- Do not mix new and used batteries.
- Do not expose the battery to water. The battery is not water-resistant.

Effective use of Nickel-Metal Hydride batteries

- Batteries are discharged even when they are not used. We recommend you charge the batteries just before using them.
- Battery performance decreases in low-temperature surroundings, and the battery life is shortened under such circumstances. To use the battery longer, we recommend you keep the battery in its case in a pocket close to your body to warm it, and insert it in your camera just before you start shooting.
- If the poles of the batteries and the terminals on the battery cover of the camera are dirty, the battery life may be extremely shortened.
Occasionally wipe them with a dry cloth, etc. to keep them clean.
- If you shoot a lot using the flash and the zoom, the battery power will be used up faster.
- We recommend having spare batteries handy for two or three times the expected shooting time, and try test shooting before actually using the camera.

Battery life of Nickel-Metal Hydride batteries

- The battery life is limited. The battery capacity decreases little by little as you use it more and more, and as time passes. When the battery operating time seems to have been considerably shortened, a probable cause is that the batteries have reached the end of their life.
- The battery life varies depending on storage, operating conditions, and environment, and is different for each battery.

Precautions

■ Do not use/store the camera in the following places

- In an extremely hot, dry or humid place

In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.

- Under direct sunlight or near a heater

The camera body may become discolored or deformed, and this may cause a malfunction.

- In a location subject to rocking vibration

- Near strong magnetic place

- In sandy or dusty places

Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

■ On cleaning

Cleaning the LCD screen

Wipe the screen surface with an LCD cleaning kit (not supplied) to remove fingerprints, dust, etc.

Cleaning the lens

Wipe the lens with a soft cloth to remove fingerprints, dust, etc.

Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. Do not use the following as they may damage the finish or the casing.

- Chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide, etc.
- Do not touch the camera with the above on your hand.
- Do not leave the camera in contact with rubber or vinyl for a long time.

■ On operating temperatures

Your camera is designed for use under the temperatures between 0°C and 40°C (32°F and 104°F). (In case of alkaline batteries/Oxy Nickel Primary Battery, the temperatures are between 5°C and 40°C (41°C and 104°C).) Shooting in extremely cold or hot places that exceed this range is not recommended.

■ On moisture condensation

If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.

Moisture condensation occurs easily when:

- The camera is brought from a cold location such as a ski slope into a warmly heated room.
- The camera is taken from an air-conditioned room or car interior to the hot outdoors, etc.

How to prevent moisture condensation

When bringing the camera from a cold place to a warm place, seal the camera in a plastic bag and allow it to adapt to conditions at the new location over about an hour.

If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you attempt to shoot with moisture remaining inside the lens, you will be unable to record clear images.

■ On the internal rechargeable battery

This camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about one week it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera.

However, even if this rechargeable battery is not charged, you can still use the camera as long as you do not record the date and time.

Charging method of the internal rechargeable battery

Insert batteries with enough capacity in the camera, or connect the camera to a wall outlet (wall socket) using the AC Adaptor (not supplied), and leave the camera for 24 hours or more with the power off.



Index

A	
A/V cable	70
Aperture	13
Auto Focus.....	12
Auto Review	41
AVI.....	56
B	
B & W	33
IM內容此頁未出現此關鍵字, 需要加入嗎?	
Blur.....	12
Brightness of image	13
Burst.....	32
C	
Camera.....	40
CD-ROM	50
Change REC. Folder.....	44
Cleaning.....	90
Clock Set.....	47
Cloudy	31
Color	14
Compression ratio.....	15
Computer	48
Copying images	51, 62
Macintosh	62
Recommended environment.....	49, 62
Software.....	50, 58
Viewing image files stored on a computer with your camera	57
Windows.....	48
Connecting	
Computer	52
Printer	66
TV	70
Copy.....	44
D	
Copying images to your computer	51
Create REC. Folder	43
Cyber-shot Viewer.....	58
D	
Date	41
Date/Time.....	41
Day&Time.....	41
Daylight.....	31
Delete	17
Format	42, 43
Digital Zoom	40
DPOF	68
E	
Enlarging an image	40
EV	30
Exposure.....	13
Extension.....	57
F	
File name	56
File Number	46
File storage destination	56
Fine.....	32
Fluorescent	31
Focus	12
Folder	34
Changing	44
Creating	43
Format	42, 43
I	
Identifying parts	16
Image file storage destinations and file names	56
Image quality.....	15, 32
Image size	15
Incandescent.....	31
Index mode printing	65
J	
JPG	56
L	
Language	45
LCD Backlight.....	45
LCD Screen	see "Screen"
M	
Macintosh computer	62
Recommended environment.....	62
Mass Storage	46
"Memory Stick Duo"	86
Format	43
Number of images/ recording time	23
Write-protect switch.....	86
Memory Stick Tool	43
Menu	28
Items	29
Shooting	30
Viewing	34
Metering Mode	30
Mode	32
Moisture condensation.....	90
Monochrome.....	33
Multi-pattern metering.....	30
N	
NTSC	47

Number of images/Recording time	23	Screen	
		Changing the display	22
		Indicator	18
		LCD Backlight	45
O		Sepia	33
Optical zoom	40	Setup	33, 38, 39
OS	49, 62	Camera	40
Overexposure	13	Internal Memory Tool	42
P		Memory Stick Tool	43
P.Effect	33	Setup 1	45
PAL	47	Setup 2	46
PC	see "Computer"	Setup 1	45
PFX	33	Setup 2	46
PictBridge	65	Sharpness	33
Picture effect	33	Shooting menu	30
Pixel	15	Shooting movies	26
Playback	see "Viewing"	Single-image mode	
Playback/Edit	26	printing	65
Precautions	90	Slide	36
Precision digital zoom	40	Smart zoom	40
Pressing halfway down	12	Software	58
Print	64	Spot metering	30
Index mode	65	Spot metering cross hairs	30
Single-image mode	65	Standard	32
Print order mark	68		
Printing at a shop	68	T	
Printing directly	65	Tripod receptacle	16
Program auto shooting mode	26	Troubleshooting	72
Protect	35	TV	70
PTP	46		
R		U	
REC Mode	32	Underexposure	13
Red Eye Reduction	41	USB cable	21
Resize	37	USB Connect	46
Rotate	38		
S		V	
Saturation	33	Video Out	47
Scene Selection	27	Viewing	
		Movie	58
		Still image	58

Trademarks

- **Cyber-shot** is trademarks of Sony Corporation.
- “Memory Stick”, , “Memory Stick PRO”, **MEMORY STICK PRO**, “Memory Stick Duo”, **MEMORY STICK DUO**, “Memory Stick PRO Duo”, **MEMORY STICK PRO DUO**, “MagicGate”, and **MAGIC GATE** are trademarks of Sony Corporation.
- Microsoft, Windows and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks or registered trademarks of Apple Computer, Inc.
- Intel, MMX, and Pentium are trademarks or registered trademarks of Intel Corporation.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the TM or [®] marks are not used in all cases in this manual.

表4記載をご確認ください。

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>