ENGLISH

iSOUND


Includes

DuraSquared, charge cable, audio cable and user guide

Please read and follow this user guide thoroughly before using the DuraSquared.

Bluetooth Speaker

ISOUND-694X

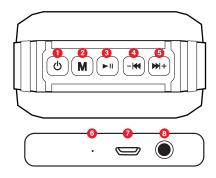

- 1. Power button
- 2. Mode button
- 3. Play/Pause
- 4. Volume down/Track back
- 5. Volume up/Track forward
- 6. Reset button
- 7. Charge port
- 8. AUX port

Specifications

Driver size: 52mm x 1 Output: 3W x 1 (3W)

Bluetooth: 3.0, up to 30 feet transmission range

Battery: 600mAh

Frequency response: 150 Hz - 20 kHz Play time: Up to 3 hours based on usage

Charge time: 2 hours Impedance: 4Ω

Water resistant IPX5 water level rating*

Button functions

NOTE: Button functions may vary per device.

Power button

- Press and hold for at least 3 seconds to power on the speaker.
- Press and hold for at least 3 seconds to power off the speaker. You will hear a tone when the speaker is shutting down.

Mode button

NOTE: The speaker will default to Bluetooth® mode when turned on. The AUX cable must be inserted in order to use the mode button.

 Press and release to change from Bluetooth® mode to AUX mode.

Play/Pause button

 Press and release to pause a track; press and release again to play the track.

Volume up/Track forward button

- Press and release to go to the next track.
- Press and hold to raise the volume.

Volume down/Track back button

- Press and release to go to the previous track.
- Press and hold to lower the volume.

NOTE: The volume can be adjusted through both your speaker and audio device. Device results may vary.

Charging your DuraSquared

NOTE: Make sure the DuraSquared is fully charged before using it the first time.

- **1.** Pull up the rubber piece protecting the charge port on the side of the DuraSquared.
- **2.** Gently plug the Micro-USB end of the included charge cable into the charge port.
- **3.** Plug the USB-A end of the cable into a powered USB port, such as a computer, laptop or USB AC adapter (not included).
- **4.** The LED indicator on the front of the DuraSquared will glow solid red when charging.
- **5.** Once the speaker is fully charged, the charge LED indicator will turn off.

NOTE: You must replace the rubber piece securely in order to prevent any water from entering the speaker.

Connecting via Bluetooth® (first time set-up)

- **1.** Power on the speaker by pressing and holding the power button for at least 3 seconds. You will hear a tone to indicate that it is in Bluetooth® mode.
- 2. Open the settings on your Bluetooth® device (Bluetooth® must be enabled).
- 3. Select DuraSquared from the devices list.
- **4.** Once paired, you will hear a tone and the LED indicator on the front of the DuraSquared will turn solid blue.

NOTE: Your device will automatically find and pair with the DuraSquared after the initial pairing. If your device does not automatically pair, turn off the speaker and repeat steps 1-4.

Connecting via audio cable (AUX)

- **1.** Power on the speaker by pressing and holding the power button for at least 3 seconds. You will hear a tone to indicate that it is in Bluetooth® mode.
- 2. Plug one end of the included audio cable into the AUX port on the side of the speaker. You will automatically enter AUX IN mode and the LED indicator on the front of the DuraSquared will slowly blink blue.
- 3. Plug the other end of the cable into your audio device.
- **4.** While the cable is inserted, you can switch to Bluetooth® mode using the Mode button.

NOTE: AUX IN mode only works if you have an audio cable inserted.

*Water Resistant Information and Warnings

IPX5 Water Level Rating

The DuraSquared cannot be fully submerged under water, but is resistant to water splashed from any direction. To ensure the DuraSquared is prepared for use against splashing water, remove all cables and tightly close the rubber piece that protects the charge port and AUX port, otherwise water may seep into these ports and damage the speaker.

Power saving mode

The DuraSquared will enter power saving mode to conserve battery when the speaker is paused or when there is no Bluetooth® connection for more than 10 minutes. Turn the speaker off and back on to exit power saving mode.

Troubleshooting

Issue: My speaker doesn't turn on. **Solution:** Try the following:

• Make sure that you fully charge your speaker before use.

 Power on the speaker by pressing and holding the power button.

Issue: My speaker isn't charging.

Solution: Try the following:

- Make sure that the charge port on the speaker is free from dust and debris.
- Make sure that you are using the charge cable that came with your speaker.
- Make sure there is power coming from the power source.

Issue: My speaker isn't syncing to Bluetooth®.

Solution: Try the following:

- Make sure that the Bluetooth® setting on your device is turned on.
- Check to see if another user is connected to the speaker.
- Refer to the user guide of your device for Bluetooth® syncing instructions.

Issue: My speaker volume is turned all the way up, but the volume is still very low.

Solution: Try the following:

- Make sure your speaker and audio device are charged.
- Make sure the volume is turned up on your device and speaker.

Issue: I can't play music through AUX IN mode.

Solution: Try the following:

- Make sure you are using the included audio cable.
- Make sure you are in AUX IN mode by pressing the mode button. When in AUX IN mode, the LED indicator will slowly blink blue.

Important safety precautions

• Incorrect use or incompatibility with your device may result in

reduced battery performance or damage to your device.

- Do not attempt to disassemble product.
- Tampering or removing the battery can result in damage to your product, void of warranty, and could cause injuries.
- Do not allow this product to have contact with liquids.
- Store and operate between 32°F 113°F.
- Do not place this product near a heat source or flame.
- Do not throw or shake.
- Do not operate if it has been subjected to shock or damage.
- Do not crush or puncture the battery.
- Recharge the battery every 3 months when not in use to keep battery in best condition.
- Use soft cloth to clean the exterior. Do not use harsh chemicals or strong cleaning solvents.
- The internal battery must be recycled or disposed of properly.
 Contact your local waste management office for information on the proper disposal or recycling.

FCC information

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This equipment may not cause harmful interference.
- 2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warranty information

All iSOUND products come with a limited warranty and have been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, iSOUND warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs, iSOUND, at its option, will repair or replace the product purchased at no charge or refund the original purchase price. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion

of iSOUND.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

Service information

For service on any defective product under the 120-day warranty policy, please contact Consumer Support to obtain a Return Authorization Number. SOUND reserves the right to require the return of the defective product and proof of purchase.

NOTE: iSOUND will not process any defective claims without a Return Authorization Number.

Consumer support hotline

877-999-3732 (U.S. and Canada only) or 310-222-1045 (International)

Consumer support email

support@isound.com

Website

www.isound.com

Save a tree, register online

iSOUND is making the eco-friendly choice to have all products registered online. This saves the printing of physical paper registration cards. All the information you need to register your recent iSOUND purchase is available at:

www.isound.com/product-registration