H001

**User Manual** 

#### Introduction

Thank you for purchasing the H001.

Before using it for the first time, be sure to read the Basic Manual (this PDF manual) so as to know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

#### Printed Manuals for the H001 (Japanese)

The H001 comes with a Basic Manual and an Instruction Manual.

## For information about basic operation

**Basic Manual**Refer to this English
PDF manual.

## For detailed information about each function

**Instruction Manual** English version not available.

The following information is also available on the au website.

- To download the Basic Manual or Instruction Manual (http://www.au.kddi.com/torisetsu/index.html)
- To access a keyword searchable au On-Line Manual (http://www.au.kddi.com/manual/index.html)

You can also access the au On-Line Manual using EZweb.

#### EZweb Access

au one Top

- →auお客さまサポート (au Customer Support)
- →調べる (Information)
- →オンラインマニュアル (On-Line Manual)

If you have any trouble with your cellphone, please visit the auお客さまサポート (au Customer Support) 故障診断 (Malfunction Diagnosis) web site and find out your problem before calling for professional repairs.

- From H001→au one Top→auお客さまサポート (au Customer Support)→調べる (Information) →オンラインマニュアル (On-Line Manual)→故障診断Q&A (Malfunction Diagnosis Q&A)
- From PC -- http://www.kddi.com/customer/service/au/trouble/kosho/index.html

#### 000m

The typeface, fonts, and colors of the texts on the screens shown in this manual may differ from the actual contents. Also, certain icons and the scroll bars may be omitted.

## **Cellphone Etiquette**

## Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.

## Some locations do not allow the use of cellphones.

- Using a cellphone while driving is dangerous and prohibited by the Traffic Control Law.
- Using a cellphone inside of an aircraft is prohibited by the law. Be sure to turn off your cellphone before takeoff.



## Watch out where you use your cellphone, and keep your voice down.

- Do not make calls at cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ringtone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain permissions first.

## Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities prohibiting the use or possession of cellphones.



## **Cellphone Basics**

## **Features**

#### Camera

Shoot photos and record movies, and send them by e-mail.



#### **EZ Navi**

EZ Navi Walk,
Passenger Seat Navi,
Evacuate Navi and
Security Navi allow you
to get various kinds of
location information.
They are all built-in
functions.

#### **EZ FeliCa**

Use the cellphone for shopping by using electronic money, or use it as member's cards, point cards, and so on.

#### au Media Tuner

Enjoy using Television (1Seg) and EZ Channel-Plus.



## **Security Setup**

Select either "Safety Buzzer" or "HOT DIAL" as reliable setting function.



#### Mail

Send mail messages to other cellphones or to PCs.



#### **EZweb**

Download "Chaku-Uta®"/other data or access sites.



#### ाणि ।

For other useful functions, see page 86.

### **Manner Mode and Answer Memo**

#### **Manner Mode**

Use Manner Mode to turn off the ringtone so as not to bother others around you.



While the standby screen is displayed, hold down \(\text{77-}\) for at least one second.

#### **Answer Memo**

If you cannot answer a call, Answer Memo plays an answering message and records the caller's message.



While the standby screen is displayed, hold down for at least one second.

## **Checking Power, Signal Strength, and Battery Level**

#### Normally leave the phone turned on.



The phone needs to be turned on to make and receive calls.

Hold down for at least 2.5 seconds to turn on H001. After a while, H001 turns on with tone and the standby screen appears.

## You cannot talk on the phone if it is unable to receive a signal.

Signal strength is low in some areas, even if they are within the service area.

indicates the current signal strength.

### Keep an eye on the battery level.

The phone may not function properly if battery power is low.



indicates the current battery level.

## Never use your cellphone while driving!

Do not use the cellphone while driving a car/motorcycle/bicycle. It may cause a traffic accident. Use of the cellphone while driving a car/motorcycle is forbidden by the law. Use of the cellphone while driving a bicycle may be punished by the law too.



X Reading mail or looking at the display.



X Holding a cellphone in your hand to talk.

traveling

## Turn off your cellphone or use Drive Mode while driving.

#### **Drive Mode**

In Drive Mode, the phone will play the message "ただいま移動中ですので電話に出ることができません。…" (I am traveling and unable to answer the phone right now...), and then ask the caller to leave a message using Answer Memo.

While the standby screen is displayed, press  $\sqrt[2]{f}$ , and press  $\sqrt[2]{f}$  (Drive) to turn on Drive Mode.

## **Beware of spam and One-ring Calls!**

#### If you get spam

You can set up mail filters to block specific mail or spoof mail.

The following are the main features your cellphone uses to block spam.

- · Blocking of "未承諾広告※" (unsolicited advertisement) mail
- · Blocking of specific mail
- · Blocking of spoof mail



### **Beware of One-ring Calls!**

A "One-ring Call" (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

If H001 received a "One-ring Call," the **!!!** icon appears at the head of an incoming history.

## **Disaster Message Board Service**

#### **Disaster Message Board**

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering the safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the "災害用伝言板" (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- ◆ After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Checking the safety information


- Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.\*\*
  - \*\* Disaster Message Board information can be accessed from another type of cellphone, PHS, or PC at http://dengon.ezweb.ne.jp/.

Access method 『 ▶ ▶ ▶ au one Top ▶ ▶ 災害用伝言板

(Disaster Message Board)

http://dengon.ezweb.ne.jp/



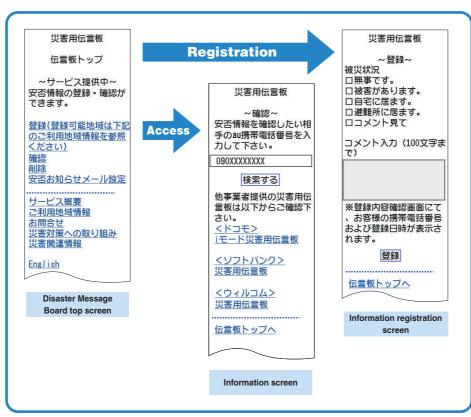

- $\ensuremath{\,\%\,}$  Registration contents are retained for up to 72 hours.
- ※ You can register up to 10 entries per phone number. Registering a new entry while there are already 10 registered entries, automatically overwrites the oldest entry.
- \* You can view a Disaster Message Board demonstration at:

■ → au one Top → auお客さまサポート → 災害用伝言板(デモ版)

(au Customer Support) (Disaster Message Board (Demo))

※ To view the Disaster Message Board in English, select the "English" option on the Disaster Message Board top screen.

## Contents

	Making a Call	
	Making an International Call	
Cellphone Etiquette 1	Answering a Call	
Mind your manners!1	Redialing (Outgoing Histories/Incoming Histories)	
Willia your mariners:	One-ring Calls	
	Changing the Ringtone	
Cellphone Basics 2	Adjusting the Ringtone Volume	
Features2	Adjusting the Earpiece Volume during a	a
Manner Mode and Answer Memo3	Call	
Checking Power, Signal Strength, and	Turning On Manner Mode	35
Battery Level3	Turning On Answer Memo	36
Never use your cellphone while driving!4	Playing an Answer Memo	37
Beware of spam and One-ring Calls!5		
Disaster Message Board Service6	Using Overseas	38
	Setting Area	38
Contents 8	Calling to Japan from Overseas	
Ready 10	Inputting Characters	40
Checking the Contents of the Package10	Inputting an E-mail Address	
Names of Parts11	Inputting Pictograms	
Charging the Battery Pack	,	
Turning On Power14	Address Book	42
Initial Values14	Address Book	43
Security Code and Passwords15	Registering an Address Book	43
Selecting English as the Display Language	Editing an Address Book Record	45
16	Adding Outgoing or Incoming History	
Operation Basics18	Data to the Address Book	
Display Indicators	Dialing from the Address Book	47
Main Menu		
Positions of H001	Pair Function	48
Wide open position features23 Initializing E-mail and EZweb24		
Looking Up Your Current Phone Number	Registering a Pair Partner	
and E-mail Address25	Making a Phone Call or Sending Mail to Pair Partner	
Changing Your E-mail Address26	rali ratitiei	49
	Mail	50
	Using E-mail	
	Using C-mail	
	Creating and Sending E-mail Message Reading Received E-mail Messages	
	Reading an E-mail Message with an	54
	Attached Photo	55
	Replying to a Received E-mail Messag	
	Avoiding Spam	
	Creating and Sending C-mail Message	s58
	Reading Received C-mail Messages	

Phone Call

28

Camera	61 Other Fund		
Using the Camera	63	Security Setup Feature	
Viewing Photos  Attaching a Photo to an E-mail Messa		<b>Troubleshooting</b>	
3		If you lose your H001	
EZweb	66		
Using EZweb	66	Index	
Displaying the au one Top Bookmarking Sites You Frequently Ac	ccess	FCC Notice	
Viewing a Bookmarked Site			
Checking Charges	69		
Downloading Chaku-Uta®/Chaku-Uta			
EZ News Flash/au one Gadg	et <b>72</b>		
EZ News Flash/au one Gadget Featu			
Setting EZ News Flash service	73		
EZ Navi	74		
EZ Navi Features	/4		
au Media Tuner	75		
au Media Tuner Features Configuring au Media Tuner Initial Se	ttings		
Using Television (1Seg)			
Exiting au Media Tuner			
Bluetooth	81		
Displaying Bluetooth Menu			
Registering Bluetooth® Devices Registering Wireless Devices and	81		
Hands-free Devices			
Using Bluetooth® Functions	83		
USB Connection	84		
Connecting to PCs	84		
Videophone	85		
Making a Videophone Call			
Answering a Videophone Call Putting a Videophone Call on Hold			

Other Functions	87
Security Setup Features	87
Troubleshooting	89
If you lose your H001	90
Index	91
FCC Notice	93

## Ready

Before using the H001, check the contents of the package coming with your H001. You should also familiarize yourself with basic operations, like how to charge the battery, how to turn the power on, etc.



CD-ROM

## **Checking the Contents of the Package**

H001




Battery pack (63HIUAA)




**TBD** 

- $\bigcirc$  The microSD<sup>TM</sup> memory card is not included.
- An AC adaptor is not included. It is up to you to purchase a common AC adaptor 01/02 (option).


## **Names of Parts**

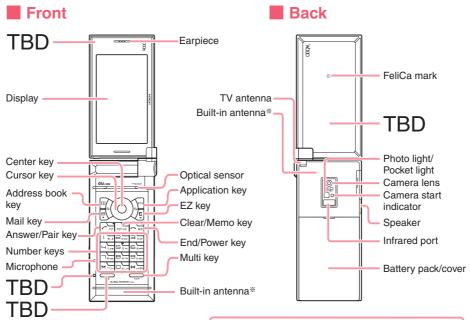


- %1 During a call, do not cover the microphone with your hands or your
- \*\*2 Take care to avoid covering the built-in antenna with your hand when making a call, using EZweb, using PC Site Viewer and when accessing GPS information
- while making a call or using EZweb will not affect reception quality.

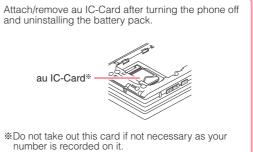

#### Side

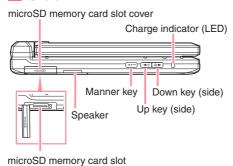

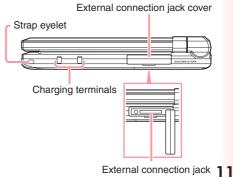

## **Charging the Battery Pack**

# **TBD**

# **TBD**

## **Turning On Power**

1

## Hold down for at least 2.5 seconds.

The message "Now Loading..." will appear on the display for a short while, followed by the standby screen.

Icon	TH	Tá	T	T	Court
Signal Strength	Strong	Medium	Weak	Very Weak	Out of Range

- Communication is not possible while the signal strength icon is (Out of Range).
- Communication may not be possible while the signal strength icon is \( \nabla \) (Very Weak).

Icon			=		3
Battery Level	High	Medium	Low	Fully Discharged	Charging

### **■** Turning off power

Hold down for at least 1.5 seconds.

## **Initial Values**

The following are the initial settings of the phone.

Lock No.	1234	Font Size	Input Size	Slightly Large
Caller ID	ON		Mail Display	Medium
Incm Caller Disp	Display		EZweb Display	Medium
Profile	Blank		Address Book	Slightly Large
			History	Slightly Large
			Phone No.	Slightly Large

## **Security Code and Passwords**

The H001 lets you use the numbers and passwords described below. Be sure to take steps so you do not to forget your numbers and passwords. You will need them to perform various operations and to access subscription services.

#### **Security Code**

	For remote operation of the Answering Service (Voice Mail) and Call     Transfer from a standard phone
Usage Examples	For inquiries, applications, and service modifications using au     Customer Service Center voice guidance, au website, and EZweb
	③ For changing e-mail settings
Initial Value	4-digit number you entered on your subscription contract

#### Lock No.

Usage Examples	For modifying various phone settings
Initial Value	1234

#### **EZ Password**


Usage Examples	For entering and canceling subscriptions for EZweb fee-based content
Initial Value	4-digit number you entered on your subscription contract

#### **Premium EZ Password**

Hoogo Evemples	① For entering and canceling subscriptions for EZweb fee-based content paid for using "まとめてau支払い" (au Collective Payment Service)
Usage Examples	② For purchasing products from EZweb sites that use "まとめてau支払い" (au Collective Payment Service)
Initial Value	4-digit number you entered on your subscription contract

## **Selecting English as the Display Language**

- While the standby screen is displayed, press .
- Use ❖ to select "機能" (Function), and then press ■ (選択) (Select).
- Press (画面表示) (Screen Display).




Press (English).

This selects English as the display language.

### CAUTION

Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the Data Folder are also displayed in year/month/day format.

## **Operation Basics**

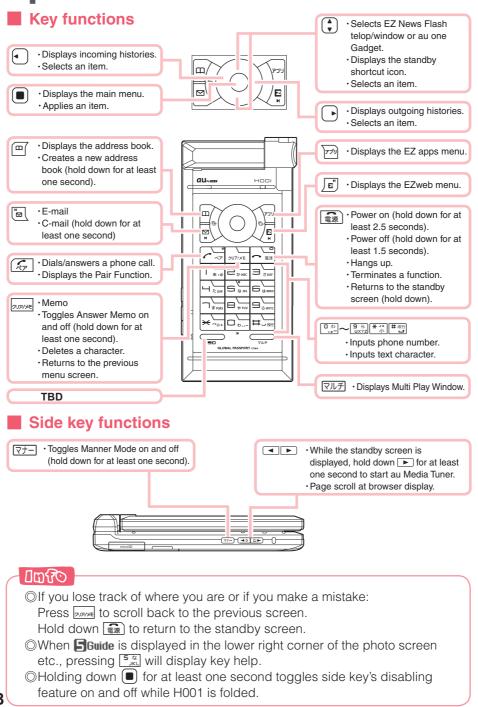

## **Display Indicators**

The following explains the main icons that appear on the standby screen.

721	Signal strength
	Battery level
SD?	The microSD™ memory card (commercial item) is inserted into the cellphone.
<u>~ v</u>	During phone call or LISMO Player/au Media Tuner on
A	EZ apps (BREW®) on
<b>Z</b> / <b>B</b>	EZweb browsing in progress/PC Site Viewer on
•	Unread mail
0/89 FRI 10810	Current time* The date and time are set automatically.
■ M5 🖆	Selects the user defined icons such as, calculator, Emission OFF Mode, and Notepad 01, etc. by pressing $\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$
Sir.	FeliCa Lock on
•	Manner Mode on
*	Ringtone off
<b>}</b> {	Vibrator on
ä	Answer Memo on
-	EZ News Flash telop
-	EZ News Flash window

<sup>\*</sup> A hyphen (-) may appear in place of the current date.

### **■** Key symbols used in this manual





The cursor key is described in this manual using the key symbols shown below.

a or w key:
or key:
^, , , • or ▶ key: �

## **Main Menu**

There are four initial main menus for H001. Pressing 
while the standby screen is displayed displays the main menu.

### ीणि रि

The menu structure depends on the type of the main menu.

## **TBD**

#### Using Soft Keys

Soft keys are the keys you use to execute the functions along with the bottom of the screen. The table below explains how to assign the soft keys to the on-screen functions. Note that the function of each soft key depends on the currently displayed screen.

Left soft key	Executes the function on the left.
Center soft key	Executes the function on the center.
Right soft key 🗹	Executes the function on the right.

#### Using Submenus


Pressing the soft key that corresponds to the "SubMenu" at the bottom of the display will display a submenu of various operations related to the function you are currently using.

## **Positions of H001**

H001 has two positions: Regular open position which the display part open lengthwise, and Wide open position which the display part open crosswise.

#### OTO [1]

In this manual, if the position is not specified, the operation step explanations are described in Regular open position.

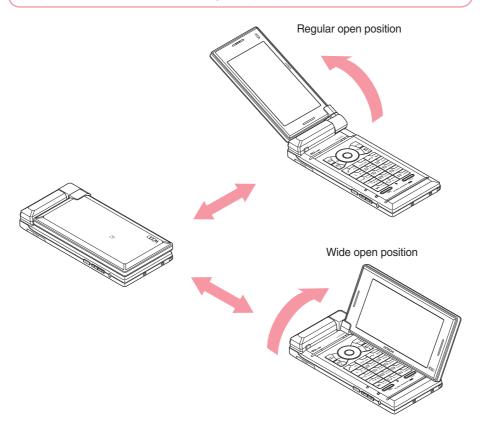

### [] CAUTION

- When re-opening from Regular open position to Wide open position, or from Wide open position to Regular open position, always close your cellphone before re-opening. If you force power when your cellphone is not closed, it may cause damage.
- OIn Regular open position and Wide open position, do not force to close your cellphone except to the direction it closes. It may cause damage.

## **Wide open position features**

# **TBD**

## **Initializing E-mail and EZweb**

An EZweb subscription is required to use e-mail, EZweb or other EZ services. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

- \* You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure.
- While the standby screen is displayed, press .
- Press (OK).

  Wait until the phone connects to the server for initialization.
- After your automatically assigned e-mail address appears, press (OK).

Organa (

Pressing [2]/[7] also allows you to make initial settings.


## Looking Up Your Current Phone Number and E-mail Address



- While the standby screen is displayed, press .
- Press To to .

  Your current phone number and e-mail address appear.

## **Changing Your E-mail Address**



- While the standby screen is displayed, press .
- Press (E-mail Setup).
- Press [4 th (Other).
- Press [1.®] (Eメールアドレスの変更) (Change E-mail Address).

- Enter your Security Code, press (OK), use to select "送信" (Send), and then press (Select). Use to select "承諾する" (Accept), and then press (Select).
- Use to select the text box, and then press (Input). Enter the e-mail address you want, and then press (OK).

To input an e-mail address

→"Inputting an E-mail Address" (page 41)

Use ♣ to select "送信" (Send), and then press ■ (Select).

The e-mail address confirmation screen appears.

Press to select "OK," and then press (Select).

The message "Update is complete." appears to indicate that your e-mail address has been changed.

- © Your Security Code is the 4-digit number you entered on your subscription contract. If the wrong Security Code is entered three times a day, the setting operation will be disabled until the following day.
- Of your e-mail address won't change in step 7:
  The new e-mail address you entered may be registered by someone else already. Try entering a different address.

## **Phone Call**

## **Making a Call**

While the standby

When calling a standard phone, you need to enter the area code.

**2** F

#### Press 😞.

After you finish a call, press to hang up.

The caller always hears your voice even when you cover the microphone with your hands.

#### **Send Methods**

You can select whether to notify/not to notify your cellphone number to the other party by pressing (Call) and displaying Outgoing Menu in step 2.

To not notify: Select "Add Special No." in Outgoing Menu→
■

(OK) →Select "184" → ■ (Add) → ②

To notify: Select "Add Special No." in Outgoing Menu → ■ (OK)

→Select "186" → ■ (Add) → ②

(Add) → ②

To call without any settings: Select "Voice Call" in Outgoing Menu→ (OK).

 When calling without any settings, your cellphone number is either notified or not notified according to "Caller ID" settings of your phone.

## **Making an International Call**

#### au International Call Service

Available without any additional application.

Ex: To call 212-123- $\triangle\triangle\triangle$  in the USA



- Calling charges for this service are added to monthly mobile phone calling charges and billed together.
- Please check the Country code at the au Customer Service Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

#### ■ 001 KOKUSAI MOBILE TALK

Application required.

For inquiries, please contact the KDDI Customer Service Center.

**0077-7160** (toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)

Ex: To call 212-123- $\triangle\triangle\triangle$  in the USA



- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Please check the Country code at the au Customer Service Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

## **Answering a Call**



Press ( to answer an incoming call.

After you finish a call, press to hang up.

#### @@@@

#### **Display for Incoming Calls**

If the caller's name is in your address book, it appears on the display. If not, only the caller's phone number is displayed.

A message appears when the phone number of the caller is not provided for some reason.

ID Unsent: The caller's phone refused to send its

phone number.
The call is from a payphone. Payphone:

Not Support: The call is from a phone that does not

support caller ID.

#### **Missed Call Notification**

The message "Missed Call X" appears on the display if you did not answer one or more calls. Press (Select) to check incoming histories (caller phone number, etc.). To redial a number

→ "Redialing (Outgoing Histories/Incoming Histories)" (page 31)

## Redialing (Outgoing Histories/ Incoming Histories)



- While the standby screen is displayed, press .
  - : Displays outgoing histories.
  - : Displays incoming histories.
- Use to select the number you want to dial, and then press .

The phone stores up to 50 histories each for the outgoing histories and incoming histories. When a history is created while there are already 50 histories in memory, the oldest current history is deleted automatically to make room for the new one.

## **One-ring Calls**

#### ■ What is a "One-ring Call"?

A "One-ring Call" is an incoming call that rings your phone only once, which aims it to be stored in your incoming histories. If you redial the number shown in your incoming histories, often you are connected to a dating service or some other service that may bill you very high charges. Always keep in mind that it is a good idea to avoid calling back unfamiliar numbers.

#### One-ring Call indicator

The iii icon indicates an incoming call you did not answer. The iii icon indicates an incoming call that rang for three seconds or less. These calls may be One-ring Calls with high possibility.

## **Changing the Ringtone**



- While the standby screen is displayed, press , use to select "Function," and then press (Select).
- Press (Sound/Vib/Lamp).
- Press . (Incoming Setup).
- Press 1.5 (Incoming Call).



- Press (Original).

  To hear the currently selected ringtone, press (Play).
- Use to select the ringtone you want, and then press (Set).
- Press (OK).
  The ringtone is set.

Orall

You can also download a "Chaku-Uta®" from the Internet and use it for your ringtone.

→ "Downloading Chaku-Uta®/Chaku-Uta-Full®" (page 70)

## **Adjusting the Ringtone Volume**

To adjust the ringtone volume, perform steps 1 through 4 under "Changing the Ringtone" (page 32), and then continue with the following steps.



- Use ♣ to select ♠ and press (Select).
- Use 🗘 to adjust the ringtone volume, and then press 🔳 (Set).
  - : Increases volume.
  - : Decreases volume.
- Press 🗹 (OK).

Organ L

STEP ↑: Ringtone volume gradually increases. STEP ↓: Ringtone volume gradually decreases.

OFF: Ringtone does not sound.

## Adjusting the Earpiece Volume during a Call



- 1
- During a call, use 🗘 to adjust the volume.
- (A): Increases volume.
- (v): Decreases volume.

You can adjust the earpiece volume (level 1-5 and Max).

## **Turning On Manner Mode**

While Manner Mode is set to on, the phone alerts you to incoming calls by vibrating.





While the standby screen is displayed, hold down 
☐→☐ for at least one second.

This turns on Manner Mode. The ♥ icon appears on the display while Manner Mode is turned on.

Turning on Manner Mode also turns on Answer Memo, which is indicated by en the display. While Manner Mode is set to on, the phone vibrates without sounding its ringtone.

To turn off Manner Mode, hold down 🖅 for at least one second.

#### Othan []

While the standby screen is displayed, you can press T to select the Manner Mode type. Holding down T for at least one second while the standby screen is displayed will enable the Manner Mode type you selected.

## **Turning On Answer Memo**





While the standby screen is displayed, hold down for at least one second.

This turns on Answer Memo. The 📺 icon appears on the display while Answer Memo is turned on.

You can use Answer Memos (up to 6 memos), and each memo can contain up to 30 seconds recording time.

To turn off Answer Memo, hold down [2007/98] for at least one second.

#### Oran D

- **Using the Answering Service (Voice Mail)** 
  - The Answering Service (Voice Mail) can be used to answer the phone and take messages when the phone is turned off, or when you are in a location where signal reception is not possible.
- © You can record Answer Memo and Voice Memo up to 6 messages within 30 seconds.

## **Playing an Answer Memo**

## When there is a recorded Answer Memo

The message "Answer Memo" appear on the standby screen.

Select "Answer Memo," and press (Select).

"Answer Memo List" appears.

Use to select the Answer Memo you want to hear, and then press (Play).

The Answer Memo plays back.

#### Organ L

To delete an Answer Memo, press [1.5] [1.5] while the standby screen is displayed. Select the Answer Memo you want to delete, press [7.5] (SubMenu), and then [1.5] (Delete). Next press [1.5] (Delete One), and then press [1.5] (YES).

## **Using Overseas**

You can use the H001 overseas with global functions.

### **Setting Area**

- While the standby screen is displayed, press .
- Use to select "Global Functions," and then press (Select) and (OK).
- Use ♣ to select "Area Setting," and then press (Select).
- Use to select "Overseas," and then press (Select).

## **Calling to Japan from Overseas**

- While the standby screen is displayed, enter the phone number and then press (Dial).
- Use to select "Voice Call," and then press

  (OK).
- Japan," and then press

   (OK) and (Dial).

#### 0000 <u>|</u>

- Although the preferred roaming list (PRL) is already stored in the phone at the time of purchase, the list may be updated several times a year. Update it before departure.
- © You can use like a normal cellphone when calling from Japan to an overseas cellphone compatible with Global Passport CDMA.
- © You need to sign up for the EZweb service before departure. Initial setting of EZweb must also be done in Japan.

## **Inputting Characters**

Input characters using keypad keys  $\frac{0.7}{0.00}$  through  $\frac{9.5}{0.000}$ , and  $\frac{*}{0.000}$ .

The table below shows the characters each key cycles through when you press it.



Key	Number of Presses								
	1	2	3	4	5	6	7	8	9
1 5		@	-	_	/	:	~	1	
2 か ABC	а	b	С	А	В	С	2		
3 8 DEF	d	е	f	D	Е	F	3		
니 た GHI	g	h	i	G	Н	I	4		
5な JKL	j	k	I	J	K	L	5		
<b>6</b> は mno	m	n	0	М	N	0	6		
7 # PORS	р	q	r	S	Р	Q	R	S	7
B to	t	u	V	Т	U	V	8		
9 5 WXYZ	W	Х	У	Z	W	Х	Υ	Z	9
	O Space ! " # \$ % & ´ ( ) * +, / : ; < = > ? @ [ ¥ ] ^ _ ` {   } ~								
<b>*</b> **	Switch between upper case and lower case of the entered alphabet character.  Inputs (.,-!?) when no character is entered.								
# 改行	Returns to the previous character (Back function) when entering characters.  Inputs a line break after the entered character has been settled.								

<sup>•</sup> In order to input consecutive characters that are assigned to the same key, press • to move the cursor (highlighted), and then press the same key to input next character.

#### **B** CAUTION

#### Allowable Characters in Your E-mail Address

Your e-mail address (the part at the left of "@") can contain up to 30 characters, including single-byte English lower case letters, hyphens (-), periods (.) and underbars (\_).

A period (.) or a zero (0) cannot be used as the first character. Characters and symbols that are shaded in the above table cannot be used at the left of "@" in the address format "\alpha\alpha\@ezweb.ne.jp."

## Inputting an E-mail Address

■ Inputting "mark@ezweb.ne.jp"

In this example, we will input "mark@ezweb.ne.jp" for [E-mail Address1]. To input [E-mail Address1], perform steps 1 through 6 under "Registering an Address Book" (page 43), and then perform the following steps.



1

#### Input "mark."

Press [79] (SubMenu), and then [3] & (Phrase).

Use  $\frac{*}{3}$ ,  $\frac{*}{3}$  and  $\frac{1}{2}$  to scroll through the categories of phrases.

Use to select "@ezweb.ne.jp," and then press (Select).

## **Inputting Pictograms**

The following procedure shows how to input pictograms into the body text when creating a new e-mail message.



#### Press

You can switch between Pictogram→ Symbol (Full-Size/Half-Size)→Face Mark →Pictogram by pressing [E].

Use 💠 to select the pictogram you want, and then press (Select).

Use 河 (Category) or \*ボ/#햌 to scroll through the various categories of pictograms. To input pictograms consecutively, press (Repeat) instead of (Select).

### **Address Book**

## Registering an Address Book



- While the standby screen is displayed, hold down for at least one second.
- Select " [Name]," and then press (Select).
- Enter the name, and then press ( ) (OK).

The read [Reading] is generated automatically when you enter a name. To input text

→"Inputting Characters" (page 40)

Use to select
"[Phone No.1]," and
then press (Select).

Enter the phone number, and then press (OK).
Use to select the No.
Type, and then press
(Select).

When entering the number of a standard phone, be sure to include the area code.

Use ♦ to select
"☐ [E-mail Address1]," and then press ☐ (Select).

If you do not want to enter an e-mail address, jump to step 8.

Enter the e-mail address, and then press (OK). Use (†) to select the E-mail Type, and then press (Select).

To input an e-mail address

→"Inputting an E-mail Address" (page 41)

Press 🗹 (Reg)

#### िशेवा 🛘

- The Address Book can contain up to 1,000 records.
- Address book records are numbered from 000 through 999. A new record is automatically assigned to the lowest available unused record number.
- ②An address book record can also contain a group, image, street address, birthday, and other personal information.
- © To delete an address book record, press 

  while the standby screen is displayed. Use 
  to select the address book you want to delete, press 

  (SubMenu), and then 

  (Delete). Next press 

  (Delete One), and then press 

  (YES).

## **Editing an Address Book Record**



**Example: To edit the phone number of "Tom Carter"** 

- While the standby screen is displayed, press , use to select the record you want to edit.
- Press (Detail), and then (Edit).
- Use to select "Usual 0900006XXXX," and then press (Select).
- Make the changes you want, press (OK).
  Use to select the No.
  Type, and then press (Select).

To delete characters, press \_\_\_\_\_.

Press (Reg). Use to select "Overwrite," and then press (OK).

### Adding Outgoing or Incoming History Data to the Address Book



- While the standby screen is displayed, press , use to select the phone number you want to register, and then press (SubMenu).
  - : Displays outgoing histories.
  - : Displays incoming histories.
- Press [2, 15] (Reg to Adrs Book).
- Press (Register New).
- Use 🛟 to select the No. Type, and then press

  (Select).

The phone number is entered automatically. To enter the name and other items, refer to step 2 under "Registering an Address Book" (page 43).

## **Dialing from the Address Book**



- While the standby screen is displayed, press ☐, and then use ❖ to select the record whose phone number you want to dial.
- Press (Detail).

  The detail screen of the record appears.
- Use to select the phone number, and then press .

### **Pair Function**

You can register up to five phone numbers (like frequently used ones from the address book).

You can make calls or send mails to these registered numbers (called Pair Partners) more easily.



### **Registering a Pair Partner**

While the standby screen is displayed, press .

Use •• to select the 1 through 5 tab where you want to register the Pair Partner.

- Use to select "Reg./ Can.," and then press (Select). Press (YES).
- Use ❖ to select the address book record for the person you want to register as a Pair Partner, and then press (Detail).
- Press (Select).

  When there is more than one phone

when there is more than one phone number/e-mail address registered in the address book, the Pair Function phone number/e-mail address selection screen will appear.

# Making a Phone Call or Sending Mail to a Pair Partner



- While the standby screen is displayed, press 🗫.
- Use to select the Pair Partner.
- Use ♦ to select "Call," and then press (Select).

Sending E-mail: Selecting "E-mail" and then pressing (Select) will display a screen for composing and sending an e-mail message.

Sending C-mail: Selecting "C-mail" and then pressing (Select) will display a screen for composing and sending a C-mail message.

For the subsequent procedure, see "Creating and Sending E-mail Messages" (page 52)/"Creating and Sending C-mail Messages" (page 58).

#### ्रीवा 🗓

In order to register a person as a Pair Partner, the person's name, phone number, and other information need to be registered in the address book beforehand. Use the procedure under "Registering an Address Book" (page 43) to create the required record before trying to register a person as a Pair Partner.





Your H001 supports two types of mail: e-mail and C-mail.



### **Using E-mail**

To use e-mail, you need to subscribe to an EZweb service. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use e-mail. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 24).

E-mail lets you exchange mails with a PC and with another cellphone that supports e-mail function.

You can send mail messages that contain up to 5,000 double-byte characters (10,000 single-byte characters), and you can attach photos to e-mail messages.

- You can send e-mail up to 30 recipients (includes To/Cc/Bcc, within 64 single-byte characters for each recipient) at a time.
- You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- The sending and receiving operations may take longer when a mail message has data attached.
- Packet communication fee (varied by the sent/received data amount, regardless of the connection time) is charged to send/receive an e-mail.

## **Using C-mail**

C-mail lets you exchange text messages that contain up to 50 double-byte characters (100 single-byte characters) with another au cellphone that supports C-mails.



C-mail transmission fee is charged when sending C-mail.

#### **About C-mail Safety Block**

• C-mail Safety Block blocks C-mails that contain accessing URLs (http://△△△, https://△△△) or phone numbers in its body text. C-mail Safety Block is set to on at the time of purchase. If you want to receive C-mails that contain accessing URLs or phone numbers in their body texts, you can disable this function to receive such C-mails.

## **Creating and Sending E-mail Messages**



- While the standby screen is displayed, press .
- Press (Create New).
  Select To Address, and then press (Select).
  Press (Select).

ie: Address to which the e-mail will be sent.

Press [1.8] (Address Book), use • to select an addressee, and then press [ (Detail).

You can select an addressee from sent histories, received histories, address book group, or profile, or you can enter an address.

Use (\*) to select the e-mail address you want to enter, and then press (Select). Press (OK). Use 🗘 to select "🖦 Subject," and then press (Select). Subject of the e-mail message. Enter the subject, and then press (OK). Use 🗘 to select " ✓ Text," and then press (Select). Body of the e-mail message. Enter the body text, and then press (OK). Press (Send) or . The message "E-mail Sending completed." appears on the display after the e-mail message is sent.

## Reading Received E-mail Messages



#### When you receive an e-mail

Select "E-mail," and then press (Select).

Press (Select).

☑: Indicates an unread message.
☑: Indicates an already read message.

Use to select the unread e-mail you want to view, and then press

(Select).

The received e-mail message appears.

If all of the message cannot be displayed, press v to scroll.

Use and to scroll between messages.

Press between to return to the e-mail message list.

### Reading an E-mail Message with an Attached Photo



- Use 🗘 to select the e-mail message, and then press 🔳 (Select).
- Use 🛟 to select the attached data, and then press 🔳 (Select).
- Use to select a file name, and then press (Play).

#### िशिया 🛘

- ©Depending on the type of the attached data, the contents may be displayed at the last of the body text.
- ©Depending on the size of the attached data, it may not come in at the same time as the mail message. If this happens, use 🗘 in step 3 to select the file name, press <a> (Receive)</a>, and then press <a> (Play)</a>.
- ©The sending and receiving operations may take longer when a mail message has data attached.
- ©Certain signal conditions may also cause e-mail sending and receiving to take longer than normal.

## Replying to a Received E-mail Message

To reply to an e-mail message, perform steps 1 through 3 under "Reading Received E-mail Messages" (page 54), and then perform the following steps.



1

#### Press (Reply).

(Subject) is prefixed with "Re:," and the body text of the e-mail is quoted.

2

Use ♣ to select " ✓ Text," and then press (Select).

For the remainder of this procedure
→Perform the procedure starting from
step 7 under "Creating and Sending
E-mail Messages" (page 52).

## **Avoiding Spam**

It is recommended that you use our mail filter function to block spam.

You can use the "Supportive settings" to easily configure mail filter settings by answering questions that appear on the display.



#### Configuring Mail Filter Settings

Example: To access the "サポート設定" (Supportive settings)

- 1 While the standby screen is displayed, press .
- ② Press (E-mail Setup) → (Mail Filter).
- ③ Use 🗘 to select "次へ" (Next) and then press (Select).
- (4) Enter your Security Code, press ( )(OK).
  - → Use 🗘 to select "送信" (Send) and then press 🔳 (Select).
- ⑤ Use ♦ to select the item and then press (Select). Next, follow the instructions that appear on the display.

#### ■ "カンタン設定" (Simple Settings)

	You can choose filtering options by answering				
"サポート設定"	our questions.				
(Supportive settings)	It is recommendable for those who want to check				
	the filtering conditions one by one.				
"フィルターレベル(高)"	You can block all the mails from PC.				
	It is recommendable for those who use only				
(Filter level (Strict))	cellphones to send e-mails.				
	You can block the e-mails from specified				
	addresses in addition to the e-mails containing "未				
"フィルターレベル(中)"	承諾広告※" (unsolicited advertisement) in their				
(Filter level (Medium))	titles and "なりすましメール" (spoof e-mail).				
	It is recommendable for those who are bothered				
	by specified spam senders.				
	You can block the e-mails containing "未承諾広告				
"フィルターレベル(低)"	* (unsolicited advertisement) in their titles, and				
(Filter level (Normal))	"なりすましメール" (spoof e-mail).				
	It is recommendable for all e-mail users.				

#### Organ L

You can prevent spam by changing your e-mail address. See "Changing Your E-mail Address" (page 26) for information about how to change your e-mail address.

## **Creating and Sending C-mail Messages**



- While the standby screen is displayed, hold down for at least one second.
- Press (Create New).
- Enter the body text, and then press (OK).
- Select " [Address]," and then press (Edit).

Press (Quote Adrs Book), use to select an addressee, and then press (Detail).

You can also select a phone number from sent histories or received histories, or you can enter an address.

- Use to select the phone number you want to enter, and then press (Select).
- Press (Send) or .

  When the C-mail reaches the other party, the message "Mail delivered" appears, and the message is stored in the Outbox.

## Reading Received C-mail Messages

#### When you receive a C-mail

The message "C-mail" and 💆 appear on the standby screen.

Select "C-mail," and then press (Select).

Press (Select).

≥: Indicates an unread message.

: Indicates an already read message.

Use to select the unread C-mail you want to view, and then press (View).

The received C-mail message appears. Use and follower to scroll between messages.

Press to return to the C-mail message list.

## Camera

## **Using the Camera**

## Use your images for H001 functions!

You can use photos you shot for the standby screen, for the image that appears when receiving a call, and in your address book.

## 2 Send images by e-mail!

Within 2MB, you can send a photo as an e-mail attachment.

※ Certain signal conditions may cause e-mail sending and receiving to take longer than normal.



### **Tips for Better Photos**

## **TBD**

### **Auto Focus**

H001 has built-in auto focus function. You can shoot photos with the subject properly focused simply by pressing the shutter key.

#### **Photo Sizes**

**TBD** 

### **Shooting a Photo**



- While the standby screen is displayed, press , use to select "Camera," and press (Select).

  Press (Photo (W.paper Mode)).
- Point the lens at the subject, and press

  (Shoot).

The phone emits a shutter sound. Note that the phone emits the shutter sound even if it is in Manner Mode. Check the subject through the monitor screen (within the area indicated as [+], and release the shutter.

Press (Save).

The photo you shot is stored in the "Photo Folder" in the Data Folder, and then returns to the photo monitor screen.

#### 

#### When shot mistakenly

If the photo is not what you want to take, press In step 3. Next, repeat step 2 to redo.

## **Viewing Photos**



- While the standby screen is displayed, press ■, use ♦ to select "Data Folder," and then press (Select).
- Use to select "Photo Folder," and then press (Select).

Selecting "All Data" displays a list of all photos in the "Photo Folder."

Use to select the folder, and then press (Select).

A list of all photos that were shot on that day are displayed.

Use to select the photo you want to view, and then press (Select).

The photo is displayed.

## Attaching a Photo to an E-mail Message

Perform the procedure from step 1 to 2 under "Shooting a Photo" (page 63), and then perform the following steps.

Press (E-mail), and then press (E-mail).

The photo you shot is stored in the "Photo Folder" in the Data Folder.

Perform the procedure starting from step 2 under "Creating and Sending E-mail Messages" (page 52) to create an e-mail message.

You can attach any photo you have shot to an E-mail, but data over 500KB cannot be sent.

## **EZweb**

EZweb subscription required

## **Using EZweb**

To use EZweb, you need to subscribe to an EZweb beforehand. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.



In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use EZweb. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 24).

EZweb is an information service for simple Internet access from your phone. EZweb lets you search for information on the Web, and provides you with access to Chaku-Uta®, the latest news, and other web-based contents (information sites).

Packet communication fee (varied by the sent/received data amount, regardless of the connection time) is charged when connecting EZweb.

## Displaying the au one Top



While the standby screen is displayed, press [2], use (1) to select "EZweb," and then press [1,2] (au one Top).

## **TBD**

## **Bookmarking Sites You Frequently Access**



- Display a site you want to bookmark, and press

  [79] (BrowserMenu).
- Press (New bookmark).

  \* You may not be able to bookmark some sites.
- Press (Reg).

  The message "Registered to Bookmark" appears when registration is completed.

**○**\$@□

You can store up to 100 sites in the Bookmark(s).

## Viewing a Bookmarked Site



- While the standby screen is displayed, press [2].
- Use to select "EZweb," and then press
  [2 the display in the select "EZweb," (Bookmark(s)).
- Use to select a site or folder, and then press (Connect/Select).

If you selected a folder, use 🗘 to select a site, and then press 🔳 (Connect).

### **Checking Charges**

You can check call and transmission charges.

While the standby screen is displayed, press

When the EZweb connection confirmation screen appears, press [1,8] (YES).

Use to select the item you want to check, and then press (Select).

## Downloading Chaku-Uta<sup>®</sup>/Chaku-Uta-Full<sup>®</sup>

To download a Chaku-Uta<sup>®</sup>/Chaku-Uta-Full<sup>®</sup>, perform step 1 under "Displaying the au one Top" (page 67), and then perform the following steps.

- Use 🗘 to select "カテゴ リ検索" (Search by Category), and then press ■ (OK).
- Use to select "着うたフル・ビデオクリップ" (Chaku-Uta-Full® and Video Clip) or "着うた" (Chaku-Uta®), and then press (Select).
- Select the content (desired information site), and download it.

In order to use fee-based contents, you need to enter your EZ Password or Premium EZ Password.

Initial Value: Any 4-digit number you entered on your subscription contract. Input the required password according to the instructions that appear on the display. To download information, follow the instructions that appear on the display. Downloaded data is stored in the Data Folder.

#### ! CAUTION

In addition to transmission charges, you will be charged according to the pricing policy of each site to download Chaku-Uta®/Chaku-Uta-Full® and other contents from a fee-based site.

#### Orgall (I

- ©Perform the same procedure to download wallpaper and use it for the standby screen background.
- © You also can access an information site where you can download Chaku-Uta-Full® by pressing 🔁 while the standby screen is displayed, using to select "LISMO," and then pressing 🖳 (Jump to au one Music).

### EZ News Flash/au one Gadget EZweb subscription required

EZ News Flash displays a scrolling telop showing the latest news on the standby screen, and you can view information by selecting it. au one Gadget displays an application called gadget on the standby screen. EZ News Flash/au one Gadget is available just after making initial settings for EZweb (page 24). All EZ News Flash information is distributed for no charge.

- \* When updating EZ News Flash by manual operation or connecting to EZweb site, packet communication fee may be required. If packet communication fee is required, confirmation screen appears.
- \* When the gadget you are using needs update via network connection, packet communication fee is required when updating.

#### **EZ News Flash/au one Gadget Features**



### **Setting EZ News Flash service**

EZweb subscription required

# **EZ Navi EZ Navi Features**

#### au Media Tuner

EZweb subscription required

au Media Tuner makes it possible to enjoy using Television (1Seg) and EZ Channel-Plus.

#### au Media Tuner Features



## **Configuring au Media Tuner Initial Settings**

## Using Television (1Seg)



### **Exiting au Media Tuner**

#### **Bluetooth**

#### **Displaying Bluetooth Menu**

1

While the standby screen is displayed, press , and then select [ACCESSORIES] and [Bluetooth].

Bluetooth Menu is displayed.

Select Device	Select from initial registration completed wireless devices to output sound by wireless applications.
Waiting ON/OFF	Set Waiting ON/OFF.
Initial Register	Perform initial registrations for wireless devices and hands-free devices.
Data Receive	Make H001 waiting for receiving data from the other device.
Bluetooth Setup	Setup for Bluetooth <sup>®</sup> functions.

### Registering Bluetooth® Devices

When connecting from H001 to Bluetooth® devices, you need to register the Bluetooth® device you want to connect beforehand. You do not need to operate this procedure to connect to an already registered device.



From Bluetooth Menu (page 81), select [Bluetooth Setup] and [Device List], and then press (Search).

Device which answered will be displayed.

Select the Bluetooth® device to connect, and then press (Connect).

Input the passkey (1 to 8 digits), and then press .

Input the same passkey between H001 and the Bluetooth® device.
When connected, the Bluetooth® device will be registered.

## Registering Wireless Devices and Hands-free Devices

Perform initial registrations for wireless devices and hands-free devices. Please operate this procedure within 10 meters from the device.

From Bluetooth Menu (page 81), select [Initial Register].

Select [Wireless Device]/
[Hands-Free Device] and
[YES].

Select the device, and then press . Input the passkey (1 to 8 digits), and then press .

After performing initial registrations for hands-free devices, connection waiting will automatically start and be connected to hands-free devices.

After performing initial registrations for wireless devices, confirmation screen will appear. Select "YES" and press to change the settings for "Select Device."

### **Using Bluetooth® Functions**

When Waiting ON is set, you can use wireless output, hands-free call, and dialup connection.

From Bluetooth Menu (page 81), select [Waiting ON/OFF].

Select [Waiting ON] or [Waiting OFF].

You can also set Waiting ON/OFF by pressing \*\* or at least one second while the standby screen is displayed.

### **USB** Connection

#### **Connecting to PCs**

### Videophone

#### **Making a Videophone Call**

Use the o to expect keys to enter the receiver's phone number, then press (Call).

Use 🗘 to select "Videophone" and press • (OK).

After you finish a call, press to hang up.

#### **Answering a Videophone Call**

Press to answer an incoming videophone call.

After you finish a call, press at to hang up.

#### **Putting a Videophone Call on Hold**

Press an during an incoming videophone call.

### **Other Functions**

#### **Security Setup Features**

In addition to the functions covered in this Basic Manual, your  ${\sf H001}$  also has the following features.

## **Troubleshooting**

### If you lose your H001



#### **FCC Notice**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

#### Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

#### **FCC RF EXPOSURE INFORMATION**

Warning! Read this information before using your phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

#### **Body-worn Operation**

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

#### Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.