

CA005 User Manual

Introduction

Thank you for purchasing the CA005. Before using your cell phone, be sure to read the Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Manuals for the CA005

The CA005 comes with the Instruction Manual.

- **For learning the basics:**

Read the Basic Manual (this manual).

- **For learning details on using each function:**

Read the supplied Instruction Manual (Japanese). Be sure to read the Safety Precautions "安全上のご注意" to ensure proper usage of the CA005.

The keyword searchable au Online Manual is also available on the au homepage:

<http://www.au.kddi.com/manual/index.html>

- To access from EZweb:  *Top Menu/Search*  *auお客さまサポート* (au Customer Support)  *オンラインマニュアル* (Online Manual)


Scan this QR code to access the au Online Manual. ►



Illustrations and Screenshots in This Manual

Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

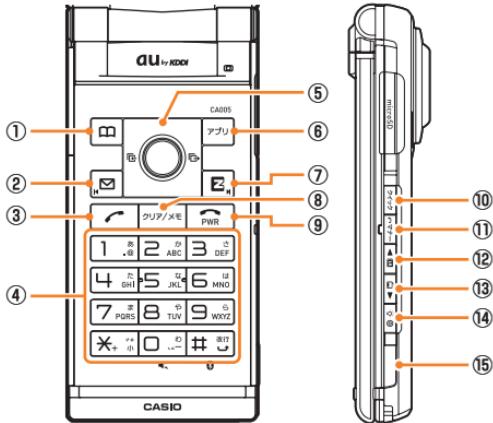

	Key Illustration		Key Illustration
①		⑦	
②		⑧	クリア/メモ
③		⑨	PWR
④		⑩	クイック
⑤		⑪	マナー
⑥		⑫	
⑦		⑬	
⑧		⑭	
⑨		⑮	

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

- The display design themes of your cell phone vary by model color.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- **Use of cell phones is not allowed in some places.**
 - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
 - Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.
- **Radio waves from cell phones may interfere with medical electrical equipment.**
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- **Be considerate of where you use the cell phone and how loudly you talk.**
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
 - Move to areas where you will not inconvenience others on trains or in hotel lobbies.
 - Refrain from talking in a loud voice.

- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do Not Use the Cell Phone While Driving!

Turn off your cell phone or put it in Drive Mode while driving.

Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the answer memo.

When the standby screen is displayed, press    to select *Drive*, and then press  (Set).

Disaster Message Board Service

When a big scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.

Registering safety information

- When a big scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 灾害用伝言板 (Disaster Message Board).
- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Inquiring for safety information

Access	<input type="checkbox"/> ⇒ Top Menu/Search ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- The maximum storage period of the registered information is 72 hours.
- The maximum available number of registrations is 10 per phone number. When the number of registrations exceeds 10, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing ⇒ Top Menu/Search ⇒ auお客様サポート (au Customer Support) ⇒ 調べる (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select *English* from the top menu of the Disaster Message Board.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do Not Use the Cell Phone While Driving!.....	2
Disaster Message Board Service	3

Contents 4

Getting Ready 6

Checking the Contents of the Box	6
Names of Parts	7
Charging the Battery Pack	8
Learning the Basics	9
Turning On Power	10
Switching the Display Language to English	10
Initial Setup of E-mail and EZweb	10
Checking Your Phone Number and E-mail Address ...	10
Display Indicators	11
Changing Your E-mail Address	12
Security Code and Passwords.....	13

Making and Answering Calls

14

Making a Call	14
Making an International Call.....	14
Answering a Call	15
Returning a Call (Outgoing History/Incoming History) ...	16
One-ring Calls.....	16
Adjusting the Earpiece Volume during a Call	16
Turning On Manner Mode.....	16
Changing the Incoming Ring Tone	17
Adjusting the Incoming Ring Tone Volume	17
Turning On the Answer Memo.....	18

Global Functions 19

Setting Area	19
Calling to Japan from Overseas	19

Character Input 20

Character Entry Modes	20
Entering Alphanumeric Characters	20
Entering E-mail Addresses	21
Entering Pictograms	22

Phone Book 23

Saving a Phone Book Entry	23
Dialing from the Phone Book	23
Editing Phone Book Entries	23
Saving a Phone Number from the Incoming or Outgoing History	24

Mail	25
Using E-mail	25
Creating and Sending E-mail Messages	25
Reading Received E-mail Messages	26
Reading an E-mail Message with an Attached Photo or Movie	26
Replying to Received E-mail Messages.....	26
Rejecting Spam	27
Using C-mail	28
Creating and Sending C-mail Messages	28
Reading Received C-mail Messages	28
Camera	29
Taking a Photo	29
Viewing Photos	29
EZweb	30
Accessing Sites	31
Bookmarking Frequently Accessed Pages	32
Viewing Bookmarked Pages	32
Checking Charges	33
Downloading Chaku-Uta-Full®/Chaku-Uta®	33
EZ Navi	34
Passenger Seat Navi for People in the Passenger Seat to Check the Route	34
Security Navi to Check Where Your Kids Are	34
EZ Navi Walk for When You Go Out	35
Bluetooth	36
Registering Bluetooth® Devices	36
Using Bluetooth® Functions	36
USB Connection	37
Connecting to PCs	37
In Case of Loss of Your Cell Phone	38
Setting Conditions for Activating the Remote Ctrl Lock.....	38
Remotely Activating the Remote Ctrl Lock on Your Cell Phone ...	38
Activating the Remote Ctrl Lock by the Security Lock Service	39
Troubleshooting	40
FCC Notice	42

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack
- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)


- The following accessories are not included.

- microSD memory card	- Desktop holder	- AC adapter
- USB cable	- Earphone jack conversion adapter	- Stereo earphone


Purchase a specified AC adapter (sold separately).

Names of Parts


From the Front

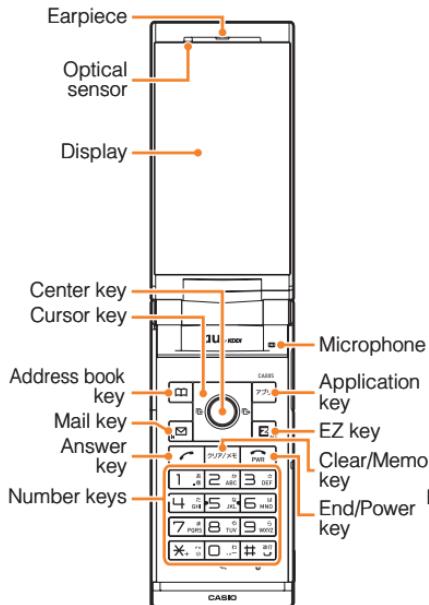

From the Back

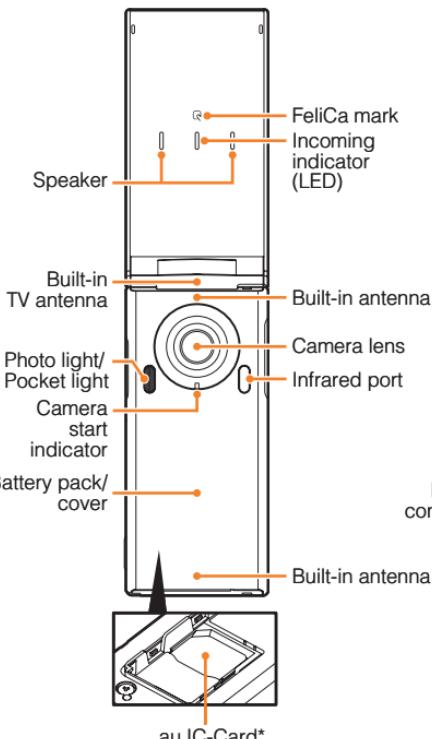

From the Sides

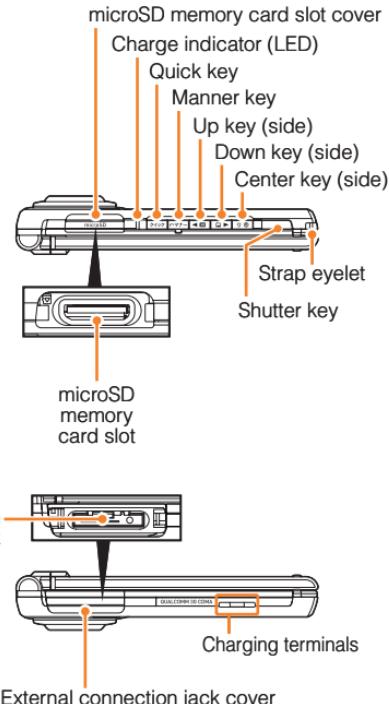

*Do not remove this card unnecessarily as your phone number is recorded on it.


Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a specified AC adapter (sold separately).

→ Confirm that the charge indicator lights.

- Charging: A charge beginning sounds and the charge indicator lights.
- Charging finished: A charge completion sounds and the charge indicator goes out.

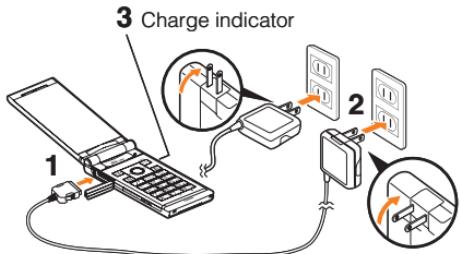


→ Connect a specified AC adapter to the cell phone.

- Check the shape of the connector of the AC adapter and then plug it straight into the power terminal of the cell phone.


→ Unfold the power plug of the AC adapter and plug it into a 100 V AC power outlet.

Learning the Basics

Key Assignments

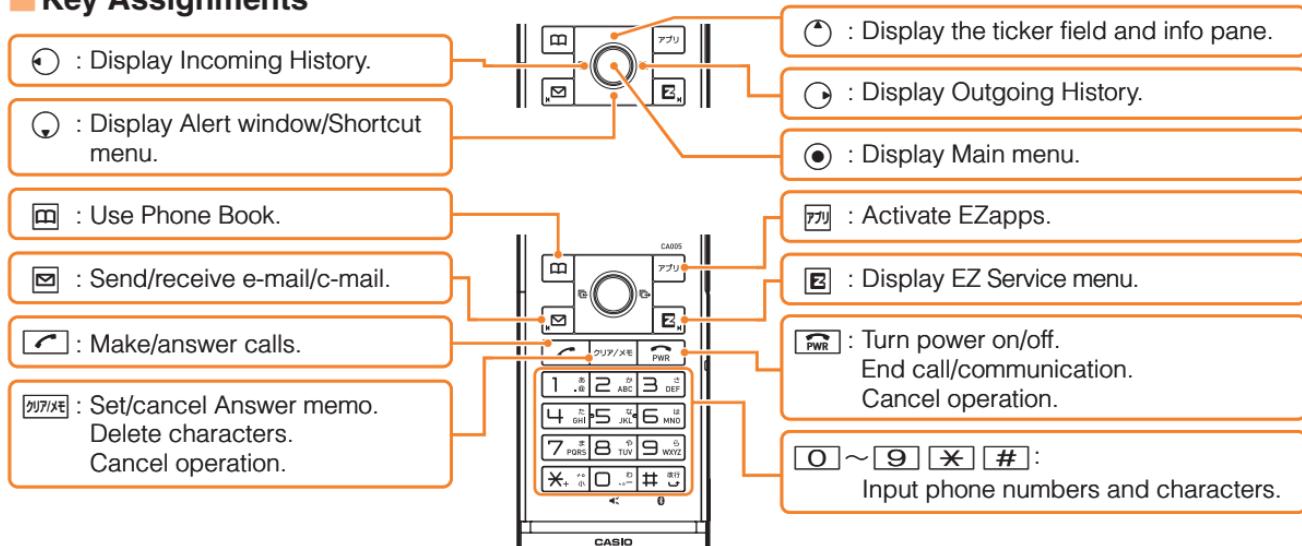

Side Key Assignments

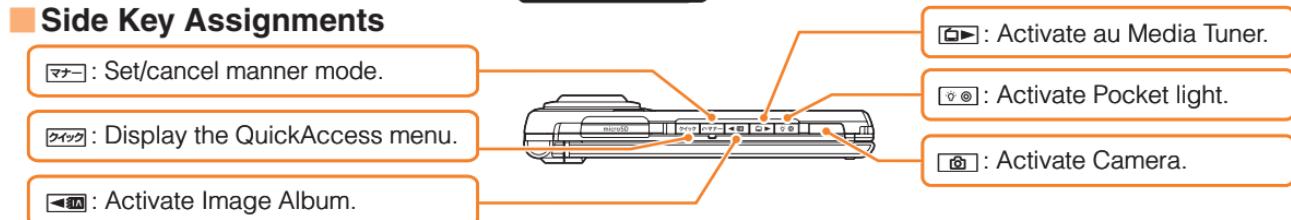

- If you lose track of where you are or if you make a mistake, press クリア/メモ to return to the previous screen. Return to the standby screen by holding down PWR for at least one second.

Hiding/Redisplaying the Alert Window

When the alert window is displayed on the standby screen, you can temporarily hide it by pressing  (Back) and then display the Main menu by pressing .

To redisplay the hidden alert window, press  when the standby screen is displayed.

Turning On Power

Hold down  for at least a few seconds.

- You cannot receive or make calls if out of range indicator is displayed.

Turning Off Power

When the standby screen is displayed, hold down  for at least one second.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

→ Use  to select **機能 (Function)** and then press  (**選択 [Select]**).

→ Use  to select **画面表示 (Screen Display)** and then press  (**選択 [Select]**).

→ Use  to select **Set Language** and then press  (**選択 [Select]**).

→ Use  to select **English** and then press  (**Set**).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.

When the standby screen is displayed, press .

→ Press  (**OK**).

After a short while, your e-mail address is displayed.

→ Press  (**OK**).

The initial settings are complete.

- You can also configure initial settings by pressing  or .


Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .

Display Indicators

Display indicators inform you of mail arrival, current settings, etc.


Display

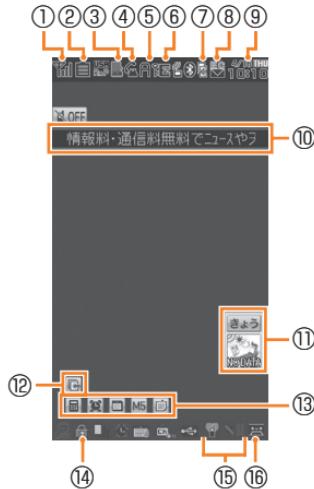

Indicator	Description
①	Signal strength
②	Battery level
③	A microSD memory card (commercially available) inserted
④	During a call
⑤	au Media Tuner activated
⑥	EZapps activated
⑦	Connecting to EZweb
⑧	Missed calls
⑨	New or unread e-mail/c-mail
⑩	Current date and time
⑪	— Ticker field
⑫	— Info pane
⑬	— Alert icon
⑭	— Shortcut menu
⑮	Auto Lock/Side key disable feature on
⑯	Manner mode set
⑰	Answer memo or manner mode set

Changing Your E-mail Address

You can change the account name of your e-mail address.

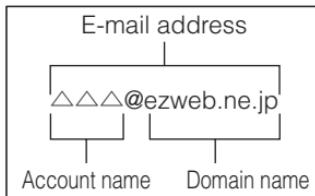

When the standby screen is displayed, press .

- Use  to select *E-mail Setup* and then press  (Select).
- Use  to select *Change adr/Other* and then press  (Select).
- Use  to select *Eメールアドレスの変更(Change E-mail Address)* and then press  (Select).
- Use  to select the entry box, press  (Input), enter your security code, and then press  (OK).
 - Your security code is the four-digit number you wrote on your subscription form.
 - If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.
- Use  to select *送信(Send)* and then press  (Select).

→ Use  to select *承諾する(Accept)* and then press  (Select).

→ Use  to select the entry box, press  (Input), enter an e-mail address using single-byte alphanumeric characters, and then press  (OK).

- For details on entering e-mail addresses, see page 21.

→ Use  to select *送信(Send)* and then press  (Select).

→ Use  to select *OK*, press  (Select) and then  (OK).

- Check that the e-mail address has been updated before pressing  (OK).

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb ③Changing the settings of <i>Mail Filter</i> or <i>Other</i> under E-mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

EZ Password

Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form

Premium EZ Password

Usage Example	①Subscribing or canceling subscriptions to EZweb fee-based contents paid by <i>まとめてau支払い</i> (au Collective Payment Service) ②Purchasing products from EZweb sites using <i>まとめてau支払い</i> (au Collective Payment Service)
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234

Making and Answering Calls

Making a Call

When the standby screen is displayed, use **[O]** to **[9]** to enter a phone number.

- When calling to a fixed-line phone, you also need to enter the area code.

→ Press **[**].

- To end the call, press **[**]

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:

→ Press **[** (Call).

→ Use **[**

 to select *Add Special No.* and then press **[** (OK).

→ Use **[**

 to select *184* or *186* and then press **[** (Add).

184: When you do not want to inform the other party of your phone number.

186: When you want to inform the other party of your phone number.


Making an International Call

001 International Call Service

Available without any additional application

Example: To call 212-123-△△△△ in the USA

Enter the access code, a country code, area code and phone number, and then press **[**].

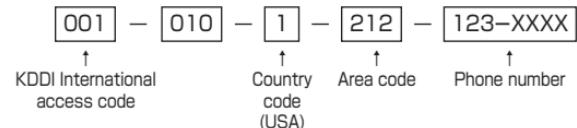

- International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:
From au cell phones (toll-free):
157 (area code not required)
From fixed-line phones (toll-free):
0077-7-111
(Open 9:00 to 20:00 everyday)

Answering a Call

To answer a call, press .

- To end the call, press .

Display When a Call is Received

The phone number of the caller appears.

If the caller's phone number and name are in the phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
<i>ID Unsent</i>	The caller did not send a Caller ID.
<i>Payphone</i>	The call is from a pay phone.
<i>Not Support</i>	The call is from a phone that does not support Caller ID.

Missed Call Notification

If you did not answer a call, *Missed Call* are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select *Missed Call* and then press  (Select). You can then return the call (see page 16).

Returning a Call (Outgoing History/ Incoming History)

Example: Returning a call to a phone number in the incoming history

When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

→ Use  to select the phone number you want to call and then press  (Detail).

- Press  to display the Outgoing History screen.

→ Press .

- The cell phone can store up to 50 phone numbers in each of the incoming and outgoing history.

One-ring Calls

What is a One-ring Call?

A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

One-ring indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.

Adjusting the Earpiece Volume during a Call

During a call, use .

-  : Increases the volume.
-  : Decreases the volume.

→ Press  (OK).

Turning On Manner Mode

When the standby screen is displayed, hold down  (マナー) for at least one second.

This turns on manner mode, and displays  and  on the standby screen. This also turns on Answer memo, which is indicated by  on the standby screen.

Turning Off Manner Mode

When the standby screen is displayed, hold down  for at least one second.

Turning off manner mode causes  and  to disappear from the standby screen. Answer memo is also turned off, which is indicated by  disappearing from the standby screen.

- Even in manner mode, the cell phone still emits a sound when autofocusing, a shutter sound when you take a photo.

Changing the Incoming Ring Tone

When the standby screen is displayed, press .

- Use  to select *Function* and then press  (Select).
- Use  to select *Sound/Vib/Lamp* and then press  (Select).
- Use  to select *Incoming Setup* and then press  (Select).
- Use  to select *Incoming Call* and then press  (Select).
- Use  to select  (Ringtone) and then press  (Select).
- Use  to select *Original* and then press  (Select).
- Use  to select a ring tone and then press  (Set).
The incoming ring tone is set.
 - If you press  (Play), the tone plays.
- Press  (OK).

Adjusting the Incoming Ring Tone Volume

When the standby screen is displayed, press .

- Use  to select *Function* and then press  (Select).
- Use  to select *Sound/Vib/Lamp* and then press  (Select).
- Use  to select *Incoming Setup* and then press  (Select).
- Use  to select *Incoming Call* and then press  (Select).
- Use  to select  (Ringtone Volume) and then press  (Select).
- Use  to adjust the volume and then press  (Set).
 - Each press of  changes the volume one step.

<i>STEP</i> ↑	The ring tone volume gradually increases.
<i>STEP</i> ↓	The ring tone volume gradually decreases.
Level5 ↓ Level1	The ring tone sounds at the set volume.
<i>OFF</i>	The ring tone does not sound.

- Press  (OK).

Turning On the Answer Memo

When the standby screen is displayed, hold down

クリアメモ for at least one second.

■ is displayed on the standby screen.

Turning Off the Answer Memo

When the standby screen is displayed, hold down

クリアメモ for at least one second. The answer memo is turned off and ■ disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds long.
- Answer memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.

Playing a Message

If a message is recorded, *Answer Memo* appears on the standby screen.

- ➔ Use ◇ to select *Answer Memo* and then press ◉ (Select).
- ➔ Use ◇ to select the message you want to play and then press ◉ (Play).
 - To stop playing the message, press ◉ (Stop).

Deleting a Message

When the standby screen is displayed, press クリアメモ.

- ➔ Use ◇ to select *Answer Memo* and then press ◉ (Select).
- ➔ Use ◇ to select *Answer Memo List* and then press ◉ (Select).
- ➔ Use ◇ to select the message you want to delete and then press アブリ (SubMenu).
- ➔ Use ◇ to select *Delete* and then press ◉ (OK).
- ➔ Use ◇ to select *Delete One* and then press ◉ (OK).
- ➔ Use ◇ to select *YES* and then press ◉ (OK).

Global Functions

You can use your cell phone overseas in the area supporting Global Passport CDMA without any special applications.

Setting Area

When the standby screen is displayed, press .

→ Use  to select *Accessories* and then press  (Select).

→ Use  to select *GLOBAL Function*, press  (Select) and then press  (OK).

→ Use  to select *Area Setting* and then press  (Select).

→ Use  to select *Overseas* and then press  (Select).

• Confirmation screen is displayed. Use  to select *YES* and then press  (OK).

Calling to Japan from Overseas

When the standby screen is displayed, use  to  to enter a phone number.

→ Press  (Call).

→ Use  to select *Voice Call* and then press  (OK).

→ Use  to select *Call to Japan* and then press  (OK).

→ Press  (Call).

- At the time of purchase, the service area information (PRL: Roaming area information) is set. However, this information may be updated several times a year. Update to the latest data before departure.
- When making a call from Japan to a cell phone overseas supporting Global Passport CDMA, make a call in the normal operation.
- Subscribe and make initial settings for EZweb in Japan.

Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (Char.Type).

Menu Items

-  : Kanji conversion mode
-  : Double-byte katakana mode
-  : Single-byte katakana mode
-  : Double-byte alphanumeric mode
-  : Single-byte alphanumeric mode
-  : Double-byte number mode
-  : Single-byte number mode

Use  to select a character entry mode and then press  (OK).

Entering Alphanumeric Characters

You can use the keys  to  to enter characters.

More than one character is assigned to each key.

The following table shows the key assignment for entering characters.

Key	Number of Times to Press the Key																					
	1	2	3	4	5	6	7	8	9	10	11	12										
	.	@	-	_	/	:	~	1														
	a	b	c	A	B	C	2															
	d	e	f	D	E	F	3															
	g	h	i	G	H	I	4															
	j	k	l	J	K	L	5															
	m	n	o	M	N	O	6															
	p	q	r	s	P	Q	R	S	7													
	t	u	v	T	U	V	8															
	w	x	y	z	W	X	Y	Z	9													
	O	O	Inputs symbols																			
	Inputs symbols (switches an unconfirmed character between uppercase and lowercase).																					
	Adds a line break and displays characters in the opposite order.																					

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

■ Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

■ Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

■ Starting a New Line

Press .

- Certain functions such as c-mail do not support entering new lines.

■ Entering E-mail Addresses

■ E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the lowercase alphanumeric (single-byte) mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

■ How to Enter E-mail Addresses

Example: Entering "taro.23@kddi.co.jp"

Enter "taro.23".

- t : Press  once.
- a: Press  once.
- r: Press  three times.
- o: Press  three times.
- . : Press  once.
- 2: Press  once and then .
- 3: Press  once and then .

→ Enter "@".

- @: Press  twice.

→ Enter "kddi".

- k: Press  twice.
- d: Press  once and then .
- d: Press  once.
- i : Press  three times.

- ▶ Press  (SubMenu).
- ▶ Use  to select *Phrase* and then press  (OK).
- ▶ Use  (Category) to select *Internet*.
- ▶ Use  to select *.co.jp* and then press  (Select).
".co.jp" is entered.

Entering Pictograms

When a character entry screen is displayed, press .

- ▶ Use  to select the pictogram you want to enter and then press  (Select).
 - You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).

Phone Book

Saving a Phone Book Entry

When the standby screen is displayed, hold down  for at least one second.

- Use  to select *[Name]* and then press  (Select).
- Enter a name and then press  (OK).
The *[Reading]* for the name is entered automatically.
- Use  to select *[Phone No.1]* and then press  (Select).
- Enter a phone number and then press  (OK).
 - If the phone number is for a fixed-line phone, enter the phone number starting with the area code.
- Use  to select a phone number type and then press  (Select).
 - Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).
- Use  to select *[E-mail Address1]* and then press  (Select).
- Enter an e-mail address and then press  (OK).
- Use  to select an e-mail address type and then press  (Select).
- Press  (Reg).

- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save three phone numbers and three e-mail addresses for each phone book entry.
- You can also assign a group No., and enter birthday, address, and other information.

Dialing from the Phone Book

When the standby screen is displayed, press .

- Use  to select the entry containing the phone number you want to dial and then press  (Detail).
- Use  to select the phone number and then press  (Select).
- Use  to select *Voice Call* and then press  (OK).

Editing Phone Book Entries

When the standby screen is displayed, press .

- Select an entry and press  (Detail).
- Press  (Edit).
- Edit the contents and then press  (Reg).
- Use  to select *Overwrite* and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

- ▶ Press  (SubMenu).
- ▶ Use  to select *Reg to Adrs Book* and then press  (OK).
- ▶ Use  to select *Register New* and then press  (Select).
- ▶ Use  to select a phone number type and then press  (Select).
 - For details on saving a phone book entry, see page 23.

Using E-mail

To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.

- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to up to 30 different addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.

Creating and Sending E-mail Messages

When the standby screen is displayed, press .

- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Use  to select *Address* and then press  (Select) twice.
- ➔ Use  to select *Address Book* and then press  (Select).
- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select an address and then press  (Select).
- ➔ Press  (OK).
- ➔ Use  to select *Subject* and then press  (Select).
- ➔ Enter a subject and then press  (OK).
 - You cannot enter single-byte katakana characters or a new line in a subject.
- ➔ Use  to select *Text* and then press  (Select).
- ➔ Enter text and then press  (OK).
 - You cannot enter single-byte katakana characters.
- ➔ Press  (Send).

Reading Received E-mail Messages

When you receive an e-mail message, *E-mail* appears on the standby screen.

- Use to select *E-mail* and then press (Select).
- Press (Select).
- Use to select the new message and then press (Select).

Reading an E-mail Message from the E-mail Menu

When the standby screen is displayed, press to display the E-mail menu, use to select *Inbox* and then press (Select).

For subsequent operations, see "Reading Received E-mail Messages" above.

Reading an E-mail Message with an Attached Photo or Movie

Example: Viewing an attached photo

Display the e-mail message that has an attached photo (above).

- Use to select the file name and then press (Select).

- Use to select the file name and then press (Receive).
- Press (Play).

- Selecting the file name or pressing (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replies to Received E-mail Messages

When the standby screen is displayed, press .

- Use to select *Inbox* and then press (Select).
- Press (Select).
- Use to select the message you want to reply to and then press (Select).
- Press (Reply).
"Re:" is prefixed to the subject, and the text of the message is quoted.
- Refer to "Creating and Sending E-mail Messages" (page 25) for subsequent operations.

Rejecting Spam

Setting mail filters to reject spam is recommended. The サポート設定 (Supportive Settings) helps you to set mail filters easily by answering questions that appear on the screen.

Setting Mail Filters

Example: Connecting to サポート設定 (Supportive Settings)

When the standby screen is displayed, press .

- ▶ Use  to select *E-mail Setup* and then press  (Select).
- ▶ Use  to select *Mail Filter* and then press  (Select).
- ▶ Use  to select 次へ (Next) and then press  (Select).
- ▶ Use  to select the input box and then press  (Input).
- ▶ Enter your security code and then press  (OK).
- ▶ Use  to select 送信 (Send) and then press  (Select).
- ▶ Use  to select an item and then press  (Select).

カンタン設定 (Simple Settings)

サポート設定 (Supportive Settings)	Set the filter by answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルターレベル (高) Filter Level (High)	Shut out all mail from PCs This is recommended for users who only want to send mail to and receive mail from cell phones.
フィルターレベル (中) Filter Level (Medium)	Block unsolicited advertisement, spoof e-mail and mail from specific addresses This is recommended for users bothered by certain senders or spam mail.
フィルターレベル (低) Filter Level (Low)	Block unsolicited advertisement and spoof e-mail This is the minimum level recommended for all users.

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 12.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters.

- The c-mail send charge applies when sending c-mail.

C-mail Safety Block

C-mail safety block is a function that allows you to reject c-mails that include URLs (`http://△△△`, `https://△△△`) or phone numbers in the c-mail message text. C-mail safety block is valid by default. Cancel the setting if you want to receive c-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages

When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Enter text and then press  (OK).
- ➔ Use  to select */Address* and then press  (Edit).
- ➔ Use  to select *Quote Adrs Book* and then press  (OK).

- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select a phone number and then press  (Select).
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a c-mail message, *C-mail* appears on the standby screen.

- ➔ Use  to select *C-mail* and then press  (Select).
- ➔ Press  (Select).
- ➔ Use  to select the new message and then press  (View).

Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select *Inbox* and then press  (Select). For subsequent operations, see "Reading Received C-mail Messages" above.

Camera

Your cell phone can take photos and movies. Shot images can be used for the standby screen, and attached to e-mail messages.

Taking a Photo

When the standby screen is displayed, press .

- Use  to select *Camera* and then press  (Select).
- Use  to select *Photo (W.paper Mode)* and then press  (Select).
- Press .

The preview screen is displayed.

Viewing Photos

When the standby screen is displayed, press .

- Use  to select *Data Folder* and then press  (Select).
- Use  to select *Photo Folder* and then press  (Select).
- Use  to select a folder and then press  (Select).
- Use  to select the photo you want to view and then press  (Select).

Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta-Full®, Chaku-Uta®, news, and other contents from web pages.

To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.

Accessing Sites

Viewing the au one Top

You can access EZweb from the au one Top. A variety of useful and fun sites are available on EZweb.

When the standby screen is displayed, press , use  to select *Top Menu/Search* and then press  (Select).



キーワード検索機能 (Search by Keyword) Provides a search function for searching for information by keyword.	集まる (Community) Provides interesting and useful information that you can use for SNS or blogs.
カテゴリ (メニューリスト) (Category (Menu List)) Provides a list of various content provider sites.	メール (Mail) Provides an extra e-mail address that can be used on your PC.
トップニュース (Top News) Provides automatic updates of the latest news.	マイページ (My Page) Provides useful information and tools tailored to your cell phone usage and a large data storage area.
最新オススメ情報 (Latest News) Introduces up-to-date information concerning entertainment, daily life, etc.	au style Introduces information and sites that au recommends.
天気・乗換・占い・テレビ・銀行 (Weather, Transportation, Horoscope, TV & Bank) Provides direct access to these au one services.	とくする情報 (Valuable Information) Presents gifts and push information to the EZweb subscriber for free.
買う (Shopping & Auctions) Provides a list of shopping and auction sites available from your cell phone.	auお客さまサポート (au Customer Support) Provides information about charges, various applications, au online manual and notices from au.
知る (Tips & Tools) Provides information on sports and stock prices, as well as useful tools such as maps and dictionaries.	auワンちゃんの部屋 (au Doggy's Room) Introduces au Doggy.
楽しむ (Hobbies & Culture) Provides the latest information, such as games, music, books, hobbies and entertainment.	カンタンアクセス・オープンサイト (Simple Access & Open Site) Provides easy access and introduces open sites.
暮らす (Lifestyle) Provides travel, restaurant and other lifestyle-oriented information.	災害用伝言板 (Disaster Message Board) Register and confirm safety information in time of disaster.
	ENGLISH Introduces English sites.

Basic Operations

Use  to select the site you want to access and then press  (OK).

Press  or  to return to the previous screen. Hold down either key for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available above or below the current screen, scrolls the screen page by page.  : Scrolls one page up.  : Scrolls one page down.
 , 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (BrowserMenu).

→ Use  to select *New bookmark* and then press  (OK).

- Some pages cannot be bookmarked.

→ Press  (Reg).

The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages

When the standby screen is displayed, press  and then use  to select *EZweb*.

→ Use  to select *Bookmark(s)* and then press  (Select).

→ Use  to select the bookmark for the page you want to view and then press  (Connect).

The cell phone connects to the site.

Checking Charges

When the standby screen is displayed, press .

→ Use  to select *Function* and then press  (Select).

→ Use  to select *Time/Toll/Sub* and then press  (Select).

→ Use  to select *Inquire Toll* and then press  (Select).

→ Use  to select *YES* and then press  (OK).
• Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta-Full®/Chaku-Uta®

When the standby screen is displayed, press  and then use  to select *EZweb*.

→ Use  to select *Top Menu/Search* and then press  (Select).

→ Use  to select *カテゴリ (メニューリスト)* (Category (Menu List)) and then press  (OK).

→ Use  to select *着うた (Chaku-Uta®)* or *着うたフル・ビデオクリップ (Chaku-Uta-Full®・Video Clip)* and then press  (Select).

→ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 13 for details.

→ **Follow the on-screen instructions.**

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

→ **Press  (Play).**

The downloaded Chaku-Uta-Full® or Chaku-Uta® plays.

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

EZ Navi

EZweb Subscription Required

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select the EZnavi.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 10).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically send a mail notification to the specified au cell phones when you enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out

フルモード (Full mode)



Function	Explanation
トータルナビ／地図 (Total Navigation/Map)	Navigate optimum route from various transportation means such as train/aircraft/bus/taxi. See current position and map of wherever you like.
乗換／時刻表(Connection/Timetable)	Search for train connections, timetables and railway information.
お店／施設／イベント (Shop/Facility/Event)	Search for shops, facilities and event information.
ドライブ／渋滞情報 (Road/Traffic Information)	See road and traffic information nationwide in real time.
オススメ便利メニュー (Useful Menu)	Provides PC cooperative service and functions enabling you to enjoy EZ Navi Walk more.
設定／会員登録／インフォ(Setting/ Membership Registration/Information)	Configure settings/membership registration/campaign information.

シンプルモード (Simple mode)



Function	Explanation
ナビをする(Navigation)	Navigate optimum route from various transportation means such as train/aircraft/bus/taxi.
現在地の地図 (Map of Your Current Location)	See map around of your current location.
乗換案内(Connection Information)	Confirm train connections from the departure to the arrival station.
渋滞／交通情報 (Traffic/Transit Information)	See road and traffic information nationwide in real time.
会員登録・インフォ (Membership Registration/Information)	Configure settings/membership registration/campaign information.
フルモードとは(About Full Mode)	Introduces functions available in Full mode.

Bluetooth

Registering Bluetooth® Devices

When connecting from your cell phone to Bluetooth® devices, you need to register the Bluetooth® device you want to connect beforehand. You do not need to operate this procedure to connect to an already registered device.

When the standby screen is displayed, press .

- ▶ Use  to select *Bluetooth/IrComm* and then press  (Select).
- ▶ Use  to select *Bluetooth* and then press  (Select).
- ▶ Use  to select *New* and then press  (Select).
Device which answered will be displayed.
- ▶ Use  to select the Bluetooth® device, and then press  (Reg).
- ▶ Input the passkey (1 to 8 digits), and then press  (OK).
 - Input the same passkey between your cell phone and the Bluetooth® device. When connected, the Bluetooth® device will be registered.

Using Bluetooth® Functions

When *Waiting ON* is set, you can use wireless output, hands-free call, and dialup connection.

When the standby screen is displayed, press .

- ▶ Use  to select *Bluetooth/IrComm* and then press  (Select).
- ▶ Use  to select *Bluetooth* and then press  (Select).
- ▶ Use  to select *Waiting ON/OFF* and then press  (Select).
- ▶ Use  to select *Waiting ON* or *Waiting OFF* and then press  (Select).

USB Connection

Connecting to PCs

After installing the "USB driver," follow the steps below to connect your cell phone and the PC by the USB cable (sold separately).

Connect the USB cable (sold separately) to the USB port of the PC.

- ▶ **Turn on your cell phone and display the standby screen.**
- ▶ **Connect the USB cable (sold separately) to the external connection jack of your cell phone.**

When all connection is completed, the PC will automatically recognize your cell phone.

- If selection screen appears when connecting your cell phone to the PC, select "Fullspeed Trans" or "Highspeed Trans."

- Do not connect your cell phone to the PC before installation is completed.
- Do not use the USB hub or an extension cord.

In Case of Loss of Your Cell Phone

The Remote Ctrl Lock allows you to remotely activate the Auto Lock, FeliCa Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Ctrl Lock

You can activate the Remote Ctrl Lock by calling your cell phone a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- Use  to select *Function* and then press .
- Use  to select *Privacy/Rstr* and then press .
- Use  to select *Security Lock* and then press .
- Use  to select *Rem. Ctrl Lock* and then press .
- Enter Lock No., and then press .
- Use  to select *Valid No.* and then press .
- Use  to select *[Register New]* and then press .

- Use  to select *Direct Input*, press (OK), enter a phone number, and then press .
- Press .
- Use  to select *Duration (min)* and then press .
- Enter a time and then press .
- This sets the time limit for receiving the set number of calls after the first call is received.
• You can set a time from one to ten minutes.
- Use  to select *No. of Incm*, and then press .
- Enter a number of calls, and then press .
- This sets the number of calls to receive to activate the Remote Ctrl Lock.
• You can set a number of calls from three to ten.
- Press .
- Use  to select *YES* and then press .

Remotely Activating the Remote Ctrl Lock on Your Cell Phone

Call to your cell phone from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Ctrl Lock is activated and a message plays telling you that the cell phone is locked.

Activating the Remote Ctrl Lock by the Security Lock Service

Even if the Remote Ctrl Lock is not set in advance, the Remote Ctrl Lock can be activated by calling au Customer Service Center or completing the application process on au Customer Support from a PC.

The Security Lock Service is available free of charge.

- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

Calling au Customer Service Center to Activate/Cancel the Remote Ctrl Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours

Follow the voice guidance to complete the application process.

Activate/Cancel the Remote Ctrl Lock from a PC

Login to au Customer Support (<https://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Ctrl Lock cannot be activated when your cell phone is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	8
	● Did you hold down  for at least a few seconds?	Hold down  for at least a few seconds.	10
Cannot make calls.	● Is power turned on?	Hold down  for at least a few seconds.	10
	● Is out of range indicator displayed?	Move to a location where out of range indicator is no longer displayed, and try again.	10
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your hand or any other metal object is not covering the area around the built-in antenna.	7
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	14
	● Is out of range indicator displayed?	Move to a location where out of range indicator is no longer displayed.	10
Cannot receive calls.	● Is power turned on?	Hold down  for at least a few seconds.	10
	● Is power turned on?	Hold down  for at least a few seconds.	10
No response when a key is pressed.	● Is power turned on?	Hold down  for at least a few seconds.	10
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	8
Calls are answered automatically.	● Is Answer memo turned on?	Hold down  for at least one second to turn off Answer memo.	18

Symptom	Possible Cause	Remedy	Page
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	16
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is out of range indicator displayed? Or are you in a location where the signal is too weak?	Move to a location where out of range indicator is no longer displayed.	10
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	14
The incoming indicator (LED) flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	16
	● Is ring tone off indicator displayed?	Increase the volume of the incoming call ring tone.	17
Cannot charge the battery pack.	● Are the plug and connector of the AC adapter (sold separately) inserted properly?	Insert the plug and connector firmly.	8
	● Is the battery pack installed correctly?	Correctly install the battery pack.	
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera lens?	Check the position of the camera lens and remove the obstacle.	-

- For more detailed information, visit the following au troubleshooting sites:

- From an au cell phone:  ⇒ *Top Menu/Search* ⇒ *auお客様サポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual) ⇒ *故障診断Q&A* (Troubleshooting FAQ)
- From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



FCC RF EXPOSURE INFORMATION

Warning! Read this information before using your phone.

electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Specific Absorption Rate (SAR) for Wireless Phones

The highest reported SAR values CA005 are: CDMA modes (Part 22).
Head: 0.073W/kg; Body-worn: 0.263W/kg

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on FCC ID TYKNX6580.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://www.ctia.org>.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency