



SUMMIT SEMICONDUCTOR LLC

Model No.: 444-2196H FCC ID: UA9300

USER MANUAL

Issue Date: 10 October, 2010

Revision: 1.0

Revision History

Rev. No.	History	Issue Date	Remarks
1.0	Draft Release	10 October, 2010	Pending FCC Grant



COPYRIGHT 2010 SUMMIT SEMICONDUCTOR LLC ALL RIGHTS RESERVED

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROTECTED BY COPYRIGHT LAWS OF THE UNITED STATES OF AMERICA AND OTHER COUNTRIES. IT MAY NOT BE REPRODUCED OR DISTRIBUTED IN ANY FORM BY ANY MEANS, ALTERED IN ANY FASHION, OR STORED IN A DATA BASE OR RETRIEVAL SYSTEM, WITHOUT EXPRESS WRITTEN PERMISSION OF SUMMIT SEMICONDUCTOR LLC.

SUMMIT SEMICONDUCTOR CANNOT BE RESPONSIBLE FOR UNAUTHORIZED USE OF EQUIPMENT AND WILL NOT MAKE ALLOWANCE OR CREDIT FOR UNAUTHORIZED USE OR ACCESS

Model No. 444-2196H www.summitsemi.com 2 of 13

22867 NW Bennett St., Suite 200 Hillsboro, OR 97124 TEL (503) 615 7734 FAX: (503) 615 4432



Table of contents

1.0 Regulatory Statement	4
1.1 FCC Certification	4
2.0 Introduction	5
3.0 Installation and Test procedure	8
3.1 Boot	
3.2 Setting frequency channel, data rate and transmit power	
3.3 Stop Transmitting	
4.0 System Requirements	13



1.0 Regulatory Statement

The United States Federal Communication Commission has established certain rules governing the use of electronic equipment.

1.1 FCC Certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and radiates radio frequency energy and if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications.

CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This radio is compliant with FCC RF Exposure requirements for mobile devices. Users are cautioned to maintain 20 cm from the transmitter to ensure compliance.

CAUTION: The operation of this radio in the 5.15-5.25 GHz frequency band is restricted to indoor use only.



2.0 Introduction:

The 444-2196H Wireless Audio Client device is a production ready module designed for active speakers in Summit Semiconductor's wireless audio technology. The module mounts to the top interior wall of a typical speaker. The module includes a patented, low cost, high gain quad diversity PCB antenna integrated in the module to provide superior wireless performance without external antennas. A 40 pin interface provides, I2S digital audio outputs, power, I2C and GPIO signals for control of the amplifier and power supply.



FRONT SIDE



BACK SIDE


CAUTION: DO NOT TRY TO REPLACE THE ANTENNAS



3.0 Installation and Test Procedure

A host interface board is used to provide the necessary regulated power supply to the 444-2196H Wireless Audio Client device.

The set up is as shown in the picture below.

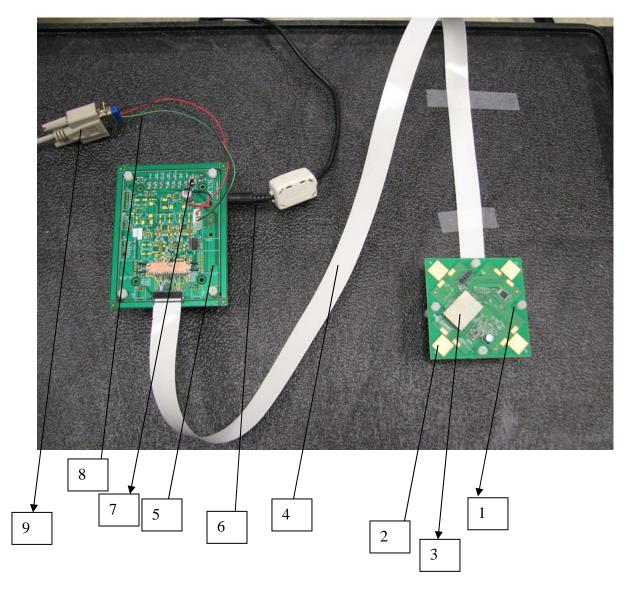



1	Wireless Audio Client device	
2	Integrated Antenna	
3	RF Can	
4	Multi pin flex cable	
5	Hermiston (Interface Board)	
6	Power Input 3.3V	
7	Reset button	
8	RS232 interface	
9	Serial cable	

3.1 Boot:

- ➤ Download Summit Semiconductor's Hood_BIST_0013 software onto your computer.
- Connect a multi pin flex cable from Hermiston (interface board) to 444-2196H Wireless Audio Client device as shown in the picture.
- ➤ Connect a 3.3V DC supply to Hermiston (interface board) from a variable or a fixed source.
- ➤ Connect the RS232 interface from J9 of the interface board (Hermiston) to the serial cable.
- ➤ Connect the serial cable to the computer's COM port.
- ➤ Press the reset button for the DUT to boot. Your screen should look as below.



SUMMIT SEMICONDUCTOR LLC

```
C. C. Documents and Scilings Jonnapopus Desidop Mond JRST_0013 exe

We loom to the Hood JRST Monitor Version 13.

Serial port cont successfully reconfigured.

Processor JRS Land Landing Address < 4800800.

Processor JRS Landing Landing Address < 4800800.

Processor JRS Landing Landing Address < 4800800.

Processor JRS Landing Landing Address < 4800800.

Expected DRFS Section to be loaded, and it was MOI. Please load the COEFR Flack Section Coeff Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update the COEFR Flack Section Version 182. found fffit: Please update Version 182. found ffit: Please update Version 1
```



3.2 Setting Channel, data rate and transmit power

The following transmit command is used to set the transmitter in a particular channel and to start transmitting.

tx -1 1 d 4 8 255

The parameters in the command are explained below.

-1	Transmit continuous control	
1	Antenna selected control (A1)	
d	Data rate selection (6Mbps)	
4	Transmit Power Control	
8	8 Channel selection (5180 MHz)	
255	Time out control	

Please refer the table below to change frequencies in the transmit command.

Channel No in Transmit	
Command	Frequency
8	5180
10	5200
12	5220
14	5240
15	5260
16	5280
17	5300
18	5320
19	5500
20	5520
21	5540
22	5560
23	5580

Model No. 444-2196H www.summitsemi.com 11 of 13



24	5600
25	5620
26	5640
27	5660
28	5680
29	5700
30	5745
31	5675
32	5785
33	5805
34	5825

Example:

- 1) tx -1 1 d 4 8 255; The DUT transmits in frequency 5180 MHz
- 2) tx -1 1 d 4 30 255; The DUT transmits in frequency 5745 MHz

3.3 Stop transmitting

The following command is used to stop the DUT from transmitting.

stoptx



4.0 System Requirements

Operation:

PC with COM ports

Programming:

Windows XP and higher