
GD66CT Speaker

Quick Start Guide

Parts and Control

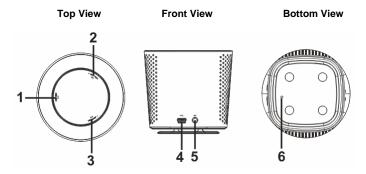

Getting Started

Carefully remove the speaker from packet.

Charging

When battery power is low, charge the speaker by connecting GD66CT to a computer or USB power adapter via the supplied USB cable.

The LED on the side with **Power** button and **Volume+/** button will turn red, indicating that it is on charging mode.

The LED will turn off when fully charged.

Turning on the speaker/bluetooth

- To turn on the Portable Speaker, press and hold the Power button for about 3 seconds until you hear a beep, then the LED indicators on Power/ Volume +/- button will blink in blue.
- Continuously press and hold the **Power** button for 2 seconds to turn on the bluetooth, then you will hear another beep.

Turning off the speaker/bluetooth

- To turn off the portable speaker, press and hold the **Power** button for about 3 seconds to turn off the bluetooth, then you will hear a beep.
- Continuously press and hold the Power button for 2 seconds to turn off the Portable Speaker; then you will hear another beep, and the LED indicators on the Power/ Volume +/- button will turn off.

Playing music

Please follow the below steps to play music.

- 1. Unwind the connector cable around the portable speaker base.
- 2. Plug the connector to the music source,e.g. PCs/laptops, MP3 players or radios.
- 3. Turn on the Portable Speaker.
- 4. Start playing the selected music or radio from the music source.

Adjusting the volume level

Press the **Volume+ or Volume-** button to increase or decrease the level of the volume.

When the volume level is the maximum or minimum, you will hear a alarm beep.

Setting Bluetooth mode

- 1. Turn on the Portable Speaker and turn on the bluetooth.
- 2. The bluetooth device of music source will search for GD66CT speaker, then select the "GD66CT" and pair the GD66CT speaker with the Bluetooth device.
- 3. Start playing the selected music or radio from the music source.
- 4. Press the **Volume+** or **Volume-** button to go to next/previous song; Press and hold to adjust the volume level.
- 5. Press the **Power** button to play/pause the music playback.

Note: If there is no response on the speaker, press the **Reset** button at the bottom of the speaker.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.