# HomeDock Music Remote...



DIGITAL LIFESTYLE OUTFITTERS

HD\_musicremote\_manual\_GM2:Layout 1 4/23/07 5:33 PM Page 2

### Contents

Quick Start	4
Included in the Box	6
Getting Connected	7
The Music Remote	10
Setting Up Your Music Remote	11
Using the Music Remote	12
iPod + Music Remote Settings	14
Changing iPod Settings	14
Changing Music Remote Settings	14
Additional Features	15
Jukebox	15
Syncing to iTunes and Your Computer	15
Playing Videos	16
Tips + Troubleshooting	17
Tech Specs	20
Service + Support	21
Warranty	22
FCC Statement	23

#### © 2007 Digital Lifestyle Outfitters

DLO logo, Digital Lifestyle Outlitters & HomeDock Music Remote are trademarks of Digital Lifestyle Outlitters. iPod is a registered trademark of Apple Inc. in U.S. and/ or other countries. All Rights Reserved Printed in Taiwan M-61000-070302-B

2 | DLO HOMEDOCK MUSIC REMOTE USER MANUAL

| 3

HD\_musicremote\_manual\_GM2:Layout 1 4/23/07 5:34 PM Page

### **Quick Start**

#### DLO HomeDock Music Remote Quick Start

Thanks for purchasing the DLO HomeDock Music Remote, the dock that leaves your iPod on the stereo while you navigate your music on the display remote anywhere in the house.

### We'll get you started with these easy steps:


- STEP 1 Plug the included AC power supply into any available AC power outlet, and then connect the power supply to the Music Remote Dock.
- STEP 2 Plug the included Audio Cable into the back of the Music Remote Dock and then into the L/R inputs of any available input on your stereo receiver.
- STEP 3 Charge the Music Remote battery by plugging it into the Music Remote Dock. While the Music Remote is charging, the screen will flash a Charging message. Once the Music Remote is fully charged, the screen will display Charging Complete for a few moments and then go blank.
- STEP 4 Dock your iPod in the Music Remote Dock. Then, adjust the Support Stand to fit your particular iPod by sliding the support up or down. Your iPod will start up in Music Remote Mode, as indicated by a check mark and OK to disconnect message on the iPod screen.

  NOTE: In Music Remote Mode, the iPod Click Wheel is non-functional.

- STEP 5 Remove the Music Remote from the Dock. On the main menu, select either Artist or Playlist. Your Music Remote will automatically begin downloading your iPod's content. This may take a few minutes.


  NOTE: Do not press any button on the Music Remote while it is in the process of downloading your iPod's content. This will stop the download process.
- STEP 6 Scroll through your Playlists or Artists using the Music Remote and begin controlling your iPod from anywhere in the house.

### Included in the Box

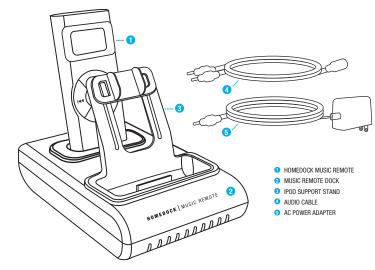

## **Getting Connected**

- USB MINI PORT
- 2 5V DC POWER
- 3 AV OUTPUT



### Connecting Your HomeDock Music Remote

Setting up your HomeDock Music Remote is easy. There are several ways you can use your Music Remote:

#### With your home stereo

To connect to a home stereo system, simply plug the included AC power adapter into the back of the Music Remote Dock, then into any available AC power outlet. Next, plug in the included Audio Cable into the back of the Music Remote Dock and then into the corresponding L/R inputs on your stereo.

### With a portable speaker system or other audio device

To connect to a powered speaker system or other audio device with an aux-in jack or mini-jack, plug the included AC power adapter into the back of the Music Remote Dock, then into any available AC power outlet. Next, plug in a standard 1/8"

HD\_musicremote\_manual\_GM2:Layout 1 4/23/07 5:34 PM Pa

mini-to-mini cable (available separately) into the back of the Music Remote Dock and the other end into the aux-in jack on the speaker system or device.

### Connect to your PC or Mac


Plug the included AC power adapter into the back of the Music Remote Dock, then into any available AC power outlet. Use a standard A-to-B USB cable (available separately) to connect the Music Remote Dock to your home computer using the USB mini port on the back of the unit.

### **Entertainment center and TV**

Plug the included AC power adapter into the back of the Music Remote Dock, then into any available AC power outlet. Next, plug in a standard A/V-to-mini cable (available separately) into the back of the Music Remote Dock and the corresponding A/V end into your stereo (audio) and TV (video, or video and audio if just using the TV).

### HomeDock Music Remote

The DLO HomeDock Music Remote features a full-function RF remote with a bright OLED display that will control your iPod's music anywhere. Its powerful range and easy-to-read display make it the ideal companion for enjoying your iPod out loud.

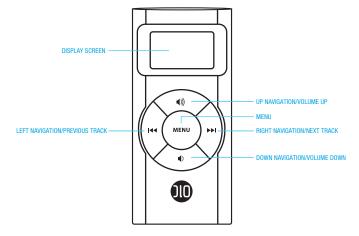

### Setting Up Your Music Remote

- STEP 1 After connecting your Dock, charging the Music Remote and inserting your iPod, press any button on the Music Remote to power it on. The Music Remote will power on into the Now Playing menu.
- STEP 2 Using the Down Nav button, scroll down to Settings and press the Right Nav button.
- STEP 3 Download Lists is now highlighted. Press the Menu button and your iPod will begin synching with the Music Remote. This can take several minutes, depending on the amount of music on your iPod. When the download process has completed, your iPod's Playlist and Artist information will be captured on the Music Remote.

  NOTE: Do not press any button on the Music Remote while it is in the process of downloading your iPod's content. This will stop the download process. Anytime you change the content on your iPod by adding new







Artists or Songs, or you use another iPod with the HomeDock Music Remote, you need to re-download your Lists.

### Using the Music Remote

The Music Remote's bright OLED display lets you navigate and select your iPod's music and other content. Just scroll to your desired selection using the Up or Down Nav buttons, and make your selection using the Right Nav or Menu button. The Music Remote will allow you to select your music by navigating through Playlists and Artists.

You can control playback functions with the Music Remote including Play/Pause, Fast Forward/Next Track, Rewind/Previous Track.

To adjust the volume, simply press the Volume Up or Volume Down buttons while on the Now Playing screen.

In the Now Playing menu, pressing the Menu button will take you to the Main Menu.



Anytime you wish to navigate back to the previous menu, simply press the Left Nav button and the Music Remote will display the previous menu screen. To navigate to the next menu, simply press the Right Nav button.

When you need to power your Music Remote On or Off, press and hold the Menu button for a few seconds.

To check the strength of your Music Remote's RF signal, go to Settings, About and you will be able to view the RF Signal Indicator Bar



## iPod + Music Remote Settings

The Music Remote lets you customize your iPod listening experience with multiple settings. Just go to Settings on the Main Menu screen and select the settings that are right for you.

### **Changing iPod Settings**

- EQ lets you select the perfect audio setting for the type of music you're enjoying. Choose from settings like Rock, Hip-Hop, Bass Booster, Jazz right from your iPod's EQ settings.
- Shuffle Songs will play back your music in random order.

#### **Changing Music Remote Settings**

- Display Timer lets you conserve your Music Remote's energy by setting it to sleep at either 30 seconds, 1 minute, or 2 minutes of inactivity. To quickly wake up your Music Remote, simply press any of its control buttons.
- Now Playing Mode lets you set the display to show you either Song/Artist information or Song/Next Song information.
- iPod Mode disables your Music Remote's iPod content navigation. In order to control playback of iPod videos using the Music Remote (though you may not navigate iPod videos using the Music Remote), you need to select iPod Mode.

### Additional Features

#### Jukebox

The Music Remote has a Jukebox feature that allows you to select up to 10 songs and play them on your iPod. In the Main Menu, select Jukebox. Next, select Song #1, which will offer your Artist selections. Select an Artist, then select the song of your choice. Repeat this process with up to 10 songs, then select Start Playing.

NOTE: When you navigate out of the Jukebox, your selections will not be saved.

#### Syncing to iTunes and Your Computer

The HomeDock Music Remote will also act as a dock for your iPod to sync with your computer and iTunes.

First, plug the included AC power adapter into the back of the Music Remote Dock, then into any available AC power outlet. Next, plug in an A-to-B USB cable (available separately) to connect your Music Remote Dock unit to your home computer. The Music Remote will sync and charge your iPod automatically. Do not use the Music Remote control with your iPod while it is docked and syncing with your computer. This will interrupt the syncing process.

To listen to your iPod using the Music Remote while it's connected to your computer, simply quit iTunes and use an the included Audio Cable or iPod audio cable to connect to your computer's speakers.

HD\_musicremote\_manual\_GM2:Layout 1 4/23/07 5:34 PM Page

## Tips + Troubleshooting

### **Playing Videos**

Your HomeDock Music Remote is designed to work with your iPod's music content, but it will also connect your iPod to a television and allow you to control video playback functions. To do this, connect the Music Remote to a television using an iPod A/V cable (available separately). Then, under Settings on the Main Menu screen, select iPod Mode to disable your Music Remote's iPod content navigation. In order to control playback of iPod videos using the Music Remote (though you may not navigate iPod videos using the Music Remote), you need to select iPod Mode. Start your video from the iPod itself, and then control playback functions using the Music Remote after your video has started.

## My Music Remote does not select the correct track, and is unresponsive. What is wrong?

You need to download your iPod content onto the Music Remote. To do this, navigate to the Main Menu screen by pressing the Menu button. Scroll down to Settings and press the Right Nav button. Select Download Lists from the Settings menu and your Music Remote will begin downloading your iPod's content. This can take several minutes, depending on the amount of music on your iPod. When the download process has completed, your Music Remote should have all of your iPod's music loaded and synced. Also, check to make sure your iPod is securely connected to the Music Remote Dock.

NOTE: The Music Remote's download process can be affected by outside RF interference. It is recommended that the download process be performed close to the Music Remote Dock.

#### My Music Remote is showing the wrong Playlists or Artists.

Your Music Remote must be synchronized with the current iPod in the Music Remote Dock. Select Download Lists from the Settings menu and your Music Remote will begin downloading your iPod's content.

HD\_musicremote\_manual\_GM2:Layout 1 4/23/07 5:34 PM Page

## My Music Remote keeps displaying "Out of Range" and I cannot see my iPod's music.

First, ensure that your iPod is securely connected to the Music Remote Dock. This is verified by the iPod screen displaying the Music Remote screen message OK to disconnect. The Music Remote is a powerful RF remote that will function through walls and other obstructions, but you may be out of range of the base unit or experiencing some kind of outside interference. Move closer to the Music Remote Dock to verify communication. (Once communication is well established, you can verify distance and RF communication under About in the Settings menu). If these steps do not work, or your Music Remote seems to be non-responsive, you should reset the unit by pressing and holding the Menu button and Up Nav/Volume Up buttons simultaneously for a few seconds until you see the DLO logo appear. Finally, the Music Remote can be reset by pressing a needle or paper clip end into the reset access hole on the bottom left side of the remote.

### Do I need to download both lists (Artists and Playlists) separately?

No. Once you select Download Lists, both lists will automatically be downloaded to your Music Remote.

### When I place my iPod into the Music Remote Dock, the iPod does not enter the Music Remote Mode.

Be sure that your iPod contains recent firmware. Visit apple.com/ipod/download to get the latest iPod software updates.

# When I place my iPod into the Music Remote Dock, the iPod Click Wheel is no longer functional.

Don't worry, the Music Remote is working correctly and provides the same functionality as the iPod Click Wheel.

#### My music sounds distorted and "fuzzy".

The Music Remote lets you control the volume of your iPod's music. However, it is important that you find the correct balance between your Music Remote's volume setting and the speaker system, stereo, TV, computer or other audio device's volume setting. Be sure to try different volume settings on your audio device until you find the optimum balance.

#### I removed my iPod from the Dock and it still displays "OK to Disconnect".

Return your iPod to the Dock and remove it after a few minutes. If this does not work, you can also reset your iPod by holding down the Menu + Center buttons.

## Tech Specs

### Dock

AV Output (L/R audio, video): aux out jack

Power Input: 5 VDC, 1 amp

USB mini port

Operating Frequency: 915.92 MHz

#### Remote

Operating Frequency: 915.92 MHz

Battery: 3.3 Volt Rechargeable Lithium Ion. (not user serviceable)

### **Power Adapter**

Power Adapter Input: 100-240VAC, 47-63 Hz

Power Adapter Output: 5 VDC, 1 amp

### Cable

mini-to-RCA Stereo Audio

# Service + Support

For more information, updates and tips, please visit our website at www.dlo.com and click Support.

I 21

### Warranty

Digital Lifestyle Outfitters Limited Manufacturer's Warranty

What This Warranty Covers. DLO (Digital Lifestyle Outfitters) warrants this product against defects in materials and workmanship. This limited warranty applies only to products manufactured by or for DLO.

What This Warranty Does Not Cover. This warranty does not apply to damage caused by: [a] accident, abuse, misaspelication, ordinary wear, improper maintenance, failure to follow instructions, or products not manufactured by or for DLO; and [b] aftermarket services [including upgrades and expansions].

How Long This Warranty Lasts. This warranty lasts for a period of ninety [90] days from the date of original retail purchase.

What DLO Will Do. If a defect exists, DLO will exchange the product, at its option, with a product that is new or has been manufactured from new or serviceable used parts and that is at least functionally equivalent to the original product. DLO will warrant a replacement product against defects in materials and workmanship for a period of ninety (90) days from the date of replacement.

How To Get Service. In order to be eligible for this warranty, you MUST register your purchase at www.dlo.com/register within thirty (30) days of purchasing this product. If you believe that this product is defective in materials or workmanship, please e-mail customerservice@dlo.com with a brief description of the problem, for further instructions.

No Change To Warranty. No DLO reseller, agent or employee is authorized to make any modification, extension, or addition to this warranty.

How State Law Applies. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state, or country.

Restrictions On Implied Warranties. All implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to

Restrictions On Damages. DLO is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory (including, without limitation, lost profits; downtime; goodwill; damage to or replacement of equipment and property; failure to maintain the confidentiality of data stored on the product; and any costs of recovering, reprogramming or reproducing any program or data stored in or used with products manufactured by or for DLO). Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you

W1000-050803-B

### **FCC Statement**

#### Federal Communications Commission Interference Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Any such modification could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

Thanks for purchasing the DLO HomeDock Music Remote

Move with your music – not your iPod