



4 CHANNEL RADIO CONTROL SYSTEM

Transmitter T4F

(2 sticks,4channel,FM transmitter) Transmitting frequency: 27,36,40,72 Mhz Modulation method:FM

Power requirement: 12V(penlight battery 8pcs); 3W


Receiver R4F


(4channel, FM receiver) Receiver frequency: 27,36,40,72 Mhz Size:40X25X15mm Power requirment: 4.8V or 6.0V; 200mW Transmitter: T4F-Aviator 4 1Pc

Receiver: R4F 1Pc Servo:M09 4Pcs

Servo M09

(Micro servo) Power requirment: 4.8V or 6.0V Output torque: 1.00kg/cm Operating speed: 0.10sec/60degree Size:24X12X23mm Weight:9.0g

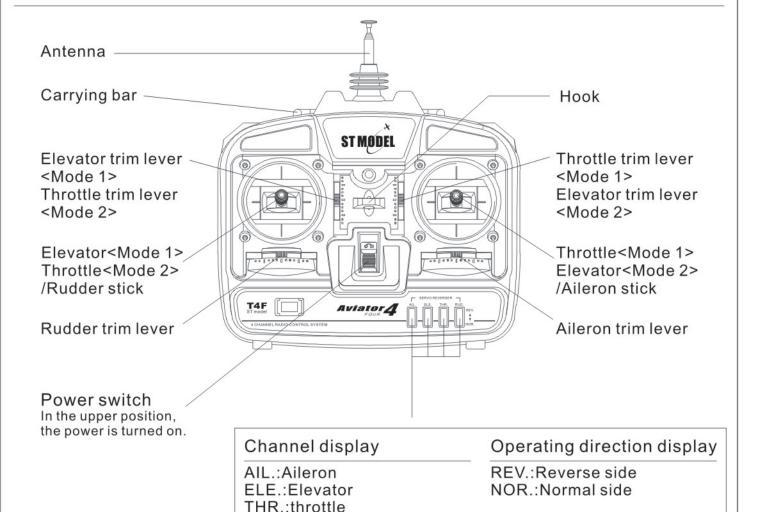



RUD.:Rudder

ShengTeng Electric R/C Model Plane Co.,Ltd Phone No.:0086-573-2032127 Fax No.:0086-573-2089745 E-mail:shengteng@263.net.cn Web site:www.sheng-teng.com

- Remove and insert the battery according to the "positive / negative" marks of battery case of the rear cover of transmitter.
- Non-rechargeable batteries are not to be recharged;
- Rechargeable battery are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Children under the age of 12 must be accompanied by an adult.
- The battery chargers used with the toys are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this battery charger until the damage has been repaired.