Model: CS60-340

## **PICTORIALS – EUT**

Handle Assembly of Wrench
Bottom cap removed, exposing programming connector and charger port
(antenna wire is placed in circular groove of end cap).



Handle Assembly of Wrench
Metal cover removed, exposing battery compartment and transmitter housing.




Handle Assembly of Wrench *Metal cover removed, with battery removed.* 



Client: SEEG Order Number: F2LQ2956A Model: CS60-340


## Transmitter/Controller Unit Removed From Wrench

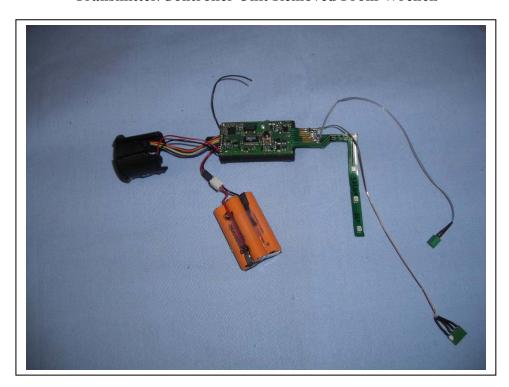

Transmitter/Controller Unit - Close-up of Component Side of PCB



Transmitter/Controller Unit Reverse side of PCB after removal from plastic mounting.

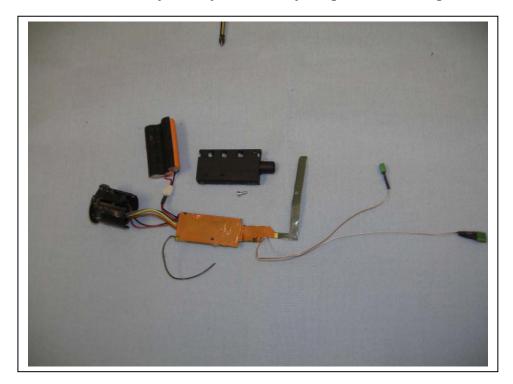

**Transmitter/Controller Unit** Close-up of Reverse Side of PCB



Bottom View of PCB, with Copper Tape Removed

