

REPLACING THE BATTERY:

NOTE: The battery for both the receiver and transmitter are inside of the product

1. Slide the battery cover off for both the RECEIVER and TRANSMITTER.
2. Remove the old batteries and carefully replace with new batteries of the same kind.
3. Replace both battery covers.
4. The batteries should be replaced after 6 months.

SPECIFICATIONS:

Reception Range: 60 ft
Operational Condition:
Temp: 0-40 degrees Celsius
Humidity: 40% - 99% RH
Standard: FCC Approved

TROUBLESHOOTING


For any problems with your Luggage Retriever, please refer to the "TROUBLESHOOTING" section located on our website.

<http://www.luggageretriever.com>

Warning Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undersired operation.

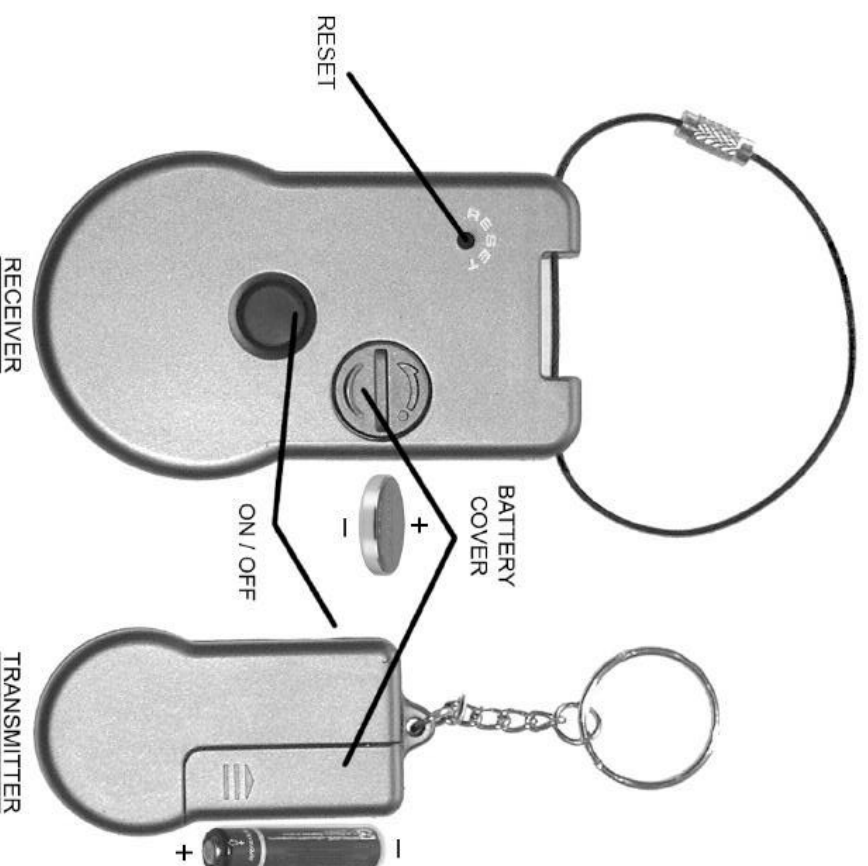

HOW IT WORKS:

1. The Luggage Retriever™ (LR) system consists of 2 units. A RECEIVER, and TRANSMITTER. The LR system uses Radio Frequency signals, ensuring no interference with other systems.

2. The LR system allows you to use more than 1 receiver with 1 transmitter. For all additional receivers, please follow the instructions below:

The 2 units must be within a few inches of each other. Turn on the additional receiver. Press and hold the reset button while pressing and holding the transmitter button until you hear a beep from the receiver, this will take a few seconds. This unit is now set to work with the desired transmitter.

WARNING:

This product conforms with FCC regulations, do not use product for any other use than intended.

This product is not a toy & not intended for use by children under 8 years old.

Do not expose product to intense heat. Or expose it to intense sun light.

Do not immerse transmitter or receiver in liquid.

Transmitter and receiver are water resistant not water proof.

The batteries are chemical waste, please dispose of them properly.



Luggage Retriever Inc.
4211 North Federal Hwy., Unit 1,
Pompano Beach, FL 33064
(888) 880-1771



**LUGGAGE
RETRIEVER™**

INSTRUCTION MANUAL

HOW IT IS USED:



1. Attach the receiver, via the strap provided, onto the handle of your luggage. Keep the transmitter with you. Before checking your bags at the airline, activate the receiver attached to your luggage by pushing and holding the ON/OFF button until it beeps. (located on the back of the receiver)

To activate the transmitter, slide the small switch on the side. (a green dot will be visible)

2. To test your system, both units must be turned on. Press the transmitter button, and the receiver will beep and flash.

3. After testing the system, turn off the transmitter to prevent activation during your trip. Turn on when you are ready to retrieve your luggage.

4. Check battery life before each use. Activate the receiver, the blinking red light means good battery power. A solid red light, indicates the batteries must be replaced.