




# Game Controller

Read and follow all safety instructions before use or risk bodily injury, damage to property and/or void your warranty.

## Box Contents:



## Game Controller Back:

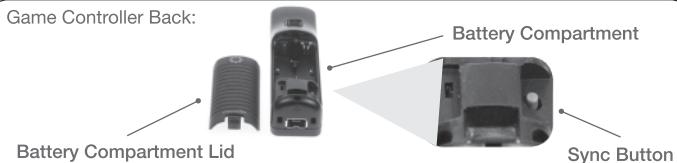

### ① Load Battery



Remove battery compartment lid and add two 1.5 volt alkaline AA batteries or Memorex Rechargeable Battery Pack for Wii™.

### ② Sync with Wii™ Console



For First Time Use: Game Controller needs to sync with Wii™ console.



Press power button on Wii™ console.



Open the Wii™ SD card slot cover on the front of the console.



Press the sync button on the Wii™ console and Controller simultaneously for 3 seconds and let go. When the Controller LED lights stop blinking the sync has been successful



Replace battery compartment lid.



Fasten wrist strap securely to wrist before use.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

€2200