

You can insert a RDU into any slot. It is not possible to provide services with a RDU module alone; you need to connect the module with Cavity BPF in any case.

The table below shows types of RDU and CAVITY BPF:


No	Unit naming	Cavity BPF	RF CABLE	Multiplexer Interface	
				TX	RX
1	RDU 800PS	800PS BPF	TX CABLE 1EA RX CABLE 1EA	BPF OUT	RDM RX IN
2	RDU 850C	850C BPF	TX CABLE 1EA RX CABLE 1EA	BPF TX OUT	BPF RX IN
3	RDU 1900P+AWS-1	1900P DUP	TX/RX CABLE 1EA	RDM AWS+1900P	
5	RDU 800PS+900I+PA	800PS+900I+PA BPF	TX CABLE 1EA RX CABLE 1EA	RDM TX OUT	RDM RX IN
6	RDU 850C+700PS	850C+700PS BPF	TX CABLE 1EA RX CABLE 1EA	RDM TX OUT	RDM RX IN
7	RDU VHF+UHF	-	TX CABLE 1EA RX CABLE 1EA	-	-
8	RDU 850C+700LTEC	850C+700LTEC BPF	TX CABLE 1EA RX CABLE 1EA	RDM TX OUT	RDM RX IN
9	RDU 700LTEF+850C	700LTEF+850C BPF	TX CABLE 1EA RX CABLE 1EA	RDM TX OUT	RDM RX IN
10	RDU 700LTEF SISO	700LTEF SISO BPF	TX CABLE 1EA RX CABLE 1EA	RDM TX OUT	RDM RX IN
11	RDU 700LTEF MIMO	700LTEF SISO BPF	TX CABLE 2EA RX CABLE 1EA	RDM TX OUT	RDM RX IN

The following describes how to install RDU in ROU.

How to install RDU 800PS Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 800PS	RF Module	
2	800PS BPF	BPF	
3	800PS TX RF CABLE	SMA(M) to SMA(M), 360mm	
4	800PS RX RF CABLE	SMA(M) to SMA(M), 410mm	

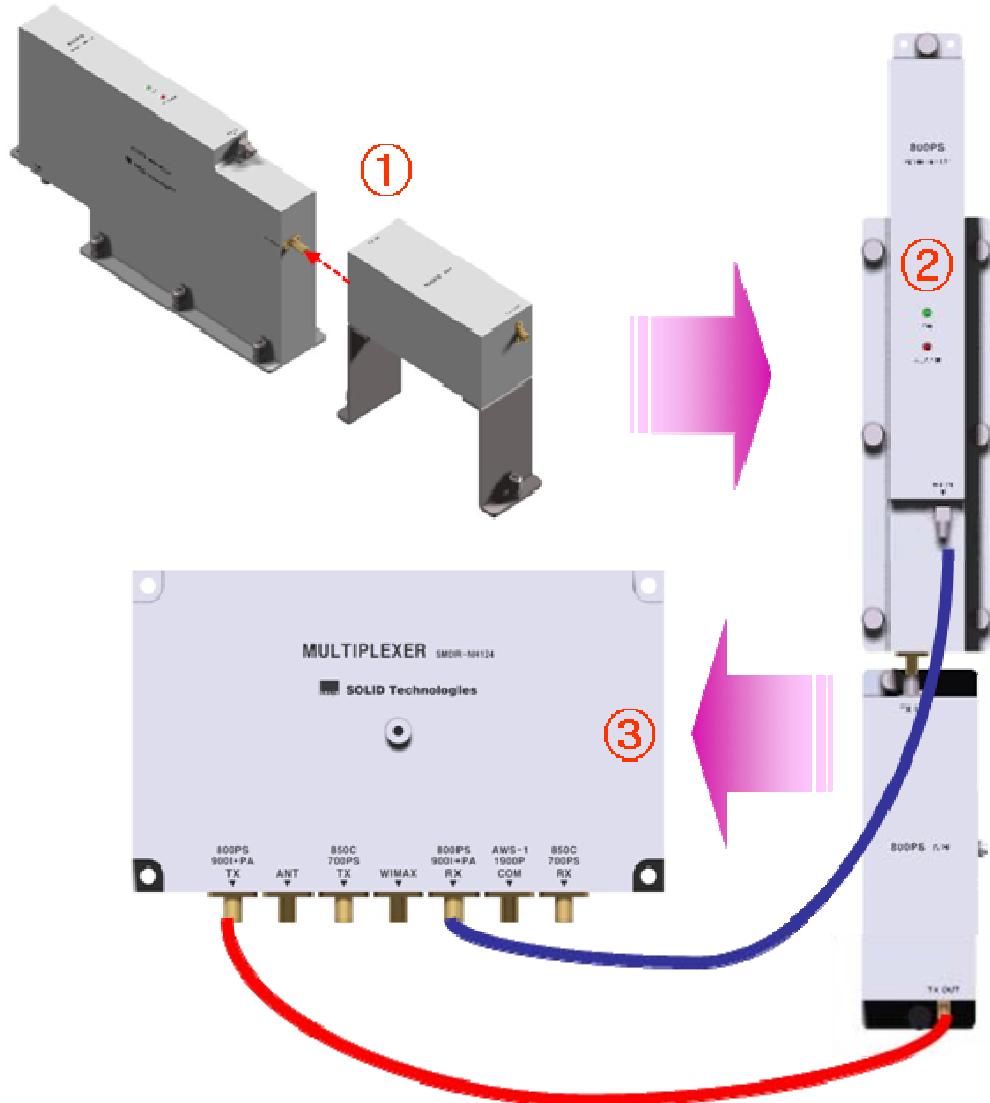


- ① Combine RDU 800PS with 800PS BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 800PS+850C BPF Ass'y into any slot of ROU.
- ③ Combination point of 800PS+800PS BPF Ass'y of the multiplexer

Multiplexer Port naming	Interface Point		Remark
	800PS RDU	800PS BPF	
800PS+900I+PA TX	-	TX OUT	
800PS+900I+PA RX	RX IN	-	

How to RDU install 850C Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 850C	RF Module	
2	850C BPF	BPF	
3	850C TX RF CABLE	SMA(M) to SMA(M), 310mm	
4	850C RX RF CABLE	SMA(M) to SMA(M), 310mm	

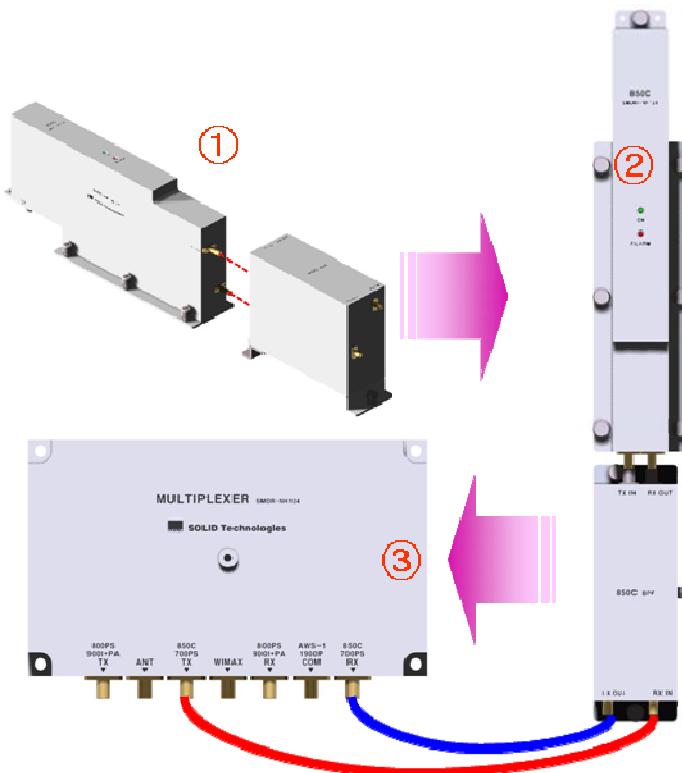


- ① Combine 850C RDU with 850C BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 850C+850C BPF Ass'y into any slot of ROU.
- ③ Combination point of 850C+850C BPF Ass'y of the multiplexer

Multiplexer Port naming	Interface Point		Remark
	850C RDU	850C BPF	
850C TX	-	TX OUT	
850C RX	-	RX IN	

How to install RDU 800PS+900I+PA Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 800PS+900I+PA	RF Module	
2	800PS+900I+PA BPF	BPF	
3	800PS+900I+PA TX RF CABLE	SMA(M) to SMA(M), 460mm	
4	800PS+900I+PA RX RF CABLE	SMA(M) to SMA(M), 380mm	

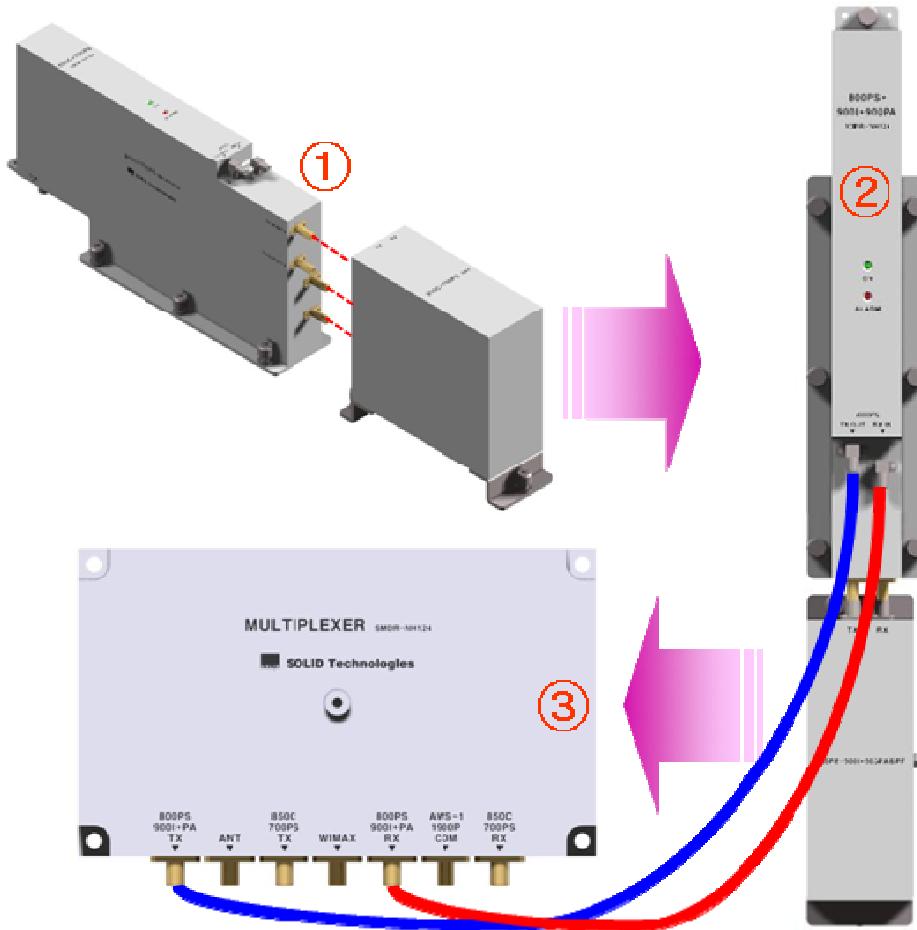

- ① Combine RDU 800PS+900I+PA with 800PS+900I+PA BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 800PS+900I+PA BPF Ass'y into any slot of ROU.
- ③ Combination point of 800PS+900I+PA BPF Ass'y of the multiplexer


Multiplexer Port naming	Interface Point		Remark
	800PS+900I+PA RDU	800PS+900I+PA BPF	

800PS+900I+PA TX	TX OUT	-	
800PS+900I+PA RX	RX IN	-	

How to install RDU 850C+700PS Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 850C+700PS	RF Module	
2	850C+700PS BPF	BPF	
3	850C+700PS TX RF CABLE	SMA(M) to SMA(M), 470mm	
4	850C+700PS RX RF CABLE	SMA(M) to SMA(M), 400mm	

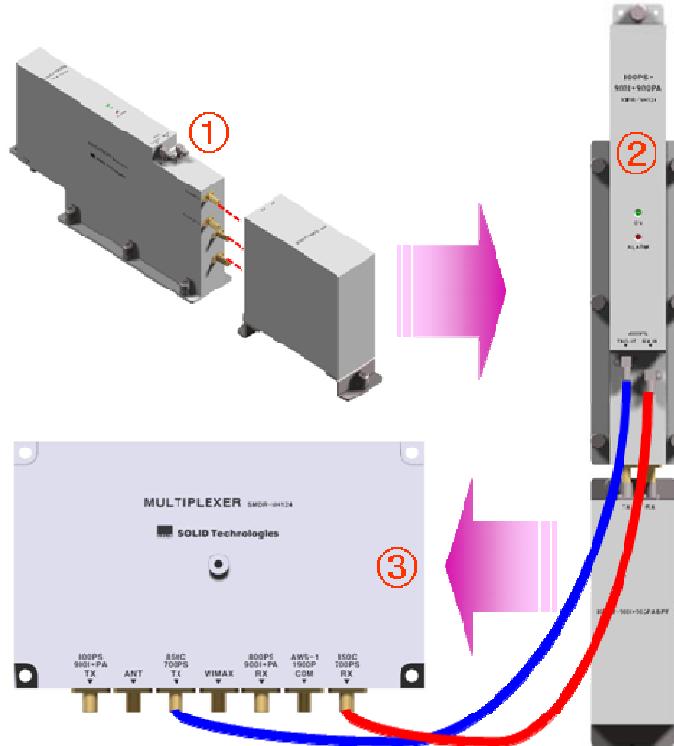

- ① Combine RDU 850C+700PS with 850C+700PS BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 850C+700PS BPF Ass'y into any slot of ROU.
- ③ Combination point of 850C+700PS BPF Ass'y of the multiplexer

Multiplexer Port naming	Interface Point		Remark
	850C+700PS RDU	850C+700PS BPF	
850C+700PS TX	TX OUT	-	

850C+700PS RX


RX IN

-

How to install RDU 1900P+AWS-1 Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 1900P+AWS-1	RF Module	
2	1900P+AWS-1 BPF	BPF	
3	1900P+AWS-1 RF CABLE	SMA(M) to SMA(M), 390mm	
4	1900P+AWS-1 RF-01	SMA(M) to SMA(M)	Semirigid

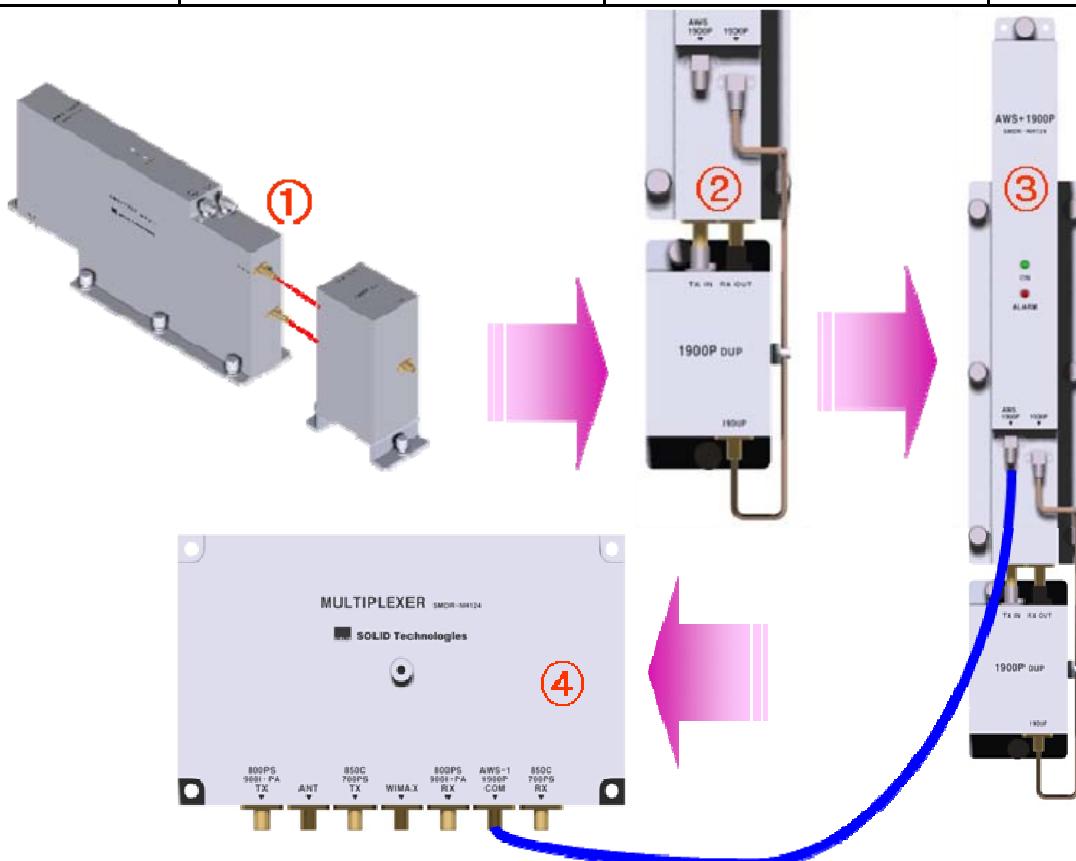

- ① Combine RDU 1900P+AWS-1 with 1900P BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Connect BPF 1900P port with 1900P port of 1900P RDU through 1900P+AWS-1 RF-01 RF CABLE.
- ③ Insert the combined 1900P+AWS-1 BPF Ass'y into any slot of ROU.
- ④ Combination point of 1900P+AWS-1 BPF Ass'y of the multiplexer


Multiplexer Port naming	Interface Point	Remark
-------------------------	-----------------	--------

	1900P+AWS-1 RDU	1900P BPF	
AWS-1+1900P COM	1900P+AWS	-	

How to install RDU VHF+UHF Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU VHF+UHF	RF Module	
2	RDU VHF+UHF RF CABLE	SMA(M) to SMA(M), 460mm	
3	RDU VHF+UHF RF CABLE	SMA(M) to SMA(M), 380mm	

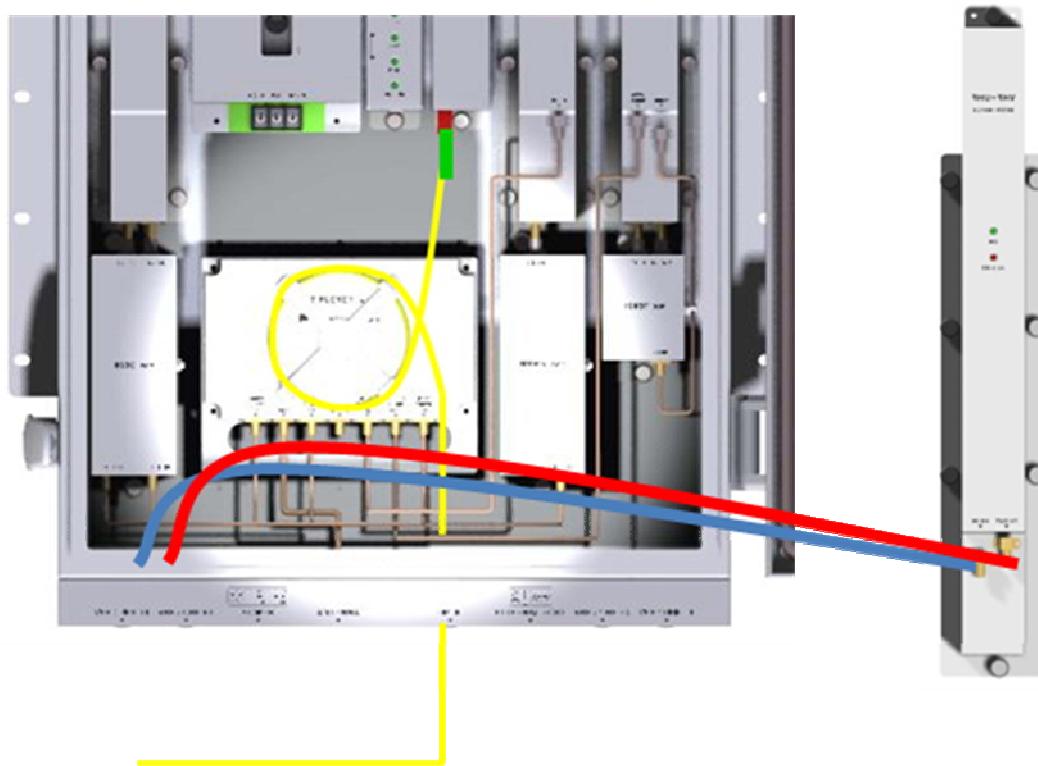


- ① Insert the combined VHF+UHF RDU into any slot of ROU.
- ② Connect RDU VHF+UHF Port with ROU VHF+UHF Port through VHF+UHF RF CABLE

How to install RDU 850C+700LTEC Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 850C+700LTEC	RF Module	
2	850C+700PS BPF	BPF	

3	850C+700PS TX RF CABLE	SMA(M) to SMA(M), 470mm	
4	850C+700PS RX RF CABLE	SMA(M) to SMA(M), 400mm	

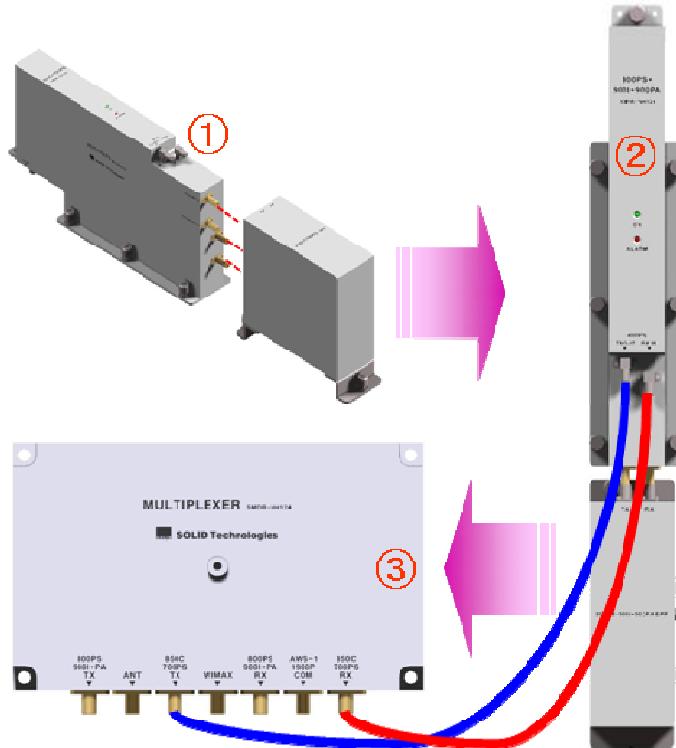

- ① Combine RDU 850C+700 LTEC with 850C+700PS BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 850C+700 LTEC BPF Ass'y into any slot of ROU.
- ③ Combination point of 850C+700PS/700LTE BPF Ass'y of the multiplexer


Multiplexer Port naming	Interface Point		Remark
	850C+700LTEC RDU	850C+700PS BPF	
850C/700PS/700LTE TX	TX OUT	-	
850C/700PS/700LTE RX	RX IN	-	

How to install RDU 700LTEF Ass'y

The following components are required:

No.	Unit	Description	Remark
1	RDU 700LTEF	RF Module	
2	700LTEF BPF	BPF	

3	700LTEF TX SISO RF CABLE	SMA(M) to SMA(M)	SISO
4	700LTEF RX SISO RF CABLE	SMA(M) to SMA(M)	SISO
5	700LTEF TRX MIMO RF CABLE	SMA(M) to SMA(M)	MIMO

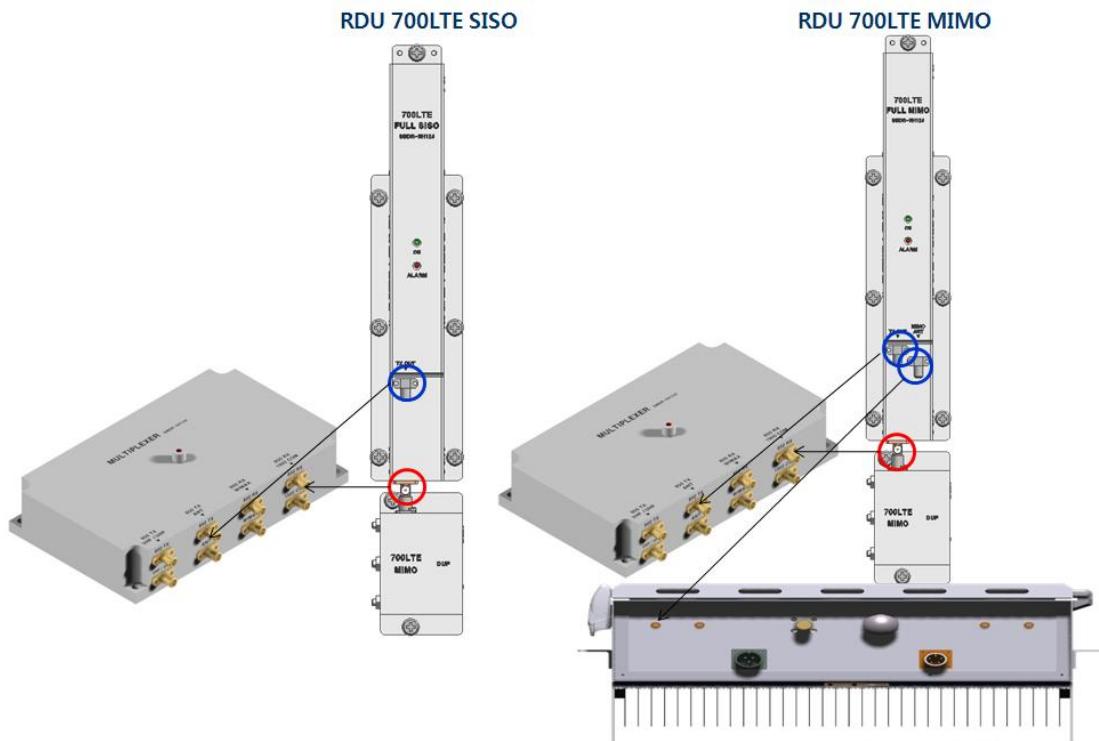

- ① Combine RDU 700LTEF with 700LTEF BPF (As it is a plug type, push the unit to combine with BPF.)
- ② Insert the combined 700LTEF BPF Ass'y into any slot of ROU.
- ③ Combination point of 700LTEF BPF Ass'y of the multiplexer

Multiplexer Port naming	Interface Point		Remark
	700LTEF RDU	700LTEF BPF	
700LTEF SISO TX	TX OUT	-	
700LTEF SISO RX	RX IN	-	
700LTEF MIMO TRX	TRX OUT/IN	-	



You cannot insert the same module and band into MULTIPLEXER port at the same time.

For example, you are not supposed to insert both of 800PS RDU and 800PS+900I+PA RDU into ROU at the same time. In the same way, you cannot concurrently insert both of 850C RDU , 850C+700PS RDU and 850C+700LTEC into ROU.

In addition, if you want to use 700LTEF RDU and 850C+700PS RDU in the ROU concurrently, you should change the multiplexer supporting these band together

Information of LED at the front RDU

RDU has the structure of enabling a random RDU to be inserted into three slots.

ROU can be equipped with a total of three RDUs. If only one RDU is inserted into a slot and the other slots remain reserved, you need to insert BLANK cards into the other slots.

When RDU is inserted into ROU, LED of the front panel shows the following information:

LED		Description
ON	●	Power is not supplied
	●	Power is supplied.
ALM	●	Normal Operation
	●	Abnormal Operation



Up to three RDUs can be inserted. If one or two units of them are used, then you need to terminate the unused slot of RDU with a BLANK card.

5.3.7 Consumption of RDU

The following table shows power consumption of RDU:

Part	Unit	Consumption Power	Remark
Common Part	Enclosure	17W	
	RCPU		
	ROPTIC		
	RPSU		
	Multiplexer		
RDU	RDU 800PS	39W	

	RDU 800PS+900I+Paging	800PS	49W	900I+PA HPA OFF
		900I+PA	72W	800PS HPA OFF
		FULL	79W	Both HPA ON
	RDU 850C	39W		
	RDU 850C+700PS	850C	49W	700PS HPA OFF
		700PS	58W	850C HPA OFF
		FULL	93W	Both HPA ON
	RDU 1900P+AWS-1	1900P	46W	AWS-1 HPA OFF
		AWS-1	46W	1900P HPA OFF
		FULL	68W	Both HPA ON
	RDU VHF+UHF RDU E-VHF+UHF	VHF	47W	VHF HPA OFF
		UHF	47W	UHF HPA OFF
		FULL	74W	Both HPA ON
	RDU 850C+700LTEC	850C	49W	700LTEC HPA OFF
		700LTEC	58W	850C HPA OFF
		FULL	93W	Both HPA ON
	RDU 700LTEF SISO	32W		
	RDU 700LTEF MIMO	50W		SISO & MIMO HPA ON
	RDU 700LTEF+850C	90W		Both HPA ON

For power consumption of ROU, the common part consumes 17W. Depending on the quantity of each RDU, you can add overall power consumption of ROU. Only, in case of Dual-Band signals, power consumption is calculated respectively when HPA of the other party is turned OFF and two HPA devices are turned ON. Note that when you calculate Power Budget.

5.4 OEU Installation

OEU is used to expand ROU in Campus Site.

OEU is located at a Remote Closet. As it can be equipped with up to two DOUs, you can expand a total of eight ROUs.

5.4.1 OEU Shelf installation

OEU is a shelf in around 2U size. Its width is 19" and so this unit should be inserted into a 19" Standard Rack. OEU is in a Remote Closet, providing optical ports of ROU.

The following table shows power consumption of OEU:


No.	Unit	Description	Remark
Common Part	Shelf	Including EWDM,ERF,EPSC,ECPU, 19",2U	1EA
	Power Cable	-48Vdc Input with two lug terminal	1EA
Optional Part	DOU	Optical Module with 4 Optic Port	Up to 2EA to be inserted

5.4.2 OEU Power Cabling

The input power of OEU is DC -48V. You need to connect DC cable with the Terminal Block seen at the rear of OEU.

Terminal	Color of cable	Description	Remark
-48V	Blue color	Input range: -42 ~ -56Vdc	
NC	Not Connected		
GND	Black color		

Before connecting the power terminal, you need to connect "+" terminal of Multi Voltage Meter probe with the GND terminal and then connect "-" terminal with -48V to see if "-48Vdc" voltage is measured. After the check, connect the power terminal through the terminal seen below.

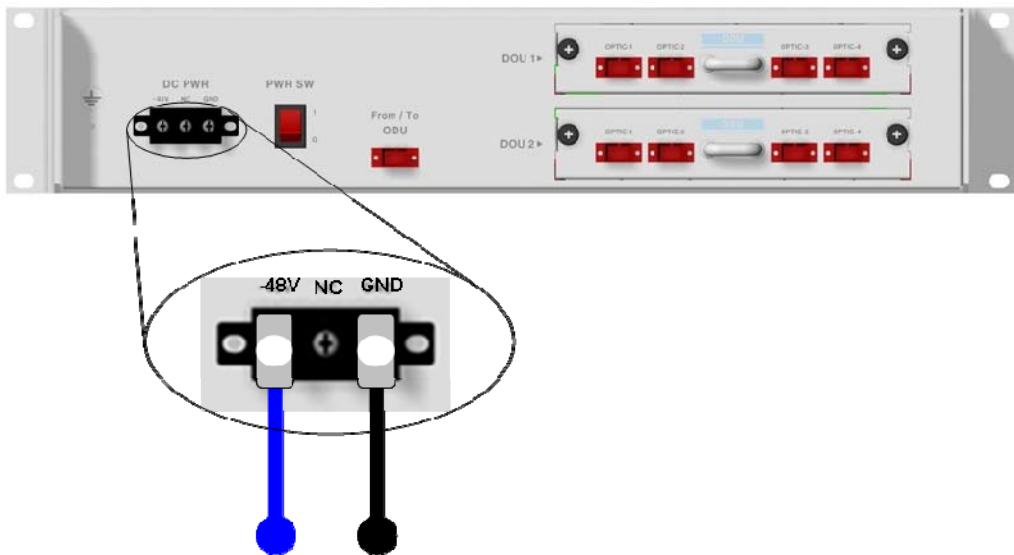

! Note that OEU does not operate if the “+” terminal and the “-“ terminal of the -48V power are not inserted into the accurate polarity.

5.4.3 OEU Optic Cabling

OEU is connected with upper ODU. With DOU inserted in it, the unit is connected with ROU. As OEU has a shelf with EWDM in it, the unit makes electronic-optical conversion of TX signals from ODU and makes optical-electronic conversion of RX signals. In addition, OEU can be equipped with up to two DOUs. One DOU supports four optical ports and one optical port can be connected with ROU. With WDM in DOU, the unit can concurrently send/receive two pieces of wavelength (TX:1310nm, RX:1550nm) through one optical core. DOU has SC/APC of optical adaptor type.



Figure 5.7 – Optical cable of SC/APC Type

For optical adaptor, SC/APC type should be used. To prevent the optical access part from being marred with dirt, it should be covered with a cap during move. When devices are connected through optical cables, you need to clear them using alcohol to remove dirt.

5.4.4 Insert DOU to OEU


Into OEU Shelf, up to two DOUs can be inserted. DOU module is in Plug in Play type.

When you insert DOU in OEU, insert the unit into the top DOU1 slot first. You can be careful as the number is silk printed at the left.

The following figure shows installation diagram of OEU with one DOU inserted in it.



The following figure shows installation diagram of OEU with two DOUs inserted in it.

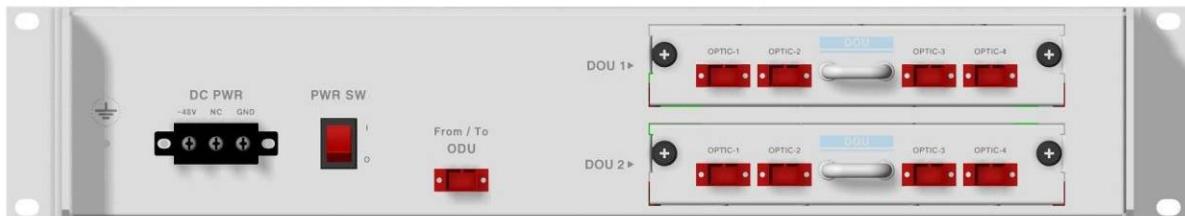

 When you insert DOU into OEU, insert the unit into the top DOU1 first. For unused slots, you need to install BLANK UNIT into them.

5.4.5 Consumption Power of OEU

OEU has -48V DC Power supply in it. ODU can be equipped with up to two DOUs. Depending on the quantity of DOU, power consumption is varied.

The following table shows power consumption of OEU:

Part	Unit	Consumption Power	Remark
Common Part	Shelf	12W	
	EWDM		
	ERF		

	EPSU		
OEU_4	DOU 1 EA	23W	
OEU_8	DOU 2 EA	33W	

5.5 ADD ON ROU Installation

5.5.1 AOR Enclosure installation

AOR is designed to be water- and dirt-proof. The unit has the structure of One-Body enclosure.

It satisfies water-proof and quake-proof standards equivalent of NEMA4 like existing ROU

AOR can be mounted into either of a 19" Standard Rack or on a Wall.

Basically, AOR has both of a Wall Mount Bracket and a Rack Mount Bracket.

Depending on the usage the Rack Mount Bracket or the Wall bracket can be removed.

The following shows dimension of the fixing point for the Wall Mount Bracket.

AOR should be installed above or under of existing ROU

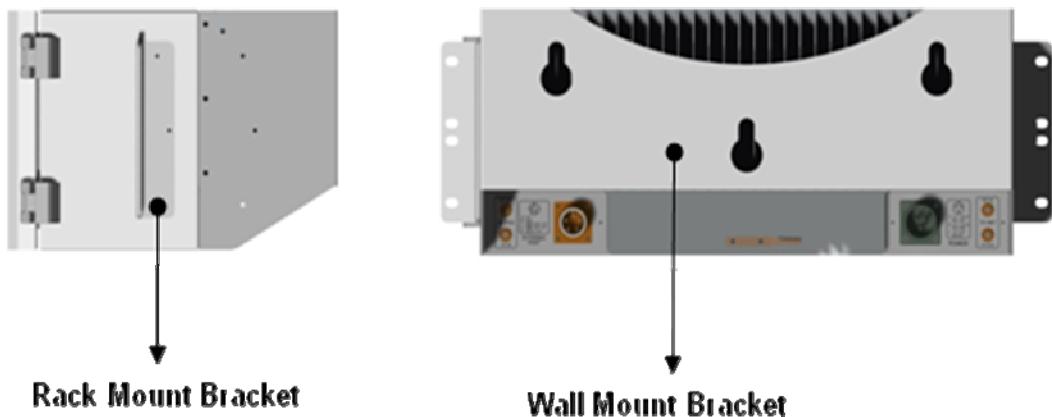


Figure 5.8 – How to install AOR

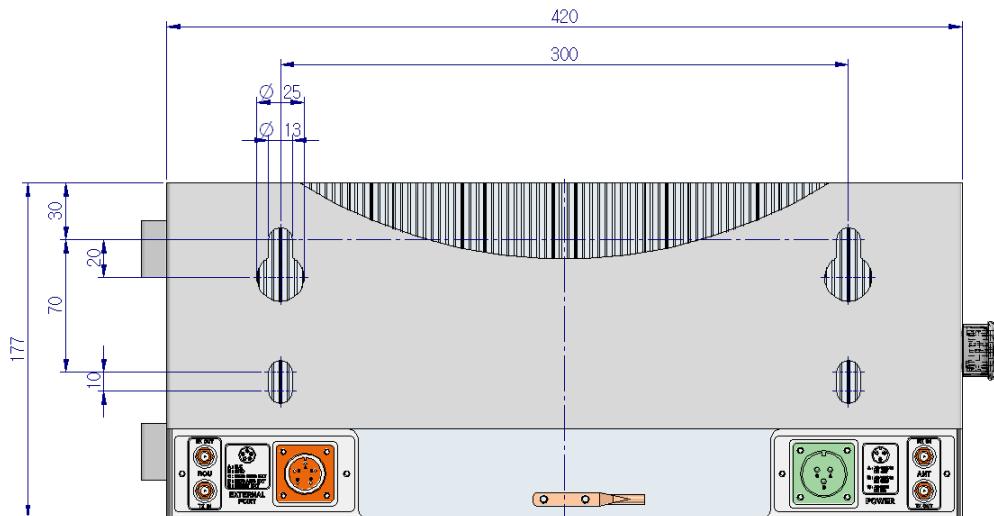
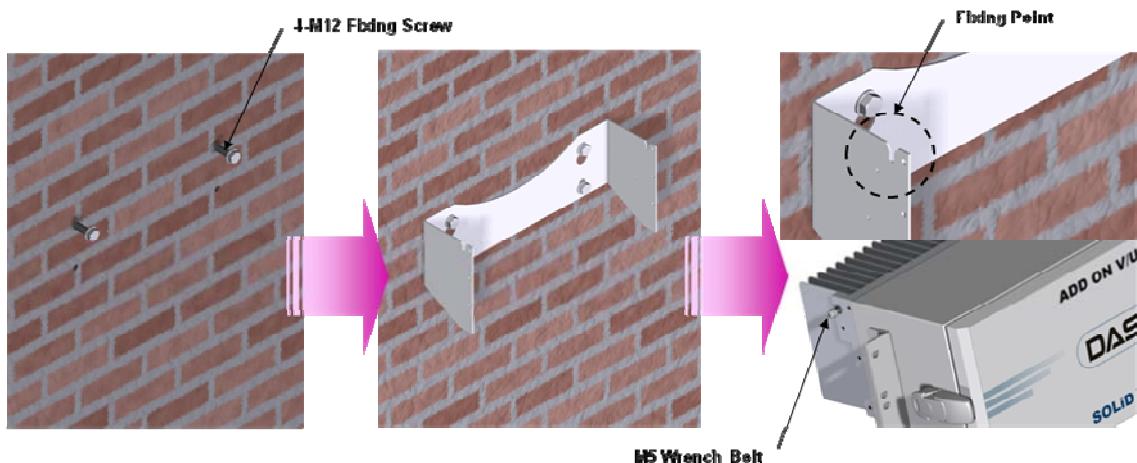


Figure 5.9 – Dimension used to install AOR on the WALL

ROU Wall Mount Installation

Turn M12 Fixing Screws by half on the wall and fully fix the screw with a Wall Mount Bracket on it. For convenience, the Wall Mount Bracket has fixing holes to let you easily mount an enclosure. Turn the M5 Wrench Bolt by half at each side of the Heatsink of the enclosure.



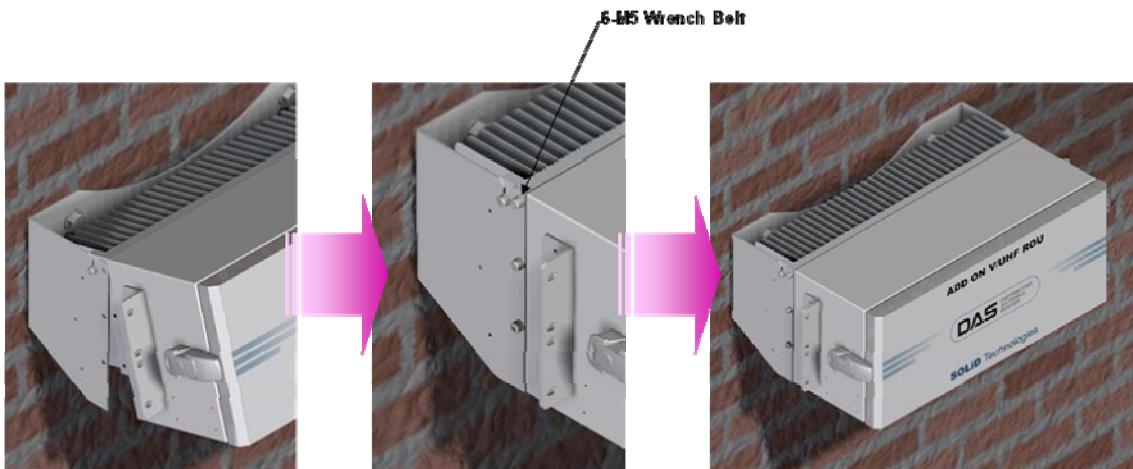


Figure 5.10 – Installation flow diagram when AOR installs on wall

Put the enclosure with the M5 Wrench Bolt fixed on the fixing groove and fix the M5 Wrench Bolts into the remaining fixing holes.

In this case, you will use 6EA of M5 Wrench Bolts in total except bolts used for the fixing groove.

ROU Rack Mount Installation

Like other units, AOR is designed to be inserted into a rack. The unit occupies about 4U of space except cable connection.

In case that AOR is installed more close above/below existing ROU, temperature of ROU/AOR increase ambient temperature, which increase ambient of AOR/ROU. Then, AOR/ROU's temperature is increased. Therefore, we recommend that AOR should be installed with at least constant space from existing ROU(above 2U)

The following shows the installed diagram on rack with existing ROU

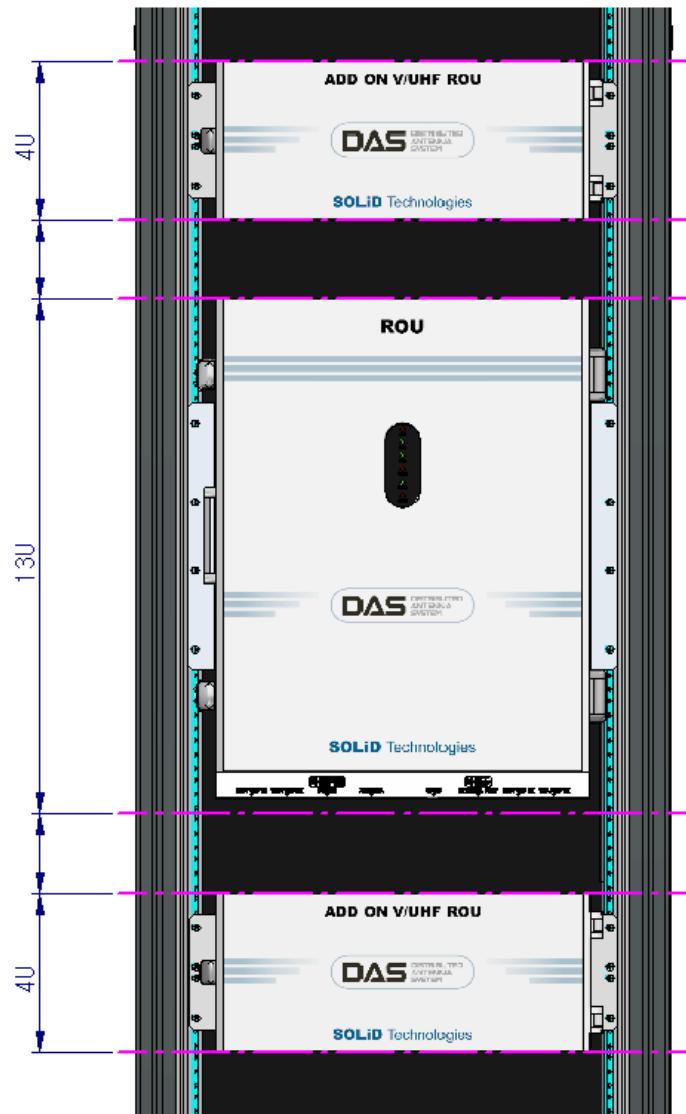


Figure 5.10 – Installation flow diagram when AOR installs in the rack

AOR components

AOR has the following components:

No.	Unit	Description	Remark
Common Part	Enclosure	Including Rack & Wall bracket	1EA
	AOR PSU	Alternative DC-48V or AC 120V	1EA
	RDU	Alternative V/UHF RDU or LTEF RDU	1EA
	Power Cable	- MS Connector with 3 hole to AC 120 plug(AC) - MS Connector with 2 lug termination(DC)	Each 1EA
	Comm Cable	- MS Connector which both end sides has 5hole	1EA


	RF cables	<ul style="list-style-type: none"> - One for interface TX signal with ROU - Another for interface RX signal with ROU 	2EA
--	-----------	--	-----

5.5.2 AOR Power Cabling

AOR supports both of DC-48V and AC120V of input power. As PSU for DC-48 and PSU for AC120V are separated from each other, you need to select one of them in case of purchase order.

RPSU for DC -48V and RSPU for AC 120V have the same configuration and capacity while each of the units uses different input voltage from each other.

The following figure shows configuration of PSUs for DC -48V and AC 120V.

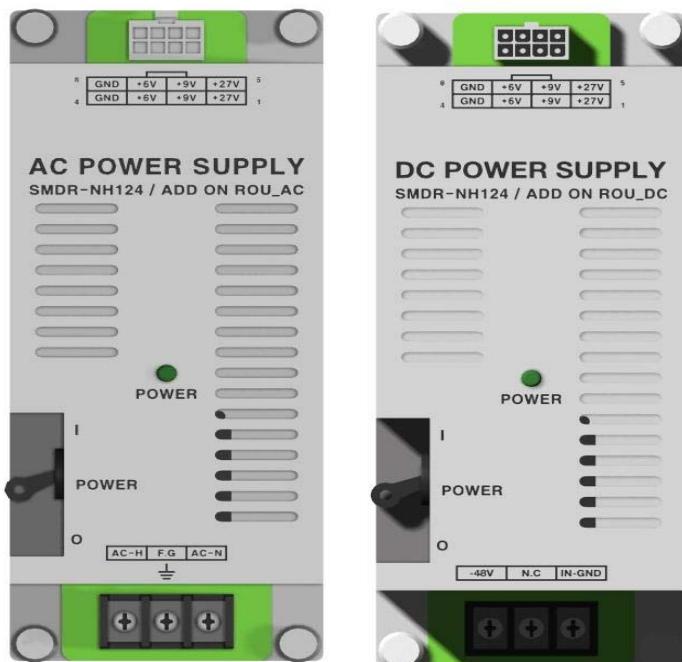

MC Connector numbering	Lug Naming		AOR PSU Terminal naming		Remark
	AC	DC	AC	DC	
A	AC_H	-48V	AC-H	-48V	
B	AC_N	GND	AC-N	IN_GND	
C	GND	DC NC	FG	FG	



Check if the connection is the same as one seen in the table above and make sure before turn the power ON. If you want to turn on the power of AOR, move PSU's circuit break switch to "I" status

Check if the POWER LED indicator on the AOR PSU is green lights status

Information of LED at the front RDU


When power of AOR is turned on, LED of the PSU front panel shows the following information:



LED		Description
ON	●	Power is not supplied
	●	Power is supplied.
ALM	●	Normal Operation
	●	Abnormal Operation

5.5.3 GND Terminal Connection

AOR has one GND terminal port where is on rear side, like below

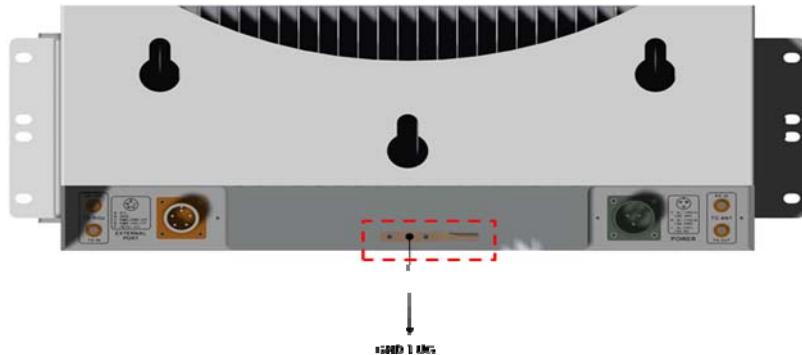

- Take off the GND terminal port from enclosure and connect to ground cable, then fix it the position of enclosure again
- The opposite end of the ground cable should connect to the communication GND of building
- The ground lug is designed meeting the SQ22 standard

5.5.4 Coaxial cable and Antenna Connection

- AOR has two antenna port, the one is TX antenna and the others is RX antenna
- The coaxial cables which are connected to antenna distributed network connect to two antenna port of AOR. Before connection, check the VSWR value of coaxial cable whether it is within specification using SITEMASTER .
- At this time, check if the Return loss have above 15Db or VSWR have below 1.5
- The part of antenna connection fasten to port not to be loosed and not to be injected the dusty and insects
- The antenna connected to AOR is only serviced in inbuilding

5.5.5 Consumption Power of AOR

The following table shows power consumptions of AOR:

Part	Unit	Consumption Power		Remark
AOR	RDU VHF+UHF (E_VHF+UHF)	VHF	47W	VHF HPA OFF
		UHF	47W	UHF HPA OFF
		FULL	74W	Both HPA ON
	RDU 700LTEF	SISO	32W	

		MIMO	50W	SISO & MIMO HPA ON
--	--	------	-----	-----------------------

5.5.6 Interface with existing ROU

AOR is not operated by themselves. TX/ RX signals receive/transmit through RF port terminal of existing ROU. Also for communication with existing ROU, should connect cable on external port of each other. The following shows the connection diagram with existing ROU:

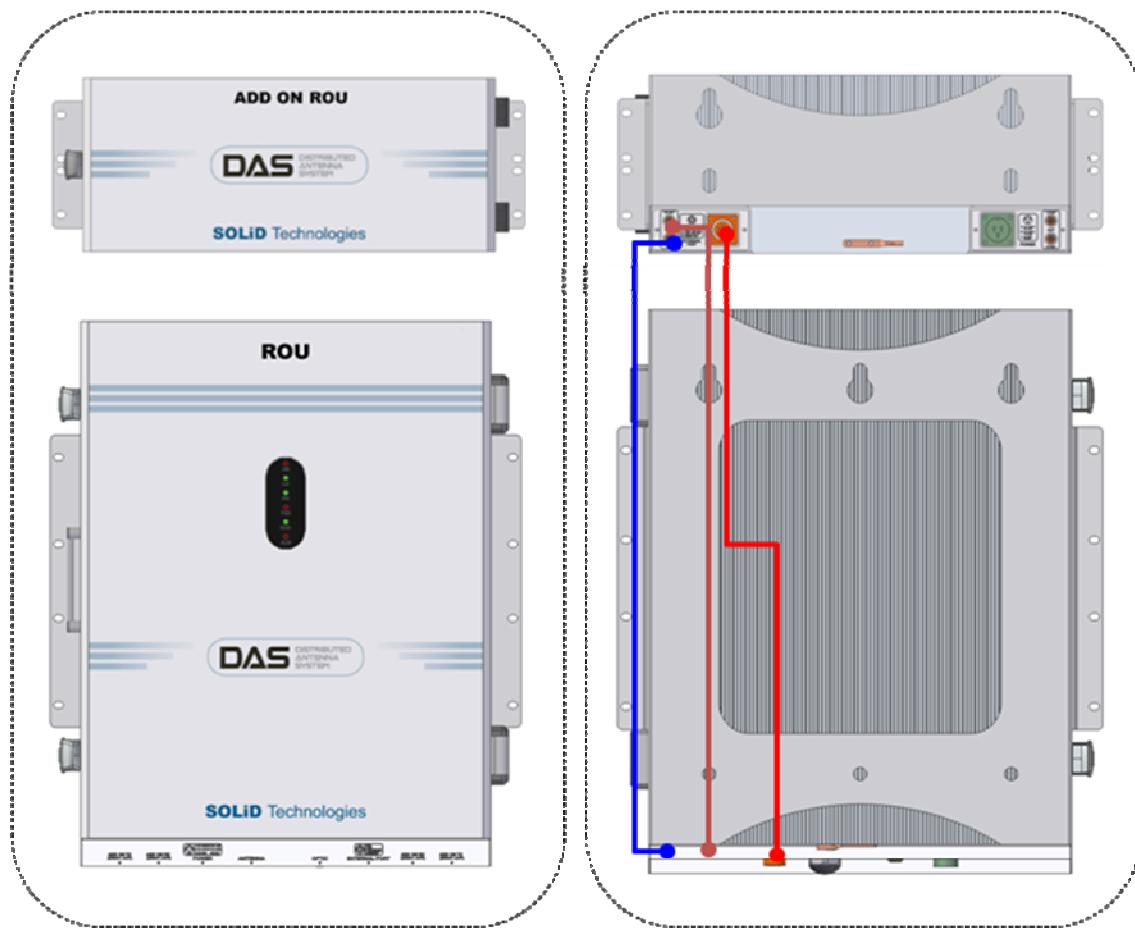


Figure 5.10 – AOR which is installed above of ROU

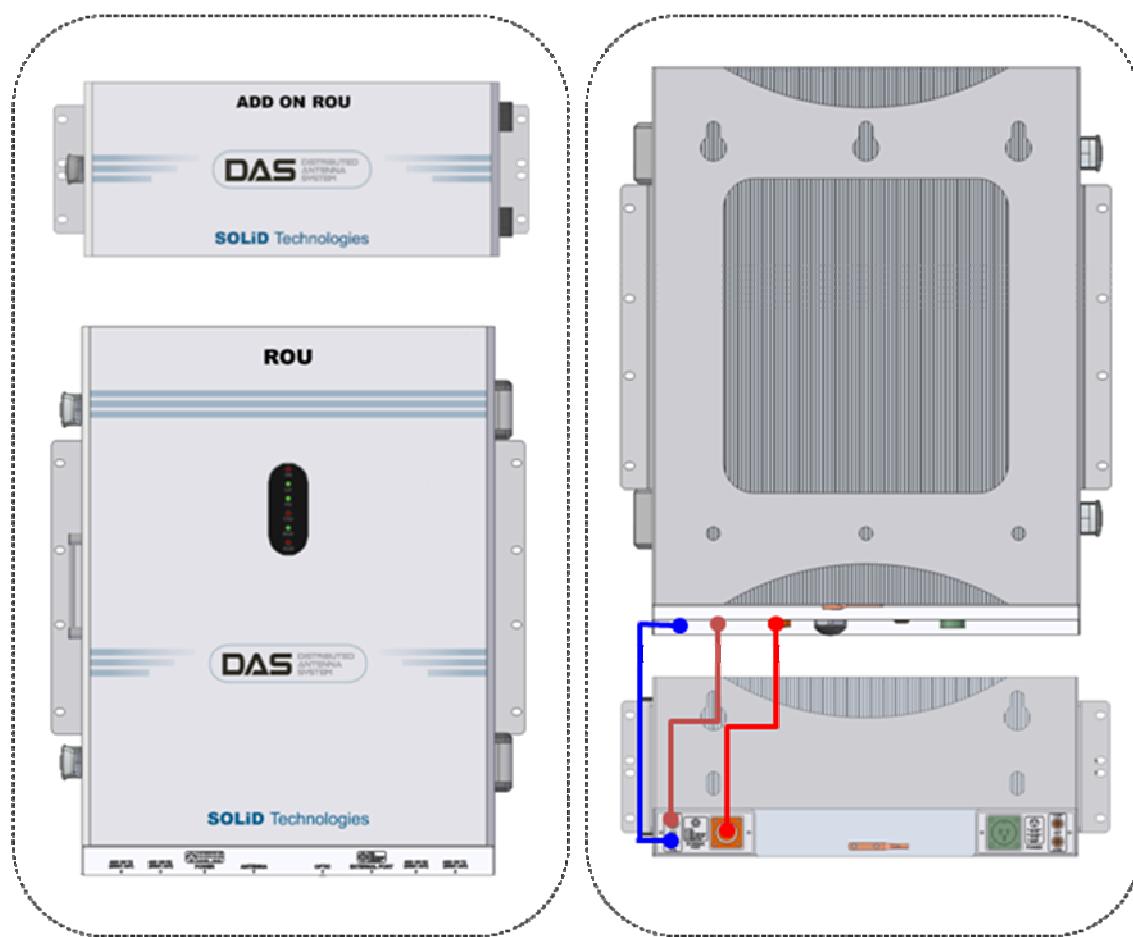


Figure 5.11 – AOR which is installed under of ROU

For connecting with existing ROU, need three sorts of cables

The following shows the interface point between existing ROU and AOR:

Items	Interface Point			Remark
	Existing ROU Port	AOR Port		
TX RF Cable	ADD ON TX (MIMO ANT)	TO ROU	TX IN	SMA
RX RF Cable	ADD ON RX (MIMO ANT)		RX OUT	SMA
Communication signal Cable	EXTERNAL PORT	EXTERNAL PORT		MS-CON