
JLDK.26.09.01and JLDP.15.005.004 User Manual

1. Appearance

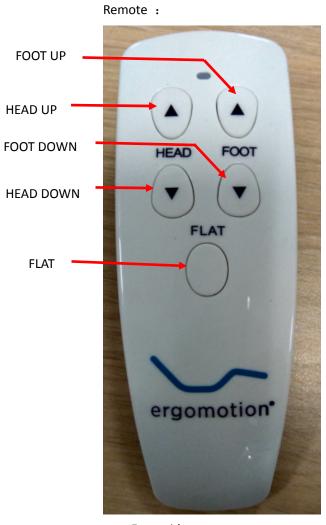




Front side Back side

Control Box:



2. Connect to the Control Box

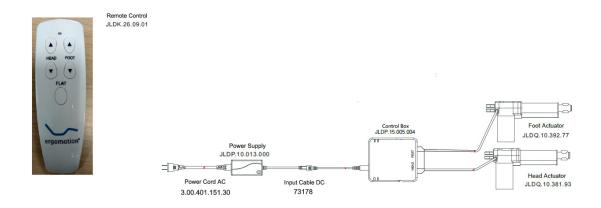

3. Function description

- 3.1 **HEAD UP:** Press this key, the head actuator out, release to stop it.
- 3.2 **HEAD DOWN:** Press this key, the head actuator in, release to stop it.
- 3.3 **FOOT UP:** Press this key, the foot actuator out, release to stop it.
- 3.4 **FOOT DOWN:** Press this key, the foot actuator in, release to stop it.
- 3.5 FLAT: Actuators are moved into FLAT automatically. The movement starts when the key is released. Click any key to stop it.
- 3.6 Pairing Key: Press this key for more than 1 second, the remote will enter pairing mode

- and a blue LED besides the pairing key will flash. Release this key to stop pairing .After the pairing is successful, LED will stop flashing.
- 3.7 Control Box RESET button: Double click on the RESET button ,the Control box will enter pairing mode and the Green LED will on. After the pairing is successful or 10s later ,Green LED will off.
- 3.8 Control Box -MultiFunction: Connected to another control box or lamp and other peripherals.

FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.