SIEMENS

Preface

Introduction	1
Installing the Subscriber Unit	2
Device Management	3
Technical Specifications	4
Certification	5

RUGGEDCOM WIN5137-V-GPS

Installation Guide

Copyright © 2018 Siemens Canada Ltd

All rights reserved. Dissemination or reproduction of this document, or evaluation and communication of its contents, is not authorized except where expressly permitted. Violations are liable for damages. All rights reserved, particularly for the purposes of patent application or trademark registration.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Siemens Canada Ltd.

» Disclaimer Of Liability

Siemens has verified the contents of this document against the hardware and/or software described. However, deviations between the product and the documentation may exist.

Siemens shall not be liable for any errors or omissions contained herein or for consequential damages in connection with the furnishing, performance, or use of this material.

The information given in this document is reviewed regularly and any necessary corrections will be included in subsequent editions. We appreciate any suggested improvements. We reserve the right to make technical improvements without notice.

» Registered Trademarks

RUGGEDCOM™ and ROS™ are trademarks of Siemens Canada Ltd.

Other designations in this manual might be trademarks whose use by third parties for their own purposes would infringe the rights of the owner.

Security Information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit https://www.siemens.com/industrialsecurity.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit https://support.automation.siemens.com.

Warranty

Siemens warrants this product for a period of five (5) years from the date of purchase, conditional upon the return to factory for maintenance during the warranty term. This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void. The warranties set forth in this article are exclusive and are in lieu of all other warranties, performance guarantees and conditions whether written or oral, statutory, express or implied (including all warranties and conditions of merchantability and fitness for a particular purpose, and all warranties and conditions arising from course of dealing or usage or trade). Correction of nonconformities in the manner and for the period of time provided above shall constitute the Seller's sole liability and the Customer's exclusive remedy for defective or nonconforming goods or services whether claims of the Customer are based in contract (including fundamental breach), in tort (including negligence and strict liability) or otherwise.

For warranty details, visit https://www.siemens.com/ruggedcom or contact a Siemens customer service representative.

Contacting Siemens

Address Siemens Canada Ltd Industry Sector 300 Applewood Crescent Concord, Ontario Canada, L4K 5C7 **Telephone**Toll-free: 1 888 264 0006
Tel: +1 905 856 5288
Fax: +1 905 856 1995

E-mail ruggedcom.info.i-ia@siemens.com Web

https://www.siemens.com/ruggedcom

Table of Contents

Pretace	<u> </u>	١
	ts	
Rela	ited Documents	٧
Trai	ning	٧
Cust	tomer Support	٧
Chapter 1	uction	
	action	
	Feature Highlights	
	Description	
	Required Tools and Materials	
1.4	Decommissioning and Disposal	4
Chapter 2		
Installi	ng the Subscriber Unit	5
2.1	General Procedure	6
2.2	Unpacking the Subscriber Unit	7
2.3	Site Preparation and Precautions	7
2.4	Mounting the Subscriber Unit	8
	2.4.1 Mounting the Subscriber Unit to a Wall or Tower	ç
	2.4.2 Mounting the Subscriber Unit to a Pole	1 1
2.5	Installing the Antennas	12
	Grounding the Subscriber Unit	
2.7	Connecting Power and Data	14
2.8	Weatherproofing the Subscriber Unit	15
	2.8.1 Weatherproofing a Cable	
	2.8.2 Applying Cold Shrink Tubing	
	2.8.3 Applying Self-Amalgamating Tape	
Chapter 3		
Device	Management	17
	Configuring the Subscriber Unit	
Chapter 4		
Techni	cal Specifications	19
4.1	Power Supply Requirements	19

4.2	Power Consumption	19
	Radio and Modem Specifications	
4.4	Operating Environment	20
4.5	Mechanical Specifications	20
4.6	Dimension Drawings	21
Chapter 5		
Certific	ation	23
5.1	Approvals	23
	5.1.1 CSA	23
	5.1.2 European Union (EU)	
	5.1.3 TÜV Rheinland	24
	5.1.4 ISED	25
	5.1.5 FCC	25
	5.1.6 IEEE	
	5.1.7 RoHS	25
5.2	Environmental Type Tests	26

Preface

This guide describes the RUGGEDCOM WIN5137-V-GPS. It describes the major features of the subscriber unit, installation, commissioning and important technical specifications.

It is intended for use by subscriber unit installers and operators, and assumes readers have a working knowledge of WiMAX technologies and procedures. While some safety precautions are reviewed here, it is assumed that installers are trained in safe installation practices. Users unfamiliar with safe installation procedures, WiMAX technologies, and service procedures should not rely on this manual for comprehensive guidance.

CONTENTS

- "Alerts"
- "Related Documents"
- "Training"
- "Customer Support"

Alerts

The following types of alerts are used when necessary to highlight important information.



DANGER!

DANGER alerts describe imminently hazardous situations that, if not avoided, will result in death or serious injury.



WARNING!

WARNING alerts describe hazardous situations that, if not avoided, may result in serious injury and/or equipment damage.



CAUTION!

CAUTION alerts describe hazardous situations that, if not avoided, may result in equipment damage.



IMPORTANT!

IMPORTANT alerts provide important information that should be known before performing a procedure or step, or using a feature.



NOTE

NOTE alerts provide additional information, such as facts, tips and details.

Alerts

Related Documents

Other documents that may be of interest include:

RUGGEDCOM SU User Guide [https://support.industry.siemens.com/cs/ww/en/view/109737453]

Training

Siemens offers a wide range of educational services ranging from in-house training of standard courses on networking, Ethernet switches and routers, to on-site customized courses tailored to the customer's needs, experience and application.

Siemens' Educational Services team thrives on providing our customers with the essential practical skills to make sure users have the right knowledge and expertise to understand the various technologies associated with critical communications network infrastructure technologies.

Siemens' unique mix of IT/Telecommunications expertise combined with domain knowledge in the utility, transportation and industrial markets, allows Siemens to provide training specific to the customer's application.

For more information about training services and course availability, visit https://www.siemens.com/ruggedcom or contact a Siemens Sales representative.

Customer Support

Customer support is available 24 hours, 7 days a week for all Siemens customers. For technical support or general information, contact Siemens Customer Support through any of the following methods:



Online

Visit http://www.siemens.com/automation/support-request to submit a Support Request (SR) or check on the status of an existing SR.



Telephone

Call a local hotline center to submit a Support Request (SR). To locate a local hotline center, visit http://www.automation.siemens.com/mcms/aspa-db/en/automation-technology/Pages/default.aspx.



Mobile App

Install the Industry Online Support app by Siemens AG on any Android, Apple iOS or Windows mobile device and be able to:

- Access Siemens' extensive library of support documentation, including FAQs and manuals
- Submit SRs or check on the status of an existing SR
- Contact a local Siemens representative from Sales, Technical Support, Training, etc.
- Ask questions or share knowledge with fellow Siemens customers and the support community

vi Related Documents

1 Introduction

The RUGGEDCOM WIN5137-V-GPS subscriber unit is part of the RUGGEDCOM WIN family, a line of mobile WiMAX broadband wireless access systems based on the IEEE 802.16e mobile WiMAX standard.

The RUGGEDCOM WIN5137-V-GPS is a high-performance, self-learning subscriber. It automatically detects the base station on the best signal available, allowing for plug-and-play installation and maintenance free operation. The automatic switching and monitoring features guarantee on-going operation in changing conditions, which results in low maintenance and considerable operating expense savings.

The subscriber unit is compliant with IEEE 802.16e standards to effectively meet the unique requirements of the wireless Metropolitan Area Network (MAN) environment and to deliver broadband access services to a wide range of customers. Specifically designed for point-to-multipoint broadband wireless access applications, the subscriber unit provides efficient use of the wireless spectrum, supporting a range of user environments.

The subscriber unit also complies with the IEEE 802.16-2005 standard for the deployment of point-to-multipoint (PMP) and point-to-point (PTP) network architectures.

The subscriber unit is a WiMAX Forum IEEE 802.16e Wave 2 (MIMO) certified subscriber. Each subscriber registers and establishes a bi-directional data link with the base station.

Primary benefits offered by the RUGGEDCOM WIN5137-V-GPS include:

- Non-Line-of-Sight (NLOS) Propogation
 - Provides excellent performance in NLOS conditions. Mitigates multi-path and deep fading, providing extended range and easy installation.
- Automatic Transmit Power Control (ATPC)

ATPC allows for optimal network deployment, tight frequency reuse, and interference avoidance.

• Wide Frequency Band

Provides support for deployments around the world.

CONTENTS

- Section 1.1, "Feature Highlights"
- Section 1.2, "Description"
- Section 1.3, "Required Tools and Materials"
- Section 1.4, "Decommissioning and Disposal"

Section 1.1

Feature Highlights

>> Long Range

The subscriber unit has multiple built-in receivers to improve range and Non-Line-of-Sight (NLoS) performance. The system has the ability to leverage sub-channelization technology to balance links with high-power base stations.

>> Robust Design

The subscriber unit is designed for mission critical applications in harsh environments with very high Mean Time Before Failure.

>> Quality of Service

The subscriber unit gives the user the ability to separate traffic types over the air, and guarantee latency, minimum bandwidth and jitter according to application needs.


>> Flexibility

The subscriber unit supports both IP convergence sublayer for wireless Internet service providers or Ethernet Convergence Sublayer, ideal for mission critical private networks.

Section 1.2

Description

The RUGGEDCOM WIN5137-V-GPS features various ports, controls and indicator LEDs on the bottom panel for connecting, configuring and troubleshooting the subscriber unit.

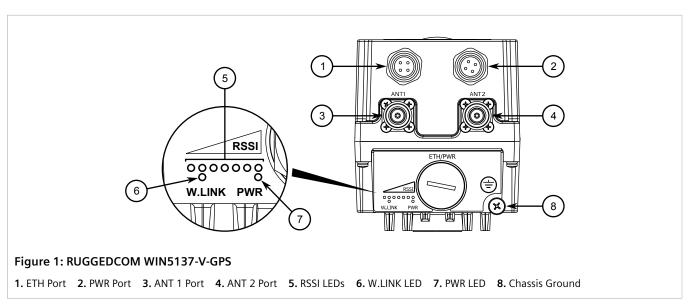

2 Feature Highlights

12VDC Port	A 4-pin, female, D-Coded M12 port for power. For more information about connecting data and power, refer to Section 2.7, "Connecting Power and Data".		
ANT 1 and ANT 2 Ports	Ports for connecting primary and secondary external antennas. For information about connecting the antennas, refer to Section 2.5, "Installing the Antennas".		
RSSI LEDs	Indicates the received signal stre	ngth.	
	LED	RSSI Level	
	• • • • • • • •	<-90	
	•••••	-85 to -90	
	•••••	-80 to -85	
	•••••	-75 to -80	
	•••••	-70 to -75	
	•••••	-65 to -70	
	•••••	-20 to -60	
	000000	>-20	
W.LINK LED	Indicates when the subscriber unit is connected with a base station.		
	State	Description	
	Green (Solid)	Subscriber unit is connected to the base station and receiving services.	
	Green (Blinking)	Link between the subscriber unit and the base station is down.	
PWR LED	Indicates when power is supplied to the subscriber unit.		
	State	Description	
	Green	Power is on.	
	Off	Power is off.	
ETH Port	A 4-pin, female, D-Coded M12 pc	rt for data.	
Chassis Ground Connection	Protects the subscriber unit from power surges and accumulated static electricity. For information about grounding the subscriber unit, refer to Section 2.6, "Grounding the Subscriber Unit".		

Section 1.3

Required Tools and Materials

The following tools and materials are required to install the RUGGEDCOM WIN5137-V-GPS:

Tools

- Wrench or socket set
- Phillips screwdriver
- Drill with an 8 mm (5/16 in) drill bit
- Wall anchors (if necessary)

Greases

• Marine grease (for marine applications only)

Tapes

• POE cold shrink (maximum 49.2 mm or 1.9 in inner diameter before shrinking) or self-amalgamating tape

Sprays

- Cleaner and de-greaser
- SCC3 conformal coating
- Corrosion protection

- UV-resistant vinyl tape
- · Electrical insulation putty

Mounting Hardware (Wall/Tower Only)

- Four 1/4" × 1/2" HEX chipboard screws
- Four 1/4" flat washers
- Four 1/4" spring washers

Section 1.4

Decommissioning and Disposal

Proper decomissioning and disposal of this device is important to prevent malicious users from obtaining proprietary information and to protect the environment.

>> Decommissioning

This device may include sensitive, proprietary data. Before taking the device out of service, either permanently or for maintenance by a third-party, make sure it has been fully decommissioned.

For more information, refer to the associated *User Guide*.

>> Recycling and Disposal

For environmentally friendly recycling and disposal of this device and related accessories, contact a facility certified to dispose of waste electrical and electronic equipment. Recycling and disposal must be done in accordance with local regulations.



Installing the Subscriber Unit

This chapter describes how to install the subscriber unit, including mounting the subscriber unit, connecting power, connecting the antenna, and connecting the subscriber unit to the network.



DANGER!

Electrocution hazard – risk of serious personal injury and/or damage to equipment. Before performing any maintenance tasks, make sure all power to the subscriber unit has been disconnected and wait approximately two minutes for any remaining energy to dissipate.



DANGER!

Electrocution hazard – risk of death or serious injury. When the subscriber unit is installed in an outdoor location, all indoor components (e.g. Ethernet and power supply) should be connected through a lightning protector.

Lightning protection protects people and equipment located indoors from lightning that may strike the subscriber unit or its outdoor cables. Therefore, install the lightning protector indoors, as close as possible to the point where the cables enter the building. The lightning protector can also be installed outdoors as long as the cables that lead indoors are well protected from lightning between the protector and the building entrance.



Safety hazard – risk of serious personal injury and/or damage to equipment. Installing the RUGGEDCOM WIN5137-V-GPS can pose a serious safety hazard. Be sure to take precautions to avoid the following:

- Exposure to high voltage lines during installation
- Falling when working at heights or with ladders
- Injuries from dropping tools
- Contact with AC wiring (power system connection)



IMPORTANT!

Only certified personnel should be permitted to install equipment.



IMPORTANT!

This product contains no user-serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void.

Changes or modifications not expressly approved by Siemens Canada Ltd could invalidate specifications, test results, and agency approvals, and void the user's authority to operate the equipment.



IMPORTANT!

This product should be installed in a **restricted access location** where access can only be gained by authorized personnel who have been informed of the restrictions and any precautions that must be taken. Access must only be possible through the use of a tool, lock and key, or other means of security, and controlled by the authority responsible for the location.



IMPORTANT!

Install equipment in accordance with the electrical code relevant to the country of installation, such as:

- the National Electrical Code (NEC), ANSI/NFPA 70
- the Canadian Electrical Code (CEC), Part 1, CSA C22.1
- the National Electrical Safety Code IEEE C2 (when applicable)

Unless marked or otherwise identified, the Standard for the Protection of Electronic Computer/Data Processing Equipment, ANSI/NFPA 75, also applies.



IMPORTANT!

Outdoor exposed communication lines longer than 40 m (140 ft) must be considered as TNV-1 circuits. The installer must make sure the power supply and network ports are designed for full compliance with the standards for TNV-1 telecommunication networks.

CONTENTS

- Section 2.1, "General Procedure"
- Section 2.2, "Unpacking the Subscriber Unit"
- Section 2.3, "Site Preparation and Precautions"
- · Section 2.4, "Mounting the Subscriber Unit"
- Section 2.5, "Installing the Antennas"
- Section 2.6, "Grounding the Subscriber Unit"
- Section 2.7, "Connecting Power and Data"
- Section 2.8, "Weatherproofing the Subscriber Unit"

Section 2.1

General Procedure

The general procedure for installing the subscriber unit is as follows:

- 1. Review the relevant certification information for any regulatory requirements. For more information, refer to Section 5.1, "Approvals".
- 2. Unpack and inspect the subscriber unit components. For more information, refer to Section 2.2, "Unpacking the Subscriber Unit".
- 3. Mount the subscriber unit to a pole, wall or tower. For more information, refer to Section 2.4, "Mounting the Subscriber Unit".
- 4. Install and connect the antenna(s). For more information, refer to Section 2.5, "Installing the Antennas".
- 5. Make sure the subscriber unit is grounded. For more information, refer to Section 2.6, "Grounding the Subscriber Unit".

6 General Procedure

- 6. Connect the subscriber unit to a power source and the network. For more information, refer to Section 2.7, "Connecting Power and Data".
- 7. Seal all cable connections. For more information, refer to Section 2.8, "Weatherproofing the Subscriber Unit".
- 8. Configure the subscriber unit. For more information, refer to Section 3.1, "Configuring the Subscriber Unit".

Section 2.2

Unpacking the Subscriber Unit

The following items are included in the RUGGEDCOM WIN5137-V-GPS package:

Item	Quantity
RUGGEDCOM WIN5137-V-GPS Subscriber Unit	1
Radio Frequency (RF) antenna cables, 5 m (16.4 ft) long	2
Pole/wall/tower mounting kit	1

When unpacking the subscriber unit, do the following:

- 1. Inspect the package for damage before opening it.
- 2. Visually inspect each item in the package for any physical damage.
- 3. Verify all items are included.

If any item is missing or damaged, contact Siemens for assistance.

Section 2.3

Site Preparation and Precautions

Before installing the subscriber unit and or antenna(s), it is important to plan the the complete installation and make sure the appropriate safe guards are in place.

>> Site Selection

Consider the following recommendations when selecting an appropriate site for the subscriber unit and antenna(s):

- Mount the antenna(s) at the highest point possible. Reception will increase according to the height of the antenna(s).
- Mount the antenna(s) in a place with as few obstructions as possible between the antenna(s) and the planned service area.
- To avoid interference, mount the antenna(s) and subscriber unit as far as possible from other antenna(s) and subscriber units.
- Keep the cable from the subscriber unit to the antenna(s) as short as possible and mount the antenna(s) as close as possible to the subscriber unit. Using a cable longer than 2 m (6.6 ft) will result in greater loss and more interference, as the cable will act as an antenna itself.
- Do not point the antenna(s) directly at populated areas.
- Locate the antenna(s) at least 3.6 m (11.8 ft) from people and public areas.

- Make sure the antenna(s) and subscriber unit are easily accessible for maintenance purposes.
- Mount the GPS antenna in a position where the whole sky is visible to the antenna. If the subscriber unit is mounted on a wall and the GPS antenna is mounted on top of the subscriber unit, only half of the sky will be visible to the antenna. This may not be enough for proper operation.
- Conduct a site survey to best position the subscriber unit and antenna(s) in relation to other subscriber units, antennas and base stations in the area. The site survey should also take into consideration the overall safety of the selected site

Site Survey

Most wireless networks include many subscriber/base stations installed in various locations in an overlapping radio-cell pattern. It is important to position each subscriber unit in an optimal location considering the assignment of its radio channels. Therefore, a site survey becomes an essential first step before physically deploying the subscriber unit.

The site survey should include details important to the planning of the subscriber unit deployment in each specific site, including potential mounting points for the subscriber unit and antennas, as well as the routing options for data, power and antenna cables.

For safety, always consult with the local power utility as well. It is important to select a site that not only offers maximum coverage, but is also safe for installers to work in.

>> Safety Precautions

When installing the subscriber unit or an antenna, make sure to adhere to the following safety precautions:

- Always install the subscriber unit with the help of a partner.
- Always use the most appropriate mounting method for the site and the equipment being installed. For assistance, contact a Siemens representative.
- Always assume an overhead line can cause serious injury or death. Note that electric power lines and phone lines look alike.
- Always wear the appropriate Personal Protective Equipment (PPE) for the task, including but not limited to rubber boots, rubber gloves, hard hat, harness and lanyard, etc.
- Always use a ladder made of a non-conductive material, such as wood or fiberglass. Do not use a metal ladder.
- Always work under favorable conditions. Do not work on wet or windy days.
- If the subscriber unit or antenna begins to drop, step away immediately and allow it to fall. The subscriber unit, cables, metal guy wires and pole (in the case of pole mount installations) are all excellent conductors. Any contact between these components and an electrical power line will complete an electrical path through the subscriber unit/antenna and the installer.
- If any part of the subscriber unit or an antenna comes in contact with an electrical power line, contact the local power utility. Do not attempt to touch or remove the component.

Section 2.4

Mounting the Subscriber Unit

The RUGGEDCOM WIN5137-V-GPS is designed for maximum mounting and display flexibility. It can be secured to a bracket and then mounted to a pole, wall or tower.



NOTE

For detailed dimensions of the subscriber unit, refer to Section 4.6, "Dimension Drawings".

When choosing the mounting location for the unit, consider the available mounting structures and antenna clearance.

Site Survey

Most wireless networks include many subscriber/base stations installed in various locations in an overlapping radio-cell pattern. It is important to position each subscriber unit in an optimal location considering the assignment of its radio channels. Therefore, a site survey becomes an essential first step before physically deploying the subscriber unit.

The site survey should include details important to the planning of the subscriber unit deployment in each specific site, including potential mounting points for the subscriber unit and antennas, as well as the routing options for data, power and antenna cables.

>> Recommended Site Requirements

It is highly recommended the subscriber unit be mounted with as few obstructions as possible between itself and the base station. The subscriber unit should be pointed in the direction of the designated server base station. When choosing the ideal location, it is also important to take into consideration the overall area topology.

CONTENTS

- Section 2.4.1, "Mounting the Subscriber Unit to a Wall or Tower"
- Section 2.4.2, "Mounting the Subscriber Unit to a Pole"

Section 2.4.1

Mounting the Subscriber Unit to a Wall or Tower

Mount the subscriber unit to any wall or tower capable of supporting its weight. An outer wall on a roof or other high location to avoid interference from other buildings or trees is preferred.

To mount the subscriber unit to a wall or tower, do the following:

1. Attach the subscriber unit to the mounting bracket.

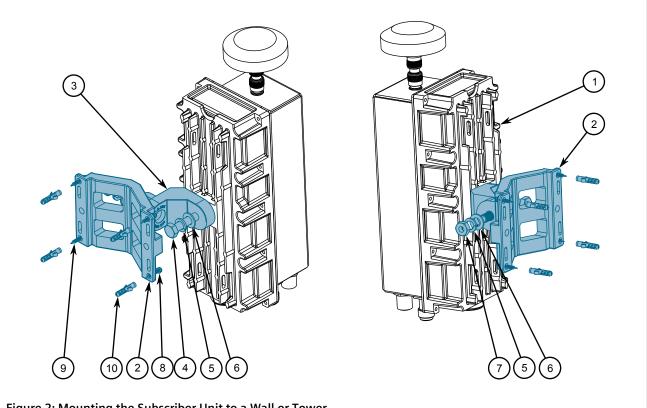


Figure 2: Mounting the Subscriber Unit to a Wall or Tower

1. Subscriber Unit 2. Mounting Kit 3. Wall Holder/Pole Mount 4. M8 × 25 mm Hex Screw 5. M8 Spring Washer 6. M8 Flat Washer 7. M8 Nut 8. M5 Flat Washer 9. NS 1/4" × 1/2" HEX Chipboard Screw 10. Wall Anchor

- 2. Liberally apply an anti-corrosion spray to all galvanized steel components, including mounting brackets, washers and screws.
- 3. Select a mounting location on the wall.
- 4. Place the mounting bracket on the wall and mark four mounting holes.
- 5. Drill four holes and insert a wall anchor into each hole.
- 6. Secure the mounting bracket to the wall with four 1/4" × 1/2" HEX screws, four spring washers, and four flat washers.
- 7. Connect the arm bracket to the mounting bracket using a screw, spring washer, flat washer and nut. Make sure the nut is hand tight
- 8. Connect the subscriber unit to the arm bracket using a screw, spring washer, flat washer and nut. Make sure the nut is hand tight.
- 9. Make sure the subscriber unit is properly grounded according to local standards. For more information, refer to Section 2.6, "Grounding the Subscriber Unit".
- 10. Tighten the screws connecting the arm bracket to the subscriber unit and mounting bracket. Make sure the screws are torqued to 24 N·m (17.7 ft. lb.).

Section 2.4.2

Mounting the Subscriber Unit to a Pole

The subscriber unit can be attached to any pipe or pole with a diameter of 44.5 to 254 mm (1.75 to 10 in).

To mount the subscriber unit to a pole, do the following:

1. Attach the subscriber unit to the mounting bracket.


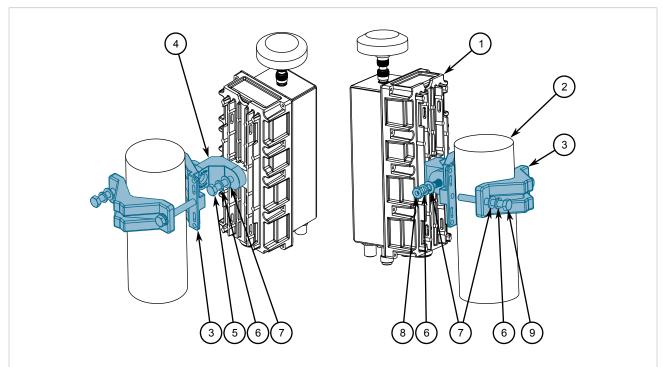


Figure 3: Mounting the Subscriber Unit to a Large Pole

1. Subscriber Unit **2.** Pole **3.** Clamping Bracket **4.** Mounting Bracket **5.** M8-25 Hex Screw **6.** M8 Spring Washer **7.** M8 Flat Washer **8.** M8 Nut **9.** M8-70 Hex Screw



- 2. Liberally apply an anti-corrosion spray to all galvanized steel components, including mounting brackets, nuts, washers and screws.
- 3. Select a mounting location on the pole.
- 4. Position the mounting bracket against the pole.

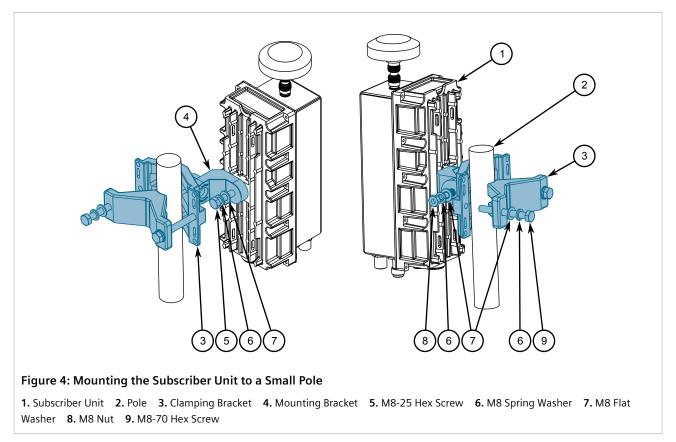

NOTE

When mounting the subscriber unit, note the orientation of the clamping bracket in Figure 3 or Figure 4.

- 5. Secure the clamping bracket to the mounting bracket using screws, spring washers and nuts. Make sure the screws are hand tightened.
- 6. Make sure the subscriber unit is properly grounded according to local standards. For more information, refer to Section 2.6, "Grounding the Subscriber Unit".
- 7. Tighten the screws connecting the clamping bracket to the mounting bracket. Make sure the screws are torqued to 14 N·m (10 lbf-ft).

Section 2.5

Installing the Antennas

The RUGGEDCOM WIN5137-V-GPS supports N-Connect female antennas.

To install an antenna, do the following:

12 Installing the Antennas



WARNING!

Radiation hazard – risk of Radio Frequency (RF) exposure. This subscriber unit is compliant with the requirements set forth in FCC CFR 47, section 1.1307, addressing Radio Frequency (RF) exposure from radio frequency base stations, as defined in FCC OET Bulletin 65 [http://transition.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins/oet65/oet65.pdf]. The emitted radiation should be as little as possible. To achieve minimum RF exposure, install the subscriber unit when it is configured not to transmit and set it to operational mode remotely, rather than having a technician enable transmission on-site. For maintenance of the subscriber unit or other operations which require RF exposure, the exposure should be minimized in time and according to the regulations set forth by the country of installation or the Federal Communications Commission (FCC).



WARNING!

The subscriber unit must be placed at a distance of at least 20 cm (8 in) from all persons during normal operation. The antennas used for this product must not be located or operating in conjunction with any other antenna or transmitter, except in accordance with FCC multi-transmitter evaluation procedures.



IMPORTANT!

During antenna installation, observe the following:

- Always install the antenna at least 40 cm (16 in) from people and public areas.
- Antenna must be in a fixed position.
- Make sure the front of the antenna is always facing the base station. In some conditions, such as
 when the line of sight to the subscriber unit is impeded, better reception may be achieved using a
 reflected signal. In this case, direct the antenna towards the reflecting object, rather than towards
 the base station.
- In some cases, the antenna may need to be tilted to make sure the level at which the subscriber unit receives transmissions from the base station (and vice versa) is not too high. When only the last RSSI LED is on, this indicates saturation and the received signal level is too high. This must be avoided, preferably by tilting the antenna upwards. As a general rule, if the subscriber unit is located at a distance of less than 300 m (984 ft) from the base station, it is recommended to tilt the antenna upwards by approximately 10 to 15°.
- After the antenna is installed, do not change the antenna position.
- 1. Mount the antenna to a pole or wall in an area that provides good signal coverage and is away from any signal noise emanating from other communications equipment.
- 2. Position the antenna towards the general direction of the designated base station.




WARNING!

Fire hazard – risk of serious personal injury and/or damage to equipment. To reduce the risk of fire, use only 26 AWG or larger telecommunication line cord between indoor and outdoor devices.

3. Using shielded coaxial cables, connect the antenna to the lightning protector. Make sure the cables are routed away from any noise sources, such as Switch-Mode Power Supplies (SMPS).

Installing the Antennas 13

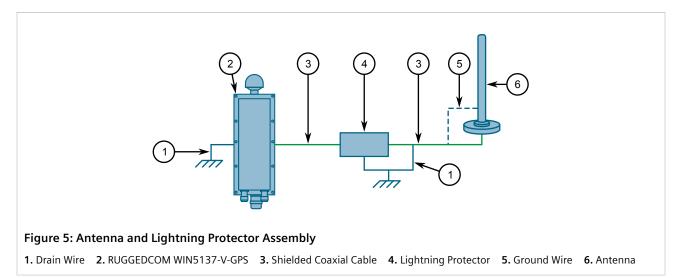

- 4. Make sure the **PWR** LED on the subscriber unit is on.
- 5. Adjust the position of the antenna until the maximum RSSI link quality reading is achieved. A single RSSI LED indicates the subscriber unit is at minimum synchronized with the base station. For information about the RSSI LED indicators, refer to Section 1.2, "Description".
 - If the subscriber unit is not synchronized with the base station, make sure the subscriber unit is properly configured. For more information, refer to the *RUGGEDCOM WIN User Guide* for the subscriber unit.
 - If the expected link quality still cannot be achieved, try to improve the reception quality by placing the antenna at a higher point or in an alternate location.
- 6. Make sure the antenna is properly grounded according to local standards.

Section 2.6

Grounding the Subscriber Unit

When connecting the ground cable to the subscriber unit, make sure to use a 10 AWG grounding cable and torque the screw to 15 N·m (11 ft. lb.).



DANGER!

Electrocution hazard – risk of death or serious injury. The system must be properly grounded to protect against power surges and accumulated static electricity. It is the installer's responsibility to install this base station in accordance with the local electrical codes.

Section 2.7

Connecting Power and Data

The RUGGEDCOM WIN5137-V-GPS requires a 9 to 36 VDC Class 2 power supply.



IMPORTANT!

When connecting a DC battery power supply, make sure to use a 36 VDC, 3 A, double-pole circuit breaker as the main disconnecting device.

To connect a power supply to the subscriber unit, do the following:

1. Make sure the power supply is grounded. For more information, refer to Section 2.6, "Grounding the Subscriber Unit".



CAUTION!

Crushing hazard – risk of damage to cables. Route all power supply cables so that people cannot walk on them or place objects on or against them.

- 2. Connect the power supply to the M12 (4-pin, male, A-coded) PWR port on the subscriber unit.
- 3. Connect a CAT-5e cable between the ETH port on the subscriber unit and a router/switch.

Section 2.8

Weatherproofing the Subscriber Unit

Most outdoor subscriber unit, antenna and cable problems are caused by coaxial cable connections loosened by vibration, allowing moisture to penetrate the connector interface. Siemens strongly recommends weatherproofing *all* outdoor cable connections to prevent the ingress of water and help secure connections.

Use cold shrink tubing or self-amalgamating tape, as well as UV-resistant tape and electrical insulation putty to seal connections.



IMPORTANT!

Warranty is void if the subscriber unit is assembled without waterproof sealing or if the sealing is removed from the connections.



IMPORTANT!

The method of weatherproofing described in this section must be completed on **all** external connections. If surge arrestors are used, all associated connections and arrestors must be completely wrapped with splicing tape or self-amalgamating tape.

CONTENTS

- Section 2.8.1, "Weatherproofing a Cable"
- Section 2.8.2, "Applying Cold Shrink Tubing"
- Section 2.8.3, "Applying Self-Amalgamating Tape"

Section 2.8.1

Weatherproofing a Cable

To weatherproof a cable, do the following:



IMPORTANT!

PVC tape, silicon sealant and glue are not recommended for weatherproofing, as these materials are difficult to apply accurately and are difficult to remove.

1. Spray the cable end and connector with a cleaner and de-greaser, making sure to remove any excess with a clean lint-free cloth.

- 2. Spray the cable end and connector with SCC3 conformal coating and allow them to dry fully (approximately 3 to 5 minutes depending on the ambient temperature).
- 3. Apply cold shrink or self-amalgamating tape to the connector end. For information about how to apply these types of seals, refer to Section 2.8.2, "Applying Cold Shrink Tubing" or Section 2.8.3, "Applying Self-Amalgamating Tape".
- 4. Apply two layers of UV-resistant vinyl tape to the cable ends.
- 5. Apply electrical insulation putty around the very end of the cable to form a seal between it and the base station.
- 6. If the subscriber unit is installed in a marine environment (e.g. wind farm substation, coastal tower, or marine vessel) apply a coating of marine grease to all galvanized steel components, including mounting brackets, nuts, washers and screws. This is in addition to the anti-corrosion spray applied during the mounting process.



IMPORTANT!

Should a cable need to be replaced, make sure all surfaces are thoroughly cleaned with a cleaner and de-greaser spray before connecting the new cable. No residue from the previous weatherproofing materials should be evident on the connector or the subscriber unit chassis.

Section 2.8.2

Applying Cold Shrink Tubing

To apply cold shrink tubing to a cable end, do the following:

- 1. Disconnect the cable and slide the tube over the connector end.
- 2. Reconnect the cable and slide the tube up to meet the subscriber unit chassis.
- 3. Hold the tube against the subscriber unit chassis and start rotating it clockwise while gently pulling out the core. Stop rotating once the front end of the cold shrink has begun to form around the cable end.
- 4. Continue to remove the core in a counter-clockwise direction until it is completely removed.

Section 2.8.3

Applying Self-Amalgamating Tape

To apply self-amalgamating (or self-fusing) tape to a cable end, do the following:



IMPORTANT!

When applying self-amalgamating tape, make sure to stretch it to 2/3 of its original width to form a tight seal.

- 1. Cut a strip of self-amalgamating tape approximately 50 cm (19.7 in) long.
- 2. Apply one end of the tape to the cable end and tightly wrap it around the cable once fully, making sure the tape overlaps.
- 3. Tightly wrap the remainder of the tape down the cable, making sure the tape overlaps with each pass.
- 4. Repeat the previous steps to apply a second layer of tape.

3 Device Management

This section describes how to connect to and manage the subscriber unit.

CONTENTS

• Section 3.1, "Configuring the Subscriber Unit"

Section 3.1

Configuring the Subscriber Unit

Once the subscriber unit is installed and connected to the network, it must be configured. The RUGGEDCOM WIN5137-V-GPS features a Web-based User Interface (UI) for all configuration management. For more information about configuring the subscriber unit, refer to the RUGGEDCOM WIN Subscriber Unit User Guide associated with the subscriber unit and the installed software release.



Technical Specifications

This section provides important technical specifications related to the subscriber unit.

CONTENTS

- Section 4.1, "Power Supply Requirements"
- Section 4.2, "Power Consumption"
- Section 4.3, "Radio and Modem Specifications"
- Section 4.4, "Operating Environment"
- Section 4.5, "Mechanical Specifications"
- Section 4.6, "Dimension Drawings"

Section 4.1

Power Supply Requirements

The RUGGEDCOM WIN5137-V-GPS requires an external power supply that meets the following requirements:

Power Supply Type	Class 2
Input Range	10 to 36 VDC

Section 4.2

Power Consumption

Typical Power Consumption	12 W
---------------------------	------

Section 4.3

Radio and Modem Specifications

Operating Frequency	3600 to 3800 MHz
Wireless Communication Standard	IEEE 802.16e-2009
Operating Mode	Time-Division Duplexing (TDD)
Channel Bandwidths	3.5 MHz
	5 MHz

	7 MHz
	10 MHz
Frequency Resolution	250 kHz
Transmission Mode for MIMO	MRC/STC (downlink)
Antenna Type	External RF
Number of Ports for External Antenna(s)	2
Type of Ports for External Antenna(s)	N-Connect female
Maximum Transmit Power	0.5 W
Transmit Power Level (Adjustable)	54 dB
Size of Fast Fourier Transform (FFT) Channels	1024/512FFT
Type of Modulation	QPSK, 16-QAM, 64-QAM
Dynamic Range (Receiver)	-20 to 100 dBm
Dynamic Range (Transmitter)	-20 to 27 dBm

Section 4.4

Operating Environment

The RUGGEDCOM WIN5137-V-GPS is rated to operate under the following environmental conditions.

Ambient Operating Temperature ^a	-40 to 75 °C (-40 to 167 °F)
Ambient Storage Temperature	-40 to 75 °C (-40 to 167 °F)
Ambient Relative Humidity ^b	5% to 95%
Maximum Altitude	2000 m (6562 ft)

^a Measured from a 30 cm (12 in) radius surrounding the center of the enclosure

Section 4.5

Mechanical Specifications

Weight	1.5 kg (3.3 lb)
Ingress Protection	IP67
Enclosure	Aluminum

20 Operating Environment

^b Non-condensing


Section 4.6

Dimension Drawings



NOTE

All dimensions are in millimeters, unless otherwise stated.

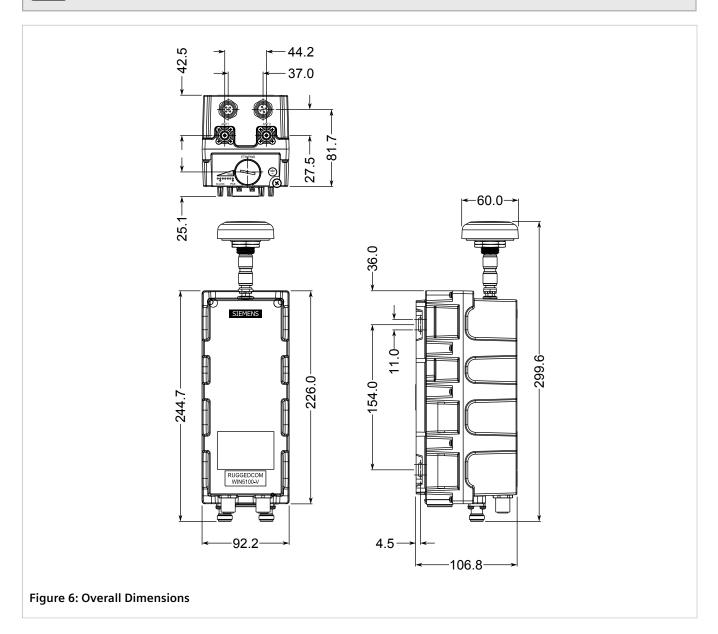

Dimension Drawings 21

22 Dimension Drawings

5 Certification

The RUGGEDCOM WIN5137-V-GPS ODU SU has been thoroughly tested to guarantee its conformance with recognized standards and has received approval from recognized regulatory agencies.

CONTENTS

- Section 5.1, "Approvals"
- Section 5.2, "Environmental Type Tests"

Section 5.1

Approvals

This section details the standards to which the RUGGEDCOM WIN5137-V-GPS complies.

CONTENTS

- Section 5.1.1, "CSA"
- Section 5.1.2, "European Union (EU)"
- Section 5.1.3, "TÜV Rheinland"
- Section 5.1.4, "ISED"
- Section 5.1.5, "FCC"
- Section 5.1.6, "IEEE"
- Section 5.1.7, "RoHS"

Section 5.1.1

CSA

This subscriber unit meets the requirements of the following Canadian Standards Association (CSA) standards:

- CAN/CSA-C22.2 No. 60950-1-07+A1:2011+A2:2014 Information Technology Equipment – Safety – Part 1: General Requirements (Bi-National Standard, with UL 60950-1)
- CAN/CSA-C22.2 No. 60950-22-07+GI1:2012
 Information Technology Equipment Safety Part 22: Equipment to be Installed Outdoors (Bi-National standard, with UL 60950-22)

Approvals 23

Section 5.1.2

European Union (EU)

This subscriber unit is declared by Siemens Canada Ltd to comply with essential requirements and other relevant provisions of the following EU directives:

IEC/EN 60950-1

Information Technology Equipment – Safety – Part 1: General Requirements

• EN 301 489-1 (v1.9.2)

Electromagnetic Compatibility and Radio Spectrum Matters (ERM) – Electromagnetic Compatibility (EMC) Standard for Radio Equipment and Services – Part 1: Common Technical Requirements

• EN 301 489-4 (v2.2.1)

Electromagnetic Compatibility and Radio Spectrum Matters (ERM) – Electromagnetic Compatibility (EMC) Standard for Radio Equipment and Services – Part 4: Specific Conditions for Fixed Radio Links, Broadband Data Transmission System Base Stations, Ancillary Equipment and Services

• EN 50121-3-2

Railway Applications – Electromagnetic Compatibility – Rolling Stock – Apparatus

• EN 50121-4

Railway Applications – Electromagnetic Compatibility – Emission and Immunity of the Signaling and Telecommunications Apparatus

EN 50155

Railway applications – Electronic Equipment Used on Rolling Stock

Section 5.1.3

TÜV Rheinland

This subscriber unit is certified by TÜV Rheinland to meet the requirements of the following standards:

• UL 60950-1:2007 R10.14

Information Technology Equipment – Safety – Part 1: General Requirements

• UL 60950-22:2007 R12.11

Information Technology Equipment – Safety – Part 22: Equipment to be Installed Outdoors

The subscriber unit is marked with a TÜV Rheinland marking and can be used throughout the European community.



A copy of the TÜV Rheinland Declaration of Conformity is available from Siemens Canada Ltd. For contact information, refer to "Contacting Siemens".

24 European Union (EU)

RUGGEDCOM WIN5137-V-GPS

Installation Guide

Certification

Section 5.1.4

ISED

This subscriber unit is declared by Siemens Canada Ltd to meet the requirements of the following ISED (Innovation Science and Economic Development Canada) standard:

• RSS-197

Wireless Broadband Access Equipment Operating in the Band 3650–3700 MHz

Section 5.1.5

FCC

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 Subpart B, Part 90, and Part 96 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the device is operated in a commercial environment.

This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected
- Contact Siemens Customer Support for assistance



IMPORTANT!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Section 5.1.6

IEEE

This subscriber unit complies with the Mobile WiMAX Forum Wave 2 requirements defined by the following Institute of Electrical and Electronics Engineers (IEEE) standards:

• IEEE 802.16-2005

IEEE Standard for Local and Metropolitan Area Networks – Part 16: Air Interface for Fixed and Mobile Broadband Wireless Access Systems – Amendment for Physical and Medium Access Control Layers for Combined Fixed and Mobile Operation in Licensed Bands

Section 5.1.7

RoHS

This device is declared by Siemens Canada Ltd to meet the requirements of the following RoHS (Restriction of Hazardous Substances) directives for the restricted use of certain hazardous substances in electrical and electronic equipment:

ISED 25

• China RoHS 2

Administrative Measure on the Control of Pollution Caused by Electronic Information Products

A copy of the Material Declaration is available online at https://support.industry.siemens.com/cs/ww/en/view/109738831.

Section 5.2

Environmental Type Tests

The RUGGEDCOM WIN5137-V-GPS has passed the following environmental tests.

Test	Description	Test Levels
IEC 60068-2-1	Low Temperature	-25 °C for 72 hours
		-40 °C (-40 °F) for 16 hours
		-40 °C (-40 °F) for 72 hours
IEC 60068-2-2	High Temperature	55 °C (131 °F) for 72 hours
		60 °C (140 °F) for 16 hours
		70 °C (158 °F) for 72 hours
IEC 60068-2-11	Salt Fog	5% NaCl 35° 48h
MIL-STD-810F 509.4		
IEC 60068-2-14	Temperature Change	-10 to 45 °C (14 to 113 °F) @ 0.5 °C/min (0.9 °F/min) for 2 cycle
		-40 to -30 °C (-40 to -22 °F) @ 1 °C/min (1.8 °F/min) for 5 cycles
IEC 60068-2-18	Water (Rain, Intensity)	0.01 m³/min (0.35 ft³/min @ 90 kPa (13 PSI) for 30 minutes
IEC 529 (IP65/IP67)	Water (Rain)	0.01 m³/min @ 90 kPa (13 PSI) for 15 minutes
IEC 60068-2-6	Sine Vibration	Velocity: 5 mm/s
		Displacement: 1.5 mm
		Acceleration: 2 m/s ²
		Frequency Range: 5 to 62 Hz, 62 to 200 Hz
		3 Axes
		Duration: 3x5 sweep
IEC 60068-2-64	Random Vibration (Class 4M5)	ASD: 0.04 m²/s³
		12 to 12 dB/oct
		Frequency Range: 5 to 10 Hz, 10 to 50, 50 to 100 Hz
		3 axes, 30 min per axes
	Random Vibration	ASD: 1 m ² /s ³
		-3 dB/oct
		Frequency Range: 5 to 20 Hz, 20 to 200 Hz
		3 axes, 30 min per axes
IEC 60068-2-29	Shock (Class 4M5)	Spectrum: Half sine
		Duration: 11 ms
		Accelerator: 50 m/s ²
		100 shocks in each direction
	Shock	Spectrum: Half sine
		Duration: 6 ms

Test	Description	Test Levels
		Accelerator: 180 m/s²
		100 shocks in each direction
IEC 60068-2-32	Free Fall	Height: 1 m (3.3 ft)
Nebs: GR63		One fall on 3 faces, 3 edges and 4 corners
IEC 60068-2-30	Humidity (Cycling)	30 °C (86 °F) @ 90 to 100% for 2 cycles
		40 °C (104 °F) @ 90 to 100% for 2 cycles

Environmental Type Tests 27