modu W



User Guide



Intellectual Property Information

© Copyright 2010 modu Ltd. All rights reserved. modu, modu W and the modu symbols are trademarks or registered trademarks of modu Ltd. All other company or product names are trademarks or registered trademarks of their respective holders

microSDHC Logo is a trademark of SD-3C, LLC.
The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance. Wi-Fi is a mark or a registered mark of the Wi-Fi Alliance.

Android™ and the robot character design are copyright Google, Inc. and used under the terms of the Creative Commons 3.0 Attribution License.

YouTube is a trademark or registered trademark of Google, Inc. MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

[Note: additional attributions may be required according to the User Guide contents]

This document is published by modu Ltd., without any warranty*. This document is intended only for its designated recipient and does not constitute a representation or warranty on behalf of modu Ltd. This document does not create any legal obligations on modu Ltd. Any unauthorized reproduction, transfer, use, distribution or storage of the information and/or material contained in this document, or any part thereof, is strictly prohibited. modu Ltd. reserves the right to modify and

modu W

replace this document at its sole discretion, without prior notice or obligation.

*TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL MODU OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING OUT OF THE USE OF THE INFORMATION IN THIS DOCUMENT.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. MODU RESERVES THE RIGHT TO REVISE THE DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

Export Controls: This device may contain commodities, technology or software subject to export laws or regulations from the U.S. and other countries. Diversion contrary to law is prohibited.

Regulatory Information

(€1588

FCC ID: WQKW1000

Declaration of Conformity

We, modu Ltd. hereby declare that this modu™ W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.modumobile.com/DoC.htm.

WLAN and Bluetooth technologies use frequencies in the spectrum around 2.4 GHz.

This spectrum may have restrictions in some countries. For example the use may be limited to specific channels, or limited to indoor usage. For more specific information you should contact the local authorities.

In Israel WLAN usage is limited to channels 1-13 which cover the frequency range of 2.4 - 2.483 GHz.

Federal Communication Commission Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC requires the user to be notified that any changes or modifications not expressly approved by modu Ltd. could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

modu W



The crossed-out wheeled-bin symbol on your product, literature or packaging reminds you that the electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available.

Do not dispose of these products as unsorted municipal waste. By returning the products to collection you help prevent uncontrolled waste disposal and promote the reuse of material resources. For more information about returning your obsolete product, please contact your local waste authorities or local distributor.

modu W

Contents

CONTENTS

Getting Started	. 11
What's in the Box	. 11
Dronoving Vous moduTM M/ device for Hea	12
Preparing Your modu™ W device for Use	
Charging the Modu™ W Battery	
Turning Your modu™ W On / Off	
Changing to Sleep Mode When Not in Use	
Locking / Unlocking Your modu™ W When Not in Use	. 17
Setting Up Your modu™ W for the First Time Using the	
Welcome Wizard	. 19
Court of the Manager	
Getting to Know Your modu™ W device	
Home Screen	
Basic Settings	
Opening the Settings Screen	
Adjusting the Volume	. 36
Status & Notifications	41
Status Bar	
Notifications	
Notifications	-72
Applications	47
Accessing the Application Tab	. 47
Recently Used Applications	. 47
History than Brown and	••
Using the Browser	
Accessing the Browser	
Browsing the Web Pages	
Viewing Web Pages	
Managing Links, History, & Downloads	. 54

modu W Contents

Managing Bookmarks	58
Adjusting Browser Settings	60
Setting Up Voice and /or SMS Services	61
Settings	62
Opening the Settings Screen	62
Getting Connected to Wi-Fi®	66
Using Bluetooth	69
Calls	74
Making Calls	
Answering/Rejecting Calls	75
Call Options	75
Using the Call Log	77
Adjusting modu™ W Settings	
Turning the Modu™ W Function On/Off	78
Contacts	79
Creating & Managing Contacts	
Entering Text	89
Using the Onscreen Keyboards	
Entering Numbers & Symbols	
Adjusting Text Input & Keyboard Settings	90
Managing Your Time	91
Using the Calendar	
Using the Alarm Clock	
Exchanging Messages (SMS)	101
Sending Text and Multimedia Messages/Notifications .	
Receiving Text and Multimedia Messages	101
0	

Contents

modu W

Exchanging Messages Emails	102
Using Mail	. 102
Photos & Multimedia	110
Using the Gallery	. 110
Working with the Photo Gallery	. 111
Using the YouTube™	. 119
Using Music – TuneWiki	. 120
Using the SlideME™ Marketplace	122
Using the SlideME™ Market	
Managing Your modu™ W	.123
Managing Memory	
Resetting modu™ W	
FM Radio	127
Connecting the modu™ W Headsets	
Accessing & Listening to the Radio	. 127
Searching for Stations Automatically	
Selecting & Listening to a Radio Station from the Station Lis	
	. 129
Manually Tune to a Frequency	. 129
Manually Save a Station in the Station List	. 130
Managing Your Radio Stations	. 130
Sound Recorder	132
Accessing the Sound Recorder	. 132
Recording Using the Sound Recorder	. 132
Playing the Recorded Records	. 133
Deleting a Saved Recorded Record	. 133
File Manager	135
- 0-	-

Contents modu: W

Accessing the File Manager	135
Managing Files in the File Manager Application	136
Service Messages	140
Receive a service message	140
View a WAP service message	141
General Information	142
Care and maintenance of your modu™ W device	142
About your modu™ W device	142
Support and contact information	143
Safety	144
Symbols and information	144
AC adapter	145
Small children	146
Pacemakers	147
Magnetic fields	147
Radio frequency signals	147
Protect your hearing	148
Exposure to Radio Frequency Information	148
Limited Warranty	149
The warranty	
Conditions	150

Getting Started

What's in the Box

Your modu W package contains the following components:

A modu W product
An AC adapter

- An USB data cable A 2 GB microSD™ memory card
- 3.5 stereo headset
- A Quick Reference Guide
- A warranty card

Preparing Your modu™ W device for Use

This chapter explains how what you need to do in order to start using your modu $^{\text{m}}$ W. This chapter includes the following topics:

- Install / remove the SD memory card
- Charge your modu W
- Turn on/off our modu W
- Manage the lock screen
- Change to sleep mode
- Lock the modu W screen
- Welcome wizard
- Import contacts

Installing the MicroSD™ Memory Card

Make sure to always turn off your modu W before installing or replacing the SD memory card. The purpose of the SD memory card is to be able to store your pictures, music, and other files.

- Turn off your modu W by pressing and holding the Power key.
 - The **Phone options** menu appears.
- **2.** Touch the Power off option. A notification message appears:
- 3. Touch the OK button.
- 4. Turn your modu W so that the side is facing you.
- 5. Open the storage slot cover.
- 6. Hold the cover back, and place the SD card in its slot.
- 7. Push the SD card into your modu W.

12

8. Close the cover.

Removing the MicroSD™ Memory Card

 Turn off your modu™ W by pressing and holding the Power key.

The Phone options menu appears.

- **10.** Touch the **Power off** option. A notification message appears:
- 11. Touch the OK button.
- 12. Turn your modu W so that the side is facing you.
- 13. Open the storage slot cover.
- 14. Hold the cover back.
- 15. Press the SD card to eject it from its slot.
- 16. Remove the SD card
- 17. Close the cover.

Charging the Modu™ W Battery

Charge your modu W when first receiving it for two hours to fully charge its battery.



NOTE: The modu W battery cannot be removed.

You can charge your modu W battery by connecting your modu W to the AC adapter or by connecting it to the USB port on your computer.

The following is an illustration and explanation of the charging methods:

» Charging Your modu™ W Battery Using the AC Adapter

- 1. Insert the AC plug into an electrical outlet.
- Connect the other end of the AC adapter cable to the micro USB port on the bottom of your modu™ W.

» Charging Your modu™ W Battery Using Your Computer

- 1. Insert the USB data cable into the computer's USB port.
- 2. Connect the other end of the USB data cable to the micro USB port on the bottom of your modu W.
 - TIP: It is recommended that you use the AC adopter and USB cable provided with your modu W package only in order to charge the modu W battery.

 Notice that the (Charging) icon is displayed in the status bar of the Home screen. When the battery is fully charged a (Full Battery) icon is displayed in the status bar of the Home screen.

Turning Your modu™ W On / Off

Only after you installed the SD (storage) card, you can turn your modu W and start to use it.

» Turning Your modu™ W On

Press and hold the **Power** key.
 When using your modu W for the first time, you will be prompted to set up your modu™ W by the welcome wizard.
 The default screen displayed in the **Lock** screen.

» Turning Your moduW Off:

- Press and hold the **Power** key.
 The **Phone options** menu appears.
- Touch the Power off option.A notification message appears:
- 3. Touch the OK button.

» Managing the Lock Screen

You can access the following from the Lock screen:

- Dialer Touch and drag the right arrow to make a call.
- Home screen Touch and drag the left arrow to display the Home screen.
- Notifications Touch and drag the arrow downwards to view notifications.
- Modu Portal Touch and drag the arrow upwards to display the modu portal.

Changing to Sleep Mode When Not in Use

The purpose of changing the screen to sleep mode when not in use is to save the battery's power. If this option is on, the modu $^{\text{TM}}$ W automatically goes into the sleep mode after a certain time period (the default time period is 30 seconds), and when wakes up the displayed screen will be the last screen you were on.

Note: You will still be able to receive messages and calls while the modu W screen is off.

- 1. Access the Home screen.
- 2. Press the Menu button.

The Menu appears:

3. Touch the Settings option.

The Settings screen appears:

4. Touch the Sound & display option.

The Sound & display menu appears:

5. Touch the Screen timeout option in the Display settings section.

The Screen timeout screen displays.

- 6. Touch the relevant option button e.g. 1 minute, 2 minutes etc.).
- 7. Press the Back button to return to the previous screen/s.

Locking / Unlocking Your modu W When Not in Use

You can protect that data on your modu™ W by locking your modu W screen. The advantage of locking the screen is to prevent accidental screen touches when the modu W is in your backpack, purse, or pocket.

There are two locking options:

- By the power key
- By the locking pattern

Note: If a locking pattern option is enabled, when wanting to unlock the screen, you will be required to draw the correct a pattern to unlock it.

You will still be able to receive messages and calls while the modu W is locked.

» Locking Your moduW Using the Power Key

- To lock, press the Power key located on the right sideways panel.
- 2. To unlock, press the Power key again.


» Locking Your modu W Using the Locking Pattern

- 1. To create the unlock pattern, access the Home screen.
- 2. Press the Menu key.

The Menu appears:

3. Touch the **Settings** option. The **Settings** screen appears:

- 4. Touch the Security & location option.
 The Security & location screen appears:
- 5. Scroll down to the Screen unlock pattern section.
- 6. Touch the Set unlock pattern option.
- 7. Read the information on the screen.
- 8. Touch the Next button to continue.
- 9. Study the example pattern on the screen.
- 10. Touch the Next button to continue.
- Draw the screen unlock pattern by touching and dragging your finger connecting at least four dots in a vertical/horizontal/diagonal direction.
- **12.** List your finger from the screen when done. Below is an example:



The modu™ W records the pattern.

- 13. Touch the Continue button to continue.
- 14. Draw the screen unlock again.
- 15. Touch the Confirm button when finished.
- **16.** To cancel the locking pattern, press the Menu key. The Menu appears:

- 17. Touch the Settings option.
- The Settings screen appears:

 18. Touch the Security & location option.

The Security & location screen appears:

- 19. Scroll down to the Screen unlock pattern section.
- 20. Touch the Require pattern option.



NOTE: After five times you draw the unlock pattern incorrectly, you will be promoted to wait for 30 seconds before you can retry.

Touch the Forgot pattern button in case you forgot your unlock pattern. You will be asked to sign in to you Email account in order to create a new screen unlock pattern before the Home screen is displayed.

Setting Up Your modu W for the First Time Using the Welcome Wizard

When turning on the modu W for the first time, you will be prompt to set it up using a welcome wizard. First you will need to sign in to your existing Email account (e.g. google, yahoo, hotmail).



TIP: You need to know your Email account's password in order to sign in.

The following are the welcome wizard stages:

- Connecting to the Wi-Fi
- Setting up mail

Connecting to Wi-Fi®

Wi-Fi provides wireless Internet. In order to use your modu $^{\text{TM}}$ W you need access to a wireless network.

This section includes the following topics:

- Email account set up.
- Voice & SMS service set up

» Turning Wi-Fi® On and Connecting to a Wireless Network:

- 1. Press the Home key.
- 1. Press the Menu key.

The Menu appears:

- 2. Touch the Setting button.
- 3. Touch the Wireless controls button.
 The Wireless controls screen appears:
- Touch the Wi-Fi option.
 Notice that the Turn on Wi-Fi check box is marked.
 The modu W scans for available wireless networks.
- 5. Touch the Wi-Fi settings option.
 The detected Wi-Fi (wireless) networks are displayed in the Wi-Fi network section.
- **6.** Touch a Wi-Fi network to connect to.



TIP: When you select an open network, you will be automatically connected to it. If you select a secured network in, enter the password and touch the **Connect** button.

- Importing Your Contacts
 To be completed
 Access the Contacts list.
 The Contacts list appears:

 Touch the contact in order to open the contact option menu.

Getting to Know Your modu™ W

This chapter explains how navigate your modu™ W. This chapter includes the following topics:

- Modu W panels
- Control keys
- Touch screen
- Home screen
- The home screen menu
- Extend the home screen
- Manage the home screen

Modu™ W Panels

» Front Panel

To be completed.



22

» Left & Back Panels



» Top & Bottom Panels





» Right Panel



modu W Controls

There are three control keys located at the front panel of your $\mathsf{modu}^{\mathsf{TM}} W$:

Keys	Description
Back	 Press to go back to the previous screen, or to close a dialog box, menu, or the notifications panel. When the onscreen keyboard is open, press to close the onscreen keyboard.

modu W

Menu	•	Press to open a list of actions that you can perform on the current screen or options menu.
		While on any application or screen, press to return to the Home screen.
Home	•	Press and hold to open the recently-used applications window (notice that only the six recently used applications appear).

Using the Touch Screen

There are five finger movements that you use to select or view information on your modu W:

 Touch/Tap: Using your fingertip to type on the onscreen keyboard, select items onscreen such as applications and settings icons, or press onscreen buttons.



 Touch & Hold: Using your fingertip, touch the screen and hold your finger there for a few seconds in order to open available options for an item (e.g.

contacts).



Drag: Using your fingertip, touch and hold it on the screen with some pressure before dragging it. Do not release your finger until you have reached the desired position.



Slide/Swipe: Place your finger anywhere on the screen and quickly slide your finger as follows:



- Slide/swipe Up: Slide your fingertip in an upward (vertically) movement.
- Slide/swipe Down: Slide your fingertip in a downward (vertically) movement.
- Slide/swipe Left: Slide your fingertip quickly to the left in a horizontally movement.

- Slide/swipe Right: Slide your fingertip quickly to the right in a horizontally movement.
- Rotate: The modu W automatically changes the screen orientation from portrait to landscape when turning the modu W sideways. For example: when entering text, turn the modu W sideways to bring up a full keyboard.





NOTE: To define an automatic orientation change follow these steps:

Home screen > Menu > Settings > Sound & display > select Orientation.

A check icon is displayed next to your choice.

On the touch screen, perform the following actions to select or view menu items or options:

- To select a menu item or option, tap it.
- To view all of the text of a menu item, touch and hold the menu item.
- To scroll through a list, swipe up or down.
- To scroll slowly through a list, slowly move your finger up or down the screen.



TIP: A scroll bar on the right side of the screen indicates that you need to scroll to see the remaining items in the list.

Home Screen

The Home screen is your starting point for using the applications on your modu W. You can customize the Home screen to display application icons, shortcuts, folders, and widgets.

This section explains how to work with the Home screen and customize it.

- Touch and drag the downwards arrow to view all notifications
- Touch and drag the upwards arrow to view all applications



TIP: While in any application, press the **Home** key to return to the **Home** screen.

» The Menu

You can perform various actions available from the Menu.

To access the Menu, press the (Menu) key located at the bottom front of the modu W.

The available options are as follow:

Option	Description
Add	Opens the Add to Home screen menu which enables you to add items to the Home screen such as shortcuts, Widgets, Folders, and Wallpapers.
Wallpaper	Opens the Select wallpaper from menu which enables you to select a wallpaper for your modu W either from imported pictures or from the preinstalled modu W wallpaper gallery
Search	Opens a Quick Search Box which enables you to enter any text to conduct a search.
Notifications	Opens the Notifications screen which displays all the new notifications available.
Settings	Opens the Settings screen which enables you to define various settings for you modu W such as Sound & display, Applications, Date & time etc.

» Extending the Home Screen
The modu W enables you to extend beyond the screen width in order to provide more space for adding icons, widgets, etc.

1. Press the Home button.

The **Home** screen appears:

2. Slide your finger horizontally across the screen to go left or right of the extended Home screen.



NOTE: You can slide only through two screens to the right and two screens to the left of the Home screen. Press the Home button to return to the main Home screen.

» Navigating Between Screens:

- To return to the previous screen, touch the Back key.
- To return to the Home screen, touch and hold the Back key.

» Customizing the Home Screen

This section explains how to:

- Add a Home screen item.
- Reposition a home screen item.
- Remove a home screen item.
- Change the Home screen wallpaper.
- Create a folder & add items to it.
- Rename a folder.

All the customization is performed from the Add to Home

screen menu which can be accessed by:

Touching and holding an empty area on the Home screen

or

 Pressing the Menu button > Tapping the Add option.

The following are the available items:


Item	Description
Shortcut	Enables to add shortcuts such as applications, bookmarks, favorite contacts, music playlist, etc.
Widgets	Enables to add widgets to the Home screen.
Folders	Enables to add folders/shortcuts where you can organize Home screen items.
Wallpapers	Enables to change the Home screen wallpaper.

» Adding a Home Screen Item

- 1. Access the Add to Home screen menu.
- 2. Touch the item you wish to add to the Home screen.
- 3. Press the Back button to return to the previous screen/s.

» Repositioning a Home Screen Item:

 Touch and hold the item on the screen you want to reposition in order to activate the Move mode.



2. Drag the item (icon) to the desired position on the screen (without lifting your finger from the screen).

3. Release your finger.



NOTE: To move an item from the Home screen to an extended Home screen following these steps:

- 1. Touch and hold the item.
- 2. Drag it to the left or right edge of the screen until the display shifts to the extended Home screen.
- 3. Position the item on the screen.
- 4. Release your finger.
- 5. Press the Back key to return to the previous screen.

» Removing a Home Screen Item

 Touch and hold the item on the screen you want to remove in order to activate the **Move** mode.



NOTE: When the **Move** mode is activated, the item magnifies and the modu[™] W vibrates.

- Drag the item (icon) to the Application tab which has changed to the (Trash) tab.
 The (Trash) tab turns read.
- 3. Release your finger.

» Changing the Home Screen Wallpaper

- 1. Access the Add to Home screen menu.
- 2. Touch the Wallpapers item.
 The Select wallpaper from menu appear:

- Touch the desired option (Pictures/Wallpaper gallery).
 Pictures Enables you to use a picture that you have saved into the (photo) gallery as wallpaper.
 Wallpaper gallery Enables you to used preset wallpapers that came with the modu™ W.
- Touch the <u>Set wallpaper</u> option.
 The selected wallpaper is not displayed on your modu W.
- 5. Press the Back button to return to the previous screen/s.

» Creating Folders & Adding Items

 $\mathsf{Modu}^{\mathsf{m}}$ W allows you to create folders on the Home screen in order to hold application icons/shortcuts.

- 1. Access the Add to Home screen menu.
- 2. Touch the Folders item.
 The Select folder menu appear
- 3. Touch the Add folder item.

 The new folder appears on the Home screen.
- 4. Touch and hold the application icon / shortcut from the Home screen in order to activate the Move mode.
- 5. Drag the application icon / shortcut on top of the desired folder.
- 6. Release your finger.
- To access the item/s inside the folder open the folder by touching it.
 - The folder is not open:
- 8. Touch the application icon/shortcut you wish to open.



NOTE: To delete a folder follow the step describes in section **Removing a Home Screen Item**.

» Renaming a Folder

- 1. Access the Home screen.
- 2. Touch the Folders you wish to rename.
- 3. Touch and hold the folder's title bar.
 The Rename folder dialog box appears
- 4. Enter the desired folder name by touching the Folder name field.
- 5. Type the folder name.



TIP: You can either use the full onscreen keyboard, or the 16-key pad.

- Touch the Done button when done.The Rename folder dialog box reappears.
- 7. Touch the OK button.

Basic Settings

This section explains the basic settings in order to use your modu W prior the first use. This section includes the following topics:

- Volume adjustment
- Date, time zone & time set up
- Ringer settings set up
- Language set up

Opening the Settings Screen

There are two ways to open the **Settings** screen.

34

Press Home > Menu > Settings.

Press Home > Application tab > Settings.

The following are the settings options available:

Option	Description
Wireless controls	Enables you to configure your modu W connections, such as Wi-Fi, Bluetooth, Airplane mode, etc.
Sound & display	Enables you to call and notification ring tones, or set screen brightness, timeout, etc.
Security & location	Enables you to set the screen unlock pattern, etc.
Applications	Enables you to manage applications and installation of new programs.
SD card & phone storage	Enables you to check the available card and modu W internal memory, reset the modu W to its factory default settings, etc.
Date & time	Enables you to set the date, time, time zone, and date or time format.
Locale & text	Enables you to set the modu W keyboard options.
Search	Enables you to set Google search, and searchable items.
Speech synthesis	Enables you to set the speech rate, and Language.

Option	Description
About phone	Enables you to view the modu W status, battery use, and legal information.

Adjusting the Volume

modu W enables you to control its volume by adjusting the ringer volume which changed volume level of the ring tones. You can also adjust the media volume which will affect the volume level of the sound notifications and music or video playback.

» Adjusting the Ringer Volume Using the Volume Keys:

- Press the Volume Up (Plus) key or Volume Down (Minus) key located at the left panel of the modu W.
 The Ringer volume screen appears:
- 2. Adjust the ringer volume to your desired level.



NOTE: While on the lowest volume level, press once on the Volume Down (minus) key to set the modu™ W to Vibrate mode. Notice that the modu W vibrates and

(Vibrate Mode) icon appears on the status bar.

While on Vibrate mode, press once on the Volume Down (minus) key to turn off the sound of your modu

W. Notice that the Speaker Mute) icon appears on the status bar.



TIP: To quickly switch your modu W to silent mode, press and hold the Power key > touch the Silent mode from the Phone options menu.

Adjusting the Ringer Volume Using the Settings Screen

- 3. Press the Home key.
- 4. Press the Menu key.

The Menu appears:

- 5. Touch the Setting button.
- 6. Touch the Sound & display button. The Sound & display screen appears:

7. Touch the Ringer volume button.

The Ringer volume screen appears:

- Adjust the volume by moving the slider to the left or right. Moving the slider to the left decreases the volume. Moving the solider to the right increases the volume.
- 9. Touch the OK button.
 The Ringer volume screen closes.

» Adjusting the Media Volume Using the Volume Keys

- Press the Volume Up (Plus) key or Volume Down (Minus) key located at the left panel of the modu™ W while playing music or watching videos.
 - The Music/video volume screen appears:
- 2. Adjust the volume to your desired level.

» Adjusting the Media Volume Using the Settings Screen

- 1. Press the Home key.
- 2. Press the Menu key.
- The Menu appears:
 3. Touch the Settings option.
- 4. Touch the Sound & display option.
 - The Sound & display screen appears:
- 5. Touch the Media volume option.
 The Media volume screen appears:
- Adjust the volume by moving the slider to the left or right. Moving the slider to the left decreases the volume. Moving the solider to the right increases the volume.
- 7. Touch the OK button.

The Media volume screen closes.

Setting Up the Date, Time Zone & Time

When receiving your modu $^{\mbox{\tiny TM}}$ W, you need to manually set the clock.

- 1. Press the Home key.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the Settings button.
- 4. Touch the Date & time button.
 The Date & time screen appears:
- 5. To set the date, touch the Set date button.
- A dialog box appears:Set the date using the Plus and Minus signs next to the Month, day, and year fields.
- 7. Touch the Set button when done.

38

- 8. To set the time zone, touch the Select time zone button.
 The Select time zone screen appears:
- 9. Touch the desired time zone.
- 10. To set the time, touch the Set time button. A dialog box appears:
- 11. Set the time using the Plus and Minus signs next to the hours and minutes fields.
- 12. Touch the Set button when done.
- 13. To set the time format, touch the User 24-hour format button.
 - Notice that when this option is on a green check box is marked next to it.
- 14. To set a date format, touch the Select date format button.
 The Select date format menu appear:
- **15.** Touch the desired date format option button.

Setting Up the Ringer Settings

- 1. Press the Home key.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the Settings button.
- 4. Touch the Sound & display button. The Sound & display screen appears:
- 5. Navigate to the Sound settings section.
- 6. To set notification ringtones, touch the Notification ringtones option.

The Ringtones menu appears:

- 7. Touch the desired ringtone option button.
- 8. Touch the OK button to close the Ringtones menu.

- To set touch tones when using dial pad or when making screen selection, touch the Audible touch tones and Audible selection option buttons.
 Notice that when this option is on a green check box is marked next to it.
- 10. To set a ring tone, touch the Phone ringtone option. The Ringtones menu appears:
- 11. Touch the desired ringtone option button
- 12. Touch the OK button to close the Ringtones menu.

» Setting Up Languages

- 1. Press the Home key.
- 2. Press the Menu key.
 - The Menu appears:
- Touch the Settings button.
 Touch the Locale & text button.

The Locale & text screen appears:

- 5. Touch the Select locale option.
 - The Locale screen appears:
- Touch the desired language.
 Notice that all options on the modu™ W has changed to the selected language.

Status & Notifications


This chapter explains the notifications/status icons, panels etc.

Status Ba

The status bar is located at the top of the modu $^{\!\scriptscriptstyle\mathsf{TM}}$ W screen.




The left side of the status Bar displays the **notification** icons The right side of the **status** bar displays the modu W status



The Status Icons

The following are the status icons which provide information about the status of your modu W.

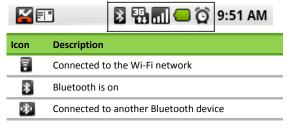

modu W

Icon	Description
割	Airplane mode
Ø	Alarm is set
Co	Speakerphone on
"D"	Vibrate mode
23	Modu W speaker is mute
X	Modu W microphone is mute
•	Battery is very low
•	Battery is low
	Battery is full
(Battery is charging
9	Data is syncing

Notifications

» The Notification Icons:

The following are the notification icons.



modu W

Icon	Description
@	New email message
= °	New SMS
₽IØ	Problem with SMS delivery
₽	New instant message
σo,	New voicemail
1	Upcoming even
	Song is playing
\mathbf{A}	Problem with sign-in/sync
91	Storage card is full
8	Wi-Fi is on and wireless networks are available
Ψ	Modu™ W is connected to the computer via USB cable
D	Hidden notifications
6	Call in progress
×	Missed call
4ii	Call on hold
G.	Call forwarding
	Compass needs orientation

Icon	Description
<u>û</u>	Uploading data
8	Downloading data
<u>B</u>	Content download
Û	Uploading picture to Picasa
0	Uploading to Picasa finished
Insert image	No storage card installed on the modu W

» The Notification Panel:

You can quickly view unread messages, view missed calls, view your next alarm, listen to voicemail, and view the latest modu™ W news or application updates by checking the Notification panel.

- 1. Notice a new notification icon is displayed in the Status bar.
- 2. Touch and hold the Status bar.
- Slide your finger downward the Home screen in order to open the Notifications panel.

4.



TIP: You can also open the Notifications panel by pressing the Menu key and touching the Notifications button.

The Notifications panel appears.





- 6. Touch the Clear all notifications button in order to clear all notifications from the Notifications panel.
- 7. Touch and hold the bottom bar of the Notifications panel.
- 8. Slide your finger upward or press the Back key.



TIP: You can scroll down the **Notifications** panel in case there are many notifications.

Applications

 $\mathsf{modu}^{\mathsf{TM}}$ has selected some application to be used by you that are preinstalled on the modu W device.

All the preinstalled and downloaded applications are located in the $\mbox{\sc Applications}$ tab.

Accessing the Application Tab

- 1. Press the Home key to access the Home screen.
- 2. Touch / touch and drag the (Applications Tab) button upward.
 - The Application Tab appears:
- 3. Touch / touch and drag the (Applications Tab) button downward.

Recently Used Applications

The recently used applications option is used to quickly open a recent application. There are up to 4 recently used applications displayed.

» Opening the Recently Used Applications

From the Home screen, press and hold the Home key.
 The recently-used applications screen opens:



2. Touch the desired icon to open the related application.

Using the Browser

The (web) browser enables you to view web pages that were designed for viewing on a computer as well as web pages that were designed for mobile devices.

This chapter explains how to:

- Access the browser
- Access a web page
- Set your home page
- View web pages
- Change the screen orientation
- Navigate on the Web page
- Zoon in/out on a web page
- Open a new browser window
- Switching between browser windows
- Find a text within a web page
- Select links on web pages
- Download a web application
- View your Downloads
- Bookmark a web page
- Open a Bookmark
- Edit a Bookmark

Accessing the Browser

- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:

3. Touch the Browser application. The Browser screen appears:

Browsing the Web Pages

You can view your home page, bookmarks, stored pages, and pages in the history list.

Important:

Use only services that you trust and that offer adequate security and protection against harmful software. Install and use applications and other software only from trusted sources, such as applications that have passed Java Verified™ testing.

Moing to a Web Page:

- 1. Access the Browser application.
- 2. Press the Menu key.


The Menu appears:

3. Touch the Go option.

A web page appears:

4. Enter the web page address using the keyboard.

Note: As you enter the address, matching web page address will appear on the screen.



Touch a matching address to go directly to that web page. or

Touch the Go button.

» Setting Up Your Home Page:

- 1. Access the Browser application.
- 2. Press the Menu key.
- The Menu appears:
 3. Touch the Go option.
- 4. Enter the URL (address) of the web page you want to use as your home page.
- 5. Touch the Done button.
- 6. A screen appears containing various options:
- 7. Press the Menu key.
- 8. Touch the More option.
- 9. Touch the Set home page option.



TIP: You can also set up your home page by performing the following steps:

Access the Browser application> Press the Menu key > Touch the Settings option > Touch the Set home page option.

Viewing Web Pages

- » Changing the Screen Orientation to Landscape View:
- Verify that the Switch orientation automatically when rotating phone option button is selected.



TIP: If the Switch orientation automatically when rotating phone option button is not selected perform the following steps:

Access the Home screen > Press the Menu key > Touch the Settings option > Touch the Sound & display option > Select the Switch orientation automatically when rotating phone option button.

2. Rotate your phone sideways to view the web page in a landscape mode.

Note: The screen orientation automatically adjusts to how you hold your modu $^{\text{\tiny{M}}}$ W.

» Navigating on a Web Page

- 1. Access the Browser application.
- Press the Menu key. The Menu appears:
- 3. Touch the More option.
 A screen appears containing.... To be completed

» Zooming In/Out on a Web Page

- 1. Access the Browser application.
- 2. Press the Menu key.

The Menu appears:

3. Touch the More option.

A screen appears containing various options appears:

» Opening a New Browser Window:

- 1. Access the Browser application.
- 2. Press the Menu key.
 - The Menu appears:
- **3.** Touch the New window option. A new web page appears.

» Switching Between Browser Windows:

- 1. Access the Browser application.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the New window option.
 - A new web page appears.
- 4. Press the Menu key.
 - The Menu appears:
- 5. Touch the Window option.

Note: This option appears in the Menu only when there are two or more web pages open.



- 6. Touch the browser window you want to view.
- Touch the (Close) icon on the browser window you want to close.

» Finding Text Within a Web Page:

- 1. Access the Browser application.
- 2. Access any web page.
- 3. Press the Menu key. The Menu appears:
- 4. Touch the More option.

A screen appears containing various options.



- 6. Enter the search item.
- 7. Touch the left/right arrow to go to the previous/net matching item.
- 8. Touch the (Close) icon to close the search bar.

» Copying Text on a Web Page:

- 1. Access the Browser application.
- 2. Open a web page where you want to copy text.
- 3. Locate the text you want to copy.
- 4. Press the Menu key.
- The Menu appears: 5. Touch the More option.
 - A screen appears containing various options.

6. Touch the Select text option.



TIP: Zoom out of the page before you select text.

- Position your finger at the start of the text you want to copy.
- 8. Hold and drag to the end of the text you want to copy. **Note**: Copied text is highlighted in pink.
- 9. Release your finger from the section.
- 10. To paste text on an email or SMS message, locate the email/SMS message.
- **11.** Touch and hold the text box. An option screen appears:
- 12. Touch the Paste option.

Managing Links, History, & Downloads

- » Selecting Links in Web Pages:
- 1. Access the Browser application.
- **2.** Open a web page that contains links. For example:



Links are enclosed in an orange or green box when selected.

The following are the available link options:

Link	Description
Web page address (URL)	 Touch the link to open the web page Touch and hold the link to open the menu that allows you to open: bookmarks, copy to the clipboard, or share the link via email.
Email address	 Touch to send an email message to the email address. Touch and hold > touch the Copy option to copy the email address to the clipboard. You can paste the email address when creating a new contact or sending a new email message.

» Checking Browser History:

- 1. Access the Browser application.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the Bookmarks option.
 The Bookmarks screen appears:
- 4. Touch the History tab.
- 5. Touch an item to open the web page.

» Downloading a Web Application:

- Verify that you are able to download web applications by following the below steps:

 The Harmonian Process Agent have Touch the Continue of the Harmonian Process Agent have been processed.

 The Harmonian Process Agent have been processed as a possible of the Harmonian Process Agent have been processed.

 The Harmonian Process Agent have been processed as a possible of the Harmonian Process Agent have been processed as a possible of the Harmonian Process Agent have been processed as a possible of the Process Agent have been processed as a p
 - the Home screen > Press Menu key > Touch the Settings option > Touch the Applications option.
- 2. Access the Home screen.
- 3. Press the Menu key.

The Menu appears:

- 4. Touch the Settings option. The Settings screen appears:
- 5. Touch the Applications option.
- 6. Touch the Unknown sources check box.
 An Attention dialog box appears:
- 7. Touch the OK button.



NOTE: All downloaded applications are automatically saved on the storage card. Make sure the SD (storage) card is installed before you download an application.

- 8. Now download the application by navigating to the application you want to download.
- 9. Touch the desired application.
 The item details screen appears:
- 10. Read all the necessary information before downloading the application such as costs, rating, users' comments etc.
- 11. Scroll down the screen to the About the developer section to view more application by this developer. Below is an example:



- Touch the Install button in order to download the application.
- 13. Open the notification screen to check the progress of the
- **14.** Touch the Cancel Download button, to stop downloading the application.

The **(content download)** icon appears in the notification area of the status bar.

The new application you have just downloaded appears in the Applications tab.

» Viewing Your Downloads

- 1. Access the Browser application.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the More option.
 A screen appears containing various options appears:
- Touch the Downloads option.

A screen opens containing the downloads.

Managing Bookmarks

You can store as many bookmarks as you want.

» Bookmarking a Web Page:

- 1. Access the Browser application.
- 2. Open a web page that you want to book mark.
- 3. Press the Menu key.

The Menu appears:

4. Touch the **Bookmarks** option.

The **Bookmarks** screen appears:



- 5. Touch the Add bookmark option from the Bookmark tab.
- 6. Enter a bookmark name in the Name field.
- 7. Touch the OK button.

» Opening a Bookmark:

- 1. Access the Browser application.
- 2. The Menu appears:
- 3. Touch the Bookmarks option.
 The Bookmarks screen appears:



4. Touch the bookmark you want to open from the Bookmarks tab.

or

Touch and hold the bookmark you want to open > Touch the Open / Open in new window option from the option menu.

» Editing a Bookmark:

- 1. Access the Browser application.
- 2. Press the Menu key.

The Menu appears:

3. Touch the Bookmarks option.

The **Bookmarks** screen appears:



4. Touch and hold the bookmark you want to edit from the Bookmarks tab.

An option menu appears:

- 5. Touch the Edit bookmark option.
 An edit bookmark dialog box appears:
- 6. Enter your changes.
- 7. Touch the OK button.

Adjusting Browser Settings

Set up or change any settings that were defined for the browser by following these steps:

- 1. Access the Browser application.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the More option.
 - A screen appears containing various options appears:
- 4. Touch the Settings option.
- 5. Modify relevant browser settings.

Setting Up Voice and /or SMS Services



NOTE: The voice/SMS services are supplied by a third party, independent from modu. For more details click here (insert an external link). modu will not be responsible for the operation, availability of such services and modu shall not be responsible or liable, either directly or indirectly, in any way for any loss or damage of any kind incurred as a result of, or in connection with your use of such services

» Name of topic

To be completed

Settings

This chapter explains how to use the modu $^{\mathbf{M}}$ W settings and what's available on the settings screen. This section includes the following topics:

- Volume adjustment.
 - Use the storage card as an USB drive.
- Date, time zone & time set up.
- Display settings set up.
- Ringer settings set up.
- modu W settings set up.
- Language set up.

Opening the Settings Screen

There are two ways to open the Settings screen.

- Press Home > Menu > Settings.
 - or
- Press Home > Application tab > Settings.

The following are the settings options available:

Option	Description
Wireless controls	Enables you to configure your modu W connections, such as Wi-Fi, Bluetooth, Airplane mode, etc.
Sound & display	Enables you to call and notification ring tones, or set screen brightness, timeout, etc.

Option	Description
Security & location	Enables you to set the screen unlock pattern, etc.
Applications	Enables you to manage applications and installation of new programs.
SD card & phone storage	Enables you to check the available card and modu™ W internal memory, reset the modu W to its factory default settings, etc.
Date & time	Enables you to set the date, time, time zone, and date or time format.
Locale & text	Enables you to set the modu W keyboard options.
Search	Enables you to set Google search, and searchable items.
Speech synthesis	Enables you to set the speech rate, and Language.
About phone	Enables you to view the modu W status, battery use, and legal information.

Using the Storage Card as an USB Drive

You can use the modu™W storage (SD) card as an USB drive in order to transfer music, pictures, and other files from your computer. In order to be able to do that, you need to set your modu W SD card as your USB drive.

» Setting Up the Storage Card as a USB Drive

Connect the modu W to your computer using the USB cable.

- 2. Open the Notification panel. The Notification panel appears:
- 3. Touch the USB connected option in the Ongoing section.
 A USB connected dialog box appear:
- 4. Touch the **Mount** button.



NOTE: When selecting the Mount button, the modu™ W will not recognize the storage card when it is connected to a computer.

Turning Off the USB Storage

- Open the Notification panel. The Notification panel appears:
- 2. Touch the Turn off USB storage option.
 The Turn off USB storage dialog box appears:
- 3. Touch the Turn off button.

Removing the Storage Card Safely while the modu™ W is On

- 1. Unmount the storage card to prevent corrupting/damaging the storage card by pressing the Home key.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Settings button. The Settings appears:
- 4. Scroll down the Settings screen.
- 5. Touch the SD card & phone storage option.
- **6.** Touch the **Unmount SD** card option.
- 7. Remove the storage card.

Formatting the Storage (SD) Card

- 1. Press the Home key.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Settings button. The Settings appears:
- 4. Scroll down the Settings screen.
- 5. Touch the SD card & phone storage option.
- Touch the Unmount SD card option.
 Notice that the Format SD card option is not enabled.
- 7. Touch the Format SD card option.
 - The Format SD card screen appear:
- 8. Touch the Format SD card button.

Setting Up the Display Settings

- 1. Press the Home key.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Settings button.
- 4. Touch the Sound & display button. The Sound & display screen appears:
- 5. Scroll down the screen to the Display settings section.
- 6. To set orientation automatically when rotating the modu W, touch the Orientation option.
 - Notice that when this option is on a green check box is marked next to it.
- To set animation when opening/closing a window, touch the <u>Animation</u> option.
 - Notice that when this option is on a green check box is marked next to it.

8. To adjust the Brightness of the screen, touch the Brightness option.

The Brightness dialog box appears:

- Adjust the brightness by moving the slider to the left or right.
 - Moving the slider to the left makes the screen darker. Moving the solider to the right makes the screen lighter.
- 10. Touch the OK button to close the screen.
- 11. To set the time before the screen automatically turns off, touch the Screen timeout option.

The Screen timeout menu appears:

12. Touch the desired screen timeout option button.

Getting Connected to Wi-Fi®

Wi-Fi provides wireless Internet. In order to use your modu $^{\mbox{\tiny TM}}$ W you need access to a wireless network.

- This section includes the following topics:

 Email account set up.
 - Voice & SMS service set up

>> Turning Wi-Fi On and Connecting to a Wireless Network:

- 13. Press the Home key.
- 14. Press the Menu key.

The Menu appears:

- 15. Touch the Setting button.
- 16. Touch the Wireless controls button.

The Wireless controls screen appears:

17. Touch the Wi-Fi option.

Notice that the Turn on Wi-Fi check box is marked. The modu W scans for available wireless networks.

66

18. Touch the Wi-Fi settings option. The detected Wi-Fi (wireless) networks are displayed in the Wi-Fi network section.

19. Touch a Wi-Fi network to connect to.



TIP: When you select an open network, you will be automatically connected to it. If you select a secured network in, enter the password and touch the Connect button.

» Checking the Wireless Network Status Using via the Status Bar:

- Look at the Status bar located at the top panel of the modu™ W.
- 2. If your modu W is connected, the (Wi-Fi) icon appears.



The approximate signal strength is also displayed in the Status bar.

» Checking the Wireless Network Status Using via the Wi-Fi® Network:

- 1. Press the Home key.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the Setting button.
- 4. Touch the Wireless controls button.
 The Wireless controls screen appears:
- 5. Touch the Wi-Fi settings option.

The detected Wi-Fi (wireless) networks are displayed in the Wi-Fi network section.

Touch the wireless network that your modu $^{\mbox{\tiny TM}}$ W is connected to in order to view the status.



This screen displays the Wi-Fi network name, status, speed, signal strength, security information, and IP address.



NOTE: If you want to remove the wireless network settings from you modu[™] W, touch the **Forget** button on the Status screen.

» Connecting to Another Wi-Fi® Network:

- 1. Press the Home key.
- 2. Press the Menu key.
 - The Menu appears:
- Touch the Setting button.
 Touch the Wireless controls button. The Wireless controls screen appears:
- Touch the Wi-Fi settings option.
 The detected Wi-Fi (wireless) networks are displayed in the Wi-Fi network section.



TIP: To manually scan for available Wi-Fi networks perform the following steps:

- Press the Menu key (from the Wi-Fi settings screen)
- 2. Touch the (Scan) button.
- 3. Touch another Wi-Fi network to connect to.

Using Bluetooth®

Using Bluetooth enables you to exchange information over a short-range distance without requiring a physical connection to a headset etc.

There are three modes to operate the Bluetooth with the $\mathsf{modu}^{\intercal\!\mathsf{M}}$ W:

Mode	Description
On	Bluetooth is turned on. Your modu W can detect other Bluetooth-enabled devices but not vice versa.

Mode	Description
Off	Bluetooth is turned off. You cannot send/receive information using Bluetooth.
Discoverable	Bluetooth is turned on and all other Bluetooth-enabled devices can detect your modu W.



NOTE: Bluetooth is turned off by default. When you turn on Bluetooth and turn off your modu W, then the Bluetooth is turned off as well. When you turn back on the modu W then automatically the Bluetooth is turned on.

It is recommended to turn off Bluetooth when not in use in order to save battery power, also in placed that using wireless devices are prohibited.

» Turning On the Bluetooth:

- 1. Press the Home key.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Settings button.
- 4. Touch the Wireless controls button.
 The Wireless controls screen appears:
- 5. Touch the Bluetooth check box to turn on Bluetooth.
 - When Bluetooth is on the (Bluetooth) icon appears in the Status bar.
- **6.** Touch the **Bluetooth setting** option. The **Bluetooth setting** screen appear:

70

Touch the Discoverable check box to make your modu™ W
discoverable to other Bluetooth devices that are within
range.

» Changing the modu™ W Name:

Your modu W name is used as identification in a Bluetooth network.

- 1. Verify that the Bluetooth is on.
- 2. Press the Home key.
- 3. Press the Menu key.
 - The Menu appears:
- Touch the Setting button.
 Touch the Wireless controls button.
 - The Wireless controls screen appears:
- 6. Touch the Bluetooth settings option.
- 7. Touch the Device name option.
 - The **Device name** dialog box appears:
- 1. Enter the name of your modu W.
- 2. Touch the OK button.

» Connecting a Bluetooth Hands-Free Headset or Car Kit:

Using a Bluetooth enables you to be hands-free and still be able to send and/or receive calls.

- 1. Verify that the Bluetooth is on.
- 2. Press the Home key.
- 3. Press the Menu key. The Menu appears:
- 4. Touch the Settings button.

- 5. Touch the Wireless controls button.
 The Wireless controls screen appears:
- 6. Touch the Bluetooth settings option.
- Touch the Bluetooth check box.
 The modu™ W will start to scan for the Bluetooth devices within range and will display all detected devices in the Bluetooth devices section.
- 8. Touch the hands-free headset or car kit from the list.



TIP: To refresh the scanned list, touch the **Scan for devices** option in order to scan again.

» Disconnecting a Bluetooth Hands-Free Headset or Car Kit:

- 1. Press the Home key.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the Settings button.
- 4. Touch the Wireless controls button.
 The Wireless controls screen appears:
- 5. Touch the Bluetooth settings option.
- 6. Navigate to the Bluetooth devices section.
- 7. Touch and hold the connected hands-free headset or car kit.
- 8. Touch the Disconnect button.

» Sending/Receiving Files via Bluetooth:

To be completed

» Turning Off the Bluetooth:

- 1. Press the Home key.
- 2. Press the Menu key.

The Menu appears:

- 3. Touch the Settings button.
- 4. Touch the Wireless controls button.

The Wireless controls screen appears:

5. Touch the Bluetooth check box to turn off Bluetooth.

When Bluetooth is off the (Bluetooth) icon disappears from the Status bar.

Calle



NOTE: The voice/SMS services are supplied by a third party, independent from modu. For more details click here (insert an external link). modu will not be responsible for the operation, availability of such services and modu shall not be responsible or liable, either directly or indirectly, in any way for any loss or damage of any kind incurred as a result of, or in connection with your use of such services.

Making Calls

 $\mathsf{Modu}^{\scriptscriptstyle\mathsf{TM}}$ W enables you to place calls using the Dialer.

» Opening the Dialer:

- 1. To be completed.
- » Making a Call Using the Dialer:
- 1. To be completed.
- » Making an Emergency Call:
- 1. To be completed.

» Making a Call from the Call Log Tab:

To be completed.

Answering/Rejecting Calls

Modu™ W enables you to answer and reject calls. When receiving calls from someone on your Contacts list, the modu W recognizes the contact and displays the caller's caller ID icon, name, and phone number on the incoming call screen. When receiving a call from someone who is not on your Contacts list, the modu W does not recognize the contact and thus displays only the caller ID icon and phone number on the incoming call screen.

» Answering an Incoming Call:

1. To be completed.

» Rejecting an Incoming Call:

1. To be completed.

Call Options

Various call options are available when a call is in progress.

The following are the call options:

Option Description

modu W

Option	Description	
Mute		
Speaker		
End call		
Add call		

- » Putting a call on Hold:
- 1. To be completed.
- » Muting the Microphone During a Call:
- 1. To be completed.
- » Turning the Speakerphone On/Off:
- 1. To be completed.
- » Transferring the Call to a Bluetooth Headset:
- 1. To be completed.
- » Ending a Call:
- 1. To be completed.

Using the Call Log

The Call Log tab lists the following:

Call Log	Description
.	All missed calls
- <u> </u>	Dialled numbers
*	Received calls

- » Accessing the Call Log:
- 1. To be completed.
- » Adding a New Phone Number to Contacts:
- 2. To be completed.
- » Muting the Microphone During a Call:
- 1. To be completed.
- » Adding a New Phone Number to Contacts:
- 1. To be completed.
- » Checking Missed Calls:
- **1.** To be completed.

» Clearing the Call Log:

1. To be completed.

Adjusting modu™ W Settings

» Topic Name

1. To be completed.

Turning the Modu™ W Function On/Off

When it is prohibited to use a mobile device by law for example on board of an aircraft or hospitals, enable to **Airplane** mode.

» Topic Name

1. To be completed.

Contacts

Creating & Managing Contacts

The Contacts list is preinstalled application available on the modu™ W. The Contacts application is similar to an online address book. It provides you a quick and easy access to the people you wish to reach. You can synchronize your existing Contacts list from your existing email account.

This section explains how to:

- View the contacts list.
- Add new contacts.
- Add favorite contacts.
- Edit and customize the contacts list.
- Communicate with the Contacts.

Notice that you can change any contacts information at any given time.

» Viewing Your Contacts List:

- 1. Access the Home screen.
- 2. Touch the (Contacts) icon.

The Contacts tab appears:

or

Press the Call button > touch the Contacts tab.

Touch and hold a contact or search for a contact using the Search field.

The contact's option menu appears:

- 4. Touch the View contact option, in order to view a specific contact's details.
- 5. Touch the Back key to return to the previous screen.

» Adding a New Contact:

You can add a contact to your Contacts list of in three ways:

- By creating a new contact and entering the information in your Contacts list
- By using a number from the call log
- By using a number from a message in your Inbox.
- 6. Access the Contacts list.
- 7. Press the Menu key.

The Menu appears:

8. Touch the New contact icon.

or

Accessing the dialer.

Enter the number you wish to call.

Press the Menu key.

Touch the Add contact option.

The Contacts screen appears:

Touch the Create new contact option.

The New contact screen appears:



- Touch the first field in order to enter the contact's name.
 A 16-key pad or a full keyboard is displayed according to how you hold the modu™ W.
- 10. Type the contact's name.
- 11. Touch the **Next** button.
- 12. Enter the contact's phone number using the keyboard.
- 13. Touch the Next button.
- 14. Enter the contact's Email address using the keyboard.
- 15. Touch the **Done** button.
- **16.** When finished entering all the relevant information, press the Menu key.
- 17. Touch the Done icon.



NOTE: If you want all calls from this contacts list to transfer directly to your voicemail, select the Incoming calls check box.

If you cannot find the Incoming calls check box, scroll down the New contact screen.

» Searching for a Contact:

There are two ways you can search for a contact.

- By the fast scroll feature.
- By the search option.

» Using the Fast Scroll Feature to Search for a Contact:

- 1. Access the Contacts tab.
- Scroll down/up the contacts list to find your contact. Your list of contacts begins to scroll quickly. The first letter of the first contact name in the list appears in a box, and then advances alphabetically according to the first letter in the names in your contact list.



NOTE: Only the letters that represent names that you have entered appear. For example, if no names begin with the letter "p", that letter will not appear during fast scrolling.

 When the first letter of the name that you are looking for appears, touch the letter in the box.
 The list stops scrolling and the first contact with the selected letter is displayed.

» Using the Search Option to Search for a Contact:

- 1. Access the Contacts tab.
- 2. Press the Menu key.
 - The option menu appears:
- 3. Touch the Search option.

- Enter the first letter or first two letters of the contact's name you are looking for.
- 5. Touch the Search icon.

» Deleting a Contact:

- 1. Access the contacts tab.
- 2. Touch and hold a contact's name. The contact's option menu appears:
- 3. Scroll down the option menu.
- 4. Touch the Delete contact option.
 A Delete dialog box appears:
- 5. Touch the OK button to delete the contact.

» Deleting All Your Contacts:

- 1. Access the contacts tab.
- 2. Press the Menu key.
- The menu appears:
 3. Touch the Delete all option.
- A Delete all dialog box appears:
- 4. Touch the OK button to delete the contact.

» Adding Favorite Contacts:

The Favorites tab is used to filter your Contacts list.

Access the Contact list.
 The Contacts list appears:

Press and hold the desired contact in order to open the contact's option menu.

The contact's option menu appears:

Touch the Add to favorites option.The contact is now added to the favorites list displayed in the Favorites tab.



NOTE: A colored (yellow) star appears next to the contact name in accessing the contact details screen.

» Viewing Favorite Contacts:

1. Access the Favorites tab.

» Removing a Contact from the Favorites Tab:

- 1. Access the Favorites tab.
- 2. Touch and hold the contact you wish to remove. The contact's option menu appears:
- 3. Touch the Remove from favorites option.

» Editing Contacts Information:

You can edit any information and setting related to contacts. For example: Contact's name, phone number, address, assigning an image for a contact, ringtones and incoming calls for a particular contact. In order to edit any of this information follow the below steps:

Access the Contacts list.
 The Contacts list appears:

2. Touch and hold the contact's name you wish to edit its

The contact's option menu appears:

- 3. Touch the Edit contact option.
 The Edit contact screen appears:
- 4. Edit the contact information.
- 5. Touch the **Done** button to save.



NOTE: To ignore all changes you just made, touch the **Revert** option on the **Edit contact** screen.

» Changing the Contact's Default Phone Number:

- Access the Contacts list.
 - The Contacts list appears:
- 2. Touch the contact in order to open the contact details screen
 - The contact's details screen appears:
- 3. Touch the Cell mobile option which is the default phone number.
- 4. Touch the Make default number option. An indication that the phone number displayed is the default phone number is the (Check) icon appears next to the phone number.
- 5. Press the Back key when done.

» Communicating with Your Contacts:

The following communication methods are available from the Contacts list to the contact's default phone number:

Call / send a text.

Send multimedia messages.

Other communication methods are available from the contact's details screen.

» Calling a Contact:

1. Access the Contacts list.

The Contacts list appears:

2. Touch the contact's name in order to open the contact details screen.

The contact's details screen appears:

3. Touch a phone number.

» Sending a Text/Multimedia Message to a contact:

Notice that the contact you about to send a text/multimedia message must have a mobile phone number in their contact details screen.

1. Access the Contacts list.

The Contacts list appears:

2. Touch the contact in order to open the contact option menu.

The contact option menu appears:

3. Touch the Send SMS option.

A text compose screen opens:

Enter the text you wish to send using the 16-key pad or the onscreen full keyboard.

» Sending an Email to a Contact:

Notice that the contacts you about to send an Email to have an Email address in their contact details screen.

1. Access the Contacts list.

The Contacts list appears:

- 2. Touch the contact in order to open the contact option menu.
 - The contact option menu appears:
- 3. Touch the Email home option.
 - A compose screen opens:
- 4. Type your email content using the 16-key pad or the onscreen full keyboard.



NOTE: If you have more than one Email accounts set up on the modu™ W, you will be promoted to select which Email account you wish to use in order to send the message.

» Importing/Exporting Contacts:

For more information, refer to the Preparing Your modu $^{\text{\scriptsize IM}}$ W For Use.

» Displaying Contacts Group:

To be completed.

Access the Contacts list.
 The Contacts list appears:

- 2. Touch the contact in order to open the contact option
- 1. Connect the micro USB connector on your headset to the micro USB port on your modu $^{\mathsf{m}}$ phone. A message appears indicating the headset is connected to your modu™ phone.

 2. Accept or end a call by pressing the Accept/End key on the
- headset.

Entering Text

Using the Onscreen Keyboards

The $modu^{\text{\tiny{TM}}}$ W offers two types of keyboards:

- Landscape onscreen keyboard.
- 16-key keyboard

» Entering Text Using the Landscape Onscreen Keyboard:

When entering text, you can choose to use the landscape orientation by rotating the modu $^{\text{IM}}$ W horizontally. The advantage of the landscape onscreen keyboard to that it lets you type easily.



NOTE: If your modu W does not display the landscape keyboard, verify that the screen orientation change is set on automatically.

Press Home > Menu > Settings > Sound & display > Orientation.

» Entering Text Using the 16-key Keyboard:

When entering text, you can choose to use the 16-key keyboard by leaving the modu W vertically.

Entering Numbers & Symbols

The modu™ W enables you to switch to the numeric and symbol onscreen keyboard to let you enter number and common symbols.

Adjusting Text Input & Keyboard Settings

Modu™ W enables you to set onscreen keyboard options such as vibrate and/or emit a sound when you touch a key, auto-capitalization, auto-complete, etc..

- 1. Access the Home screen.
 - The **Home** screen appears:
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Settings option.
 - The **Settings** screen appears:
- 4. Touch the Locale & text option.
 - The Locale screen appears:
- 5. Scroll down to the Text settings section.
- 6. Touch the Android keyboard in order to set it up. The Android keyboard screen appears:
- 7. Set the relevant settings.
 - Touch the Vibrate on keyboard option button in order to enable the keyboard vibrates.
 - Touch the Sound on keyboard option button in order to enable sound when pressing any keys on the keyboard. Touch the Auto-capitalization option button in order to enable this option.
- 8. Touch the Back key to return to the previous screen.

Managing Your Time

Using the Calendar

 $\mathsf{Modu}^{\mathsf{TM}}$ W offers you the use of calendar to create and manage events, meetings, and appointments.

» Accessing Your Calendar:

- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:
- **3.** Touch the Calendar icon. The Calendar appears:

» Calendar Views:

You can choose how you want to view your calendar. You can display the calendar in a daily, weekly, monthly, or agenda view.



» Changing the Calendar View:

 Access the Calendar icon. The Calendar appears: 2. Press the Menu key.

The Menu appears:

Touch the desired view, such as Agenda, Day, Week, or Today.

» Creating Events:

An event can be an appointment, meeting, etc..

1. Access the Calendar icon.

The Calendar appears:

2. Press the Menu key.

The Menu appears:

3. Touch the New event option.

The New event details screen appears:

- 4. Enter the event name using the keyboard.
- 5. Touch the Next button to continue.
- 6. Enter the even location.
- 7. Touch the Next button to continue.
- 8. Enter the event description.
- Touch the Done button when finished.
 You can scroll down the Event details screen to set a reminder while creating it.



NOTE: If you wish to set a time frame for the event you create, touch the From and To and adjacent time fields to set them.

If you have an all day event, touch the All day check box in order for this option to be enabled.

» Setting an Event Reminder:

An event reminder allows you to set a reminder for a particular event. This way it would be easier for you not to forget important event that appear in your calendar.

- 1. Access the Calendar icon.
 - The Calendar appears:
- 2. Touch the event you wish to add a reminder to.
 The View event screen appears:
- 3. Touch the Add reminder icon.
 - If there is a set default reminder then it will be displayed automatically according to the set default reminder time.
- 4. Touch the Reminders dropdown list in order to change the reminder time
 - The Reminder option menu appears:
- 5. Touch the option button next to the desired reminder time.
- Press the Back key to return to the calendar view.
 The modu™ W automatically saves the changes made.



NOTE: When an event reminder arrives you have the following options to choose from:

- View the event by touching the event displayed on the screen.
- Dismiss the event by touching the Dismiss / Dismiss all button.
- Snooze the event by touching the Snooze / Snooze all button.

Editing an Event:

1. Access the Calendar icon.

The Calendar appears:

2. Touch the event you wish to edit. The View event screen appears:

3. Press the Menu key.

The Menu appears:

4. Touch the Edit event option.
The Event details screen appears:

5. Change the necessary information

6. Touch the done button when finished.

The $\mathsf{modu}^{\mathsf{TM}}$ W automatically save the changes made.



NOTE: You also have an option to edit the event from the editing option.

» Deleting an Event:

1. Access the Calendar icon.

The Calendar appears:

2. Touch the event you wish to delete.

The View event screen appears:

3. Press the Menu key.

The Menu appears:

4. Touch the Delete event option.

The Delete dialog box appears:

5. Touch the OK button to delete.

» Calendar Settings:

You can set default reminder settings for your calendar. To access the Settings screen to change any of the existing calendar settings, follow these steps:

- 1. Access the Calendar icon.
- The Calendar appears:
 2. Press the Menu key.
- The Menu appears:
- 3. Touch the Settings option.
 - The Settings screen appears:

4. Modify the settings accordingly.

The following are the settings options:

Settings	Description
Set alerts & notifications	Enables you to set an alert, status bar notification, or none of these options.
Select ringtone	Enables you to select a ringtone or set the silent option.
Vibrate	Enables you to decide whether or not you want to vibrate option on/off.
Set default reminder	Enables you to define the reminder min. As a default option.

Using the Alarm Clock

You can set a one-time alarm, an alarm that repeats daily, or an alarm that repeats weekly.

The default snooze time is five minutes. You can touch the ${\bf Snooze}$ up to five times.

» Accessing Your Alarm Clock:

- 1. Access the Home screen.
- 2. Touch the Applications tab. The **Applications** tab appears:
- 3. Touch the Alarm clock icon. The Alarm clock appears:

» Setting the Alarm Clock:

- 1. Access the Alarm clock screen. The Alarm clock screen appears:
- 2. Touch once of the available alarms.



3. Touch the Time option. The time dialog box appears:

- 4. Adjust the time by touching the (Plus) or (minus) icon.
- 5. Touch the AM button to change to PM or vice versa.
- 6. Touch the Set button to save.



- 7. Touch the Ringtone option, to set the alarm's ringtone. The Ringtone menu appears:
- 8. Select the relevant ringtone option button.
- 9. Touch the OK button to save.
- 10. Touch the Vibrate check box in order to enable/disable the alarm vibrate option.
- 11. Touch the Repeat option, to set the alarm repetition. The Repeat menu appears:
- 12. Touch the check box next to the relevant repetition day.
- 13. Touch the OK button to save. The Set alarm screen appears.

- 14. Touch the Label option, to change the alarm default label.
 The Label menu appears:
- 15. Enter the desired alarm label name.
- **16.** Touch the **OK** button to save. The **Set alarm** screen appears.
- Touch the check box next to the Turn on alarm in order turn on and off the alarm.

» Setting Alarm Silent Mode:

The setting alarm silent mode enables you to still hear the set alarms when your modu $^{\text{\tiny{IM}}}$ W is in silent mode.

- 1. Access the Alarm clock screen.
 - The Alarm clock screen appears:
- 2. Touch the Menu key.
 - The Menu appears:
- 3. Touch the Settings option.
 - The **Settings** screen appears:
- 4. Touch the Alarm in silent mode check box in order to enable/disable this option.

Customizing the Alarm Clock:

You can customize the alarm clock appearance.

- 1. Access the Alarm clock screen.
 - The Alarm clock screen appears:
- 2. Touch the clock image.
 - The Select a clock to display screen appears:
- 3. Slide your finger to the left/right (at the bottom section of the screen) in order or select the desired clock display.
- 4. Touch the clock display you want.


» Hiding / Displaying the Alarm Clock:

- 1. Access the Alarm clock screen.
- The Alarm clock screen appears: 2. Touch the Menu key.
 - The Menu appears:
- 3. Touch the Hide clock option.
- 4. To display the clock, touch the Menu > touch the Show clock option.

» Deleting a Set Alarm:

Delete an alarm whenever it is no longer relevant.

- 1. Access the Alarm clock screen.
 - The Alarm clock screen appears:
- 2. Touch the alarm you wish to delete.

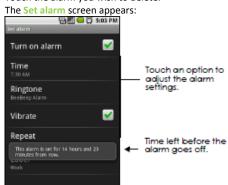

- 3. Touch the Menu key. The Menu appears:
- 4. Touch the Delete alarm option.

NOTE: The modu[™] W deletes the alarm without displaying a delete warning message.

Exchanging Messages (SMS)

Sending Text and Multimedia Messages/Notifications

To be completed.

- » Opening Text Messaging:
- 1. Access the Home screen.
- 2. Touch the Applications tab.

» Creating/Sending a Text Message:

- 1. Access the Home screen.
- 2. Touch the Applications tab.

» Saving the Text Message as a Draft:

- 1. Access the Home screen.
- 2. Touch the Applications tab.

Receiving Text and Multimedia Messages

To be completed.

» Opening / Reading a Text Message:

- 1. Access the Home screen.
- 2. Touch the Applications tab.

Exchanging Messages Emails

When turning on the modu™ W for the first time, you will be prompt to set it up using a welcome wizard. First you will need to sign in to your existing Email account (e.g. google, yahoo, hotmail).

Using Mail

Use the Email application in order to set up the email for the first time as well as to use the Email on an going basic.

» Setting Up Your Email for the First Time:

- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:
- 3. Touch the Email application.

The Your account screen appears:

There is a welcome wizard which guides you through how to set up your account.

- 4. Touch the Next button to proceed the wizard.
 - The **Set up email** screen appears:
- 5. Enter your Email address in the Email address field.
- 6. Touch the Next button to continue.
- 7. Enter your password in the Password field.
- Touch the Done button when finish.
 The Set up email screen appears containing the information you have just entered.
- Touch the Next button to continue with the wizard. An Attention dialog box appears:

- 10. Touch the OK button to continue. modu™ W informs you that your email is set. The Set up email screen appears:
- 11. Enter a name for your account (optional) in the Give this account a name field.
- 12. Enter a name you want to be displayed on ongoing messages in the Your name field.
- 13. Touch the Done button when finish. Your Inbox is displayed in the screen and modu™ W will load Emails from your existing Email account.



NOTE: While setting up your email account using the wizard, touch the Manual setup button instead of the Next button to directly enter the incoming/outgoing settings or the email account you are setting up. You can also set this account to be the default account to sent emails from by touching the Send email from this account by default check box (located in the Set up email screen).

- » Viewing Emails:
- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:
- 3. Touch the Email application. The Inbox screen appears:
- 4. View your Emails.

- 5. Press the Menu key in order to refresh the screen. The Menu appears:
- 6. Touch the Refresh option.
- 7. To exit your Emails, press the Back key.

» Creating Another Email Account:

- 1. Access the Email application.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Account settings option.
 - The Account settings screen appears:
- 4. Scroll down to the Server settings section.
- 5. Touch the Add another account option.
 - The **Set up email** screen appears:
- Follow steps 5-13 in the Setting Up Your Email for the First Time section on P. 96.

» Viewing Your Email Accounts:

- 1. Access the Email application.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Accounts option.
 - The Your accounts screen appears:
- 4. Touch the Email account you wish to view. There following option are available from this screen's options menu:
 - **Refresh** Enables you to refresh the screen.
 - Add account Enables you to create a new Email account.
 - **Compose** Enables you to compose a new Email.

» Editing/Deleting an External Email Account:

- 1. Access the Email application.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Accounts option.
 - The Your accounts screen appears:
- 4. Touch and hold the account you want to edit/delete. The Account options menu appears:
- 5. To delete the account, touch the Remove account option.
 A Remove account dialog box appears:
- 6. Touch the OK button to delete the account.
- 7. To edit the account, touch the Account settings option. The account settings screen appears.



NOTE: You can edit the following:

- General account settings such as account name, your name, how often the modu™ W checks for emails, and set a default account.
- Notification settings such as setup email notifications, select email ringtone, or sent the vibrate mode when an email arrives.
- Server settings such as incoming/outgoing server settings, and add another account.

» Composing & Sending Emails:

1. Access the Email application.

- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Compose option.
 The Compose screen appears:
- 4. Touch the To field to enter the recipient's email address.



NOTE: As you enter information, matching contacts will appear on the screen. Touch the recipient or continue entering the desired email address. If you are sending the email to several recipients, separate the email addresses with a comma. You can ass as many recipients as you wish.

- 5. Touch the Next button to continue.
- 6. Enter the subject of the email in the Subject field.
- 7. Touch the **Next** button to continue.
- 8. Type the email boxy text in the Compose Mail field.
- 9. Touch the **Done** button when finished.
- 10. To send this email, touch the Send button.
- 11. To save this email as a draft and come back to it later, touch the Save as draft button.
- 12. To delete this email, touch the Discard button.

» Adding a POP3 Email Account:

- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:

3. Touch the Email application.

The Your account screen appears:

There is a welcome wizard which guides you through how to set up your account.

- 4. Touch the Next button to proceed the wizard. The Set up email screen appears:
- 5. Enter your Email address in the Email address field.
- 6. Touch the Next button to continue.
- 7. Enter your password in the Password field.
- Touch the Done button when finish.
 The screen appears asking what type of email account you want to set up.
- 9. Touch the POP3 button.

The Incoming server setting screen appears:

- 10. Define the relevant POP3 settings.
- 11. Touch the Done button when finish.

» Adding IMAP Email Account:

- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:
- 3. Touch the Email application.

The Your account screen appears:

There is a welcome wizard which guides you through how to set up your account.

- 4. Touch the Next button to proceed the wizard.
 - The Set up email screen appears:
- 5. Enter your Email address in the Email address field.
- 6. Touch the Next button to continue.
- 7. Enter your password in the Password field.

- 8. Touch the Done button when finish.

 The screen appears asking what type of email account you want to set up.
- 9. Touch the IMAP button.
 The Incoming server setting screen appears:
- 10. Define the relevant IMAP settings.
- 11. Touch the Done button when finish.

» Managing Emails on Your External Email Account:

- 1. Access the Email application.
- 2. Touch and hold the email you want to delete. The option menu appears:
- Touch the Delete option.
 Other available options from the Option menu are:
 Viewing email message, forwarding, and replaying.

» Editing/Deleting an Email Account:

This section explains how to edit a saved email as a draft, replay, forward, search and delete emails.

- 1. Access the Email application.
- 2. Touch the Inbox folder.

The available folders in your account appear:

3. To continue working on a draft email, touch the Drafts folder

All your drafts are displayed.

4. Touch the desired draft email in order to open the compose screen.

5. Press the Menu key in order to display more available editing options.

The Menu appears:

The following are the editing options available:

Delete – Enables you to delete the message. Notice that there is not warning message before deleting. You can always find the deleted email in the Trash folder.

Forward – Enables you to forward an email.

Replay – Enables you to replay an email.

Replay all – Enables you to replay an email to all recipients.

Mark as unread – Enables you to mark an read email as unread.

6. Touch the relevant option button.



NOTE: You can view the email you have just sent by touching the **Sent** folder.

Photos & Multimedia

You can view, manage, or send images and videos. You can also set an image as your wallpaper background for the modu $^{\mathbf{m}}$ W home screen.

Using the Gallery

The Gallery enables you to work with photos.

This section describes how to:

- View Photos
- Browse through Photos
- Photo Zoom In/Out,
- View a Photo in Landscape
- Rotate a Photo
- Save a photo
- Crop a Photo
- Send Photos via Email
- Send Photos via Text Messaging
- Upload Photos to Picasa

» Opening/Closing the Photo Gallery:

- 1. Access the Home screen.
- 2. Touch the Applications tab.

3. Touch the Gallery icon.

The Gallery screen appears:



4. Press the Back key, to close and exit the Gallery application.



NOTE: The modu[™] W multimedia is stored on the storage (SD) card.

It may take a few second to load all your photos on the Gallery screen.


Working with the Photo Gallery

» Adding Photos to the Gallery

- 1. Access the folder that your photos are located.
- 2. Select the relevant photos.
- 3. Click the Copy option.
- 4. Connect the USB cable to your computer and the modu W. The USB mode menu appears:
- 5. Touch the PC connection option button.

6. Touch the OK button.

A Removable Disk window appears on your computer:

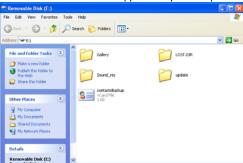

- 7. Double click the Gallery folder.
- 8. Paste the photos into the folder.
- Unplug the USB cable. or

Access the Notifications screen and touch the Turn Off USB option.

- 10. Go back to the Home screen.
- 11. Access the Gallery application.

For more information, refer to the Opening/Closing the Photo Gallery section, P. 127.

The Gallery screen appears and you can view the photos.

- » Browsing Through Photos
- Access the Gallery screen.
 Refer to the Opening/Closing the Photo Gallery section on

112

P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- Browse through the photos using the (right arrows) to browse to the next photo and the left arrow to browse to the previous photo.

Zooming In / Out Photos

1. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on P 127

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- 4. Use the (Magnifying Glass) to zoom in/out the selected photo.

» Viewing Slideshow

1. Access the Gallery screen.

Refer to the $\mbox{\bf Opening/Closing}$ the Photo Gallery section on P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Press the Menu key.

The Menu appears:

4. Touch the Slideshow option.

The **Slideshow** starts.

5. Touch anywhere on the screen to exit the slideshow.

modu W

Note: You can set the time of the photos interval in the slideshow by accessing the folder you want to view > Menu > Settings > Slideshow interval.

» Viewing Photos in Landscape

1. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- Rotate the modu[™] W horizontally as landscape.
 Note: Make sure that your modu[™] W is set to be switched its orientation automatically when rotating in the Home

screen > Menu > Settings > Orientation.

» Rotating Photos

5. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on P. 127.

The Gallery screen appears.

- 6. Touch the album you wish to view.
- 7. Touch the photo you want to view.
- 8. Press the Menu key.

The Menu appears:

9. Touch the Rotate option.

The Rotate menu appears:

10. Touch the relevant option (Rotate left / Rotate right).

Saving Photos

1. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- 4. Press the Menu key.
- The Menu appears:
 5. Touch the Save option.

» Cropping a Photo

1. Access the Gallery screen.

Refer to the $\mbox{\bf Opening/Closing}$ the Photo Gallery section on P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- 4. Press the Menu key.

The Menu appears:

5. Touch the Crop option.

The Crop menu appears:

- 6. Touch and hold anywhere on the selected photo and drag to locate the crop margins.
- 7. To delete, touch the Discard button.
- 8. To save, touch the Save button.

» Sending Photos Via Email

1. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on P. 127

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- 4. Press the Menu key.

The Menu appears:

5. Touch the **Share** option.

or

Touch the **Share** icon located on top of the displayed photo.

The Share menu appears:

6. Touch Bluetooth Send option.

Note: If Bluetooth is not turned on, your will be asked to

turn it on. To be completed

» Sending Photos Via Text Messaging

1. Access the Gallery screen.

Refer to the $\mbox{\bf Opening/Closing}$ the Photo Gallery section on P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- 4. Press the Menu key.

The Menu appears:

5. Touch the Share option.

or

modu-W

Touch the Share icon located on top of the displayed photo. The Share menu appears:

6. Touch Messaging option.

To be completed

» Deleting a Photo

1. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Touch the photo you want to view.
- 4. Press the Menu key.

The Menu appears:

5. Touch the Delete option.
A Delete dialog box appears:

6. Touch the Delete button.

Note: You can also delete a photo from the Gallery screen > Select folder > Menu > Multiselect > Select a photo > Delete.

» Photo Gallery Settings

1. Access the Gallery screen.

Refer to the **Opening/Closing the Photo Gallery** section on P. 127.

The Gallery screen appears.

- 2. Touch the album you wish to view.
- 3. Press the Menu key.

The Menu appears:

- 4. Touch the Settings option.
 - A Settings screen appears:
- 5. To select the Display size of the pictures/videos, touch the Display size option.
 - The options are Small or Large.
- 6. To select the sort order of pictures/videos, touch the Sort order option.
 - The options are: Newest first, Newest last.
- To show a confirmation message before deleting a picture/video, touch the Confirm deletions check box.
- 8. To set how long each slide displays in the slideshow, touch the Slideshow interval option.
- To select the effect used when moving from one slide to the next, touch the Slideshow transition option.
 The options are: fade in & out, Slide left – right, Slide up-down, Random selection.
- 10. To define to play a slideshow more than once, touch the Repeat slideshow check box.
- 11. To set to show pictures in random order, touch the Shuffle slides check box.

Working with Videos:

The Gallery enables you to working with videos as well.

This section describes how to:

- Watch a video
- Send a video via Email
- Send a video via text messaging
- Share a video on YouTube

The modu™ W video player is available as an application.

- 1. Access the Home screen.
 - Refer to the **Viewing Your Contacts List** section on P. 69.
- 2. Touch the Applications tab.

Using the YouTube™

To be completed.

» Opening / Closing YouTube™:

- 1. To be completed.
- » Watching Videos:
- 1. To be completed.
- » Searching for Videos:
- 1. To be completed.

- » Clearing the Search History:
- 1. To be completed.
- Sharing Videos:
- 1. To be completed.

Using Music – TuneWiki

To be completed.

- » Copying Music into the Storage Card:
- 1. To be completed.
- » Accessing the Tune Wiki:
- 1. To be completed.
- » Viewing the Music Library:
- **1.** To be completed.
- Wing Playlist:
- 1. To be completed.

120

- » Creating a New Playlist:
- 1. To be completed.
- Wing Playlist:
- 1. To be completed.
- » Managing Your Playlist:
- 1. To be completed.
- » Setting a song as Ringtone:
- 1. To be completed.
- » Verifying the Ringtone was Added:
- 1. To be completed.
- » Deleting Music from the Storage Card:
- 1. To be completed.

Using the SlideME™ Marketplace

To be completed.

- » Opening / Closing the SlideME™ Marketplace:
- 1. To be completed.
- » Getting Help:
- 1. To be completed.
- » Finding Applications :
- 1. To be completed.
- » Installing Applications:
- 1. To be completed.
- » Managing Applications:
- 1. To be completed.
- » Uninstalling (Removing) Applications:
- 1. To be completed.

122

Managing Your modu™ W

This chapter discusses how to manage your modu™ W. It includes the following topics:

- Manage internal and storage (SD) card memory
- How to reset your modu W

Managing Memory

» Viewing Available Memory:

In order to see how much internal modu $^{\text{\tiny{IM}}}$ W memory is available for use, follow these steps:

- 1. Access the Home screen.
- 2. Touch the Menu key. The Menu appears:
- 3. Touch the Settings option.

The Settings screen appears:

4. Touch the SD card & phone storage option.

Note: You might need to scroll down the Settings screen. The available internal modu W memory is displayed in the Internal phone storage section.

» Viewing Available Storage (SD) Card Memory:

- 1. Access the Home screen.
- 2. Touch the Menu key. The Menu appears:

3. Touch the Settings option.

The **Settings** screen appears:

4. Touch the SD card & phone storage option.

Note: You might need to scroll down the Settings screen. The available internal modu W memory is displayed in the SD card section.

» Freeing Up More Memory/Storage Card Space:

If you run out of memory space, you can do one of the following:

- Clear all temporary Internet field and Browser history information.
- Uninstall programs/applications you downloaded from the SlideMe™ Marketplace that you no longer use.

» Cleaning Application Cache & Data:

- 1. Access the Home screen.
- 2. Touch the Menu key. The Menu appears:
- 3. Touch the Settings option.

The Settings screen appears:

4. Touch the Applications option.

Note: You might need to scroll down the Settings screen.

5. Touch the Manage applications option.

The Manage applications screen appears:

6. Touch the application whose cache or data you want to delete.



TIP: Press the Menu key to display the Sort / Filter option.

7. Touch the Clear data / Clear cache option.

» Uninstalling Third-Party Applications:

You can uninstall any applications you want that you have downloaded. \\

You cannot uninstall applications that are preinstalled and came with the modu $^{\text{\tiny{TM}}}$ W.

- 1. Access the Home screen.
- 2. Touch the Menu key.

The Menu appears:

3. Touch the Settings option.

The Settings screen appears:

4. Touch the Applications option.

Note: You might need to scroll down the Settings screen.

- 5. Touch the Manage applications option.
 The Manage applications screen appears:
- 6. Touch the application you want to remove.
- 7. Touch the Uninstall option.

Resetting modu™ W

Resetting your modu™ W deletes all the data that was saved and downloaded. After resetting, the modu W is back to its initial state. You need to set all the modu W settings from the beginning including contacts, Email account, etc.

» Resetting modu™ W:

1. Access the Home screen.

2. Touch the Menu key.

The Menu appears:

3. Touch the Settings option.

The Settings screen appears:

4. Touch the SD card & phone storage option.

Note: You might need to scroll down the Settings screen..

5. Navigate to the Internal phone storage section.

6. Touch the Factory data reset option.

The Factory data reset screen appears:

7. Touch the Reset phone button.

Note: You might need to enter your screen unlock pattern.

8. Touch the **Erase everything** option.

FM Radio

You can manually tune in to a station or choose to automatically search for a station. To use the FM radio, you need to connect your modu $^{\text{\tiny TM}}$ W (3.5) headset.

Connecting the modu $^{\scriptscriptstyle\mathsf{TM}}$ W Headsets

 Connect the modu W headsets to it port located on the left sideways panel of the modu W.

Accessing & Listening to the Radio

- 1. Access the Home screen.
- 2. Touch the Applications tab.
 The Applications tab appears:
- 3. Touch the FM Radio application. The Fm Radio is open and on.
- 4. You can perform the following actions:
 - To listen to the next station or the previous station, touch (previous icon) or (next icon).
 - To adjust the volume, touch (up) or (down) keys.
 - To switch speakers on/off, touch the Menu key > touch the Speaker button.
 - To play the Fm radio in the background, touch the Menu key > touch the Play Background button.

- To use the seek option, touch the Menu key > touch the Seek button > Type the channel number you want to search for > Touch the OK button.
- To save a channel, search for the channel you want to save > touch the Menu key > touch the save button.
- To change the radio's setting, touch the Menu key > touch the Setting button.
- To close the Fm radio, touch the Menu key > touch the Exit button. You will return to the Home screen.

Searching for Stations Automatically

You can automatically search for channels you can save up to 10 stations, which are then saved in your station list.



NOTE: Stations that are found in the automatic search overwrite the stations previously saved in the station list.

On the FM radio screen, tap options (icon), and then tap quick 10 stations.



NOTE: You can tap **stop** to end the search before the scan is completed. The stations that were found before you stopped the scan are then saved in your station list.

When the phone finishes searching, the station list screen appears, listing the stations found by the scan.

128

Selecting & Listening to a Radio Station from the Station List

- 1. Access the Fm Radio application.
 - The radio appears on the screen.
- 2. Press the Menu key. The Menu appears:
- 3. Touch the Setting option.
 - The Fm Radio screen appears:
- Touch the Show channel list located in the Channel settings section.
 - The station list is displayed.
- 5. Touch and hold the desired channel to open the channel's option menu.
 - The option menu appears:
- 6. Touch the Play button.

Manually Tune to a Frequency

You can manually set a frequency between 87.5 MHz and 108.0 MHz. $\,$

- 1. Access the Fm Radio application.
 - For more information, refer to the **Accessing & Listening to Radio** section on P. 140.
 - The radio appears on the screen.
- 2. Press the Menu key.
- The Menu appears:
- 3. Touch the Setting option.
 - The Fm Radio screen appears:
- Scroll down the to the Advanced Settings section of the Fm Radio screen.

- 5. Touch the Radio Band option.
 - A Select a band menu appears:
- 6. Touch the relevant band option button.

Manually Save a Station in the Station List

- On the FM radio screen, tune the radio to the desired frequency.
- 2. Tap options (icon) and then tap save station.
 The station list screen appears.
- Select the desired station list location that you want to use (0 through 9).
- 4. If the location is empty, a message indicates that the station was saved.
- 5. If you are asked whether you want to overwrite the selected location:
- 6. Tap yes.

Managing Your Radio Stations

- Access the Fm Radio application.
 For more information, refer to the Accessing & Listening to Radio section on P. 140.
 - The radio appears on the screen.
- 2. Press the Menu key. The Menu appears:
- 3. Touch the Setting option.
 The Fm Radio screen appears:

- 4. Touch the Show channel list located in the Channel settings section
 - The station list is displayed.
- Touch and hold the desired channel to open the station's options menu: play, delete or rename it
 - Play Enables you to listen to a station.
 - **Delete** Enables you to remove a station from the
 - Rename Enables you to change a station's name.

Remove a Station from the Station List

- 1. Access the Fm Radio application.
 - For more information, refer to the **Accessing & Listening to Radio** section on P. 140.
 - The radio appears on the screen.
- 2. Press the Menu key.
 - The Menu appears:
- 3. Touch the Setting option.
 - The Fm Radio screen appears:
- Touch the Show channel list located in the Channel settings section.
 - The station list is displayed.
- 5. Touch and hold the channel you want to delete.
 - The Channel's option menu appears:
- 6. Touch the Delete button.

Sound Recorder

The **Sound Recorder** is an application which enables you to use the modu $^{\text{\tiny M}}$ W as a voice recorder.

This chapter explains how to:

- Access the sound recorder
- Record
- Play the saved recorded voice records
- Delete the saved recorded voice records

Accessing the Sound Recorder

- 1. Access the Home screen.
- 2. Touch the Applications tab.

The Applications tab appears:

3. Touch the Sound recorder application.
The Sound recorder screen is displayed.

Recording Using the Sound Recorder

is now in the Recording mode.

- Access the Sound Recorder application.
 Refer to the Accessing the Sound Recorder section on
 P. 146
- 2. Touch the Record icon.

 There is an indication on the Sound Recorder screen that it
- 3. Record what you need to.
- 4. Touch the Stop icon when done.

 The duration time of the recorded record is displayed on the screen.

modu-W

- Touch the Save button, to save what you have just recorded. or
- Touch the Discard button, to delete what you have just recorded.

Playing the Recorded Records

- 1. Access the Home screen.
- 2. Touch the Applications tab.

The Applications tab appears:

3. Touch the File Manager application.

The File Manager screen appears:

4. Touch the Sound_rec folder option.
This is where all the records you have recorded are saved.

The record folder appears:

5. Touch the desired record to play it.

Deleting a Saved Recorded Record

- 1. Access the Home screen.
- 2. Touch the Applications tab.

The Applications tab appears:

3. Touch the File Manager application.

The File Manager screen appears:

4. Touch the Sound_rec folder option.

This is where all the records you have recorded are saved.

The record folder appears:

5. Press the Menu key.

The Menu appears:

modu W

Touch the Delete button. Touch and hold > option menu > delete.

File Manager

The **File Manager** is an application which enables you to manage all files saved on the SD (storage) card.

This chapter explains how to:

- Access files from the storage (SD) card
- Record
- Manage files such as: copy, cut, paste, rename and delete files.

Accessing the File Manager

- 1. Access the Home screen.
- 2. Touch the Applications tab.

The Applications tab appears:

3. Touch the File Manager application.

The File Manager screen is displayed.

The File Manager screen contains various folders such as:

Gallery – Contains all files that were saved in the Gallery application.

Sound_rec – Contains all files that were recorded using the Sound Recorder application.



TIP: You can use the sorting / filtering options anywhere in the File Manager application by pressing the Menu key.

- The Small to Big / Big to Small options enable you to sort the files in the displayed list.
- The Arrangement option enables you to filter the files in the displayed list according to their Name, Size, Type, or Modification Time.

Managing Files in the File Manager Application

- Access the File Manager application.
 Refer to the Accessing the File Manager section on P.149.
 The File Manager screen appears:
- 2. Touch the relevant folder that contains the file you want modify.
 - A folder opens displaying all the files it contains.
- 3. Touch and hold the relevant folder on which you want modify the file.

The File Operation menu appears:

The File Operation menu offers the following actions:

File Operation	Description
Сору	Enables you to copy a file to another folder/location in the File Manager application.

modu-W

File Operation	Description
Cut	Enables you to cut a file to another folder/location in the File Manager application.
Paste	Enables you to paste the copied/cut file to its new location in the File Manager application.
Delete	Enables you to delete a file from the SD (storage) card.
Rename	Enables you to rename the selected file.

» Copying & Pasting Files:

You can copy a file and paste it to another folder/location in the File Manager application.

- Access the File Manager application. Refer to the Accessing the File Manager section on P.149. The File Manager screen appears:
- 2. Locate the file you want to copy.
- 3. Touch and hold the relevant file.
 The File Operation menu appears:
- 4. Touch the Copy button.
- 5. Navigate to the location/folder that you want place the file.
- **6.** Touch and hold anywhere on the screen. The File Operation menu appears:
- 7. Touch the Paste button.

Cutting & Pasting Files:

You can cut a file from one location and paste it at another folder/location in the File Manager application.

- Access the File Manager application.
 Refer to the Accessing the File Manager section on P.149.
 The File Manager screen appears:
- 2. Locate the file you want to cut.
- 3. Touch and hold the relevant file.
 The File Operation menu appears:
- 4. Touch the Cut button.
- 5. Navigate to the location/folder that you want place the file.
- 6. Touch and hold anywhere on the screen.
 The File Operation menu appears:
- 7. Touch the Paste button.

» Deleting Files:

You can delete file from the File Manager application. Notice that when you delete files from the File Manager application, the files are deleted from the SD (storage) card.

- Access the File Manager application.
 Refer to the Accessing the File Manager section on P.149.
 The File Manager screen appears:
- 2. Locate the file you want to delete.
- 3. Touch and hold the relevant file.
 The File Operation menu appears:
- 4. Touch the Delete button.
 A warning dialog box appears:

138

5. Touch the OK button to delete the file.

» Renaming Files:

You can change the default names of the file to anything that you want by using the renaming option.

- Access the File Manager application. Refer to the Accessing the File Manager section on P.149. The File Manager screen appears:
- 2. Locate the file you want to rename.
- 3. Touch and hold the relevant file.
 The File Operation menu appears:
- 4. Touch the Rename button.
 - A Rename warning dialog box appears:
- 5. Enter the desired file name in the Please input renaming file's name field.
- 6. Touch the OK button.

Service Messages

Wireless Access Protocol (WAP) "push" messages allow WAP content to be automatically transferred to your phone. A WAP "push" is a specially encoded message that includes a link to a WAP or web address.

The following WAP service messages are supported:

- Service indication messages, which notify you that new WAP content is available
- Service load messages, which automatically link your phone to the content (depending on the security level set in your phone)

In addition, you can send your service provider, and receive from your service provider, other types of service requests and messages, such as activation commands for network services. This service may not be available in all regions.

Receive a service message

Service messages can be initiated by your service provider via a phone call, text message, or the web. When you receive a service message, your modu $^{\text{m}}$ phone tells you that you have a new message.

7. Tap close.



NOTE: There is no need to view the message.

A message informs you that the new network settings were received, and asks you whether you want to install them.

8. Tap yes.

A message asks whether you want to apply the settings.

9. Tap yes.

140

modu W

A series of screens notifies you that the settings were applied to your modu^m phone.

- View a WAP service message 10. On the home screen, swipe up. The main menu appears.

 11. Tap messages > service messages.
- 12. Select the desired message. The options menu appears.
- 13. Tap view.

General Information

Care and maintenance of your modu™ W device

- Keep the device dry. Any type of liquid or moisture can damage the device.
- Do not store in areas that contain dust or dirt.
- Do not store in areas of extreme hot or cold temperatures.
- Do not open the device.
- Do not handle the device in a rough manner. Dropping, banging or shaking the device can break internal circuit boards and fine mechanics.
- Use a soft dry cloth to clean the screen.

About your modu™ W device

- The wireless device described in this guide includes Wi-Fi® connectivity. Contact your Internet Service Provider (ISP) for more information about the availability and coverage of your Wi-Fi network.
- Pour modu W device includes preinstalled content provided by third parties, independent from modu ("Third Party Content"). Your use of the Third Party Content is subject to the relevant Third Party Content provider's terms and conditions as determined by such Third Party Content provider. modu will not be responsible for the operation, availability or service of the Third Party Content and modu shall not be responsible or liable, either directly or indirectly, in any way for any loss or damage of any kind incurred as a result of, or in connection with your use of the Third Party Content. Third Party Content is the property of its respective Third Party Content provider and

is protected by applicable copyright law. You are prohibited from reproducing, disseminating, selling, distributing, publishing, circulating or commercially exploiting any of the Third Party Content in any manner without the express written consent of the respective Third Party Content provider. modu reserves the right to remove and/or replace any preinstalled content, without notice or obligation. MODU MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, REGARDING THE PRE-INSTALLED THIRD PARTY CONTENT.

- When you use the features in this device, obey all laws and respect privacy and legitimate rights of others.
- When you use images and/or media, obey all laws and respect local customs as well as the privacy and legitimate rights of others.

Warning: this device must be on to use any features. Do not switch the device on if its use may cause interference or danger.


Support and contact information

To contact modu support, go to www.modumobile.com.

Safety

Read the following precautions carefully to avoid dangerous situations and to ensure ideal performance of your modu $^{\text{IM}}$ W device.

Symbols and information

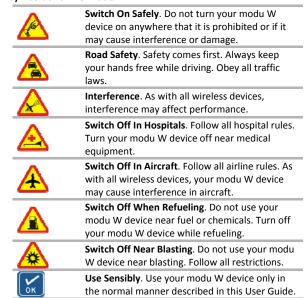

modu W

1	Qualified Service. Only qualified personnel may repair or service your modu™ W device.
	Enhancements and Batteries. Use only approved batteries and parts. Do not connect to products that are not supported by your modu W device.
	Water Resistance. Your modu W device is not water resistant. Keep away from all liquids.
B	Backup Copies . Remember to back up all data stored in your modu W device.
	Connecting to Other Devices. Read all instructions before connecting to another device. Do not connect to products not supported by your modu W device.
No emergency calls	This modu W device is not a replacement for your ordinary telephone and cannot be used for emergency calls

AC adapter

Follow these guidelines to ensure your AC adapter (charger) works properly.

- Avoid penetration of water or humidity into the AC adapter.
- Keep the AC adapter away from extreme temperatures such as ovens, or places exposed to the sun.
- Keep the AC adapter away from lamps, flames, cigarettes, cigars, etc.

- Avoid dropping objects or splashing liquids, including acids, on the AC adapter.
- For indoor use only. Do not use in places that are exposed to rain, sun, or flammable fumes.
- Plug the AC adapter into a socket that supplies the power indicated on the power supply.
- To minimize damage to the electrical cable, do not disconnect the power supply from the socket by pulling the cable. When disconnecting, hold the power supply and pull it from the socket.
- Make sure the AC adapter cable is routed so that it is not stepped on, and people do not trip over it.
- If you are using an extension cord, make sure it is properly grounded.

WARNING:

- Use only the original modu™ AC adapter supplied with this product, part number CHR000016. Using another AC adapter may invalidate the warranty, and could endanger the user.
- Use only original replacement parts. If the plug does not match the socket, use a dedicated adapter based on the manufacturer's recommendation. A bad connection endangers the user.

Small children

Keep your modu $^{\text{\tiny{M}}}$ W device and all accessories out of the reach of small children. Small parts may cause choking or serious hazard if swallowed.

Pacemakers

To avoid possible interference with pacemaker functioning, mobile device manufacturers and the independent research group, Wireless Technology Research, recommends maintaining a minimum of 15 centimeters (6 inches) between mobile devices and a pacemaker. It is therefore recommended to:

- Always keep your modu™ W device at least 15 centimeters (6 inches) away from your pacemaker.
- Never keep your modu W device in your breast pocket.
- Use your modu W device on the ear opposite your pacemaker.

If you have any reason to suspect interference with your pacemaker or any other medical device, immediately turn off your modu W device and move it away.

Magnetic fields

Exposure to magnetic fields may damage your modu W device. Parts of your device may be magnetic. Do not store credit cards or other magnetic stored media near the device, as data may be expected.

Radio frequency signals

This device emits Radio Frequency (RF) signals that may interfere with the operation of unprotected equipment such as hearing aids, pacemakers, medical devices and other electronic equipment in your home or vehicle. For information about pacemakers, see Pacemakers. If you experience any interference, consult with the manufacturer of the electronic device

When used normally your modu W device meets RF exposure guidelines.

Protect your hearing

Listening to modu™ W device at high volumes can damage your hearing. Use the minimum volume necessary to hear your conversation or music.

Exposure to Radio Frequency Information

This modu W device meets guidelines for exposure to radio waves.

This modu W device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines and conforms with European Union (EU) and Federal Communication Commission (FCC) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 Watts/kilogram (W/kg) averaged over 10 grams of tissue (according to EU standards), and 1.6 W/kg averaged over 1 gram of tissue (according to FCC standards). Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the base station. That amount changes depending on a number of factors such as how close you are to a base station. The highest SAR value for use of this device at the ear was 0.326 W/kg and at the body was 0.922W/kg.

Limited Warranty

modu Ltd. ("modu") provides this limited warranty for your modu™ W device and original accessories delivered with your modu W device (hereinafter referred to as "Product"). Should your Product need warranty service, please return it to the authorized distributor from whom it was purchased.

The warranty

Subject to the conditions of this Limited Warranty, modu warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of twelve (12) months.

If, during the warranty period, the Product fails to operate under normal use and service, due to defects in design, materials or workmanship, modu authorized distributors or service agents, in the country/region where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

modu and its service agents reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Product is repaired or replaced. At present, modu may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. modu does not take any

responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Product such as downloads, calendar and contacts before handing in your Product for repair or replacement.

Conditions

- 14. This warranty is valid only if the original proof of purchase (specifying the date of purchase and serial number*) issued to the original purchaser for this Product by a modu authorized distributor, is presented with the Product to be repaired or replaced. modu reserves the right to refuse warranty service if such information has been removed or changed after the original purchase of the Product from the dealer.
- 15. If modu repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of modu.
- 16. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner and in accordance with the modu instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

modu W

A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out — this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Battery replacement should be performed only by a modu-authorized service agent. modu recommends that you use only chargers approved by modu. Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Two defective pixels are deemed acceptable. Minor variations in camera image appearance may occur between phones. This is not uncommon and is not regarded as a defective camera module.

- 17. Wi-Fi® availability and coverage are provided by independent service providers. modu will not be responsible for the operation, availability, coverage, service or range of such.
- 18. This warranty does not cover Product failures caused by installations, modifications, repair, opening, dissembling or an attempt to disassemble the Product by a non-modu authorized person.
- 19. This warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not modu branded original accessories intended for use with the Product.
- Tampering with any of the seals on the Product will void the warranty.

21. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MODU OR IT LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the distributor arising from their sales/purchase contract.

* In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.