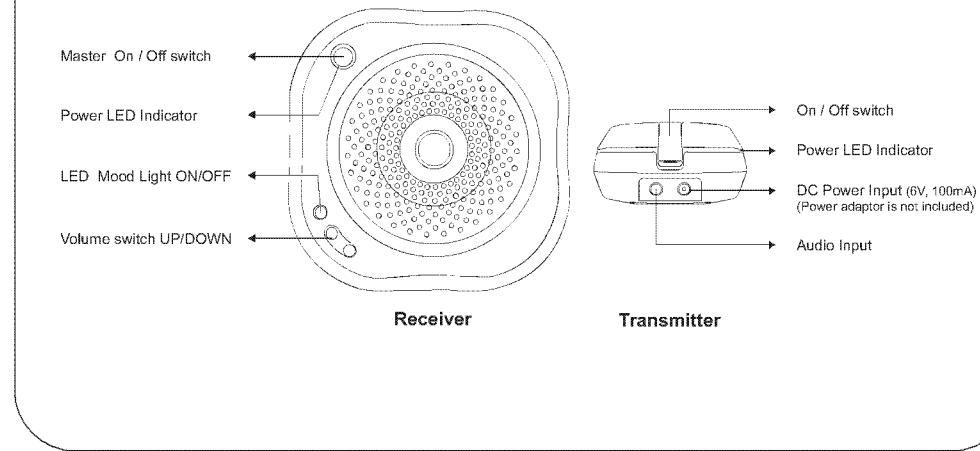


Wireless In-Pool Speaker

Operating Instructions

Printed in PRC

In-Pool Speaker Location of buttons and indicators



In-Pool Speaker Safety Instructions

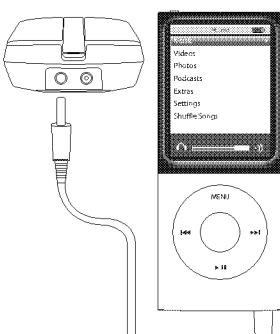
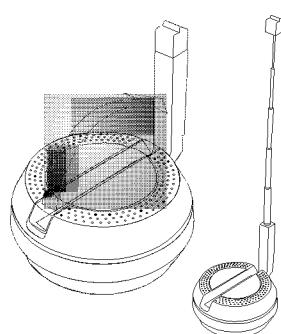
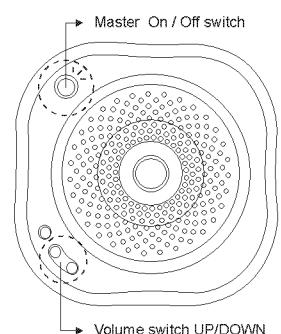
Please Read the Following Operation Precautions Before Use

- Read Instructions – All safety and operating instructions should be read thoroughly before attempting to operate this audio system.
- Retain instructions for future reference.
- Heed warnings – All warnings on this audio system and in the operating instructions should be adhered to.
- Follow instructions – All operating and use instructions should be followed.
- TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY OF THE SCREWS AND TRY TO DISASSEMBLE THE IN-POOL SPEAKER. THERE ARE NO SERVICEABLE PARTS INSIDE THIS UNIT.
- Do not expose the In-Pool Speaker to solvent.
- Do not expose the In-Pool Speaker to temperature or humidity extremes, direct sunlight, excessive dust, or vibrations.
- Place the In-Pool Speaker on a stable, level surface. Do not drop, apply excessive force to the controls, or put heavy objects on top of the In-Pool Speaker.
- If cleaning is required, use a soft dry cloth. If necessary, use a damp cloth without any solvents.
- In order to protect the In-Pool Speaker, avoid microphone feedback, continuous output from electronic musical instruments, or distorted output from any signal source.
- Do not place the In-Pool Speaker close to fluorescent light sources, or neon light fixtures.
- WARNING: To reduce the risk of fire or electric shock, do not expose the In-Pool Speaker to rain or moisture for long period without attention

In-Pool Speaker Easy Setup Guide – Battery Installation

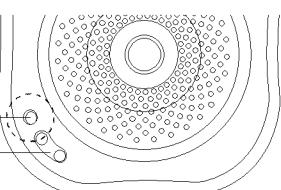
Step1. Content in the Package: 1 x In-Pool Speaker 1 x Transmitter 1 x Audio Input Cable 1 x Instruction Manual	Step2. Battery installation for In-Pool Speaker: - Turn the lower LED dome off - Unscrew the battery cover locking screws - Install 4 pcs fresh "C" size battery	Step3. Battery installation for transmitter: - Unscrew the battery cover locking screws - Install 4pcs fresh "AAA" size battery

In-Pool Speaker Easy Setup Guide - Wireless Audio Operation

		
Step4. Connect your music: - use the provided audio cable plug into the audio input socket at the back of the transmitter - connect the other end of the audio cable to your music source - Set the volume output from your music source to 75-80% for best result	Step5. Turn the transmitter ON: - flip the antenna to upright position - the power indicator ring will be illuminated - extend the telescopic antenna to maximum length for best transmission	Step6. Turn the In-Pool Speaker ON: - Press the Master ON/OFF switch - the power indicator ring will be illuminated - adjust the volume level by using the volume UP/DOWN button to your desired level

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

In-Pool Speaker Easy Setup Guide - LED Mood Light


Step7. LED Mood Light: - Turn the LED Mood Light on, by pressing the Mood Light ON/OFF button next to the Volume UP/DOWN

In-Pool Speaker Specifications

Transmit Frequency ---- 49.86MHz
Number of Channels ---- 1Ch
Modulation ---- Frequency Modulation
Output rating ---- 3Wrms x 1 (Class AB - Audio Amplifier)
Speaker ---- 3" Speaker
Power Supply ---- 4 x "C" size (In-Pool Speaker), 4 x "AAA" size (Transmitter)
Transmission Range ---- 30M (Outdoor, LoS)
Dimension ---- 175 x 175 x 160mm (In-Pool Speaker), 90 x 90 x 42mm (Transmitter)
Weight ---- 620g (In-Pool Speaker w/o battery), 88g (Transmitter w/o battery)

In-Pool Speaker Troubleshooting

Symptom	Possible Problem	Solution
Power LED does not light up	<ul style="list-style-type: none"> • No Power to the system • Batteries are empty 	<ul style="list-style-type: none"> • Ensure the batteries are installed correctly • Replace batteries
No Sound	<ul style="list-style-type: none"> • Transmitter is not functioning properly 	<ul style="list-style-type: none"> • Make sure the transmitter is functioning • Switch both the In-Pool Speaker and Transmitter off and turn them on again to rest both units • Make sure the audio cable is connected securely to the music source
Wireless Interference	<ul style="list-style-type: none"> • Signals between transmitter and receiver can be influenced by other 49MHz wireless devices 	<ul style="list-style-type: none"> • Move the transmitter and receiver away from other wireless devices • Make sure there is no other wireless devices are operating in between the transmitter and receiver

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

In-Pool Speaker Disclaimer

Normal operation should be possible within a distance of 30M (Outdoor, LoS), but the presence of obstacles in between the transmitter and receiver may result in reception problems. Such obstacles can be anything, but not limited to, certain types of furniture, constructions, wall materials, etc... The radio waves may be disrupted by other electrical appliances.