IS809B

Wireless Music System with Dock for iPod



TABLE OF CONTENTS

Warnings and Precautions	2
Important Safety Instructions	
In the Box & Features	
Powering the Unit	5
Backup Batteries for the Unit	5
Powering the Speakers & Changing the Remote Battery	6
Pairing Speakers with the Unit	7
Docking an iPod & Playing an iPod	
Setting the Clock	8
Setting the Timer & Setting the Sleep Timer	
Using the Auxiliary Input	
Locations of Controls & Definitions	
Parts & Service Information	

Warnings and Precautions



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

- Read Instructions All the safety and operating instruction should be read before the product is operated.
- Retain Instructions The safety and operating instruction should be retained for future reference
- Heed Warnings All warning on the product and in the operating instructions should be adhered to.
- Follow instructions All operating and use instructions should be followed.
- Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7. Water and Moisture Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposê aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

- 8. Accessories Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

See figure

 Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from



overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the nanufacturer's instruction have been adhered the


- 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- 12. Grounding or Polarization This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.

Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only it into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug

- into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 13. Power-Cord Protection Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- 14. Protective Attachment Plug The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- 15. Outdoor Antenna Grounding If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSL/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the flead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure

- 16. Lightning For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line
- Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or



where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

- Overloading Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain, water or moisture.
 - d) If the product does not operate normally by

- following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way, and
- f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 22. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards
- Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 25. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
 - Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- 26. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

 Excessive sound pressure from earphones and headphones can cause hearing loss.

Des pressions acoustiques excessives provenant d'écouteurs ou de casques peuvent provoquer des pertes de l'audition.

28. To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.



Symbol is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reasons.



This symbol indicates that this product incorporates double insulation.

 Caution marking is located at the bottom of apparatus.

> Les précautions d'emploi sont inscrites en bas de l'appareil.

 The marking information is located at the bottom of apparatus.

Les marquages sont inscrits en bas de l'appareil.

In the Box

- IS809B
- · Remote control
- · Docking brackets for iPod
- Documentation




Features

- Dock plays and charges iPod
- · Wireless speakers
- Supports multiple speakers
- · Advanced hi-fi sound with Channel Purity®
- Remote
- Digital volume control
- · Pairing button
- · Left, right, or mono selections
- · Weather resistant
- Digital 2.4GHz ISM wireless transmitter
- LCD display with white backlight
- Digital clock
- Play/pause, skip up/down functions for iPod
- On/Off, mute, function and pairing controls
- Independent volume settings for each speaker
- Transmission range: 200ft line of sight, 90ft indoors
- Auxiliary input for iPod shuffle and other audio devices
- AC power: built-in AC cord
- DC power: requires 6 D batteries per speaker, not included
- Includes: remote control, docking brackets for iPod

Powering the Unit

AC Power Cord


Plug the included AC cord into a standard AC outlet (120V~60Hz)

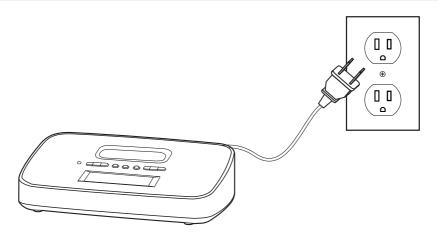

Backup Batteries for the Unit

Backup Battery Compartment (Requires 2 AAA batteries, not included)


Note: The Backup Battery Compartment will only backup the unit's time for a short period. The unit cannot function on the backup batteries alone.

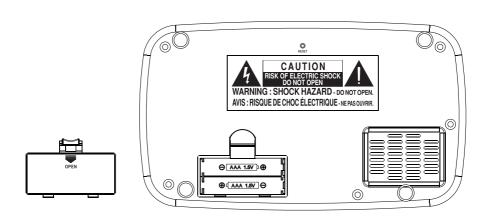


Powering the Speakers

AC Power Cord

Plug the included AC cord into a standard AC outlet (120V~60Hz)

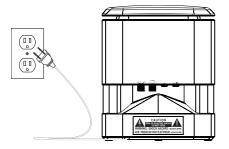


Battery Power (Requires 6 D batteries, not included)

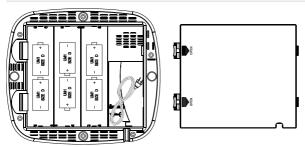


Changing the Remote Battery

Battery Power (Requires 2 AAA batteries, not included)

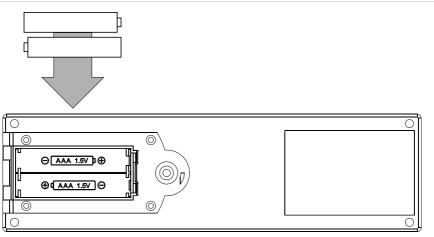

Pairing Speakers with the Unit

- Step 1: Press the Power Button on the unit to turn the unit on.
- **Step 2:** Press the **Power Button** on the speakers to turn the speakers on.
- **Step 3:** Press and hold the **Pair Button** on the unit until the **Link Indicator** begins blinking.
- **Step 4:** Press and hold the **Pair Button** on the speakers until the **Link Indicator** begins blinking.
- **Step 5:** The **Link Indicator** will shine solid on both the unit and speaker once they are paired together.

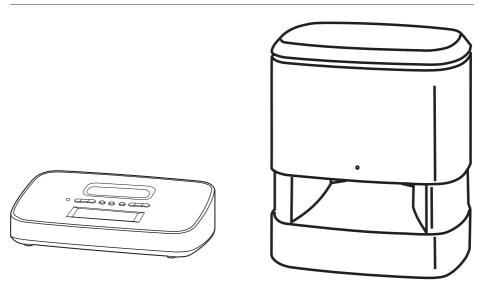

Transmission range: 200ft line of sight, 90ft indoors

Docking an iPod

- **Step 1:** Locate the numbered bracket that fits the iPod that will be docked.
 - Each included Bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.
- **Step 2:** Snap the bracket into place over the **iPod Connector** in the dock.
- **Step 3:** Connect the iPod to the iPod Connector inside the dock.
 - When the unit is plugged in, using AC power, the docked iPod will charge. If the unit is running on batteries, DC power, the docked iPod will not charge.

Playing an iPod

- **Step 1:** Press the **Power Button** to turn the unit on.
- **Step 2:** Press the **Source Button** to switch to *iPod mode*.
- **Step 3:** Press the **Play/Pause Button** to play or pause the docked iPod.

Setting the Clock

- **Step 1:** Press and hold the **Time Set Button**.
- **Step 2:** While holding the **Time Set Button**, press the **Skip/Search Buttons** to adjust the hour and minute.
- **Step 3:** Release the **Time Set Button** to set the adjusted time.

Setting the Timer

- **Step 1:** Press and hold the **Timer Button**.
- Step 2: While holding the **Timer Button**, press the **Skip/Search Buttons** to adjust the hour and minute.
- **Step 3:** Release the **Timer Button** to set the adjusted time.
- **Step 4:** Press the **Power Button** to turn the unit off.
- **Step 5:** Press the **Timer Button** to activate the timer.
 - "Timer On" will appear on the LCD display.

After the set time is reached, the unit will power on.

Setting the Sleep Timer


Step 1: Press the **Sleep Button** consecutively to adjust the sleep timer between 60 and 10 minutes, in 10 minute increments.

When the set time has expired, the unit will power off.

Using the Auxiliary Input

- **Step 1:** Connect a mini-phono 3.5mm cable (not included) to the **Auxiliary Input** on the unit and the audio output on an MP3 player.
- **Step 2:** Turn the unit on by pressing the **Power Button**.
- **Step 3:** Press the **Source Button** to switch the unit to *Aux Mode*.
- **Step 4:** Audio played through the connected MP3 player will now be heard through the unit.

Locations of Controls & Definitions

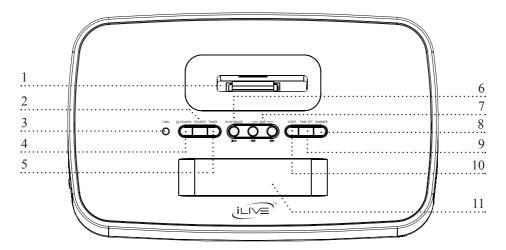

1. iPod Connector

Use the Dock Connector to connect an iPod to the unit.

2. Source Button

Press the Source Button to switch between iPod and Auxiliary Modes.

3. Link Indicator

A solid light indicates that the unit is not searching for nearby wireless speakers.

A blinking light indicates that the unit is attempting to link up with nearby wireless speakers.

4. Power Button

Press the Power Button to turn the unit off and on.

Note: The wireless speakers need to be powered off separately.

5. Timer Button

Press and hold the Timer Button to set the timer

6. Play/Pause Button


In *iPod Mode*, press the Play/Pause Button to play or pause a docked iPod.

7. Skip/Search Buttons

In *iPod Mode*, press the Skip/Search Buttons to skip between songs on a docked iPod.

In *iPod Mode*, press and hold the Skip/Search Buttons to search through an individual song.

Locations of Controls & Definitions

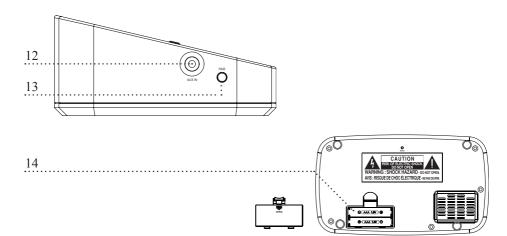

8. Dimmer Button

Press the Dimmer Button consecutively to adjust between low, medium, and high LCD display brightness'.

9. Time Set Button

Press and hold the Time Set Button to set the units clock.

10. Sleep Button

Press the Timer Button consecutively to set the sleep timer between 60 and 10 minutes (in 10 minute increments).

11. LCD Display

12. Auxiliary Input

Use the Auxiliary Input to connect an audio source (MP3 player) to the unit.


13. Pair Button

Press and hold the Pair Button to have the unit search for nearby wireless speakers.

14. Backup Battery Compartment (Requires 2 AAA batteries, not included)

Note: The Backup Battery Compartment will only backup the unit's time for a short period. The unit cannot function on the backup batteries alone.

Locations of Controls

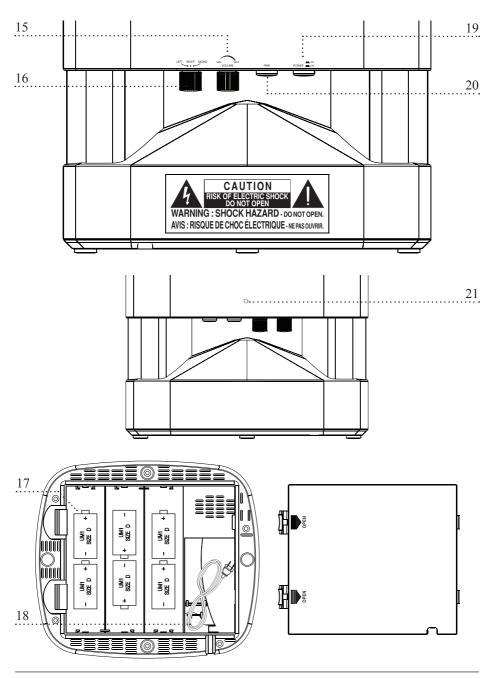

Control Definitions

15. Volume Dial

Turn the Volume Dial to adjust the volume of the speaker.

16. Left/Right/Mono Button

Turn the Left/Right/Mono Button to switch between *left*, *right*, and *mono speaker modes*.

17. Battery Compartment (Requires 6 D batteries, not included)

18. AC Power Cord

Use the AC Power Cord to power the speakers as an alternative to using battery power.

19. Power Button

Press the Power Button to turn the speakers on and off.

20. Pair Button


Press and hold the Pair Button to have the speaker search for a nearby unit to link to.

21. Link Indicator

A solid light indicates that the unit is not searching for nearby wireless speakers.

A blinking light indicates that the unit is attempting to link up with nearby wireless speakers.

Locations of Controls

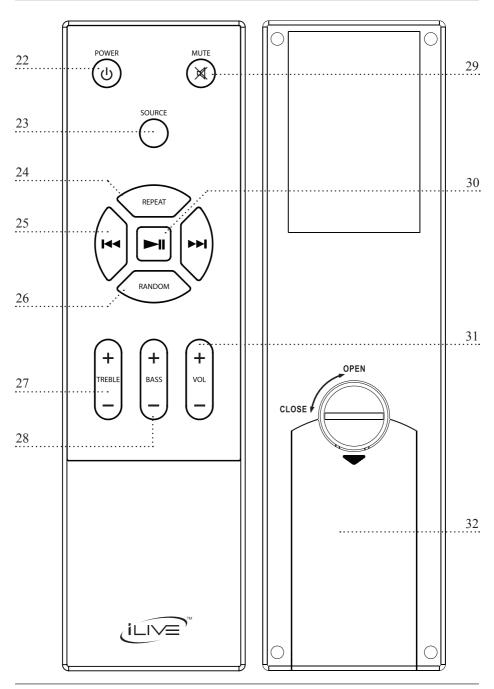

Control Definitions

22. Power Button

Press the Power Button to turn the unit off and on.

23. Source Button

Press the Source Button to switch between iPod and Auxiliary Modes.

24. Repeat Button

Press the Repeat Button to activate the repeat options on a docked iPod.

25. Skip/Search Buttons

In iPod Mode, press the Skip/Search Buttons to skip between songs on a docked iPod.

In *iPod Mode*, press and hold the Skip/Search Buttons to search through an individual song.

26. Random Button

Press the Random Button to activate the shuffle options on a docked iPod.

27. Treble Buttons

Press the Treble Buttons to adjust the level of treble output from the speakers.

28. Bass Buttons

Press the Bass Buttons to adjust the level of bass output from the speakers.

29. Mute Button

Press the Mute Button to mute the volume of the unit.

30. Play/Pause Button

Press the Play/Pause Button to play or pause a docked iPod.

31. Volume Buttons

Press the Volume Buttons to adjust the volume of the unit.

32. Battery Compartment (Requires 2 AAA batteries, not included)



Parts Information

2116 Carr Street, St. Louis MO, 63106 Address:

Phone: 1-314-621-2881 Fax: 1-314-588-1805

Email: partsinfo@dpi-global.com

Service Information

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881 Fax: 1-314-588-1805

Email: customerservice@ilive.net

Website: www.ilive.net Version: v. 010509

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.ilive.net.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.ilive.net.

© 2009 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners.