BESTPOWER X200 ILLUSTRATION




2.5mm DC Jack

Volume +/-(Up/Down)

Camera Key

Keypad Lock

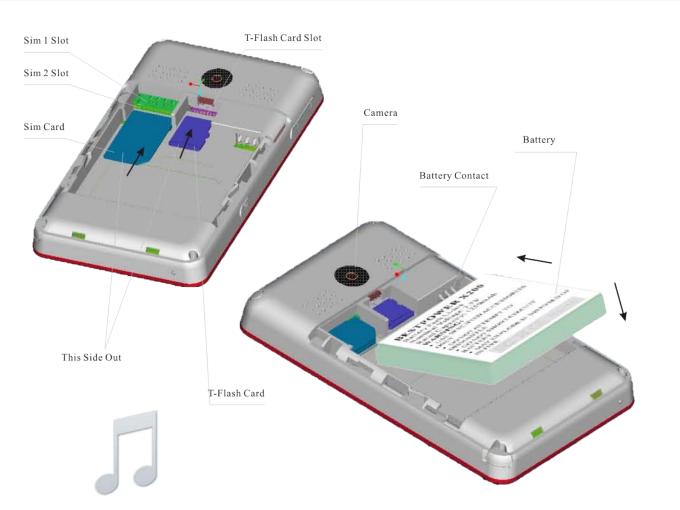

Quick Tips & Highlights:

- Press the central Confirmation Key ("OK") to enter the audio player promptly when standby. At the audio player interface, you can change the volume promptly by the Click Wheel or the side key "+/-".
- If you wish to enjoy the music in the best audio quality, please use the original ear phone rather than the phone speaker.
- The Click Wheel navigation is very sensitive and helpful to scroll the pages. But it might respond slowly if your finger is wet or too dry.
- If you need to turn off the Click Wheel navigation, please go to Main Menu -> Settings->Click Wheel.
- · Press the Key "#" to switch between the various input methods fast.
- Press the Right Selection Key ("C") and then the Key "#" quickly to lock or unlock the keypad manually.
- Long press the Key "*" and it will switch to the meeting profile promptly. Duplicate action will switch back to the last profile.
- PhoneSuite is a very helpful tool to manage and synchronize your phone with computer. Find the PhoneSuite in the CD to install. Connect the phone with the USB data cable when running the PhoneSuite.
- The language will be set to default English by dialing "*#0000#".
- Dialing "*#06#" will display the IMEI number of your phone.
- When using camera, press Key "1" to change the Effect settings, press Key "2" to change the White Balance settings press Key "3" for the LED highlight, press Key "4" for the Delay Timer, press Key "5" for the Continuous Shots settings, press Key "6" for the Scene Mode settings, press Key "7" for the Image Quality settings, press Key "8" for the Image Size settings, press Key "0" for a fast image capture, press Key "#" to turn on/off the icons at the interface.
- Press Key "*" to switch between vertical and horizontal screen when playing the audio.
- LCD display and the bluetooth consume a lot of power. It is recommended to turn off the bluetooth and lock the keypad when standby.
- You can search and download a lot of interesting and helpful Java applications from internet. Save the downloaded JAR file or JAD file to your phone or memory card, then locate it with the File Manager, press the Left Selection Key and choose Install from the options. You will see the installed Java application in Main Menu -> Extra -> Java -> Application List. It is always recommended to install Java applications on your memory card only rather than in the phone memory.
- Some Java applications may not work properly on BESTPOWER X200 or might even cause fatal errors (such as white screen problem, freeze, abnormal restart, etc.), because it is designed for the other models. Its keypad definition is different or it does not follow the memory allocation rules of BESTPOWER X200. Please delete it from the Application List.

WARRANTY CARD

When purchasing the phone from the dealer, please make sure that the following information is provided and filled in the blank without mistake immediately Keep it carefully for the future after sales service

User ID Number:			
Phone IMEI Number:			
Purchase Date :	/	/	

Shop Telephone / Fax:

Shop Name:

Shop Address:

Shop Chop & Signature:







Please take a few minutes to read through this brief user guide before using the phone. In this user guide you may find some helpful tips to utilize the phone or solve the potential problems.

Brief Introduction:

BESTPOWER X200 mobile phone is designed for the music lovers. The advanced Yamaha audio chipset is installed in the phone to improve the audio quality. And a high capacity battery is equipped with the phone to let you enjoy the music for a longer duration. It is very convenient to navigate through the menu tree with just a finger. Try to move your finger around the central navigation key and see what you get. If you would like to extend the features of the phone, JAVA may help. You can download the Java applications such as MSN, Skype, Facebook, games, etc, and install it on the phone free and easily. Now explore your phone and you will find more interesting and helpful features, such as dual SIM, Camera, Video capture, FM Radio, World Clock, and so on.

Frequency & Network:

This device is a quad bands GSM mobile phone. It will be working globally in the network of GSM 850/900/1800/1900 MHZ.

Emergency Calls:

You will need to insert the valid SIM card before you connect to the service network. However, you can dial the emergency calls any time in most of the cases. Please consult your service provider for this issue.

Touch Panel Calibration:

You must calibrate the touch panel for the first time to use the phone or when you meet problems with touch screen input. Please navigate to Main Menu -> Settings -> Pen Calibration. Simply follow the instructions and click the focus on the screen.

Stylus Pen:

To ensure the sensitivity and accuracy of hand writing by touch panel, it is recommended to keep the angel of the stylus pen and the touch panel between 75 ~ 85 degree. The less or larger angel may lead to the failure or mistake when drawing lines on the touch panel.



Playing Music:

The advanced Yamaha audio chipset is installed in this device to improve the sound's quality. And we have designed and manufactured the hands free specially for our phone. When listening to the music, please use the original stereo hands free in the pack to make sure you can enjoy the music best.

The audio player can be navigated via Main Menu>Audio Player. At the interface of Audio Player,
press the Left Soft Key will show the list of the music
on file. And you will see the menu of Options on the
left bottom corner. Press the Left Soft Key to enter

the options and you will see the frequently used functions and settings. It is very important to choose the storage option in Settings. You can select either Phone or Memory Card to be the default storage. The music files that located under the folder of My Music will be automatic added to the play file list. If you wish to add more music from your computer to the audio player list, please use the tool of File Manager by navigating to Main Menu ->File Manager.

File Manager:

To organize the files and folders on your phone and memory card, please use File Manger at the main menu. With this tool you will be easily to organize your file by the way similar to the way you do on the computer.

If you wish to organize your files via the computer,

Organize Files Via Computer:

please connect the phone and the computer first at the interface of standby with the USB data cable. Please use the original USB data cable in the pack only to prevent your phone from being damaged. When the phone is connected to the computer, it will show the options of connecting the phone as a "Mass Storage" or "COM Port". Please choose "Mass Storage" so that you will be able to see your phone or memory card as a new flash disk on your computer. Then simply organize your files on the phone and memory card now like what you usually do on the computer.

Normally you don't need to install the USB data cable driver on Windows 98 / XP, as it will be automatically installed when you connect the phone. Otherwise please find the driver in the CD in pack.

Internet, MMS, WAP, GSM Data & GPRS Settings:

You must set up the data account before you can browse the internet or sending/receiving MMS.

There are two types of data account: GSM data account and GPRS data account. The MMS data service or WAP service is normally associated with the GPRS data account. And if you wish to use your phone as a GSM modem, then you will probably need to set up the GSM data account. To set up the data account, please navigate to Main Menu->Extra->Web->Data Account.

There are some predefined data accounts for either GSM data account or GPRS data account. Select the one that is working in your local network. If the appropriate account is not listed in the predefined accounts, you can select any one of the predefined accounts and edit it. Please consult with your local network service provider about how to edit each account fields. Rename the account and save it.

After set up the data account, you can make the MMS setting now. Please navigate to Main Menu->Messages->MMS->MMS Settings->Server Profile-> SIM 1 / SIM 2 .There are some predefined server profiles in list. Select and activate the one that is correct for your local network. Or edit any one of the profiles accordingly. Save and activate it . Please consult with your network service provider about how to edit each fields. Be sure to select the correct data account that you have defined in the previous step. Please take the similar actions to set up your WAP service by navigating to Main Menu -> Extra-> Web -> WAP -> Settings-> Edit Profile -> SIM 1 / SIM 2.

Phone Lock:

To prevent the unauthorized use on your phone, you can turn on the Phone Lock function in the Main Menu->Settings->Security Setup-> Phone Lock. You will be requested to input the existing 4 digits password when you try to turn on/off this option. The default password is "1122". If the Phone Lock option is under the status of On, then every time when you power on the phone, you will be requested to input the Phone Lock password. The wrong password will lead to the failure of power on the phone. You can change the Phone Lock password by navigate to Main Menu->Settings->Security Setup->Change Password . You will need to input the old password before you confirm the new password. The default password is "1122". Please keep your Phone Lock password properly otherwise you will have to seek the help from your dealer. The contents in your phone will be lost to recover your phone.

Keypad Lock:

To prevent the unconscious keypad input when standby, you can manually lock the keypad by press "C" key (Right Soft Key) and then quickly press "#" key. Please do the same to unlock the keypad. To set up an auto keypad lock, please navigate to Main Menu->Settings->Security Setup->Auto Keypad Lock and select the duration options.

Restore Factory Settings:

To restore the factory settings, please navigate to the Main Menu -> Settings -> Restore Factory Setting. You are requested to input the password to restore the factory settings. The default code is "1122".

Install & Remove Java Applications:

It is a great advantage of this phone to extend its features by JAVA applications. You can download and install a lot of amazing Java applications from the internet free and easily. To install the JAVA application, please download the application pack first to your phone or memory card. Then locate the pack with the help of File Manager. Enter options and select Install to setup the application. After the installation, you will be able to see the newly installed application via Main Menu -> Extra-> Java Applications. You can remove the application by enter the options and choose Delete. It is recommended that you will install the Java application on the memory card only, to make sure your phone is not slow down or reducing its performance. Please note some Java applications may strictly work only under a particular screen resolution only. The resolution of this phone is 320 (width) x 240 (height) pixels. Some Java application may not work properly on this phone due to the keypad definition or memory allocation rules difference. Some Java applications might cause severe errors. You will find some Java applications and games in the CD.

Cautions & Warning:

- This device may influence the radio equipment and medical equipment. Please follow the instructions & regulations while being on board or in hospital.
- The Li-Ion battery may explode when disposed of in the fire.
- Please do not short circuit the battery.
- Please charge the battery with the specified chargers only.
- Some components of the phone such as the LCD, touch panel, battery, etc, may not function properly when the temperature is too low or too high.

- It is recommended to use the phone under the environment with a temperature between $5 \sim 35$ Celsius degree and a humidity between $35\% \sim 85\%$.
- Please make sure the phone is disassembled only by the authorized professionals when necessary, as some cables & components inside may be broken unconsciously.

Battery Capacity & Power Consuming:

The high capacity Li-Ion battery (1200mAh) is equipped with your phone. In lab the standby time of the phone is $110 \sim 120$ hours, talking time is $8 \sim 15$ hours, and the duration of continous playing music is $5 \sim 18$ hours. This is the testing data of power consuming of the phone:

- Power On Current: 180 ~ 190 mA
- Searching Network Current: 100mA (LCD off) 150mA (LCD lighting up)
- Standby Current: 10mA (LCD off) 50mA (LCD lighting up)
- Talking Current: 80 ~ 150 mA
- Playing Music: 50 ~ 200mA (LCD off) 100 ~ 360 mA (LCD lighting up)

Usually it is recommended to set your phone to turn on the Power Saving mode. you can navigate to Main Menu-> Settings-> Phone Setup-> Power Saving. Please be noted that your keypad LED light may turn off when turning on the Power Saving Mode.

Please read the detailed manual from the CD in pack.

www.bestpower.com.cn 1 www.bestpower.com.cn 2 www.bestpower.com.cn 3 www.bestpower.com.cn 5 www.bestpower.com.cn 6 www.bestpower.com.cn 6

FCC ID: X56-X200

FC C ID Label:

Initialize each page: Page 1/1

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body is 1.210 **W/kg**, next to the head is **0.504 W/kg**. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help