PA7006

Mobile Internet Device

User's Manual

- 1 Appearance
- 2 Power Switch
- 3 Touch Screen
- 4 Using SD Card
- 5 Getting Started
- 6 Desktop
- 7Lock screen
- 8 Reinstalled applications
- 9 Desktop menu function
- 10 Managing Applications
- 11 Clock
- 12 Installing Software Online
- 13 Browser
- 14 Calendar
- 15 Camera
- 16 Calculator
- 17 Sound Recorder
- 18 Email
- 19File Manager
- 20 Music
- 21 HD player
- 22setting
- **FAQ**
- Battery management

Important safety instruction

1 Appearance



2 Power Switch

Switch on: press and hold the power switch for 3 seconds and wait for startup.

Switch off: press and hold the power switch for 3 seconds \rightarrow click Power off \rightarrow click OK.

Lock/unlock screen: briefly press the power switch to lock/unlock the screen.

Forced shout down: if the device has no response, press and hold the power switch for 7 seconds to switch off the device by force.

Warning: forced shut down may cause unexpected errors of the system!

Reset: press this key to reset the device. Reset will restart the device. The result is same as startup after forced shutdown. Please be careful with it.

3 Touch Screen

The touch screen is easy and convenient to use.

You can use the touch screen in the following methods:

Single click: briefly touch the screen with the finger and then move away.

Click and hold: click the screen with the finger and hold for about 2 seconds.

Drag: click a certain icon in the screen and hold, then move the finger, the icon will move accordingly.

☆ To avoid damage the screen, never put anything on the it.

4 SD Using SD Card

☆ The device supports up to 32GB storage card.

Insert the card into the card slot, and push it in with your finger until a "click" is heard. Now the card is ready for use.

Removing SD card

Close all programs or files on the card first. Click Settings \rightarrow Storage \rightarrow Remove SD card \rightarrow OK.

Then press the card with your finger, and simply remove it when it is ejected.

- ☆ Do not insert and remove the card repeatedly in a short time, this may cause damage to the card.
- We suggest you use the card of famous brand to ensure compatibility.

5 Getting Started

Charging the device

☆Charge the device with USB cable is not recommended.

☆You may operate the device while charging it, but this may prolong the charging time.

Connect one end of the AC adaptor to the mains supply and the other end to the power jack on the device to charge it (it may take about 5 hours to fully charge the device).

Starting the device

Press and hold the power switch for 3 seconds and wait for system startup.

Wi-Fi Settings: tap the Settings icon and enter the settings interface.

- 1. Wireless & network: connect and manage WIFI and other networks.
 - 1) Wi-Fi : start WIFI function, and the device will automatically search for available WIFI

signal. You can also manually scan and add a network and add a network; the Advanced Option

allows customizing the network settings.





WiFi settings:

- 1. Open Settings-Wi-Fi;
- The device will scan and list all available APs; tap to select the AP name to be connected;
- 3. If the AP was connected successfully before, the information will be saved, and you can select "Connect" in the pop-up window; choose "Not save" and the AP information will be cleared;
- 4. If the AP is not encrypted, select "Connect" in the pop-up window to start the connection;
- 5. If the AP is encrypted, enter the password in the pop-up window, and tap "Connect" to start the connection;
- 6. After connected successfully, the wireless connection icon appears in the status bar at the bottom right of the screen.




- ①WIFI signal
- ②Battery status
- $\ensuremath{\ensuremath{\Im}}$ Current time -
- **4**Volume -
- **⑤**Task
- **©Screenshot**
- 7 Return to desktop directly
- ®Return
- 9Volume +
- ☆Click any icon to run it.
- ☆Press and hold to drag the procedure or shortcut icon to other places on the screen.
- $\stackrel{\star}{\approx}$ Press and hold to drag the procedure or shortcut icon to $\stackrel{\textstyle \times}{\times}$ for deleting it from desktop.

Bluetooth


Set the Bluetooth status, search for Bluetooth devices, as well as modify Bluetooth name.

7 Lock Screen

You can set auto lock screen or lock screen manually by pressing the power switch. The lock screen interface is as follow. Slide at the right to unlock the screen.

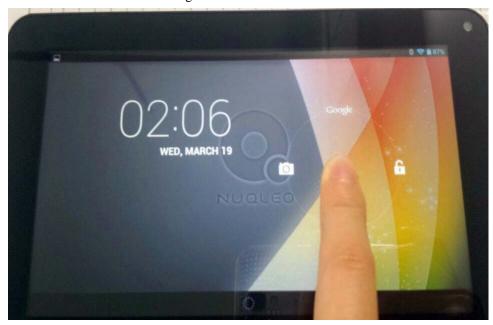

8 Reinstalled applications

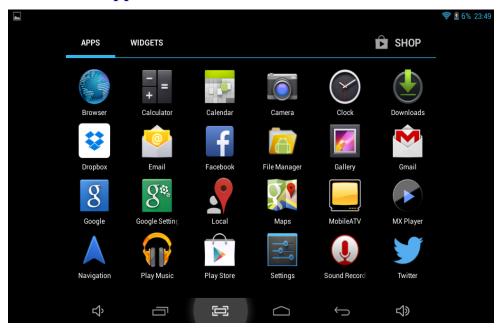

Play Store	Download applications conveniently.
HD Player	Play and manage videos.


	1	T
	Gmail	Send and receive e-mail with existing e-mail address.
	Email	Send and receive e-mail with existing e-mail address.
- =	Calculator	Make four arithmetic operation.
	Browser	Connect to Internet.
	Sound recorder	Record and play recorded sound.
	Calendar	A calendar where you can set agendas.
<u> </u>	Settings	Make personalized settings.
	Clock	Make personalized settings.
8	Search	Google search tools
	Resource manager	View and manage files and applications. Install Android applications and backup files in SD card.
	Downloaded files	Records of downloaded files.
	Camera	Take photos.
	Music	Play and manage music files.
8	GOOgle	Google search tools

P	Voice search	Internet searching through voice identification	
9	Chrome	Support browsing webpage	
S.	Google setting	Google application settings	
本地	Local search	Search for banks, hotels, restaurants, etc. near your location.	
90	Мар	View map, location, etc.	
	Navigation	Google search tools	

[☆] Click and drag the icon to move it to another place on the screen.

9 Desktop menu function

On the desktop, click and hold at the center of the screen for 2 seconds to display wallpaper menu.

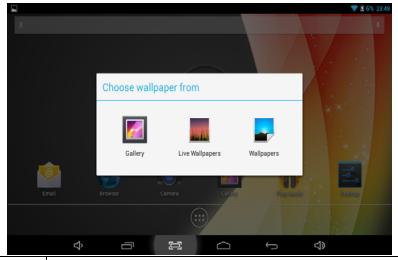

Wallpaper Select wallpaper from picture or wallpaper album.


Long press the icon on desktop to "X" at top of the screen to delete it from desktop. In the application list, click and drag the icon to to uninstall the application from the device.

10 Managing Applications

Installing

☆ You can find many interesting and free Android applications through the internet. Simply open the browser and search for "Android Applications".

The purchased or downloaded Android applications through the File Manager



- 1. Copy the .apk file you want to install to the SD card or USB disk \rightarrow insert the card or connect the USB disk to the device.
- the Resource Manager icon to find file folder with .apk file stored.
- 3. Now the application is installed and the icon of such application will display in the interface that displays all applications.
- 4. Click **Open** to run the application, or click **Complete** to return to **File Browser** interface.

Downloading applications from internet


You can directly download Android applications from the internet and install it into the device conveniently.



- Browser icon to connect to internet.
- 2. Enter the URL and click the link of the application you want to install.
- 3. After the application is downloaded, press and hold the downloaded file (in Downloaded Files interface) \rightarrow Click to open \rightarrow Install.

Uninstalling the application


You can conveniently uninstall the Android applications.



- 1. Click the application you want to uninstall \rightarrow Uninstall.
- 2. Click OK to uninstall the application.



11 Clock

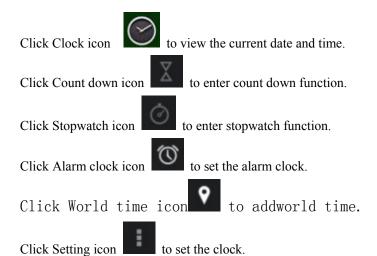

Alarm clock

The device supports more than one clock at the same time.

appears in the status bar on the top of the screen, it means at ☆ When the icon least one alarm clock is activated.

Add alarm clock

- 1. Click Clock icon
- 2. Click Alarm clock icon
- 3. Set your desired alarm clock.
- 4. Click Enable alarm clock and exit.

Stop the alarm clock

When the set time is reached, a window will pop up showing the name of the alarm clock. If you want to use the snap function, simply click and hold the alarm clock and drag it to the



You can click and hold the alarm clock icon and drag it to the icon to stop the alarm.





to return to desktop.



12 Installing Software Online

There are many applications available in the Installing Software Online interface. You can easily and quickly download them into your device.

Download the application



- If this is the first time you use this function, the system will ask to register and login. If you don't have a registered account, you need to click Register to establish a Google account. If you already have a Google account, simply click Login and enter your account information, click Login again to login.
- 2. You can select application from the recommendation list, or otherwise the list of classification or ranking. You can also search for the application you want by entering a specific name.
- 3. Click one application → Download → Confirm to download
- 4. At completion, click "Open" to directly run the application, or click "Remove" to delete the installed application..

Record

When downloading completes, click Record to manage the installed application. You can submit your comments to the application or view other users' comments.

Menu function

Click to display the menu function of the Installing Software Online.

Personal folder

Click to view personal information. You can change your password, change email address and save your password here. Click the Login out at the top right corner of the personal folder to logout your account.

About

Display the version and support information of Installing Software Online.




13 Browser

The user can connect to the internet through the browser.





on the desktop to open the browser.

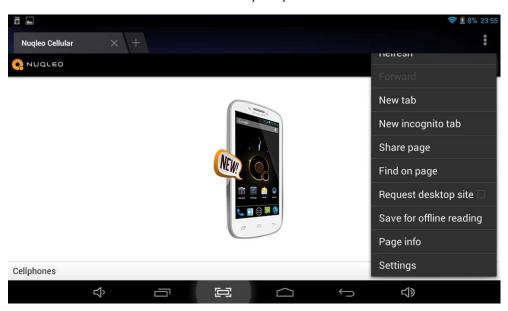



14 Calendar



If this is the first time you use this function, you need to open an Exchange account first. Enter your email address and password, click Next, and complete the configuration of the account following the instructions. Now you can use the Calendar.

New activity

- 1. 在In calendar interface, click the date you want to add an activity.
- 2. Select time of the activity \rightarrow enter the details of the activity in the field.
- 3. Click Complete.

- 4. Click icon to select your desired calendar interface.
- ☆ The date with agenda is displayed in grey.



15 Camera



Menu function

- 1. Click ____ to switch between front and rear camera
- 2. Click to switch camera mode.

Take a photo

In camera interface, click to take a photo.

- 1. The photo will be saved automatically.
- 2. Slide to left to browse the photos.
- 3. Click Return to return to camera.
- 4. Click to exit camera and return to the desktop.

Record a video

- 1. Click to switch to video, and you can record videos.
- 2. Click to start recording, click to stop
- 3. Click Return to return to camera.
- 4. Click to exit camera and return to the desktop.

16 Calculator

- 1. Click = the Calculator icon
- 2. Click the numbers and operators to make operations.
- 3. Click Clear to clear the entry one by one, or click and hold Clear to clear all entries.



17 Sound Recorder

1.	Click the	e Sound Recorder icon		
2、	Click the	icon to start recording. When recording complete	es, click the	icon
to s	stop recordi	ing.		

3. Click to check recorded voice. Click the recorded voice, and click Play in the menu popped up to listen to the recorded voice.



18 Email and Gmail

☆Support POP3 and SMTP accounts.

☆ Gmail supports Google account.

New email account

You enter one or more email accounts that you want to use on the device.

1. Click the Email icon



- 2. In the Your account interface.
- 3. Click Email address option \rightarrow Enter your email address.
- 4. In the Password option \rightarrow Enter the password of your email.
- 5. Click Next..
- 6. Manual setting (optional): Set the server to automatically fill in supplier based on your e-mail account (e.g. In , gmail.com will be automatically selected during log-in.) However, if

you need to change the server setting, you can click Manual setting and make necessary changes.

- 7. Click Next.
- 8. Optional: enter account name.
- 9. Enter the signature \rightarrow Click Complete.
- When setting completes, if you cannot connect to a free email account, please confirm with your email provider whether there sever supports (POP) and (SMTP) protocols or not.

Inbox

1. Click the Email icon



- 2. If only one email account is set, such account will be opened directly. If more than one is set, all email accounts will be listed.
- 3. Click the email account that you want to open \rightarrow Click Inbox.

Open an email

- 1. In Inbox interface, click an email to open it.
- 2. If there is attachment, click Open to activate the corresponding application to open it, or click Save to save it to SD card.
- 3. If you want to reply, click Reply or Reply all.
 - a. Enter the message you want to reply.
 - b. Click Send to send the email. If you save it as draft, the message will be saved but not sent; if you don't save it or sent it, it will be discarded.

4. Click Cancel to cancel an email immediately.

Compose an email

In Inbox interface, click → Compose your email.

- 1. If you want the e-mail CC or BCC to receiver, click "+CC/BCC" following address of the receiver, and then enter e-mail address of the receiver.
- 2. In the title bar of the email, enter the subject of your email.
- 3. Click **Write E-mail** option to enter your personal information. If needed, click to add attachment.
- 4. When composition completes, click ► ** → Send.

Edit email account

- 1. Click the Email icon
- 2. In inbox interface, click →Setting
- 3. Make your email account setting according to your needs.
- 4. Click to return to Inbox interface

Delete an email account

- If you have more than one account, and you have deleted the default account, then the next account in the list will become default.
- 1. Click the Email icon
- 2. In inbox interface, click →Setting
- 3. Click the account to be deleted, drag it to the bottom, click account deletion option to delete it.

Set default email account

You should always have one default email account. If you have more than one account, you can select any one as default.

- 1. Click the Email icon
- 2. In Inbox interface, click →Setting
- 3. Click to select default account, mark to select it as the default account of e-mail.

If the default account is deleted, the next account in the list will become default.

19 File manager

Click

File Browser icon to view the files in all storage mediums (internal storage of the device,

SD card, USB disk), and you can quickly and easily install Android applications into the device. Functions of the icons in the screen are as follow:



Previous folder



Click to view files in local disk



Click to view files in TF card.



Click to view files in USB.



Click to view all pictures.



Click to view all videos.



Click to edit the file.

Copy files between PC and device

You can use the File Browser to copy files between PC and the external/internal storage mediums. To copy files into the device, you can firstly copy them to SD card or USB disk.

- The folder name of the internal storage medium is "Local", the name of the storage card is "sdcard", and the name of the USB disk is "udisk".
- The following example is that you copy file into the device from SD card or USB disk. You can use the same way to copy the file from the device to the SD card or USB disk. Then connect your storage medium to your PC and copy the files into the desired folder.
- 1. Open file folder in which the file to be copied is stored.
- 2. Select the file or file folder to be copied \rightarrow Click **Duplication**.
- 3. Click icon to return to internal storage medium → click the folder you want to copy to → click Paste.

Delete a file

Select the file or file folder to be deleted, select \rightarrow Click Deletion \rightarrow Click **OK** for deletion.



20 Music


Support MP1, MP2, MP3, WMA, OGG, APE, FLAC, WAV, AC3, AAC, AMR, DTS, RA, M4A formats.

Play music



- 1. Click My music icon
- 2. Select the track you want to play from All/Album/Artist/Album/Track/Play list/Now playing.
- 3. Click the track to play
- 4. To return to previous interface while playing a track, click to return to desktop.

Click the track in the list to enter Music Player. The interface is as follow:

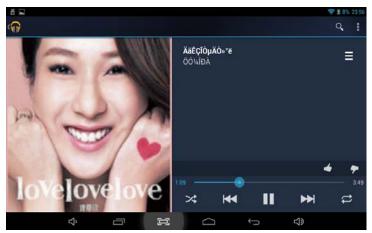

In this interface, you can use the operations such as Search, Play/Pause, Next track/Previous track, Repeat all and Random play.

Operate the track and play list

New play list

- 1. Click setting, and click Add to play list
- 2. Enter the name of the play list.
- 3. Click OK.

Rename or delete the play list

Click and hold the play lists \rightarrow click **Rename** or **Delete.**

New track

1. Click and hold the track you want to add to play list, → click "Add to play list".

Delete track

Click and hold the track you want to delete \rightarrow click Delete.

21 HD player

- Support RM, RMVB, MKV (H.264), MPEG (AVI), MOV, FLV, MPG, VOB, MPE, DAT formats. Support 2160P, 3840×2160.
- ☆ Supported picture format: JPG, JPEG, BMP and PNG.
- 1. Click video player icon
- 2. Select the desired video ack.
- 3. Click on the screen to adjust the video (including volume, pause/play, brightness, etc.).
- 4. Click **t** to return to list.



22 Settings

	W' E'/Di44b	Firstly W. F. / Dlastooth	
Windless and	Wi-Fi/Bluetooth	Enable Wi-Fi / Bluetooth	
Wireless and	More	Set flight mode, mobile network and VPN.	
network			
	Volume	Adjust media volume, alarm clock volume and notification	
		volume. Click and move the slider to adjust volume, and	
Sound		then click OK.	
		then effect off.	
	Notification ringtone	Select desired notification ringtone.	
	Touch screen tone	Tone played when selecting on screen.	
	Screen lock promote	Tone played when locking/unlocking screen.	
	tone		
	Brightness	Click and move slider to adjust brightness of the screen and	
	g	click OK to confirm.	
Display	Wallpaper	Set desktop background picture	
Screen timeout		Adjust the time of delay before screen automatic lock.	
	Interactive	Enter screensaver when the device enters sleep mode or is	
	screensaver	being charged	
	Font size	Support adjustment of font size	
	Wireless display	Support display of paired equipment through wireless	

		connection	
	Total capacity, free	Display total capacity and free space. Display when a TF	
Storage	space	card or USB disk is inserted.	
	Remove SD card/USB	When a TF card or USB disk is inserted, click Remove SD	
	disk	card/USB disk to remove them.	
Format SD card/USB		Format (clear) TF card/USB disk.	
	disk		
Battery	Battery level	Battery consumption information	
	Manage application	Manage and delete installed applications.	
Applications	Service in process	View and control the services in process.	
	Storage status	View the space occupation of the application.	
Location and	Location and	Use wireless network to view location in applications (such	
information	information sources	as Google map)	
access privilege	information sources	as Google map)	
	Set screen lock	Use picture, PIN or password to lock screen.	
	Display password	The entered password is visible.	
security	Select device manager	Add or delete device manager.	
security	Unknown source	Allow installing applications supplied by electronic market.	
	Use security	Allow application to access to security credentials and	
	credential	other credentials.	
	Install from TF card	Install encrypted certificate from SD card.	
	Personal dictionary	Add words to the user dictionary.	
	Android keypad	Screen keypad setting.	
	Listening example	Play short voice examples.	
Language	Always use my setting	Use the following defaulted setting to substitute setting of	
and input	Drafarrad angina	application Set the voice combination engine for switching between	
method	Preferred engine	text and voice.	
	Install voice data	Install voice data needed for voice combination	
	Voice speed	Play speed after the texts are converted into voice.	
	Language	Set language needed for text conversion.	
	Pico TTS	Pico TTS setting	
	Auto	Use value of the internet, sync time with the internet	
	Auto recovery	When an application is reinstalled, the system will recover the back up setting or other data.	
	Restore factory setting	Click to clear all data on the device. Click Reset the device will be reset, or click to cancel and return to	
		previous screen.	

Backup and recovery		Warning: the following data will be deleted from the device: ~ Google account. ~ Data and settings of the system and applications. ~ All downloaded applications.
		The following data will not be deleted: ~ System software and preinstalled applications. ~ Files in SD card, such as music and photos.
	Recovery mode	Restart the system and enter Recovery mode, where you can clear the partition data or upgrade the system
	Back up my data	Back up the application data, wifi password and other settings to Google server
Account	New account	Add and access to account Google, company and e-mail, and the account needed for other applications.
	Set date	Set date.
	Set time	Set time.
Date and	Select time zone	Select time zone.
time	Use 24 -hour time system	Select 24-hour time system or 12-hour time system.
	Select date format	Select date format.
About the device		View status, battery status, legal information, model, Android version, kernel version and version number.

FAQ

Android

Q: What is the Android version?

A: 4.2.2

Basic function of the device

Q: Do I need to charge the device before use?

A: Minimum 4 hours needed to charge the battery. However, you may use it while charging. Use the power adaptor to charge the battery, but not the USB data cable.

Email

Q: May I use my own email address to send and receive emails?

A: The device support POP3 and SMTP accounts. The device may not support some free email accounts. Please consult the email provider for details.

Storage card

- Q: What storage card does the device support?
- A: mini SD card.

Music

- Q: What audio formats does the device support?
- A: MP2, MP3, WAV, AAC, WMA
- Q: How can I add music into the device?
- A: You can copy the audio files from to SD card or USB disk, then copy them into the device through File Browser.

Picture

- Q: What picture formats does the device support?
- A: JPG, JPEG, BMP and PNG.
- Q: How can I add pictures into the device?
- A: You can copy the picture files from PC to SD card or USB disk, then copy them into the device through File Browser.

Video

- Q: What video formats does the device support?
- A: MPEG1/2/4, MJPG, H263, H264. H264 supports 720×480, other formats support 1280×720.
- Q: Are videos in YouTube playable by the device"
- A: Yes. You can click YouTube icon to play videos.
- Q: How can I add videos into the device?
- A: You can copy the video files from PC to SD card or USB disk, then copy them into the device through File Browser. Or connect to the computer, directly copy the file to the device.

Wi-Fi/BT

Q: Do I need an eternal Wi-Fi/BT device to connect to internet?

A: No. The device has built in Wi-Fi /BT function.

The actual product you receive may differ.

Battery management

The battery is not fully charged when leaving the factory, so we suggest you charge the battery for at least 4 hours before using.

The useful life of the battery is usually counted by charging times. However, you can try the following dos to prolong its useful life:

- Use the device at least once every week.
- Regularly fully charge the battery.
- Never keep the battery empty for a long time.
- Keep the device and the battery away from heat.

Charging the battery

Connect one end of the AC adaptor to the mains supply and the other end to the power jack on the device (it takes about 5 hours to fully charge).

☆ You are not recommended to charge the device with USB cable.

When the battery is full, the battery icon will display

It takes about 5 hours to fully charge an empty battery. You can operate the device while charging.

Important safety instruction

Please follow the following safety instructions while using the device to avoid risk of fire, electric shock or injury:

- Keep the product away from rain and humidity.
- Keep the product away from direct sunlight and heat.
- Protect the power core. When connecting the power core, do not trample on it or place anything
 on it. Use care to protect the connectors of the power core.
- Please only use the approved AC adaptor for charging. Using other adaptors may cause damage.
- Never dissemble or try to repair the device.

Clean the device

Clean the screen tenderly. To clean the fingerprints or dust on the screen, we suggest you use the soft cloth used on camera lens, but don't use any rough cloth.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.