1:18 Scale BMW Touch Racer Remote Control Vehicle User Guide



SAVE THESE INSTRUCTIONS. READ COMPLETE INSTRUCTIONS BEFORE USE.

#XC6387


XC6387IS01EXC.indd 1


© 2011 EB Excalibur, Inc.

XC6387IS01EXC 5 x 7 7/27/11 Congratulations on your new EXRC™ purchase! EXRC™ racers dominate the road with superior speed and control. Now that you're an honorary EXRC™ dragster we recommend reading through this manual thoroughly before attempting your first race.

Inside this manual you will find driving control tips, safety precautions and care instructions to keep your EXRC™ vehicle in tip-top shape. Follow the instructions, and use your EXRC™ vehicle to feed your need for speed and race toward the checkered flags! Ladies and gentlemen, start your engines!

VEHICLE LAYOUT

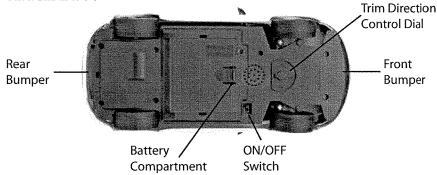

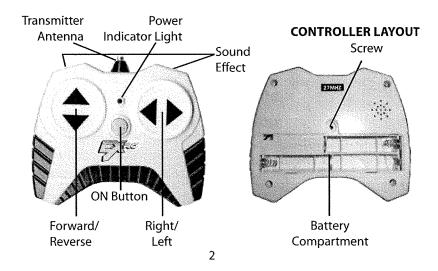

BATTERY INSTALLATION

This product requires the following batteries (not included):

3 AAA batteries - Remote


4 AA batteries - Vehicle

Remote Control:
Using a Phillips head screwdriver, remove the screw from the battery compartment cover on the controller. Insert three AAA batteries, making sure to follow the polarity (+ and -) marked on the product. Replace the battery

Vehicle:

Using a Phillips head screwdriver, remove the screw securing the battery compartment cover on the vehicle. Push down on the battery compartment cover and lift up. Insert the batteries, making sure to follow the polarity (+ and -) marked on the product. Flip the battery cover down and secure in place with the screw.

compartment cover and secure in place with the screw.

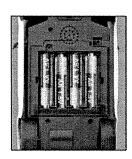

HOW TO DRIVE

- POWER Slide the ON/OFF switch in the center of the remote control to the ON position. The red light will illuminate to indicate that the remote is operational. Slide the ON/OFF switch on the bottom of the vehicle to the ON position.
- ANTENNA Insert the antenna into the hole at the top of the controller.
 Twist the antenna clockwise to secure. Extend the antenna fully for best performance.
- FORWARD/BACK Push the left controller joystick forward to move the car forward. Push the left joystick back to move the car backwards.
- LEFT/RIGHT Push the right controller joystick control the right/left direction of the vehicle.
- RANGE The maximum operational distance is a radius of approximately 25 feet.

TRIMMING VEHICLE

If you notice your vehicle drifting to the left or right when you try to drive in a straight line, adjust the Trim Direction Control dial located on the bottom of the car by moving it left or right.

CARE & HANDLING

- Do not submerge in water or other liquids.
- Do not disassemble the product for any reason.
- Do not expose to extreme temperatures.
- Do not drop, throw, smash or otherwise cause physical shock.
- Clean using only a slightly damp cloth.
- Do not use cleaners with chemical agents.
- Do not short-circuit the battery terminals.

▲ CAUTION ~ Battery Safety Information

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries must be removed before recharging
- Rechargeable batteries should only be recharged under adult supervision
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Exhausted batteries are to be removed
- Do not mix old and new batteries
- Do not dispose of product in fire; batteries may explode or leak
- If this product will not be used for an extended period of time, remove the batteries from the product
- The supply terminals are not to be short-circuited
- Batteries are to be inserted with correct polarity
- Clean the battery contacts and also those of the product prior to battery installation
- As always, dispose of batteries in an eco-friendly manner

FCC PART 15 COMPLIANCE

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the transmitting equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

The BMW logo, the BMW wordmark and the BMW model designations are Trademarks of BMW AG and are used under license.



WARNING

CHOKING HAZARD - Small Parts. Not for children under 3 years.

EB Excalibur, Inc. Miami, Florida www.EBExcalibur.com service@ebexcalibur.com



Distributed in the United Kingdom by: EB Brands UK, Worcester WR4 9FA

Actual product may differ slightly from photography.

XC6387IS01EXC



XC6387IS01EXC.indd 4 7/28/11 1:16 PM