




No	Item	Connection
1	Lemo 4-way jack	Connect 12V power via CA0002 or CA3172.
2	RJ45 8-way jack	Connect to a PC or network Ethernet port.
3	SMA 50 ohm jack	RF-A COFDM antenna.
4	SMA 50 ohm jack	RF-B COFDM antenna.
5	DIN 1.0/2.3 jack	SDI-1 video input. Connect CA2396 DIN 1.0/2.3 to BNC adaptor.
6	DIN 1.0/2.3 jack	SDI-2 video input. Connect CA2396 DIN 1.0/2.3 to BNC adaptor.

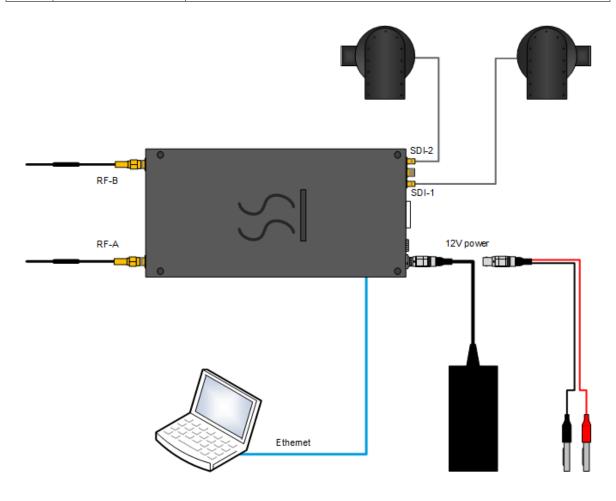

Revision 1.0 Page 1



The SOL8SDR-P IP address can be established using DTC's Node Finder application.


If DHCP settings need to be disabled and a fixed address applied, right click on the device to reconfigure.




Double click the device on Node Finder to open web browser communications.

On authentication, leave the Username blank and enter the Password as **Eastwood**.

Go to the **Configuration**>**Preset**>**Encoder** tab and set the Video Source and Format to match the attached camera. Click **Apply** at the bottom of the page to save the settings.

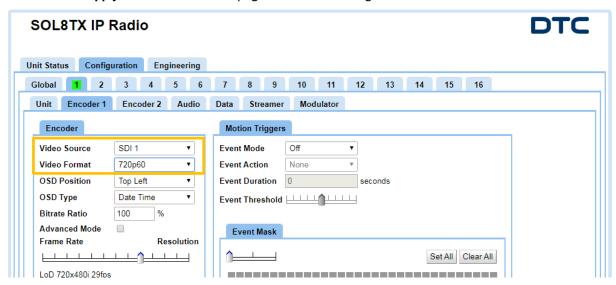

Go to the **Configuration>***Preset*>**Modulator** tab and make the settings for your system, highlighted below. Click **Apply** at the bottom of the page to save the settings. These settings **must** be matched at the receiver.

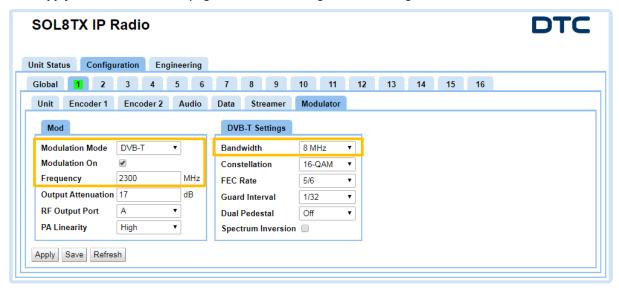

Revision 1.0 Page 2