

All rights reserved! Any company or individual person shall not copy or backup this user manual in any format (electronic, mechanical, photocopying, recording or other formats) without written permission from Launch Tech Co., Ltd (hereinafter referred to as "Launch"). The manual is for the use of the products manufactured by Launch, which shall not assume any responsibility for the consequences arising from the use of it to guide the operations of other equipment.

Launch and its branches will not bear any liability for the fees and expenses incurred by equipment damage or loss due to accidents caused by users or third parties, misuses and abuses, unauthorized modifications and repairs, or operations and services not following launch's instructions.

Launch assumes no responsibility for device damages or problems resulted from the usage of other parts or consumables, rather than original products of launch or products approved by the company.

Official statement: the mentioning of the names of other products in this manual is to illustrate how to use the device, with the ownership of the registered trademarks belonging to the owners.

The device is intended for the use of professional technicians or maintenance and repair personnel.

Registered Trademark

Launch has registered its trademark in china and several other countries, and the logo is **LAUNCH**. Other trademarks, service marks, dot names, icons, company names of launch mentioned in the user manual all belong to launch and its subsidiaries. In those countries where trademarks, service marks, dot names, icons, company names of launch have not been registered yet, launch claims the right for its unregistered trademarks, service marks, dot names, icons, and company names. Trademarks of other products and company names mentioned in this manual are still owned by the original registered companies. Without written agreement from the owner, no person is allowed to use the trademarks, service marks, domain names, icons and company names of Launch or of other mentioned companies. You can visit <https://www.cnlaunch.com>, or write to Customer Service Center of Launch Tech Co., Ltd at Launch Industrial Park, North of Wuhe Road, Bantian Street, Longgang District, Shenzhen City, Guangdong Province, P.R.China, to get contact with Launch for the written agreement on the usage of the user manual.

Disclaimer of Warranties and Limitation of Liabilities

All information, illustrations, and specifications in this manual are based on the latest information available at the time of publication.

The right is reserved to make changes at any time without notice. We shall not be liable for any direct, special, incidental, indirect damages or any economic consequential damages (including the loss of profits) due to the use of the document.

Contents



1. Product Overview	1
2. Product composition and accessories	1
3. Precautions for Safe Use	2
4. Technical Features	2
5. Operating Instructions	3
5.1 Panel Description	3
5.2 Main Unit Connection	4
5.3 Main Unit Operation	5
5.3.1 Main Menu	5
5.3.2 Discharging Test	5
5.3.3 Charging Test	7
5.3.4 Data Management	9
5.3.5 System Settings	9
6. Fault Analysis and Troubleshooting	13
Compliance Information:	13

1. Product Overview

EVP711 is an EV battery pack module charging and discharging device developed by Launch. It adopts the most advanced charging and discharging technology, according to the charging and discharging characteristics of lithium and Ni-MH batteries, has built-in various test and maintenance modes, which are suitable for the discharge, charging, cycle charging and discharging tests of various lithium and Ni-MH batteries on the market. The device adopts an intelligent operating system, so that users and managers can easily and scientifically maintain and manage the battery pack, thus extending the service life of the battery pack.

2. Product composition and accessories

The device is mainly composed of main unit, temperature and voltage acquisition box, discharge cables, etc. The following accessories are for reference only. For product configuration details, please consult from the local agency or check the package list supplied with this device together.

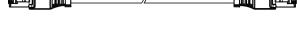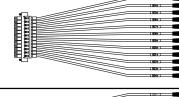No.	Name	Q'TY	Reference Picture
1	Main Unit	1	
2	Temperature and voltage acquisition box	1	
3	AC power cord (Include UK/US/EU/AU)	1	
4	AC power cord (Single-phase three wire)	1	
5	DC test cable-Positive (Red)	1	
6	DC test cable-Negative (Black)	1	
7	Network cable	1	
8	Voltage acquisition cable (12P)	1	
9	Voltage acquisition cable (13P)	1	
10	User manual	1	
11	Packing list	1	

3. Precautions for Safe Use

- (1) Follow the relevant requirements in the user manual to operate the device.
- (2) When operating the device, please take insulation protection measures and wear dry and clean insulating gloves.
- (3) In case of abnormality, please disconnect the device's working power supply and test cable.


4. Technical Features

Parameter	Description
Model	EVP711
Power input	AC 90-264V
Display	10-inch LCD screen
Data communication	RS485
Data dump	U disk
Data storage	32G
Module data acquisition communication	Harness sampling
Group voltage accuracy	$\leq(0.5\%FS+0.3V)$, resolution: 0.001V <i>Note: The voltage displayed during the testing process may deviate from the actual voltage. Please refer to the static voltage when the test is stopped.</i>
Cell voltage accuracy	$\leq(0.1\%FS+5mV)$, resolution: 0.001V <i>Note: The voltage displayed during the testing process may deviate from the actual voltage. Please refer to the static voltage when the test is stopped.</i>
Current measurement accuracy	$\leq(1\%FS+0.2A)$, resolution: 0.1A
Charging voltage range	DC 2~400V
Discharge voltage range	DC 2~400V
Charge current range	0~100A, maximum power 4.4kw
Discharge current range	0~100A, maximum power 7.2kw
Charge control	Constant current charging + constant voltage charging
Discharge mode	Constant current discharge
Protection mechanism	Overcharge and over discharge protection


	Over voltage, over current, over temperature protection Battery short connection, reverse connection protection Abnormal protection against power cord and main cable failure Fan abnormal protection
Shutdown actuator	DC breaker + release
Alarm prompt	Screen prompt + buzzer
Working Environment	
Cooling	Forced air cooling
Temperature	Operating temperature range: -5~40 °C ; storage temperature:-20~70°C
Humidity	Below 90% RH
Dimension	349.0*551.1*598.5 mm

5. Operating Instructions

5.1 Panel Description

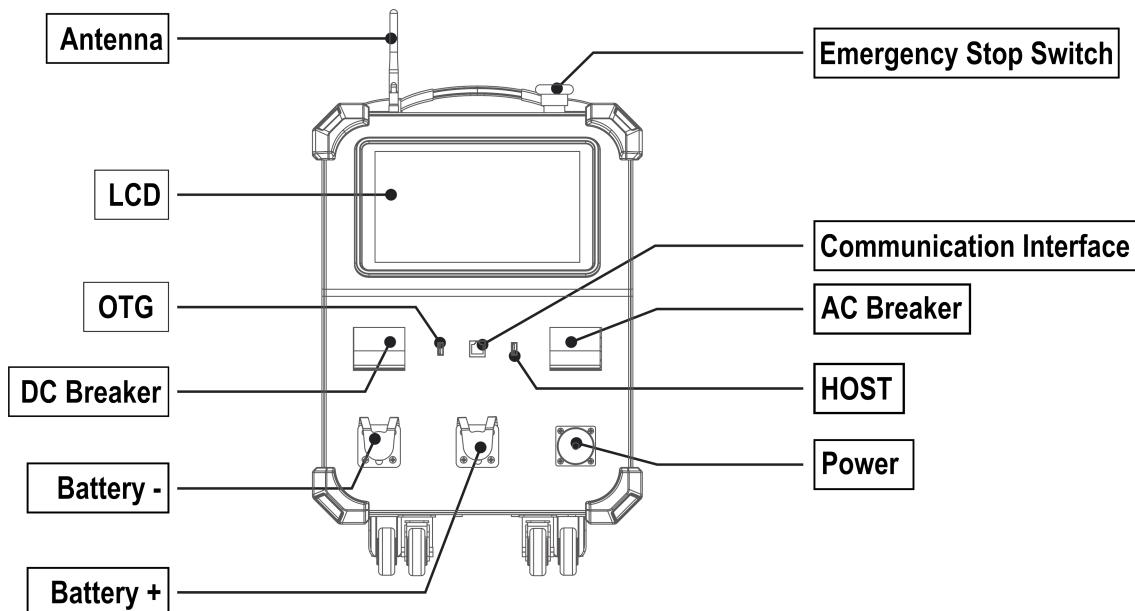

5.2 Main Unit Connection

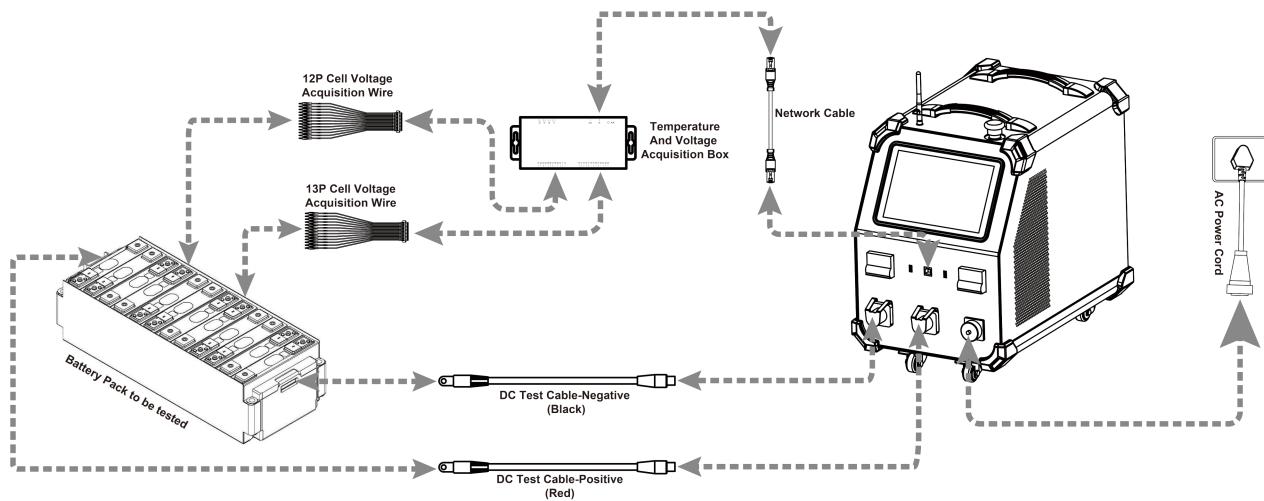


DC test cable connection

Insert the black DC test cable into the Battery - interface (Black) of the device, and connect the other end to the negative pole of the battery module; insert the red DC test cable into the Battery + interface (Red) of the device, and connect the other end to the positive pole of the battery module.

Voltage Sampling - Module Sampling

- (1) Use communication network cable to connect the communication interface of the device and the IN interface of the temperature and voltage acquisition box.
- (2) If the number of test cells does not exceed 12: use a 13P voltage acquisition cable (connected to the 13P acquisition interface of the voltage and temperature acquisition box);
If the number of test cells exceeds 12: an additional 12P voltage acquisition cable needs to be used (connected to the 12P acquisition interface of the voltage and temperature acquisition box);
If the number of test cells exceeds 24: need to add more voltage and temperature acquisition boxes (up to 3 voltage and temperature acquisition boxes can be connected).
- (3) According to the wire label on the cell voltage acquisition wire, B1 - is connected to the negative electrode of No. 1 single cell (B1), B1 + is connected to the positive electrode of No. 1 single cell (B1), B2 + is connected to the positive electrode of No. 2 single cell (B2), and connected in sequence.

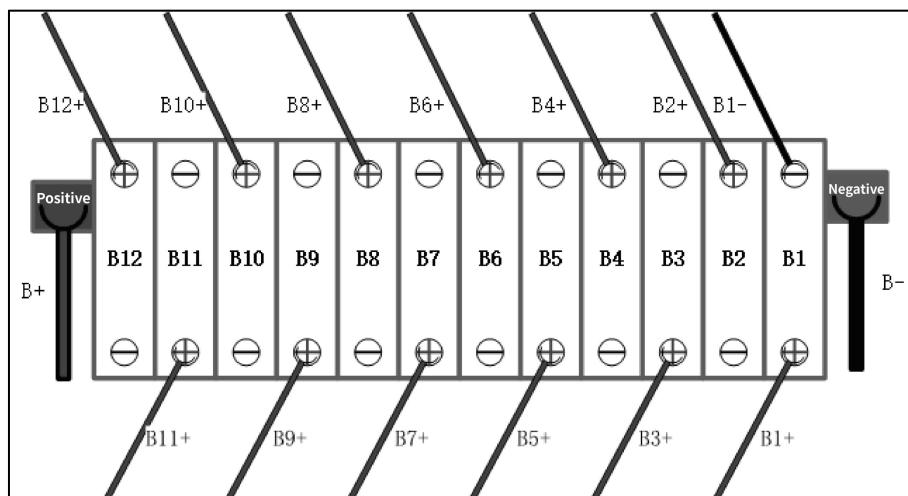

Temperature Sampling - Module Sampling

Connect one end of the temperature acquisition wire (optional) to the temperature acquisition interface of the temperature and voltage acquisition box, and connect the other end (probes or clips) to the battery cells.

Working Power Supply Connecting:

Connect the AC power cord (Include UK/US/EU/AU, choose the appropriate plug according to the region of use) equipped with the device to connect the device power interface and power socket to power the device. At this time, it is recommended to only use it for operating the discharge function.


Connect the single-phase three wire AC input power cord equipped with the device to the power interface, and connect the other end of the power cord to the distribution box to supply power to the device. At this time, the device can operate charging and discharging functions. Please set the charge current limit according to the size of the connected AC input load (see parameter table for details) to prevent overcurrent.

5.3 Main Unit Operation

After the device is connected, close the AC breaker to turn on the device, then set the charging and discharging parameters and protection conditions, and close the DC breaker before starting the test.


5.3.1 Main Menu

Click the function module on the main menu to enter the corresponding function operation interface.

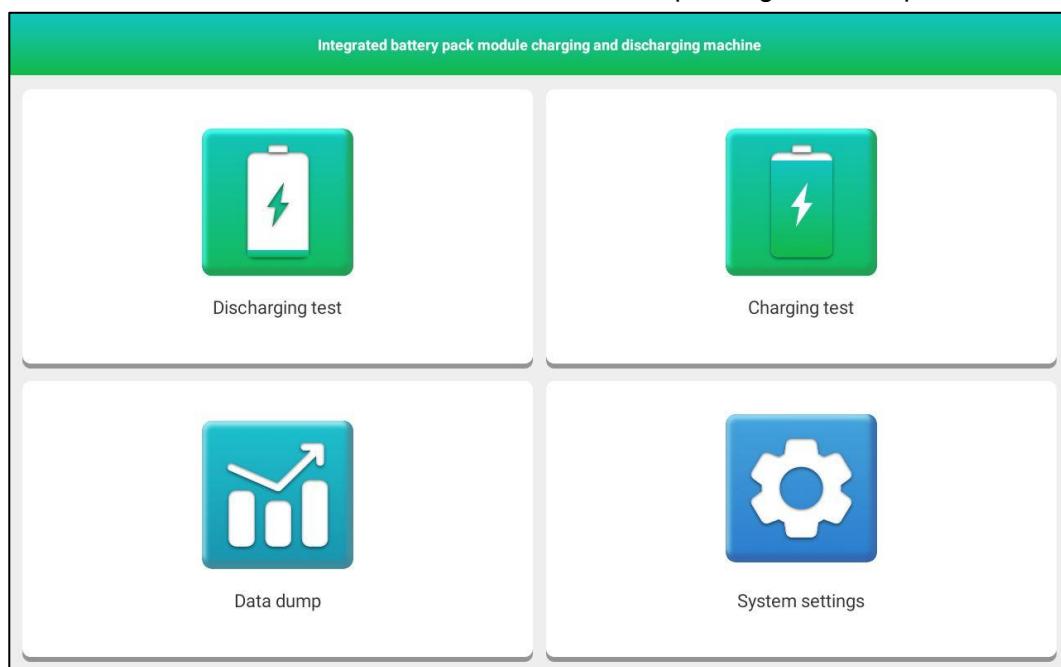

5.3.2 Discharging Test

- (1) Click "Discharging Test" to enter the following interface, set the battery information and corresponding discharging parameters.

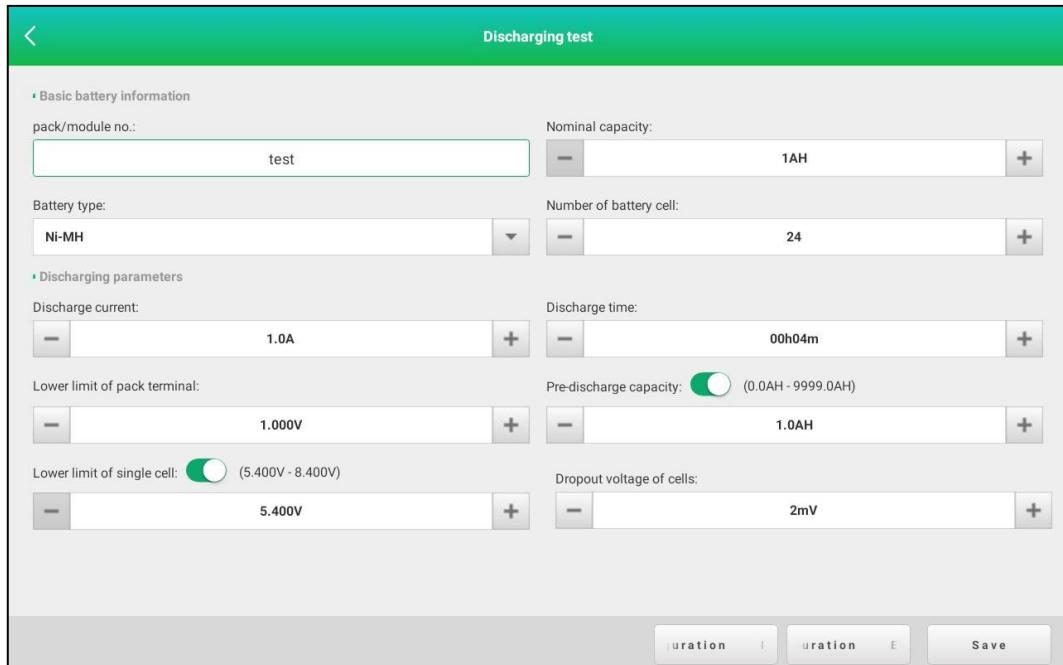

Parameter Description :

Battery Information	
Pack/module no.	The number of the battery pack or module.
Nominal capacity	The nominal capacity of the battery pack, according to the actual input, can be identified from the rating plate.
Battery type	Select battery type.
Number of battery cell	Fill in according to the actual number of strings.
Discharge Parameters	
Discharge current	Discharge test current value.
Discharge Time	The discharge will stop when the set discharge time is reached.
Lower limit of pack terminal	The discharge will stop when the set lower limit voltage value of the group terminal is reached.
Pre-discharge capacity	The discharge will stop when the set pre-discharge capacity is reached.
Lower limit of single cell	The discharge will stop when the set lower limit voltage value of the single string is reached.
Dropout voltage of cells	The difference between the highest and lowest cell voltages, the system will stop discharging when it reaches the set value.

(2) Click **Save** to save configuration and enter the discharging interface. Close the DC breaker, tap **Start test** to start the test.

The current battery status, the discharge current, the discharge time, the current voltage of the battery pack and the cell voltage information can be viewed on the discharging interface.

Note: Before starting test, the previously set parameters can be modified using the "Modify Configuration" button. After starting test, the set parameters cannot be modified during the discharging process.

Battery status:		Discharge capacity:		Discharge time:			
Stop	0.000V	0AH	0A	00:00:00	0Kw		
terminal voltage:	Maximum cell:	Minimum cell:	out voltage of cells:	Temperature Difference:			
0V	0V	0V	0V	-			
Max temperature:	Min temperature:	-					
1	0.000	2	0.000	3	0.000	4	0.000
5	0.000	6	0.000	7	0.000	8	0.000
9	0.000	10	0.000	11	0.000	12	0.000
13	0.000	14	0.000	15	0.000	16	0.000
17	0.000	18	0.000	19	0.000	20	0.000
21	0.000	22	0.000	23	0.000	24	0.000

Modify config Start test

- (3) In the process of discharging, the discharging will automatically stop when any set threshold is reached. Type of stop discharge conditions: discharge time, lower limit of pack terminal, pre-discharge capacity (when there is a limit on discharge capacity), lower limit of single cell (when there is a limit on discharge capacity), and dropout voltage of cells.
- (4) In addition to the above threshold protection, abnormal shutdown protection also has multiple protections: discharge overvoltage and overcurrent protection; battery short circuit and reverse connection protection; fan abnormality protection, etc.

5.3.3 Charging Test

- (1) Click "Charging Test" to enter the following interface, set the battery information and corresponding discharging parameters.

Basic battery information	
pack/module no.:	test
Nominal capacity:	1AH
Battery type:	Ni-MH
Number of battery cell:	24


Charging parameters	
Capacity Set:	1.0AH
Charge voltage limit:	1.000V
Charge protection:	1.0V
Charge current limit:	0.3A
Current threshold:	0.2A
Charge time:	00h00m
Upper limit of single cell:	4.0V
Dropout voltage of cells:	1mV

Import con Export con Save

Parameter Description :

Battery Information	
Pack/module no.	The number of the battery pack or module.
Nominal capacity	The nominal capacity of the battery pack, according to the actual input, can be identified from the rating plate.
Battery type	Select battery type.
Number of battery cell	Fill in according to the actual number of strings.
Charge Parameters	
Capacity set	The charge will stop when the set charging capacity is reached.
Charge voltage limit	The target value of the charging voltage.
Charge protection	The charge will stop when the set upper limit voltage value of the pack terminal is reached.
Charge current limit	Limit the charging current to not exceed this set value.
Current threshold	The charge will stop when the voltage reaches and the current is less than the set threshold.
Charge time	The charge will stop when the set charging time is reached.
Upper limit of single cell	The charge will stop when the set upper limit value for a single cell voltage is reached
Dropout voltage of cells	The difference between the highest and lowest cell voltages, the system will stop charging when it reaches the set value.

(2) Click **Save** to save configuration and enter the charging interface. Close the DC breaker, tap **Start test** to start the test.

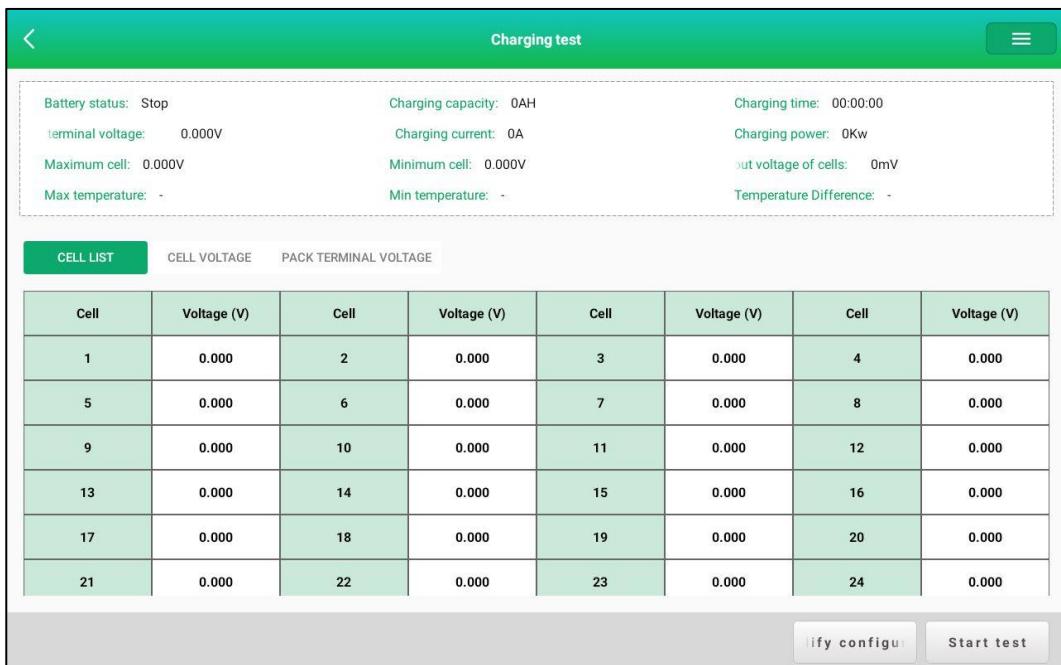


The current battery status, the charging current, the charging time, the voltage of the battery pack and the cell voltage information can be viewed on the charging interface.

Note: Before starting test, the previously set parameters can be modified using the "Modify Configuration" button. After starting test, the set parameters cannot be modified during the charging process.

- (3) In the process of charging, the charging will automatically stop when any set threshold is reached. Type of shutdown conditions: charging capacity (when there is a limit on charge capacity), charge protection voltage threshold, current threshold, charge time, upper limit of cell voltage (when there is a limit on charge capacity) and dropout voltage of cells.
- (4) In addition to the above threshold protection, abnormal shutdown protection also has multiple protections: charge overvoltage and overcurrent protection; battery short circuit and reverse connection protection; fan abnormality protection, etc.

5.3.4 Data Management

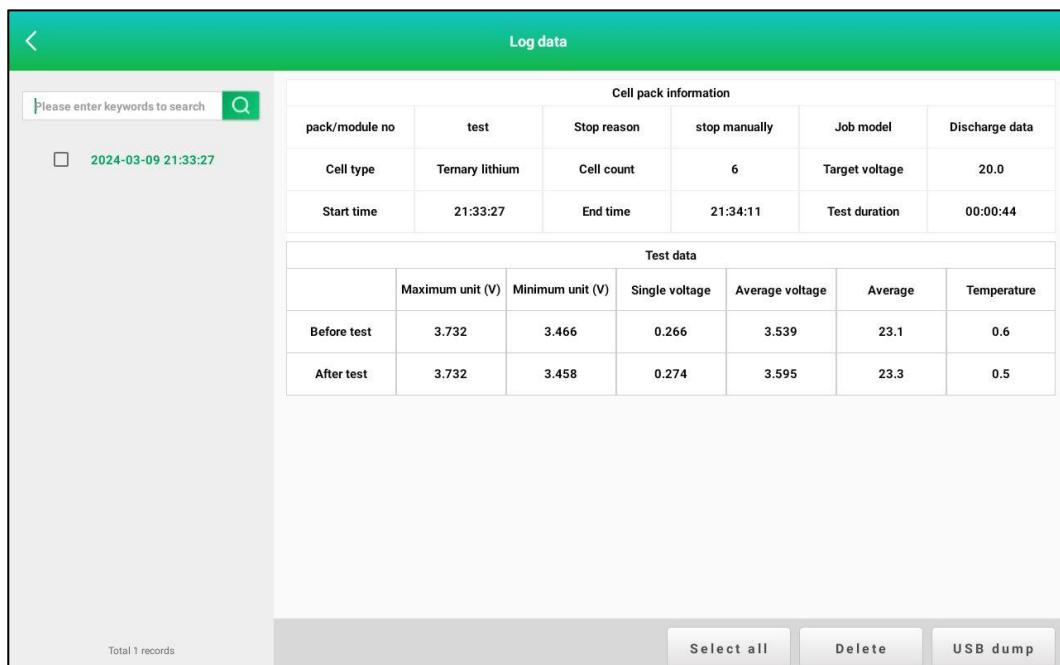

The screenshot shows the 'Log data' screen with a green header bar. On the left, there is a search bar with placeholder text 'Please enter keywords to search' and a magnifying glass icon. Below the search bar is a date and time stamp: '2024-03-09 21:33:27'. The main content area is divided into two tables: 'Cell pack information' and 'Test data'.

Cell pack information

pack/module no	test	Stop reason	stop manually	Job model	Discharge data
Cell type	Ternary lithium	Cell count	6	Target voltage	20.0
Start time	21:33:27	End time	21:34:11	Test duration	00:00:44

Test data

	Maximum unit (V)	Minimum unit (V)	Single voltage	Average voltage	Average	Temperature
Before test	3.732	3.466	0.266	3.539	23.1	0.6
After test	3.732	3.458	0.274	3.595	23.3	0.5

Total 1 records


Buttons at the bottom: Select all, Delete, USB dump

Insert a U-disk into the OTG or HOST port on the panel, select the data to be saved, and tap **USB dump** button to transfer the corresponding discharge data and charge data to the U-disk.


5.3.5 System Settings

Tap **System Settings** on the main interface to enter the system settings interface, which includes Language, Wi-Fi, Device upgrades, Module addresses, Development and maintenance, and About.

Language: Used to change the system language.

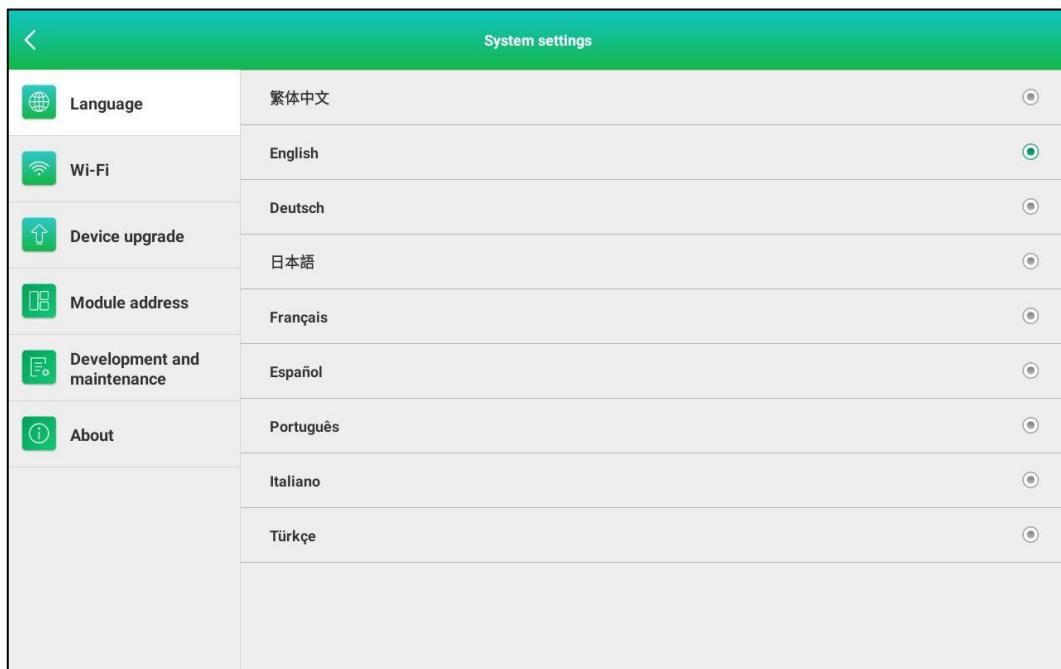


Wi-Fi : Used to connect the Wi-Fi networks.

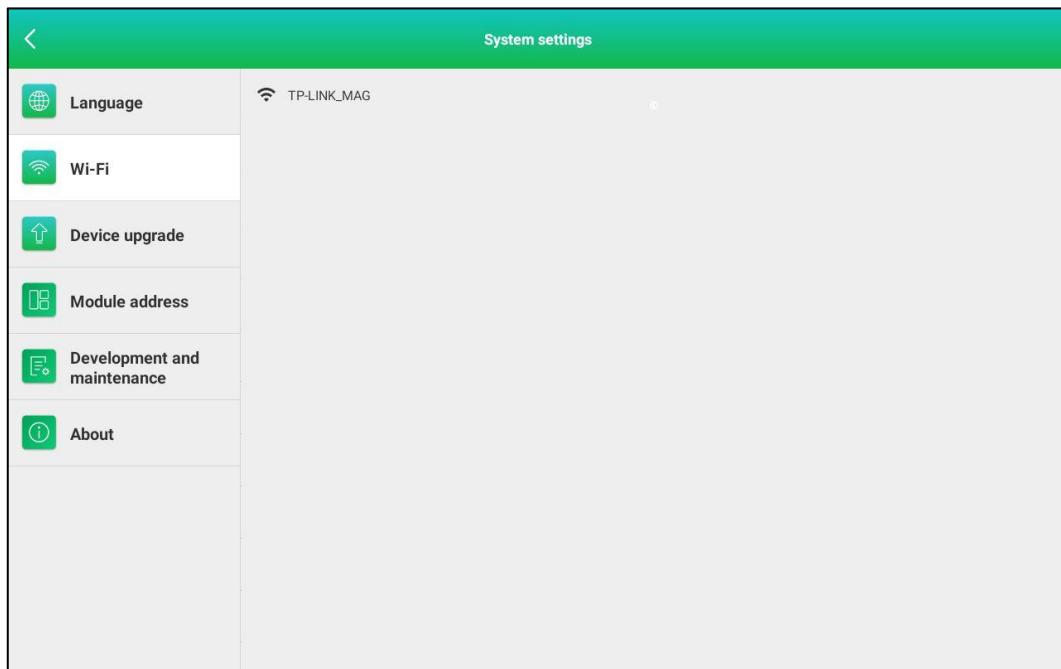


Device upgrade : Used for APP upgrade, including local upgrade and online upgrade functions.

APP local upgrade: Copy the upgrade package to the USB. After connecting to the device, select the corresponding upgrade package to upgrade the device.


APP online upgrade: After connecting to Wi-Fi, click "Online upgrade" to upgrade the device software to the latest version.

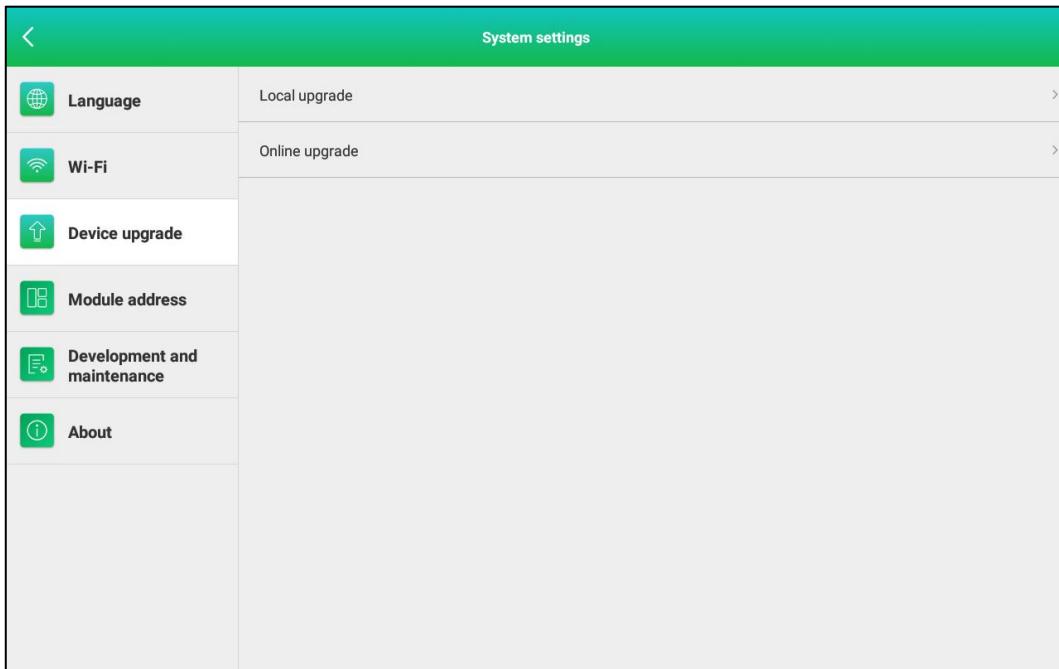


Module address : Used to select acquisition modules.

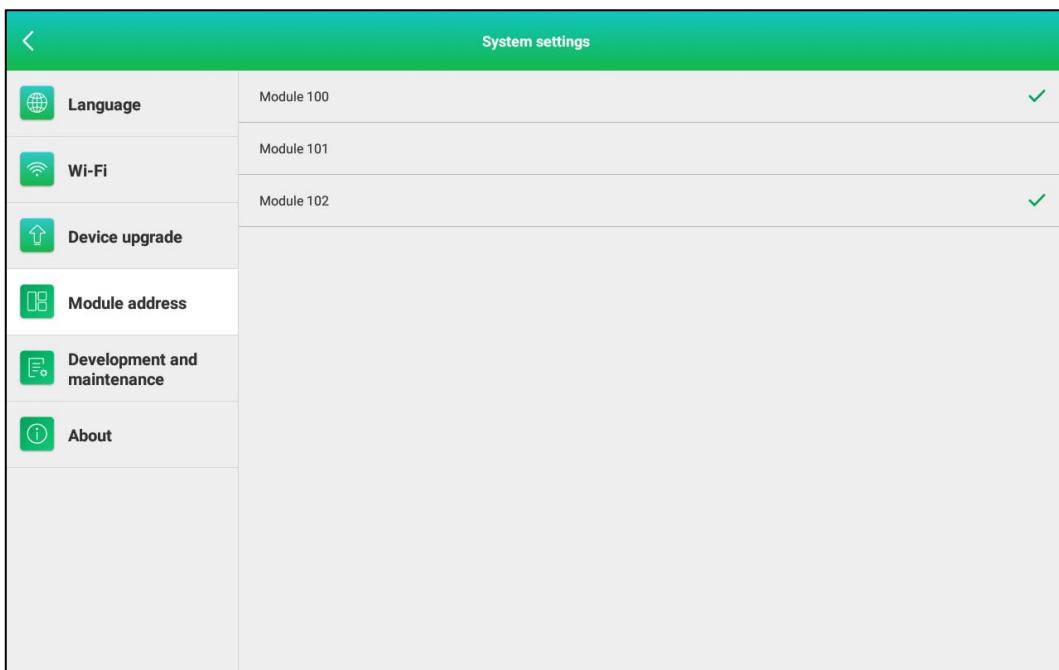

Develop and maintenance : Only for development and maintenance.

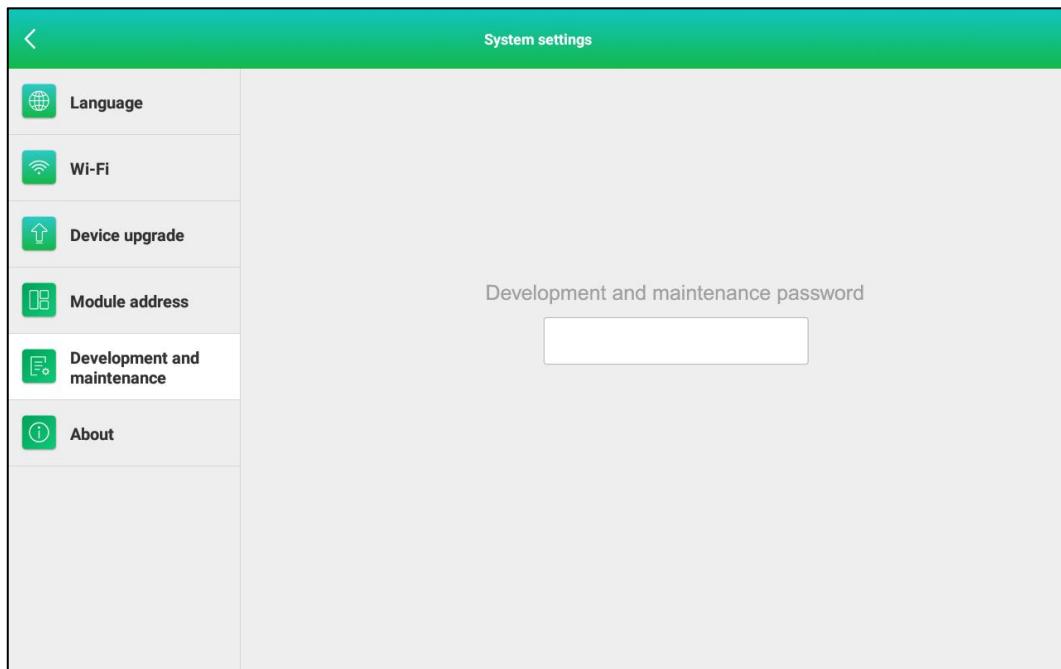

About : Used to view system version information, etc.

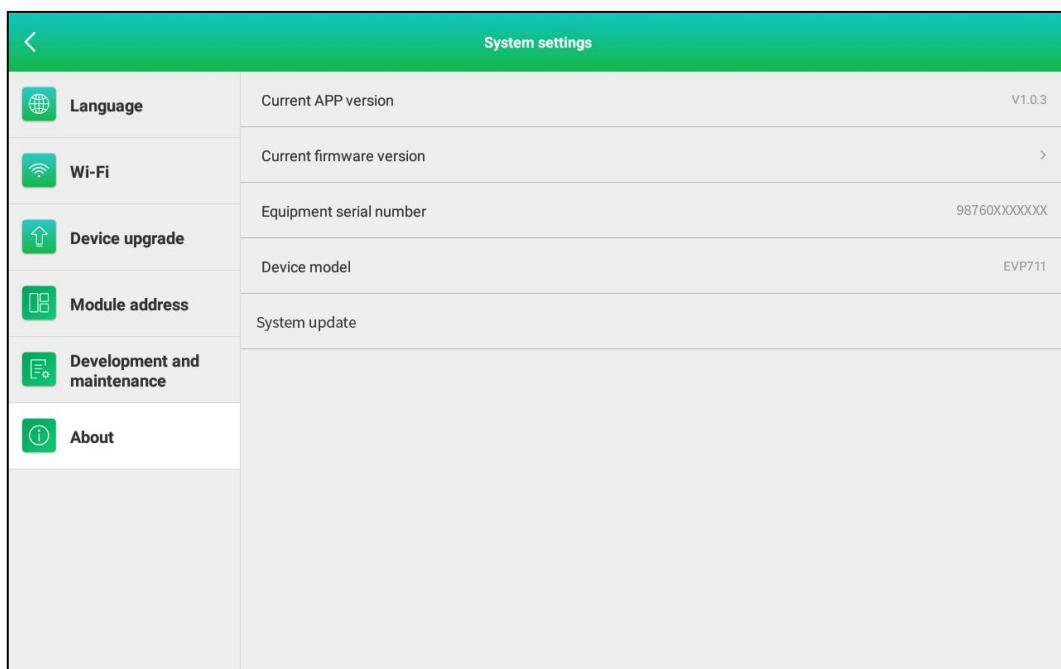

6. Fault Analysis and Troubleshooting

No.	Fault Situation	Troubleshooting Methods
1	The bottom left corner of the screen prompts "Single cell voltage acquisition module not connected"	Check the communication connection between the tested battery module and the voltage and temperature acquisition box.
2	Pop up warning "Discharge cable positive and negative pole alarm"	The positive and negative poles of the discharge cable are reversed
3	Pop up warning "Abnormal voltage at pack terminal or DC breaker not closed"	1) The DC breaker is not closed. 2) Test input voltage is too high.
4	Main unit temperature is too high	Confirm the placement of the device, pay attention to ventilation, heat flow, make sure that there are no debris placed within 0.5 meters of the device ventilation opening.

Compliance Information:

FCC ID: XUJ EVP711

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU. The RF frequencies can be used in Europe without restriction.

Warranty

This warranty applies only to users and distributors who have purchased Launch's products through regular procedures.

Launch shall provide a warranty against material or craftsmanship defects for 15 months from the date of delivery on its electronic products. Damages to the device or its components caused by abuses, unauthorized modifications, uses for a purpose other than for which it is intended, or operations not following the manner specified in the manual, etc. are not covered by this warranty. Compensation for the damage to instrument of the automobile due to the defect of the device is limited to repair or replacement, Launch is not responsible for any indirect or accidental loss. Launch will judge the attributes of the equipment damage according to its specified test method. None of Launch's dealers, employees and business representatives has the authority to make any confirmations, reminders or promises related to the company's products.

Disclaimer Statement

The above warranty can substitute warranties in any other forms.

Order Notice

Replaceable and optional parts can be ordered directly from LAUNCH authorized distributors. Your order should include the following information:

Order quantity

Part number

Part name

Customer Service Center

Customer Service Center

For any problem met during the operation, please call +86-755-84528888, or send email to overseas.service@cnlaunch.com.

If the device needs to be repaired, please send it back to Launch, and attach the Warranty Card, Product Qualification Certificate, Purchase Invoice and problem description. Launch will maintain and repair the device for free when it is within warranty period. If it is out of warranty, Launch will charge the repair cost and return freight.

Launch Address:

Launch Tech Co., Ltd, Launch Industrial Park, North of Wuhe Road, Bantian Street, Longgang District, Shenzhen City, Guangdong Province, P.R.China,

Zip Code: 518129

Launch Website: <https://www.cnlaunch.com>

Statement:

LAUNCH reserves the rights to make any change to product designs and specifications without notice. The product interface may differ from what is displayed in the manual. Please refer to the actual product for accuracy. We have tried our best to make the descriptions and illustrations in the manual as accurate as possible, and defects are inevitable, if you have any question, please contact local dealer or after-sale service center of LAUNCH, LAUNCH does not bear any responsibility arising from misunderstandings.