



OW70L (P-P)

OneWeb LEO User Terminal

Installation & Operation User Guide

Serial number of the product

--

This serial number will be required for all troubleshooting or service inquiries.



© 2023 Intellian Technologies, Inc. All rights reserved. Intellian and the Intellian logo are trademarks of Intellian Technologies, Inc., registered in the U.S. and other countries. The OW70L (P-P) is a trademark of Intellian Technologies, Inc. Intellian may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Intellian, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property. All other logos, trademarks, and registered trademarks are the property of their respective owners. Information in this document is subject to change without notice. Every effort has been made to ensure that the information in this manual is accurate. Intellian is not responsible for printing or clerical errors.

Disclaimer

The information in this user guide is subject to change without prior notice out the product life cycle. The printed version of the guide is periodically updated, but it may contain inaccuracies or omissions compared to the most recent product information. The most up-to-date information is always available on our website at intelliantech.com.

Table of Contents

Chapter 1. Precautions	7
1.1 Warnings, Cautions, and Notes	7
1.2 General Precautions	8
Chapter 2. Certifications	9
Chapter 3. Introduction	10
3.1 Introduction to OW70L (P-P)	10
3.2 OW70L (P-P) Features	10
Chapter 4. Planning Installation	11
4.1 Installation Precautions	11
4.2 Selecting Installation Site	12
4.2.1 Installation Location for Antenna	12
4.2.2 Installation Location for CNX	12
4.2.3 RF Hazard Precautions	13
4.3 System Package	14
4.3.1 Outdoor Unit (ODU)	14
4.3.2 Customer Network Exchange (CNX)	15
4.3.3 Packing List	16
4.4 System Cables	17
4.4.1 Antenna Power+Data Cable	17
4.4.2 LAN Cable (Customer Supplied)	17
4.5 Installer/Customer Furnished Equipment	17
4.6 Unpacking System Package	18
Chapter 5. Installing Outdoor Unit (ODU)	19
5.1 General Requirements	19
5.1.1 Antenna Mounting Requirements	19
5.2 Antenna Dimensions	20
5.3 Measuring the North point	21
5.4 Designing Pole Mount	23
5.4.1 Assembling Base Panel of NPM (Non-Penetrating Mount)	23
5.4.2 Installing Customized Pole Mount	26
5.5 Placing Antenna on Fine Tune assembly	28
5.5.1 Assembling the Fine Tune assembly	28
5.5.2 Levelling the Mounting Plate	29
5.6 Mounting Antenna on Mounting Plate	30
5.6.1 Moving Antenna Above the Mounting Plate	30
5.6.2 Installing Bolts for Antenna-Mounting Plate Assembly	31
5.6.3 Aligning the Antenna to the True North	32
5.6.4 Placing Concrete Blocks on Base Panels	33
5.7 Connecting Cable to Antenna	34
5.8 Grounding Antenna	35
5.9 Installing Protective Connector Covers	36

Chapter 6. Installing Indoor Unit (IDU)	37
6.1 CNX Dimensions	37
6.1.1 CNX Dimensions	37
6.2 Antenna System Configuration	38
6.2.1 Antenna System Configuration with CNX	38
6.3 CNX Cable Connection	39
6.3.1 CNX Front Panel View	39
6.3.2 CNX Back Panel View	40
6.3.3 CNX Connector Pinout Guide	40
Chapter 7. Starting Dual Antenna System	42
7.1 Configuration of Dual Antenna System	42
7.2 Accessing LUI	42
7.2.1 Setting the Compound UT#2 (Secondary)	43
7.2.2 Setting the Compound UT#1 (Primary)	44
7.3 Starting Install Menu (Install Wizard)	46
7.4 Monitoring Dual Antenna System	51
Chapter 8. Using Local User Interface (LUI)	52
8.1 Introduction	52
8.2 Turning On System	52
8.3 Accessing Webpage	53
8.3.1 TCP/IP Connection through LAN Port	53
8.4 Webpage Layout	54
8.4.1 Navigation bar	54
8.4.2 Home Page	55
8.4.3 Footer	56
8.5 Antenna	57
8.5.1 Antenna Info	57
8.5.2 Massage Stats	58
8.5.3 Modem ↔ Antenna Latency	58
8.5.4 Blockage zones	59
8.5.5 Antenna status	59
8.5.6 Antenna Setup	60
8.5.7 IMU Offset	62
8.5.8 Installation	63
8.5.9 RF Cable Setup	63
8.5.10 Blockage Zone	63
8.5.11 RCM	64
8.5.12 Product Information	64
8.5.13 Software Version	65
8.5.14 RF Gain Offset	65
8.5.15 TILT Calibration	66
8.5.16 True North Calibration	66
8.5.17 Download Complete Logs	66
8.5.18 Download AIM Logs	66
8.6 Modem	67
8.6.1 Antenna Info	67

8.6.2 APN Info	67
8.6.3 Modem status	68
8.6.4 Modem Control Panel	68
8.6.5 OneWeb Extension	69
8.6.6 PPS Status	70
8.7 Network	71
8.7.1 Network info	71
8.7.2 Packet Graphs	72
8.8 Diagnostic	73
8.8.1 UT status	73
8.8.2 Host Processor Logs	74
8.8.3 Event Logs	74
8.8.4 UT Configuration	75
8.8.5 UT Advanced Configuration	76
8.8.6 Fault Management	77
8.8.7 CNX Manager	78
8.8.8 MoCA Info	79
8.8.9 System Monitor Status	80
8.8.10 Sensor and Device Info	81
8.8.11 System Monitor Status	82
8.8.12 Self Test Results	83
8.8.13 TWAMP	84
8.8.14 Compound UT Information	85
8.9 Management	87
8.9.1 Management Status	87
8.9.2 Switch UT Software	88
Chapter 9. Specification	89
9.1 Technical Specification	89
9.1.1 RF Specification	89
9.1.2 System Specification	89
9.1.3 Mechanical Specification	90
9.1.4 Package Specification	90
9.2 Customer Network Exchange (CNX) Specification	91
9.2.1 CNX-E Specification	91
9.3 Environmental Specification	91
Chapter 10. Warranty	93
Chapter 11. Appendix	94
11.1 Pre-Installation Checklist	94
11.2 Tightening Torque Specification	95
11.3 Checking separately sold items	96
11.4 Important Notice of Waterproofing Connector	97
11.4.1 Introduction	97
11.4.2 Outline of Taping	97
11.4.3 Procedure	97

List of Figures

Chapter 4. Planning Installation	11
Figure 1: Minimizing Satellite Blockage (example)	12
Figure 2: Radomes and Pedestal	14
Figure 3: Front Panel of CNX-E	15
Figure 4: Back Panel of CNX-E	15
Chapter 5. Installing Outdoor Unit (ODU)	19
Figure 5: Antenna Dimension	20
Figure 6: Placing Concrete Blocks on Base Panel of NPM	33
Figure 7: Cable Connection of CNX-E to Antenna	34
Figure 8: Grounding Antenna	35
Figure 9: Installing Protective Connector Covers	36
Chapter 6. Installing Indoor Unit (IDU)	37
Figure 10: CNX-E Dimensions	37
Figure 11: Dual Antenna System Configuration with CNX-E	38
Figure 12: Front Panel View	39
Figure 13: Back Panel View	40
Chapter 7. Starting Dual Antenna System	42
Figure 14: Front Panel LAN Port Connection with CNX	42
Chapter 8. Using Local User Interface (LUI)	52
Figure 15: Front Panel LAN Port Connection with CNX	53

Chapter 1. Precautions

Prior to installation, read this Installation Guide carefully including the safety warnings and information. Failure to do so could result in serious injury or inoperability of the terminal.

Antenna installation must be provided by a suitably trained professional installation technician or by a qualified antenna installation service. Installation is not to be attempted by someone not trained or experienced in this type of work.


1.1 Warnings, Cautions, and Notes

WARNING, CAUTION, and NOTE statements are used throughout this manual to emphasize important and critical information. You must read these statements to help ensure safety and to prevent product damage. The statements are defined below.

	WARNING WARNING indicates a potentially hazardous situation that if not avoided, could result in death or serious injury.
	CAUTION CAUTION indicates a potentially hazardous situation that if not avoided, could result in minor or moderate injury or damage to equipment. It may also be used to alert users about unsafe practices.
	NOTE A NOTE statement is used to notify people of installation, operation, programming, or maintenance information that is important, but not hazard-related.

1.2 General Precautions

Before you use the antenna, make sure that you have read and understood all safety requirements.

	THIS WAY UP Place the boxes/crates on the floor with the arrow pointing up.
	FRAGILE Since the Radome is fragile, handle it with care. Do not apply excessive pressure or shock. These may cause surface cracking or other damage.
	KEEP DRY - Always make sure the antenna is stored on a dry floor. - The antenna can withstand ordinary rain. However, water resistance cannot be guaranteed if submerged. - Keep the antenna in a dry place with sufficient ventilation. Do not store the antenna wrapped in a tarp, tent, vinyl, and others.

* **DO NOT SHIP VIA RAIL:** Ensure not to ship any system via rail.

- Before you begin a site installation, check the appropriate electrical code requirements and with other regulations governing this kind of installation within the country of use.
- When installing, replacing, or disconnecting any cable components, make sure that each exposed metal connector of the antenna is grounded firmly before the work.
- The outdoor antenna and antenna cables are electrical conductors so transients or electrostatic discharges may occur at the antenna during thunderstorms. If the antenna is not installed properly, the electronic equipment may be damaged and/or cause personal injury or death to persons touching the exposed metal connectors of the electronic equipment.
- Avoid installing antenna near high voltage overhead cables or similar.
- Do not climb the pole during a thunderstorm or in windy, wet, icy, or snowy conditions.
- Do not touch antennas, surge arrestors, or antenna cables during a thunderstorm.
- ODU (Outdoor Unit) must be properly mounted and secured to the pole. Failure to do so could result in detachment of the unit, causing disruption in the unit's operation or could result in the unit falling, which could cause serious injury or death.
- When installing the antenna, remember the following;
 - DO NOT use a metal ladder.
 - DO dress properly: wear rubber gloves, shoes with rubber soles and heels, and a long sleeve shirt or jacket.

Chapter 2. Certifications

This device complies with Part 15 of the FCC Rules [and with Industry Canada licence-exempt RSS standard(s)].

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Radiofrequency radiation exposure Information:

This equipment complies with RED and FCC, IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 7.6 m between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This RF hazard is calculated using the following calculation.

$$S_{ff} = \frac{P_t G}{4\pi R^2}$$

- S_{ff} : Power density (on axis) in W/m²
- P_t : Power fed to the antenna feed horn in W
- G : Power gain factor in the direction of interest relative to an isotropic radiator
- R : Distance to the point of interest in m

Chapter 3. Introduction

3.1 Introduction to OW70L (P-P)

The OW70L (P-P) is a dual parabolic terminal with a 73 cm reflector size based on a 12.3 dB/K G/T which can be operated in the OneWeb low earth orbit (LEO) satellite constellation. The OneWeb communications network comprises terrestrial gateways positioned around the globe communicating with OneWeb user terminals. A radio link to the satellites is established using the User Terminal (UT) operating in the Ku-band, with uplink frequencies between 14.0 and 14.5 GHz, and downlink between 10.7 and 12.7 GHz.

The User Terminal provides network and Internet access via the OneWeb satellites and OneWeb gateways.

3.2 OW70L (P-P) Features

- LEO satellite pointing and tracking algorithm.
- 3-axis stabilization platform with motion drift compensation solutions.
- Fully sealed to protect against outdoor environment.
- Dual-dome operation for seamless connectivity.
- Simple and suitable industrial design for professional installation.
- Remote monitoring, diagnostics and troubleshooting to resolve issues on site, which is made to the end user via a local management interface.
- Ability to store multiple software versions to fallback to a known good or factory version in case of errors in the current working version of software.
- Blockage mitigation
- Enhanced Rack mount CNX
- 2 CNX variants powered via AC and DC

Chapter 4. Planning Installation

**CAUTION**

- Be sure to complete the pre-installation checklist before you begin installing the antenna. Refer to “11.1 Pre-Installation Checklist” on page 94
- DO NOT OPERATE THE ANTENNA WITHOUT THE RADOME. THIS WILL RESULT IN DAMAGE TO THE ANTENNA AND ABNORMAL OPERATION.

4.1 Installation Precautions

The User Terminal installation requires extreme precaution and safety measures given the installation environment. Failure to follow the correct installation process may lead to injury of the installer and/or cause damage to the system. To maximize the performance of the system, a thorough review of this installation guide is strongly recommended. In addition, you should execute the installation process as it is noted in this manual.

To ensure your own safety and convenience of installation, note the following precautions.

- Review the general safety precautions in the Safety Precautions chapter.
- Familiarize yourself with the antenna and the mounting instructions prior to climbing any roof or ladder.
- Verify that all safety measures for outdoor or rooftop installation are in place.
- Verify all requirements before beginning the actual installation to determine if the equipment and necessary items are available and functioning properly.
- Install the grounding system for the antenna support structure, radio hardware, and surge arrestor before connecting the cable from the equipment to the surge arrestor. This protects the system against lightning strikes during installation.

4.2 Selecting Installation Site

Before installing the antenna system, consider the best place to position the antenna for both performance and safety.

* Here, there should be references to the “Site pre-requisite survey” document for more details.

4.2.1 Installation Location for Antenna

For optimal performance, it is preferable that the user terminal has an unobstructed view of the horizon or satellite in all directions. Although the user terminal itself can mitigate blockages, it is ideal to have no obstacles within 59 degrees from zenith (or above 31 degrees of elevation from local horizon at all directions).

To utilize the basic antenna system, two antennas must be installed with a minimum distance of 1.6 meters (5.2 feet) between them to facilitate blockage mitigation.

During antenna installation, it is essential to input the values of every blockage zone, including elevation and azimuth angles, in the “configure blockage zones” for seamless blockage mitigation. Intellian recommends following these guidelines for best results.

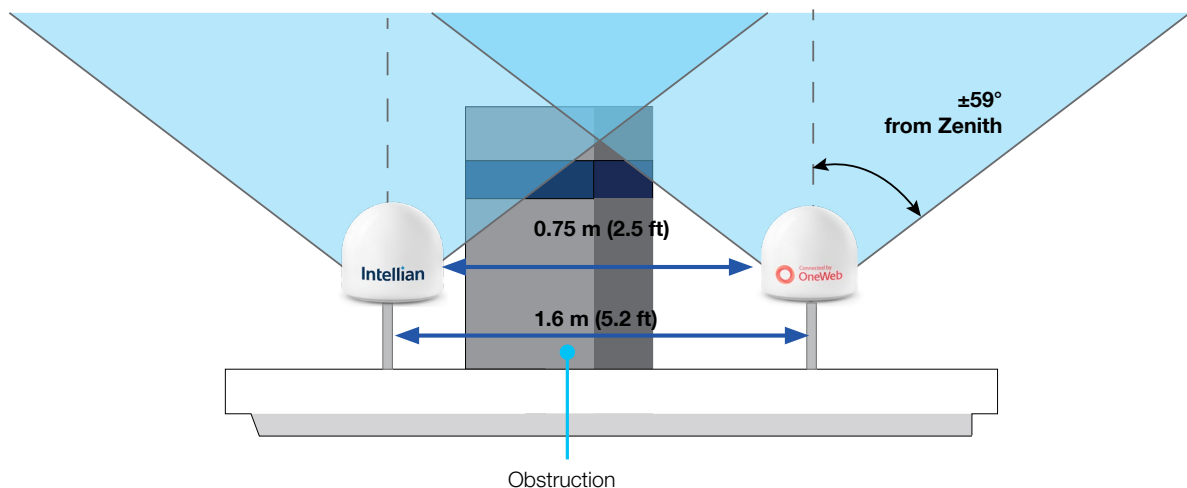


Figure 1: Minimizing Satellite Blockage (example)


4.2.2 Installation Location for CNX

An ideal location for the CNX should be:

- Within 30 m (98.4 ft) of the antennas with supplied RG cable or about 100 m (328.0 ft) under Customer purchased RG11 cable
- In a dry, cool, and ventilated location
- Close to a power source

4.2.3 RF Hazard Precautions

The Federal Communications Commission has adopted a safety standard for human exposure to RF (Radio Frequency) energy, which is below the OSHA (Occupational Safety and Health Act) limits. To comply with current FCC RF Exposure limits, the antenna must be installed at or exceeding the minimum safe distance as guided by the antenna manufacturer or supplier.

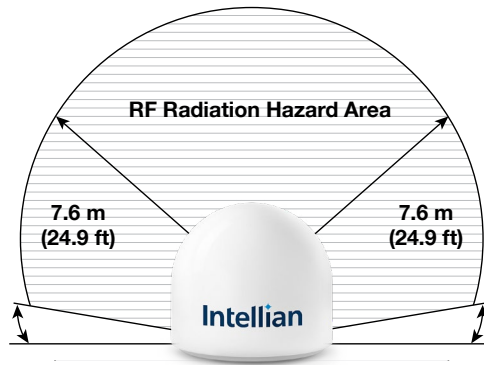**NOTE**

This RF hazard is calculated using the following calculation.

$$S_{nf} = \frac{4\eta P_t}{A}$$

- S_{nf} : Maximum near-field power density in W/m²
- P_t : Power fed to the antenna feed horn in W
- A : Physical (geometrical) area of the aperture antenna in m²
- η : Aperture efficiency (typically 0.5-0.75 for circular apertures)

4.3 System Package

4.3.1 Outdoor Unit (ODU)

The OW70L (P-P) operates in a dual parabolic two antennas configuration. Each terminal consists of a pedestal, a reflector, RF modules and antenna control modules which are enclosed in a radome.

- Pedestal: 3-axial stabilized platform for the position compensation of the antennas
- RF modules: the antenna consists of a reflector, OMT, feeder and RCM which converts the satellite signals into the IF bands and up-converts IF bands to the forward-link satellite signals. Each antenna includes the modem module, called SSM, which implements the necessary functionality to transmit and receive signals as well as communicate and command pointing directions to the antenna.
- Control modules: the antenna interface module, called AIM, controls the antenna motion by interfacing with the modem and RF modules.
- Radome: protects the antenna from outdoor environment.



Figure 2: Radomes and Pedestal

4.3.2 Customer Network Exchange (CNX)

The Customer Network Exchange (CNX) must be installed in a weather-protected area. It interfaces with user equipment and provides power and data interconnection to the above deck unit. The CNX connects to two antennas while providing a secure GigE connection to the Baseband Unit.

Front/Back Panel of CNX-E



Figure 3: Front Panel of CNX-E



Figure 4: Back Panel of CNX-E

4.3.3 Packing List

OW70L (P-P) Packing list

The ADU Packages (2 ea) and CNX Package (1 ea) are provided in each package box.

Before beginning installation, make sure you have all the included components.

The components are packaged in each package box as listed in the tables below.

OW70L (P-P) (without Heating Module) Packing List

Antenna Package (Without Heating Module, 2 ea)			
Item	Q'ty	Size	Description
Antenna Unit	1		User Terminal
Quick Installation Guide (QIG)	1		Installation Manual
RG-6 Coaxial Cable F(M) - F(M)	1	30 m	Coaxial Cable F(M)-F(M) for CNX Power & Data Connection
AC Power Cord (USA)	1	1.8m	CNX Power Cord (110V)
AC Power Cord (CEE7/7)	1	1.5m	CNX Power Cord (220V)
Hex Bolt_STS316L	5	M12x40	Bolt kit for antenna-mast assembly
Spring Washer_STS316L	5	M12	
Flat Washer_STS316L	5	M12	
RF Hazard Sticker	1		Radiation Safety Distance Label

Customer Network Exchange (CNX-E) Packing List

CNX-E or CNX-T Package (1 ea)			
Item	Q'ty	Size	Description
Customer Network Exchange (CNX-E or CNX-T)	1	442 mm x 250 mm x 44.4 mm	To access to OneWeb services
Rack mount Plate	2		19inch Rack Mount Kit
Pan Head Screw (with Spring & Flat Washer)	8	M4 x 16 L	
N-type cap	4		Protective Connector Covers
IDM Secondary MNT Silicone CAP	4		

4.4 System Cables

4.4.1 Antenna Power+Data Cable

Intellian recommends using the RG6 or RG11 cable types to connect the antenna and CNX. The use of different type of cables can cause problems. If you need a cable that runs longer than the maximum cable length recommended, contact Intellian Technical Support for assistance.

Cable Type	Cable Length
RG6 (Supplied)	UP to 30m
RG11 (Customer Supplied)	UP to 100m


NOTE

Optimal tightening torque for F type RF connector: 1.5 N-m

4.4.2 LAN Cable (Customer Supplied)

The recommended specifications and length of the LAN cable are as follows. Refer to the table below. If you need Ethernet cables that run longer than the maximum cable length recommended, contact Intellian Technical Support for assistance.


Cable Type	Cable Length
Ethernet Cat5e STP Cable (Shielded)	100 m

4.5 Installer/Customer Furnished Equipment

- Country specific power cable and socket for Power Adaptors
- Grounding system that meets the local electrical code requirements
- Waterproofing materials all connections
- Tape or wraps to attach the antenna cable to the support structurer
- Fasteners and other installation tools

4.6 Unpacking System Package

Follow the steps for easy and safe unpacking. The each system package consists of two sub-packages that an antenna package and an accessory package.

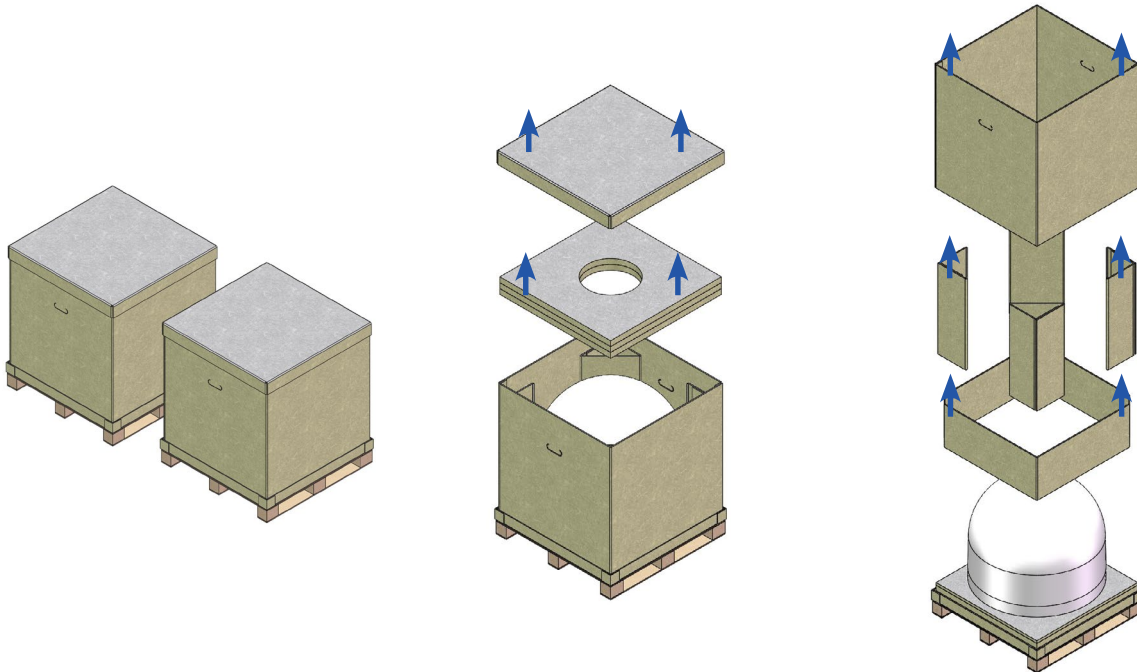

1. Place packages in a safe area large enough.
2. Remove the top cover and protection forms as shown.
3. Remove the inside paper supports and body of the box.



4. Take out the Antenna.
5. Remove the bottom cover and take out the items.
 - Refer to the Included items “4.3.3 Packing List” on page 16



NOTE

- Make sure all the parts under the bottom cover (Step 5) are removed before the packaging is discarded.
- Consider keeping the packaging material in case the terminal may need to be relocated in the future.

Chapter 5. Installing Outdoor Unit (ODU)

5.1 General Requirements

5.1.1 Antenna Mounting Requirements

You need to procure or fabricate a suitable mounting plate and pole to support the ODU (Outdoor Unit).


Consider the following factors to select the mounting method:

- The physical size of the unit (770 mm (30.3 inches) high by 845 mm (33.3 inches) diameter).
- The weight of each antenna is about 33.6 kg (74.1 lbs).
- The mechanical resonance of the system is excited by wind : 5 Hz
- Ensure there is Max ~ 100 m (depends on its RG cable applied, ~ 30m for RG6, ~ 100m for RG11) separation between two antennas.
- Ensure the antenna is levelled $\pm 2^\circ$ in elevation and $\pm 10^\circ$ from the True North axis.
- The mounting method should be able to preserve antenna pointing calibration under wind load and protect safety of life and safety of property.

5.2 Antenna Dimensions

Before installing the antenna unit, confirm its height and diameter (see figure below). The mounting surface and overall space occupied by the radome must be sufficient for the height and diameter of the fully constructed radome on top of its mounting base.

Unit: mm (inches)

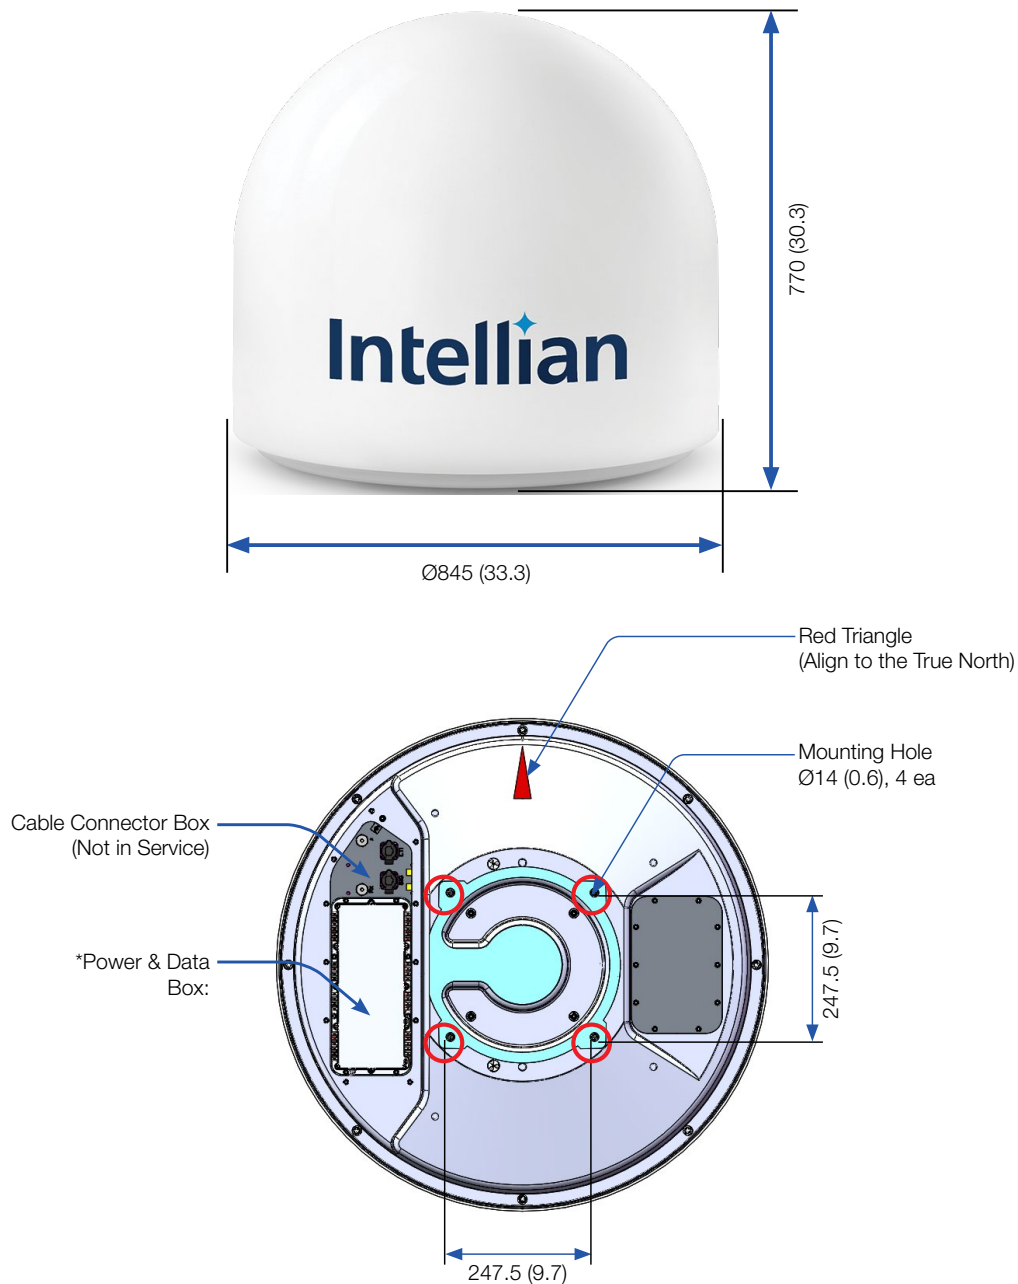

5.3 Measuring the North point

It needs to calibrate declination angle due to the difference between Magnetic North and True North.

It is recommended to perform with antenna mounting at the same time.


A. When using a magnetic compass

1. Measure the orientation of the magnetic north by using a compass.
2. Mark the magnetic north point.
3. Get the magnetic declination angle at the installation area by the calculator (Refer to the Magnetic Field Calculators on the National Oceanic and Atmospheric Administration (NOAA) website www.ngdc.noaa.gov).
4. Mark the True North point on the mounting plate by including the declination angle.

B. When using a GPS compass (To assist in better alignment of the User Terminal)

1. Check the orientation of the True North indicator.
2. Extending its virtual line from the centre of the User Terminal to the Tip of the True North indicator (Line) by using your own GPS compass (Smartphone applications or devices).
3. Compare the virtual line and "Red triangle" on the bottom of the radome to check any misalignment.

Refer to the below App screen as a reference.

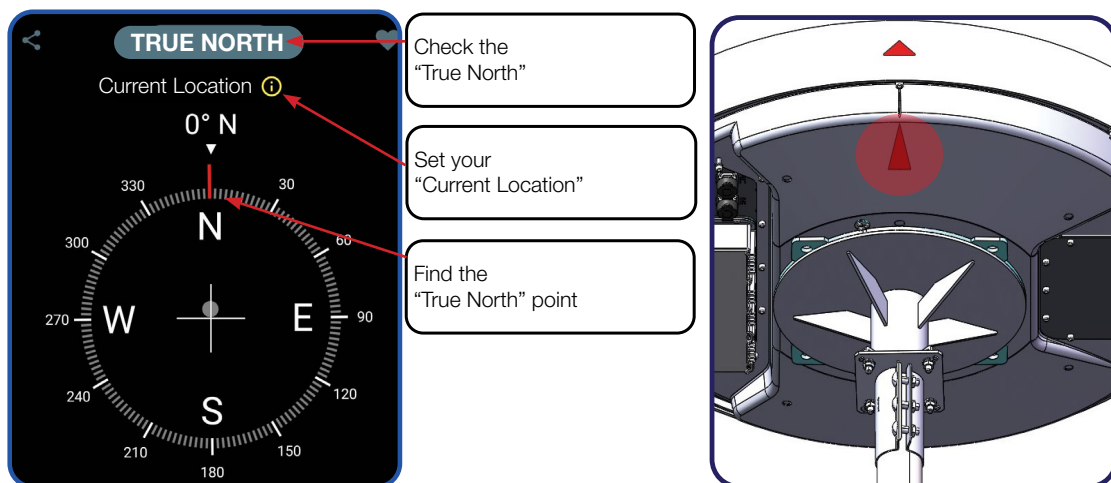

C. When using a LUI


1. Connect an Ethernet cable from the LAN Port on the front panel of CNX to a LAN Port of a PC. The Data LED indicator will turn Green if CNX is connected.
2. Enter the IP address into your web browser's address bar to log in to the Local User Interface (LUI).
 - **IP Address: 192.168.100.1 (Default)**
3. Select the **Antenna** on the main menu then go to the **Antenna Setup → Heading** menu.
4. For setting the true north offset, you need to select a satellite which is trackable in satellite information. When the antenna tracks the selected satellite, true north offset can be calculated.
 - **Heading(°):** Enter the True north Offset Range (-180° ~ +180°).
5. Click the **Submit** button to apply the settings to the system.


The screenshot shows the OneWeb LUI interface. At the top, there is a navigation bar with the OneWeb logo, a language dropdown set to 'en-US', and a menu with 'Home', 'Install', 'Antenna' (highlighted with a red box and callout 1), 'Modem', 'Network', 'Diagnostics', and 'Management'. On the right of the navigation bar is an 'Auto-Refresh' section with a dropdown set to '0' and a green refresh button. On the left is a sidebar menu with items: 'Antenna Status', 'Antenna Setup' (highlighted with a blue box and callout 2), 'Installation', 'RF Cable Setup', 'Blockage Zone', 'RCM', 'Product Information', 'Software Version', 'RF Gain Offset', 'Manufacturing', 'TILT Calibration', 'True North Calibration', 'Download Installation Guide', 'Download Operations Guide', and 'Download AIM Logs'. The main content area is titled 'Antenna Setup' and contains several sections: 'Primary True North Offset' with an 'Azimuth' input field set to '1.00'; 'Secondary True North Offset' with an 'Azimuth' input field set to '1.00'; 'Heading' with a red box and callout 3; 'Heading (°)' with an input field set to '0.00' and a red box and callout 4; and 'Debug Log Level' with a 'Log Flags' input field set to '0x7077'. At the bottom of the main content area is a blue 'Submit' button with a red box and callout 5.

5.4 Designing Pole Mount


5.4.1 Assembling Base Panel of NPM (Non-Penetrating Mount)

This is generally recommended. Check the requirement tools before assembling the NPM


FASTENERS				TOOLS	
No	ITEM	DESCRIPTION	Q'ty		
1		5/16"-18*3-1/8" hex-head cap screw	4		
2		5/16"-18*5/8" Round flat head Square screw	2	13 mm wrench	
3		5/16"-18 washer	10		
4		5/16"-18 nylon nut	6		
5		Ø8.5/Ø12.5*L60 Bush	1		
6		5/16"-18x1-1/4" hex flange screw	1		
7		5/16"-18 keeps k-lock nut	2		

DESCRIPTION	Q'ty	DESCRIPTION	Q'ty	DESCRIPTION	Q'ty
Ground Mounting Base(#A)	1	Mast Pole(#B)	1	Side Supporting Rods(#C)	4
					


1. Loosen the ground base 8 bolts.

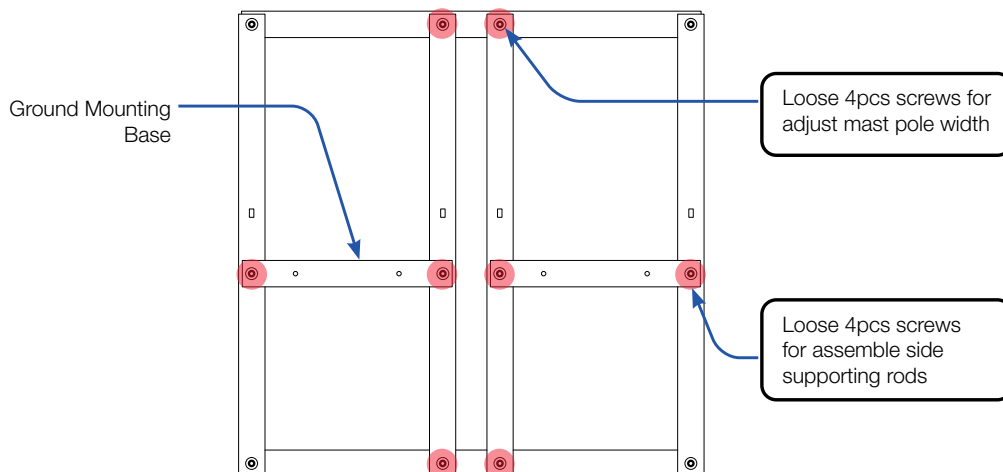


2. Assemble the mast pole with bolt kits.

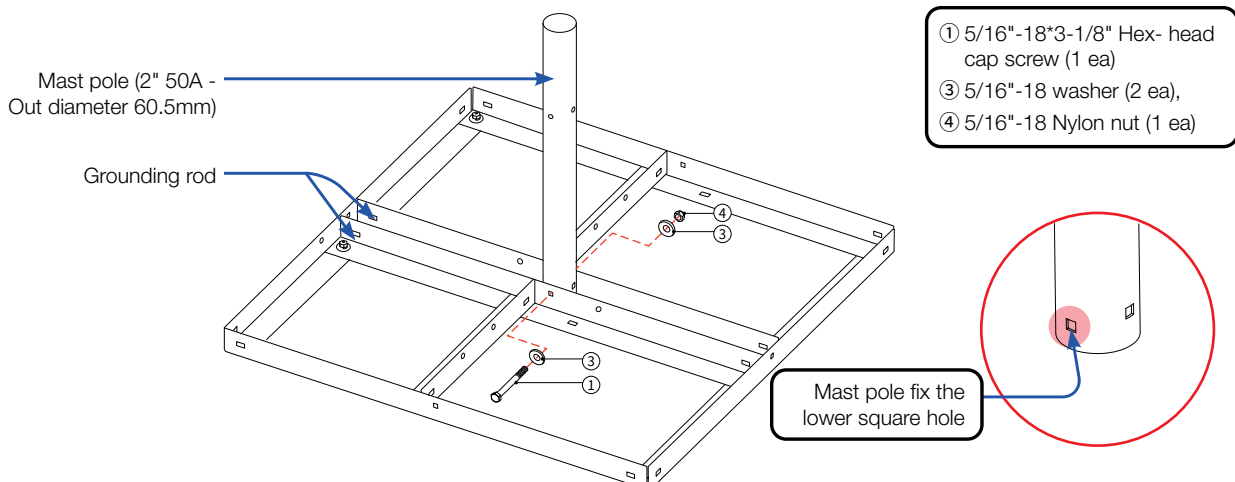


3. Assemble 2 side supporting rods with bolt kits

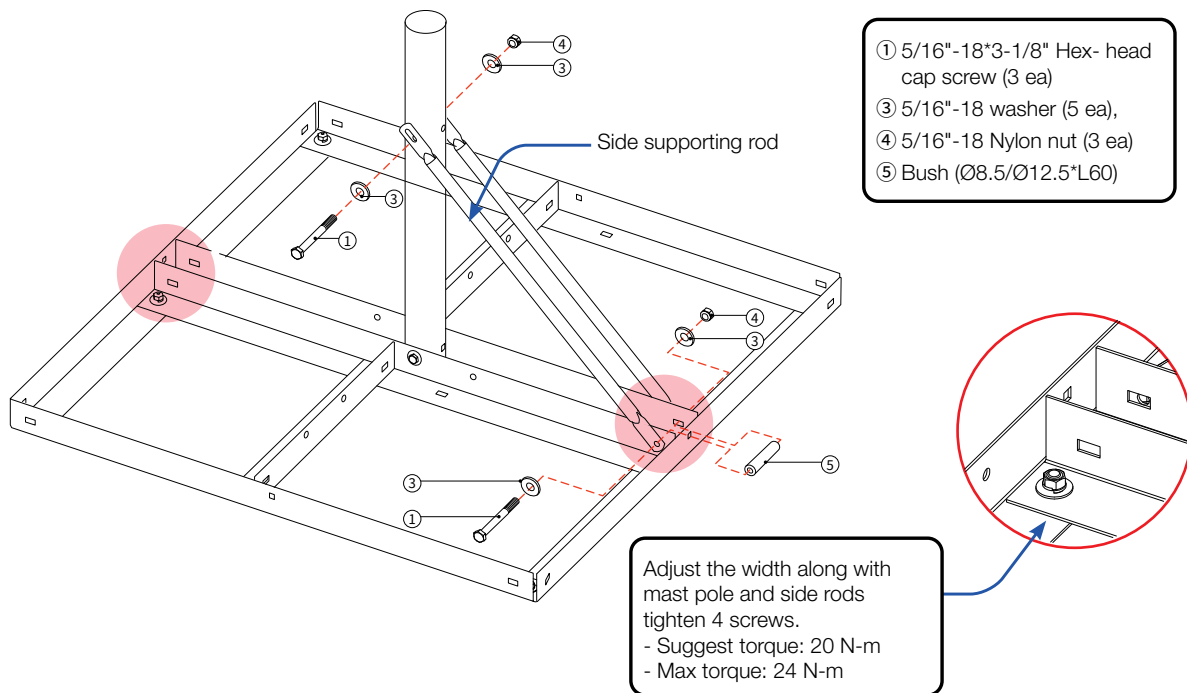



4. Assemble 2 side supporting rods with bolt kits

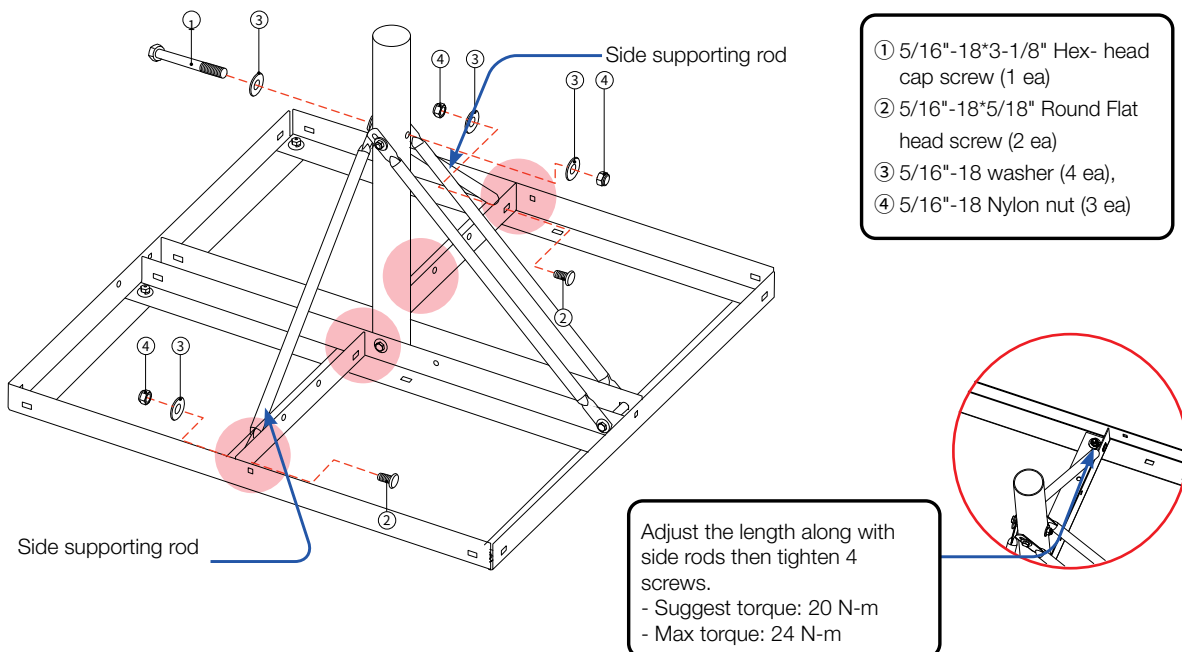

5. Assemble ground cable with bolt kits.

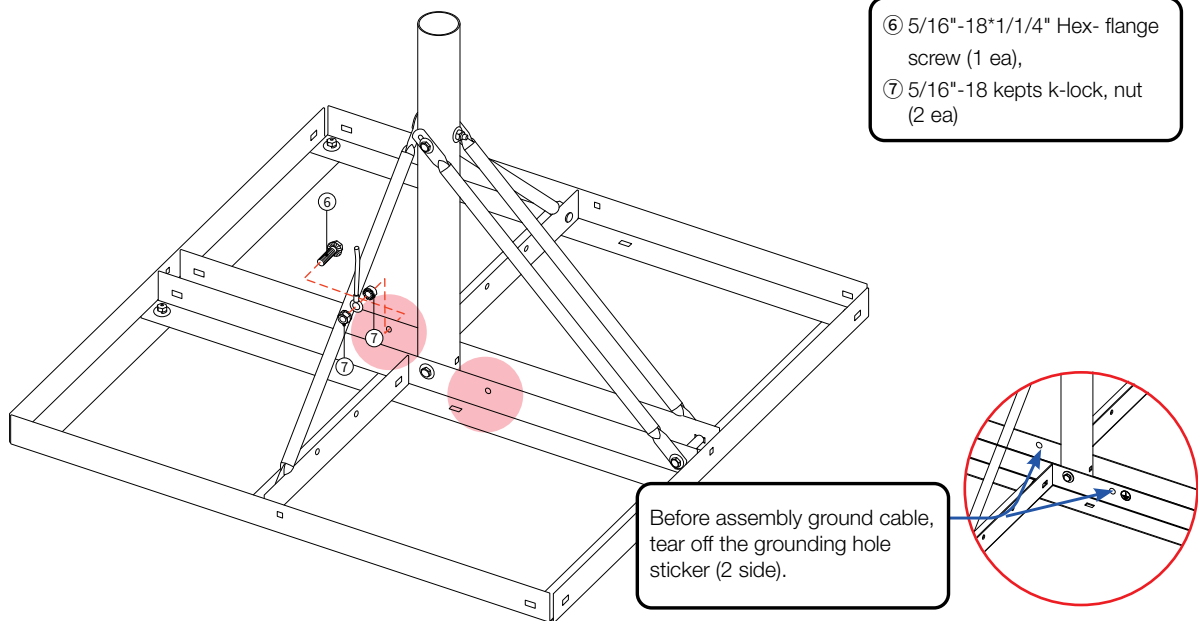


Penetrating fastener option:
For directly mounting using fasteners, place appropriately fasteners, at the locations circled in the below diagram

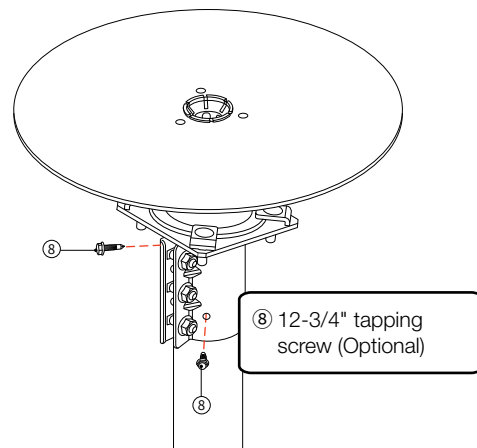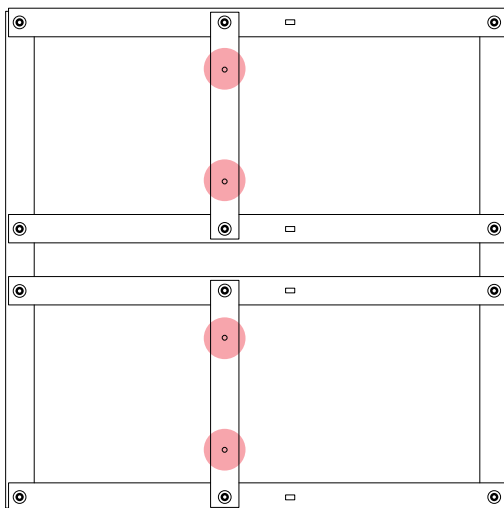

5.4.2 Installing Customized Pole Mount

Customized pole mounts must be correctly installed to ensure a robust enough mount to prevent any flex, vibration, and sway when an external force is exerted on the installed antenna. A minimum of 3 fixtures must be used to assure mount strength.


The figure to the right is an example of a proper customized pole mount installation.

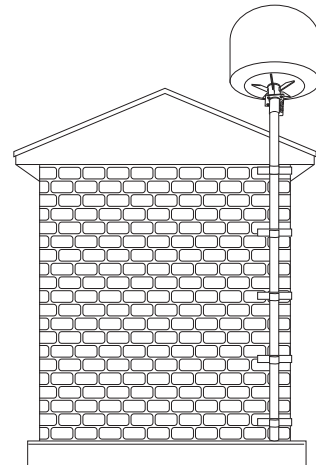

Designing the Customized Pole Mount

When designing the pole mount, various pole types and their maximum length must be considered. The Fixture Distance describes the fixture attach points and the maximum distance between them. Refer to the following table for recommended specifications.

Pole Type	Pole Diameter	Pole Thickness	Max Length (A)	Fixture Distance
50A (Recommended)	60.5 mm (2.4")	2 mm(0.1")	500 mm(19.7")	400 mm(15.8")
65A	76.3 mm(3.0")	2 mm(0.1")	650 mm(25.6")	500 mm(19.7")
80A	89.1 mm(3.5")	4 mm(0.2")	900 mm(35.4")	700 mm(27.5")
90A	101.6 mm(4.0")	4 mm(0.2")	1000 mm(39.4")	800 mm(31.5")

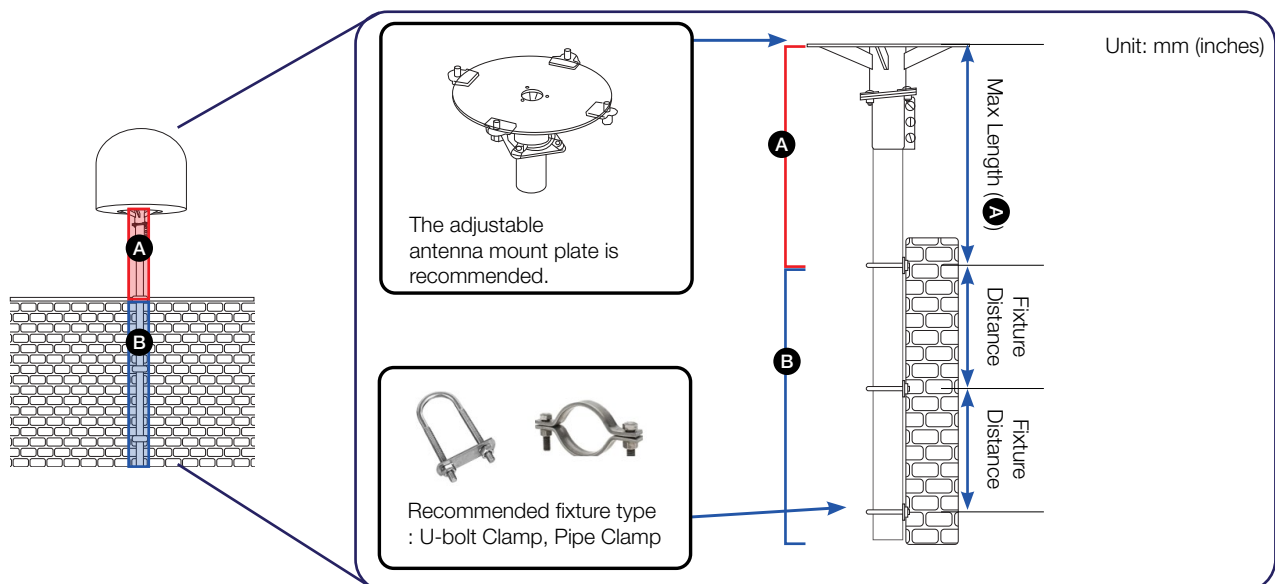

- As an example, if a 50A pole type is used for the antenna installation, the maximum length of **A** cannot exceed 500mm. The remaining pole **B** should be fixed with a minimum of 3 fixtures and the distance between them should be 400mm.

- The Max Length of **A** is the length between the top of the last fixture and the top of the mounting plate. To use the tilt adjustable mount plate, it is recommended pole type 50A be used. The recommended **A** length for a 50A pole is 500 mm. If the pole type is different from the recommended types used refer to Table 1 above for recommended lengths.
- The sections of the **B** pole have no length limits but must be installed with sufficient structural integrity to prevent any flex, vibration, and sway from wind or any other external forces. The **B** pole sections can be used as a thicker pole type than the **A** pole type, if needed. The attachment fixtures should be installed at the recommended intervals (see the Fixture Distance in Table 1). The recommended fixture types are U-bolt clamps and pipe clamps.

Mount Leveling


The antenna should be mounted within $\pm 2^\circ$ elevation angle



Mount Plate

To more readily adjust the tilt level, it is recommended that the following Intellian adjustable mount plate is used (Refer to “5.5 Placing Antenna on Fine Tune assembly” on page 28.):



Intellian Part Number	Description
OW-NPM5-1075-ATP	NP Adjustable top plate (1EA)





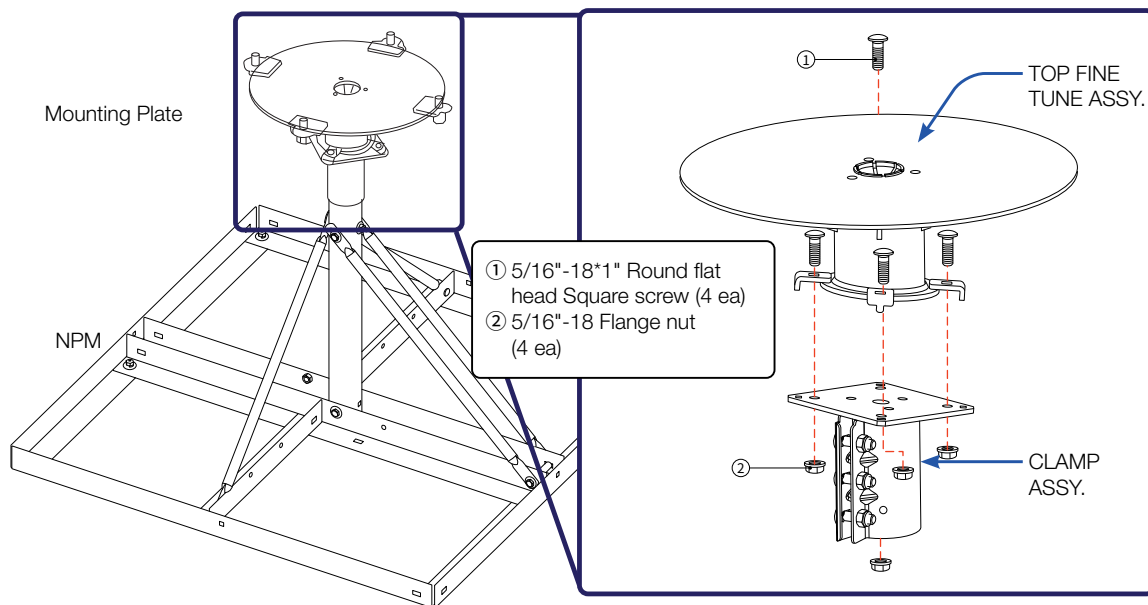


5.5 Placing Antenna on Fine Tune assembly


5.5.1 Assembling the Fine Tune assembly

Check the requirement tools before assembling the Fine Tune assembly

FASTENERS				TOOLS	
No	ITEM	DESCRIPTION	Q'ty		
1		5/16"-18*1" Round flat head Square screw	4		
2		5/16"-18 Flange nut	4		
3		M12*40 hex-head cap screw	4		
4		M12 Spring Washer	4		
5		M12 Washer	4		
6		#12-3/4" tapping screw	2		
				19 mm wrench	


DESCRIPTION	Q'ty	DESCRIPTION	Q'ty	DESCRIPTION	Q'ty
TOP FINE TUNE ASSY. (#A)	1	CLAMP ASSY.(#B)	1	BOTTOM PLATE CLAMP (#C)	4
					
DESCRIPTION	Q'ty	DESCRIPTION	Q'ty		
TOP PLATE CLAMP (#D)	4	FIX CLAMP (#E)	4		
					

Assemble top fine tune assembly and clamp assembly with bottom plate clamp using an adjustable Hex wrench.

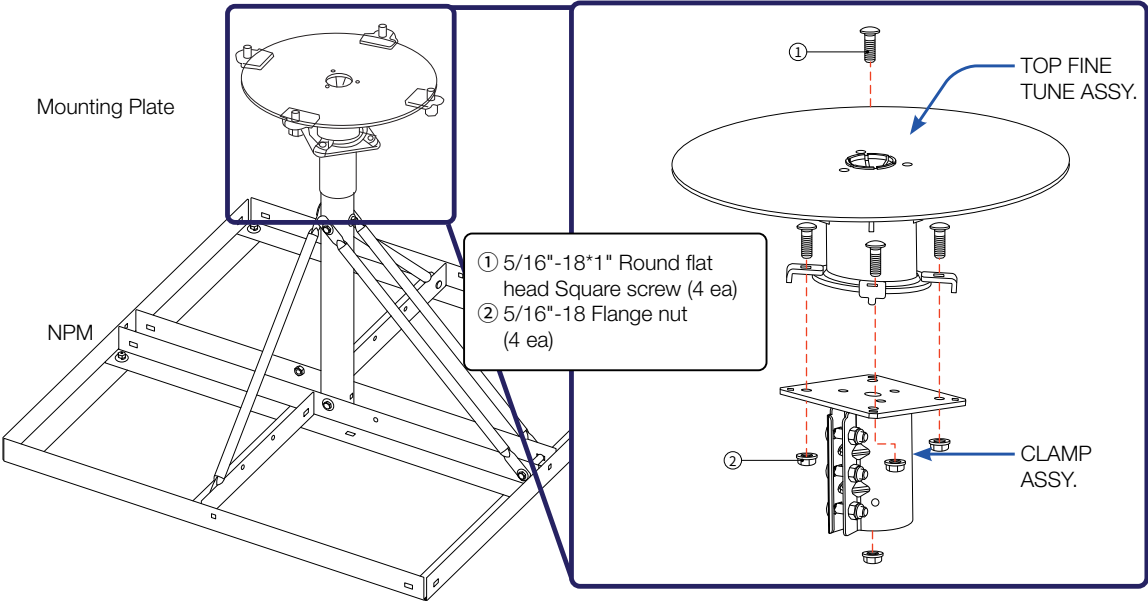


5.5.2 Levelling the Mounting Plate

1. Put a Levelling tool on the centre of the mounting plate.

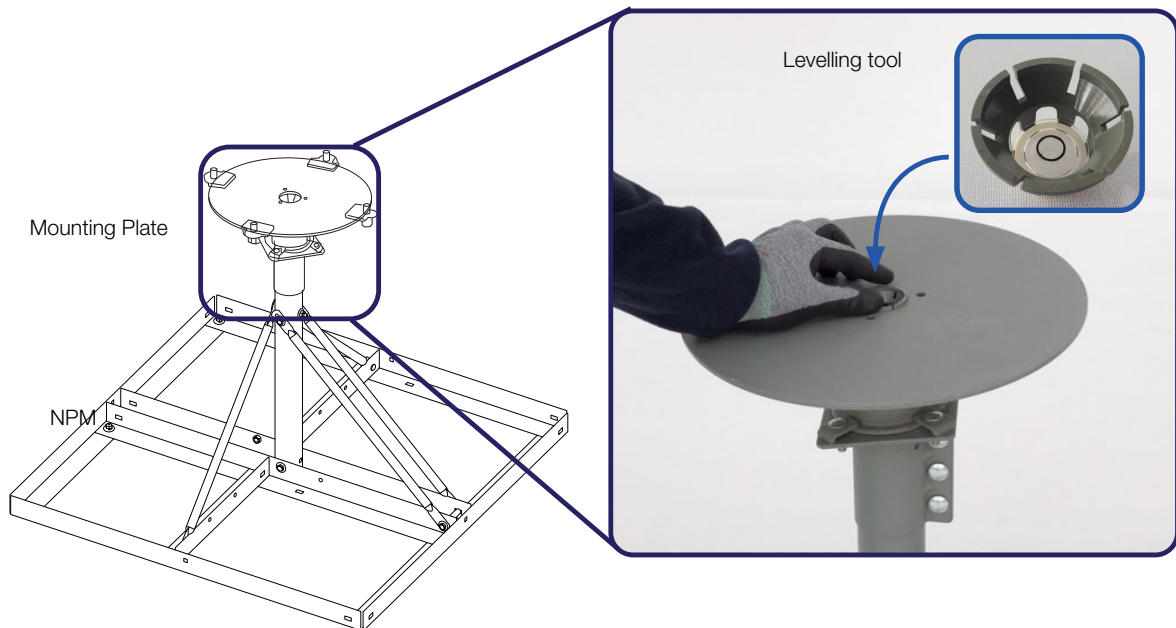

2. Rotate and adjust up & down the plates until they are perfectly parallel to the ground using the Levelling tool. Check to see whether the bubble is aligned with the guide circle.

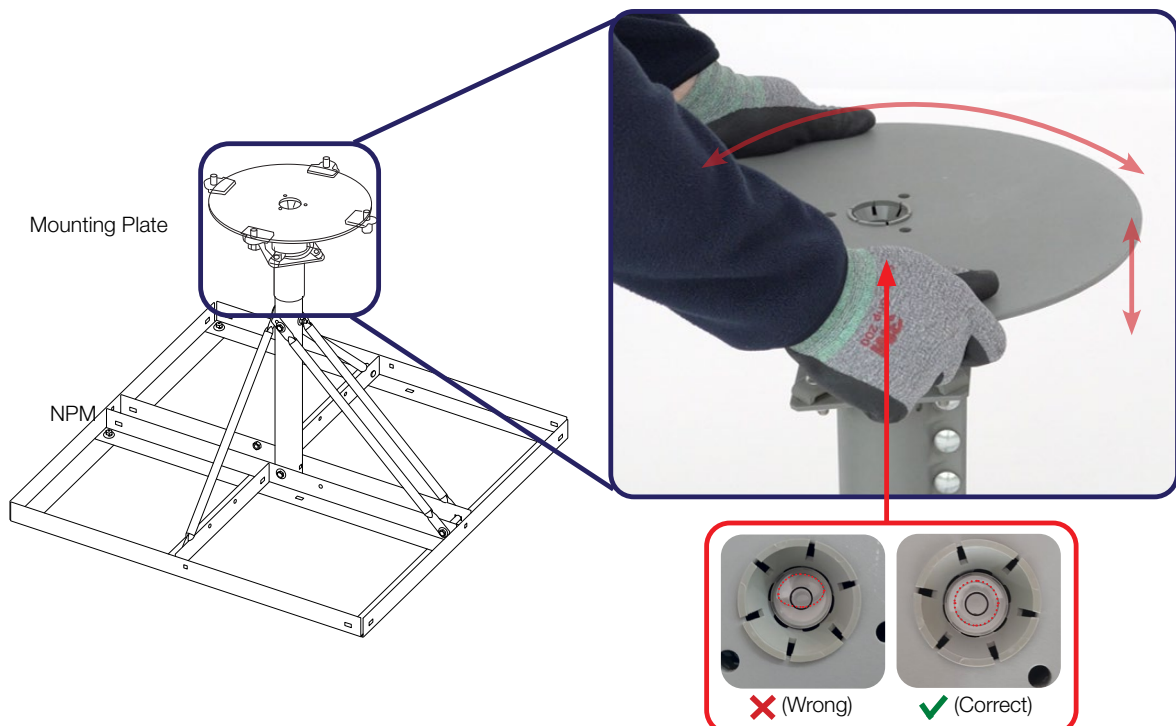


5.6 Mounting Antenna on Mounting Plate

5.6.1 Moving Antenna Above the Mounting Plate

1. Lift the antenna above the plate and carefully lower down the antenna toward the NPM.




2. Align the end edge of the antenna foam with the end edge of the NPM plate. Make sure the antenna is centered with the NPM plate when mounting the antenna on the NPM.

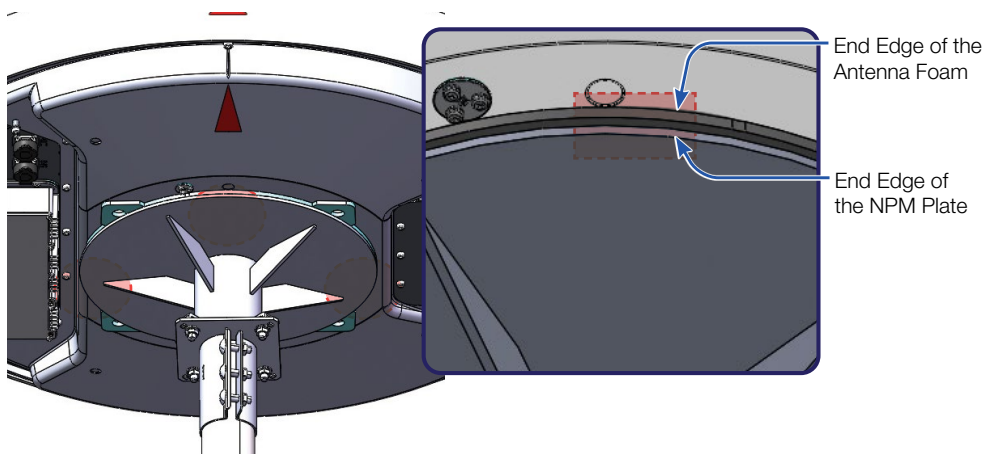


5.6.2 Installing Bolts for Antenna-Mounting Plate Assembly


1. Locate the antenna mounting holes and roughly position the “Red triangle” on the radome towards
*Magnetic North.

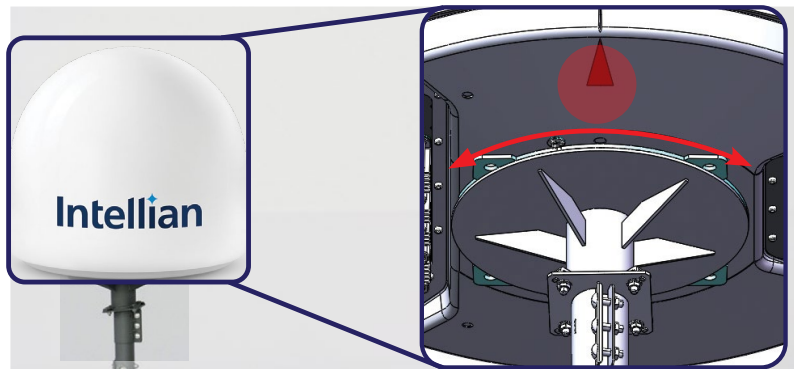

2. The circle markings in the figure indicate where the clamp positions would be installed. Insert the fix clamps between the antenna and NPM. Align the form corners on the antenna bottom with the fix clamps (4 ea). When these are aligned, the holes on the antenna foam and the holes on the clamp line up as well.

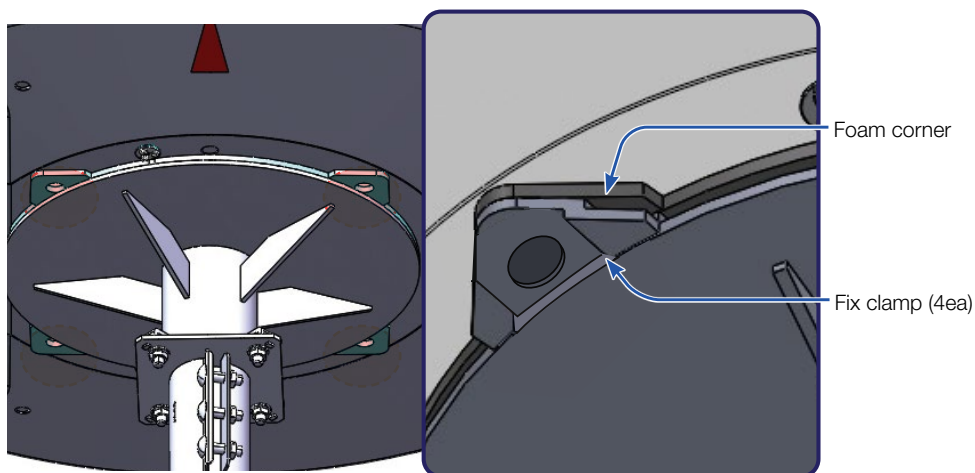

3. Find the M12x35L Hex. Bolt M12 Spring and Flat washer (4 ea) from the NPM Install Kit. Position the fixings & bolts into the antenna holes and do not fully tighten at this stage.

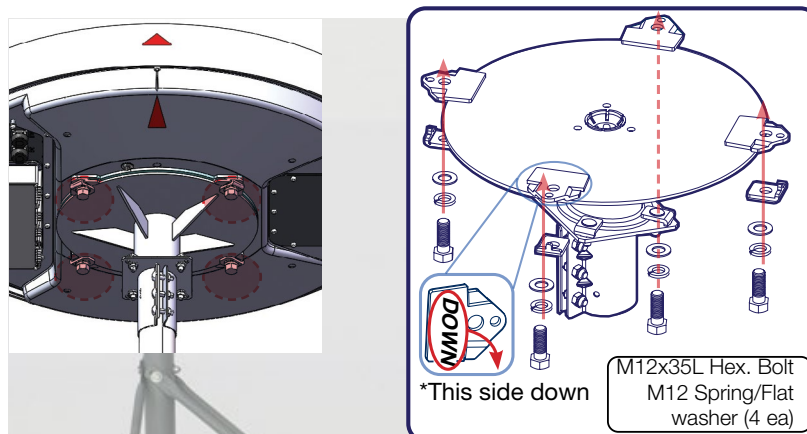


NOTE


This must be done for both the two antennas.

5.6.3 Aligning the Antenna to the True North

1. Confirm the red triangle on the bottom of the radome and rotate the antenna to align the middle strut of base.

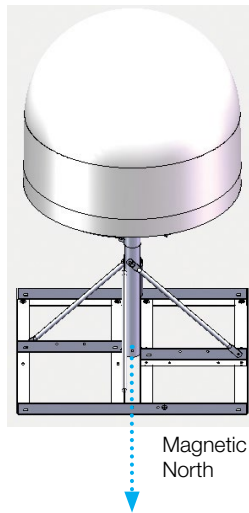

2. Mark the true north point on the mounting plate by including the declination angle using a True North indicator. (Refer to “5.3 Measuring the North point” on page 21)

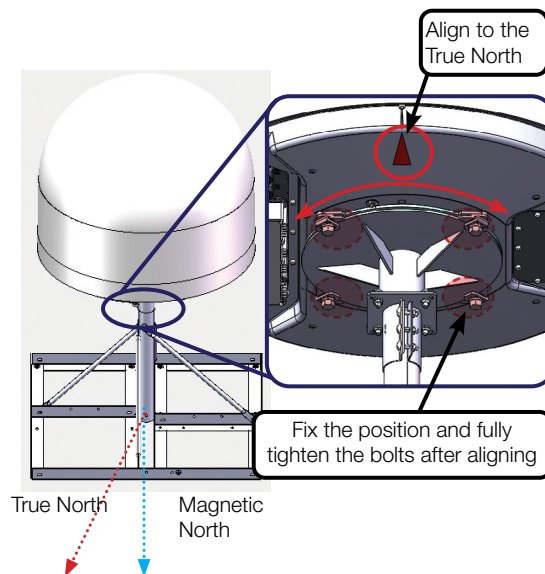


3. Fix the position and fully tighten bolts after aligning the antenna.




WARNING

- Ensure the antenna is mounted within $\pm 2^\circ$ elevation angle.
- Ensure the antenna is aligned within $\pm 10^\circ$ degrees of True North.

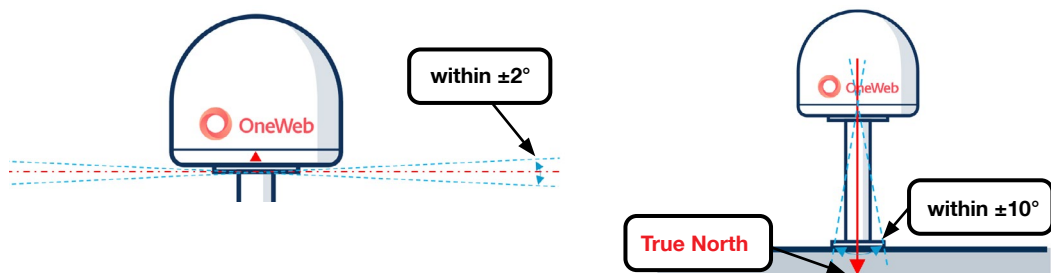

5.6.4 Placing Concrete Blocks on Base Panels

1. Place the concrete blocks on the base panel to hold the weight of the antenna.
One concrete block is 39 x 19 x 19 cm (15.3 x 7.5 x 7.5 inches) /17.56 kg (38.7 lbs).
The area of the assembled base panel is 200 x 90 cm (78.7 x 35.4 inches).

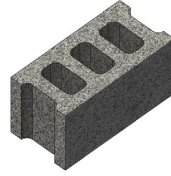

2. Arrange 8 concrete blocks on the base panel in a single layer.
The total weight per antenna of 9 concrete blocks is 158.0 kg (~ 348.3 lbs).

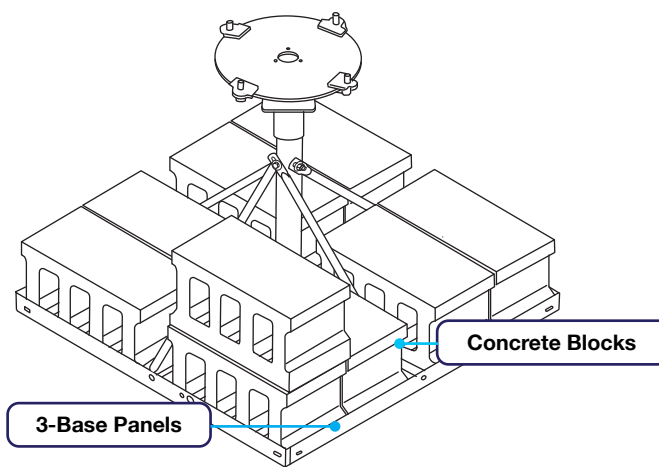


Figure 6: Placing Concrete Blocks on Base Panel of NPM



NOTE

If you want to use alternative weight instead of concrete blocks as shown above, please make sure that the total weight per antenna of alternative weight should meet the suggested weight, 158.0 kg (348.3 lbs).

5.7 Connecting Cable to Antenna



NOTE

Make sure of the following before installing system cables.

1. All cables with connectors need to be fully secured and protected from physical damage.
2. Don't acutely bend any cables during installation.
3. To reduce any damage from water (mist) or Ultraviolet Rays (UV), tape over using waterproof and UV protective tape all the connectors located outside.

Terminate F(M) Connector on each end of RG6 (or RG11) Cable and Connect the F-Connector to the Power & Data connector on each antenna and the CNX Unit. And then secure the cable on the cable bracket on the side of the power & data connector using a cable tie.



NOTE

- Choose RG6 or RG11 Coaxial Cable for or connecting the CNX depending on the cable length. The RG6 cable (30 m) is supplied to use to connect the CNX. If you use the RG11, separate purchase of RG11 cable should be needed.
 - RG6 (Supplied) : up to 30m (98.5 ft)
 - RG11 (Customer supplied): up to 100m (328 ft)
- The RG6 cable for connecting the CNX are supplied in the accessory box.
- To prevent cable damage, wrap the cable and connector by using a waterproof tape. (Refer to “11.4 Important Notice of Waterproofing Connector” on page 97.)
- DO NOT REMOVE THE PORT CAPS FOR UNUSED CONNECTORS TO AVOID FAILURE.

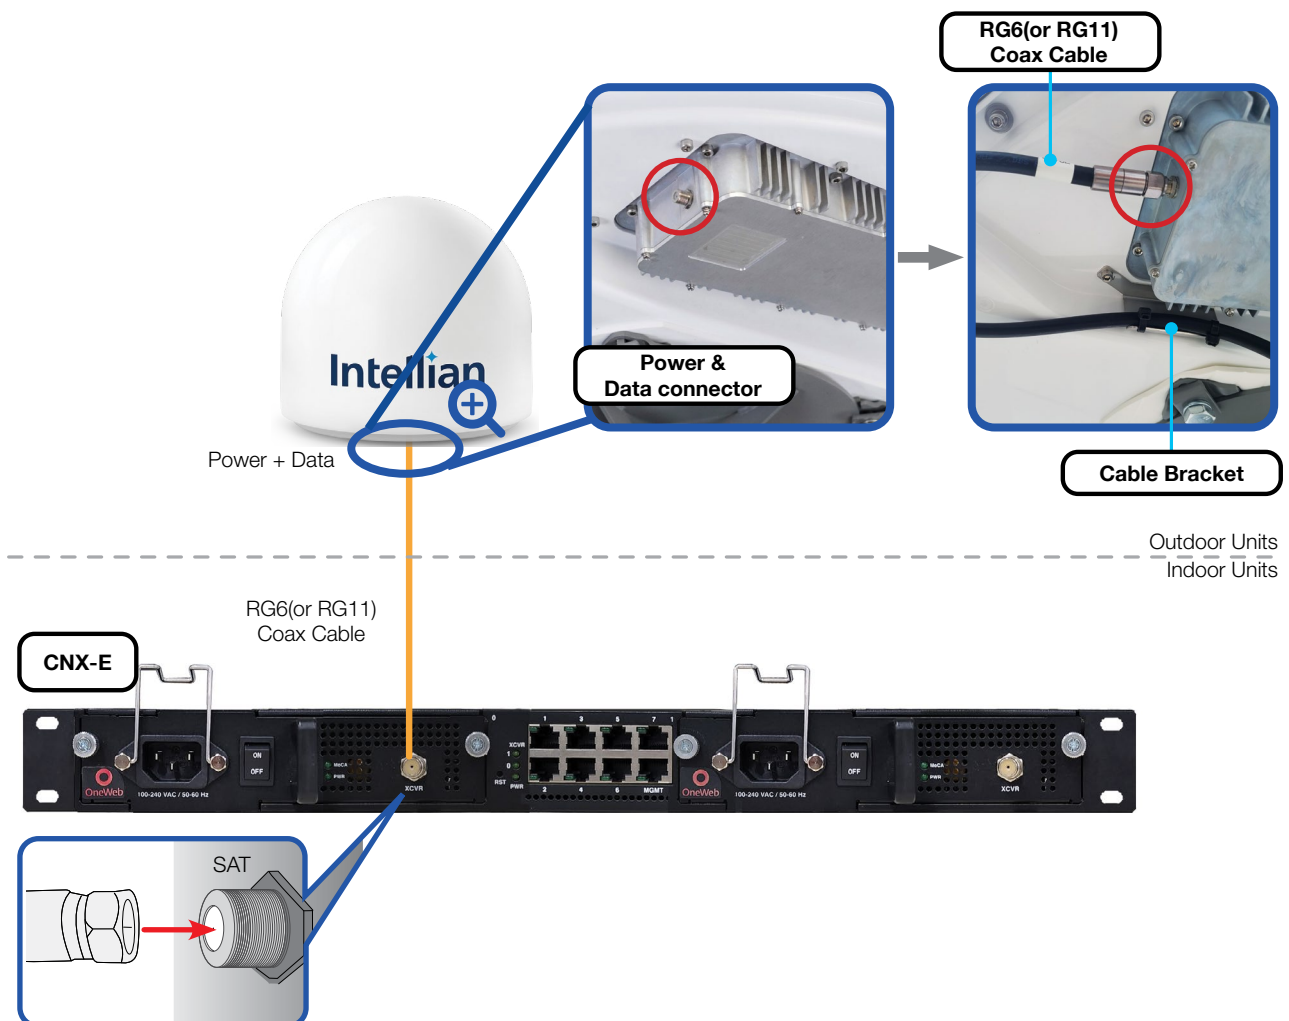


Figure 7: Cable Connection of CNX-E to Antenna

5.8 Grounding Antenna

Direct grounding for the antenna is very important for safety. Your radio hardware must be protected from lightning strikes or static electricity by grounding. When establishing your grounding system, it must comply with the safety standards in your country.

Ground all the antennas in use separately.


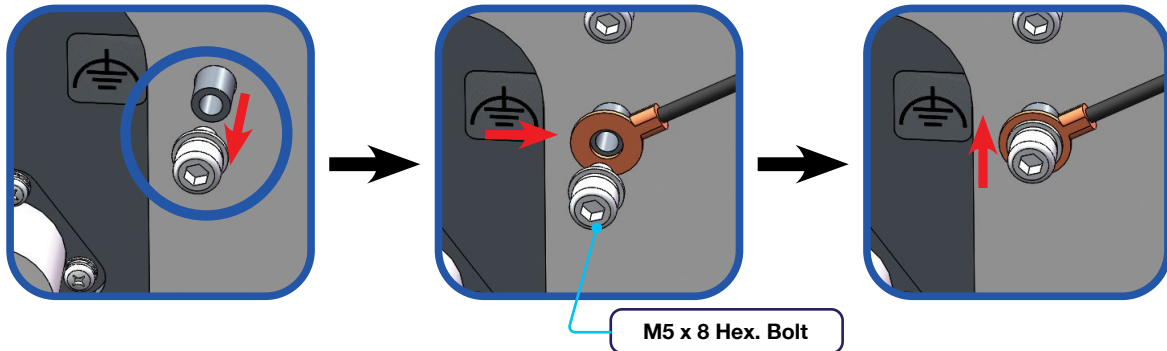


Figure 8: Grounding Antenna

5.9 Installing Protective Connector Covers

1. Bring the supplied protective connector covers from the CNX box.

- N-type cap : 4ea (2ea per an antenna)
- IDM Secondary MNT Silicone CAP:
4ea (2ea per an antenna)

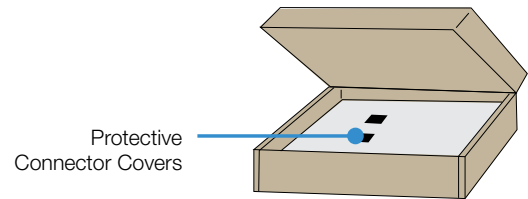

2. Assemble the N-type cap to the RX and TX connectors on the radome bottom by turning the covers clockwise using a hand.



NOTE

Intellian recommends applying Loctite #243 to N-type cap threads before installing.

3. Push the silicone cap over SIG and ETH connectors on the radome bottom.

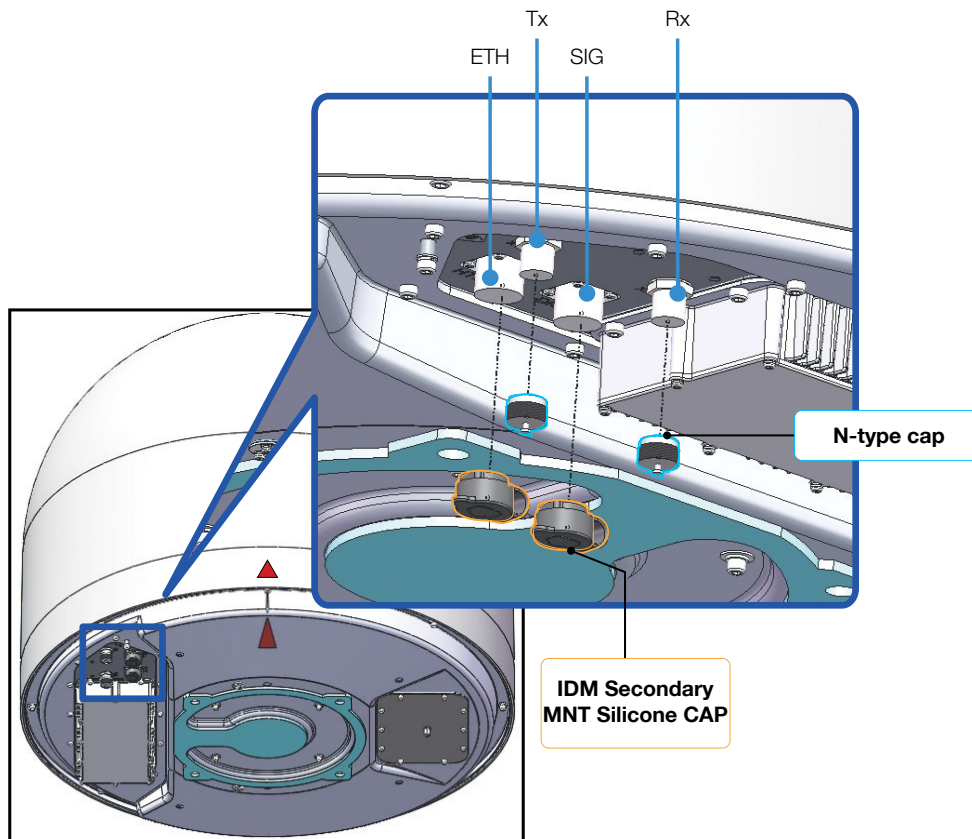


Figure 9: Installing Protective Connector Covers

Chapter 6. Installing Indoor Unit (IDU)

6.1 CNX Dimensions

Confirm the dimensions of the CNX before installing it.

6.1.1 CNX Dimensions



CAUTION

- This equipment design typically applies to commercial or industrial equipment expected to be installed in locations where only adults are normally present.
- This product is intended to be supplied from Intellian by a rated 56V DC, 4.48 A maximum, if need further assistance, please contact OneWeb for further information.
- Never open the equipment. For safety reasons, the equipment should be opened only to qualified service personnel. This appliance classification of use by a Skilled person.

CNX-E Dimensions

Unit: mm (inches)

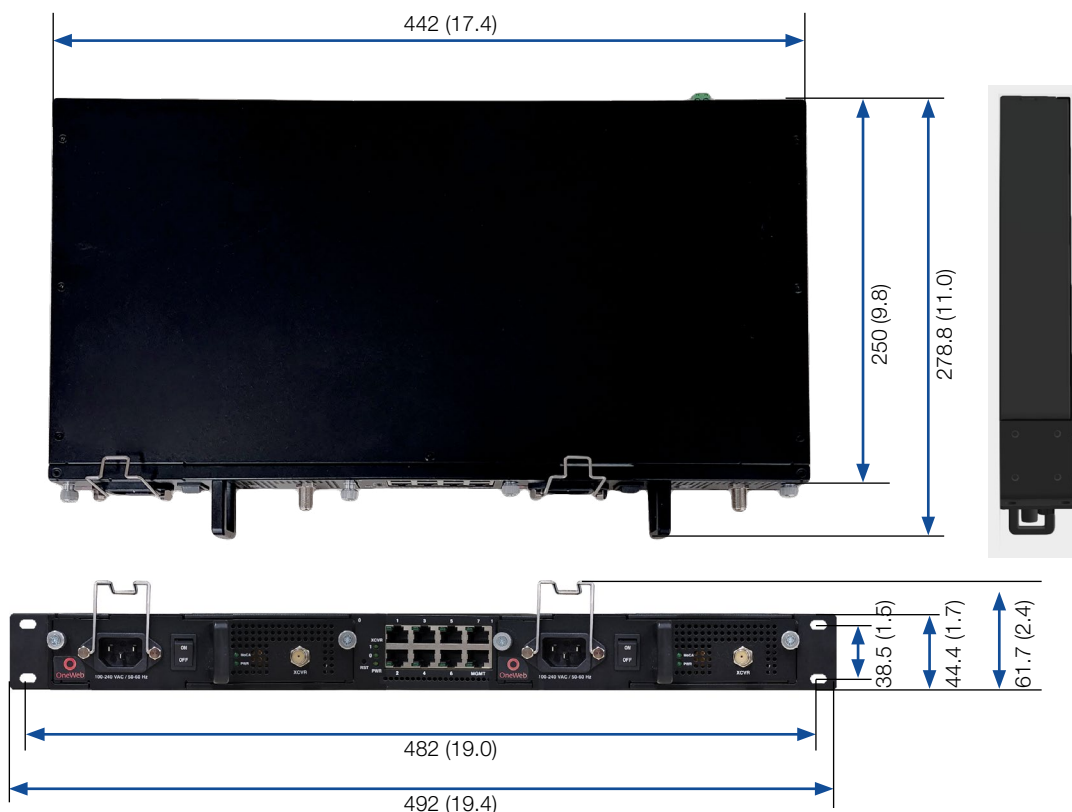


Figure 10: CNX-E Dimensions

6.2 Antenna System Configuration

For the proper operation of your satellite communication system, it must be connected with all the provided components as shown in the figures below.

The User Terminal consists of two antennas and a CNX.

The antenna includes the SSM module, which is capable of controlling and managing two antenna systems simultaneously.

6.2.1 Antenna System Configuration with CNX



NOTE

- Choose RG6 or RG11 Coaxial Cable for or connecting the CNX depending on the cable length. The RG6 cable (30 m) is supplied to use to connect the CNX. If you use the RG11, separate purchase of RG11 cable should be needed.
 - RG6 (Supplied) : up to 30m (98.5 ft)
 - RG11 (Customer supplied): up to 100m (328 ft)
- The RG6 cable for connecting the CNX are supplied in the accessory box.

Antenna System Configuration with CNX-E

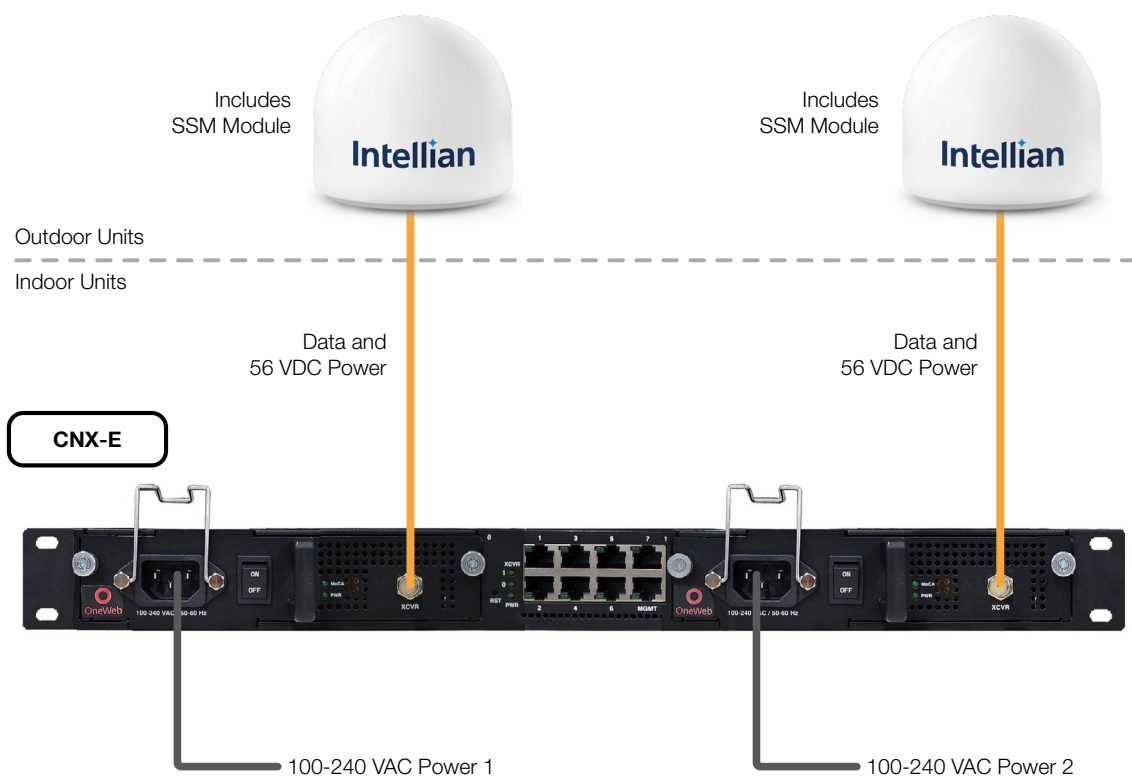


Figure 11: Dual Antenna System Configuration with CNX-E

6.3 CNX Cable Connection

6.3.1 CNX Front Panel View

The following figure shows the CNX Front panel connectors.

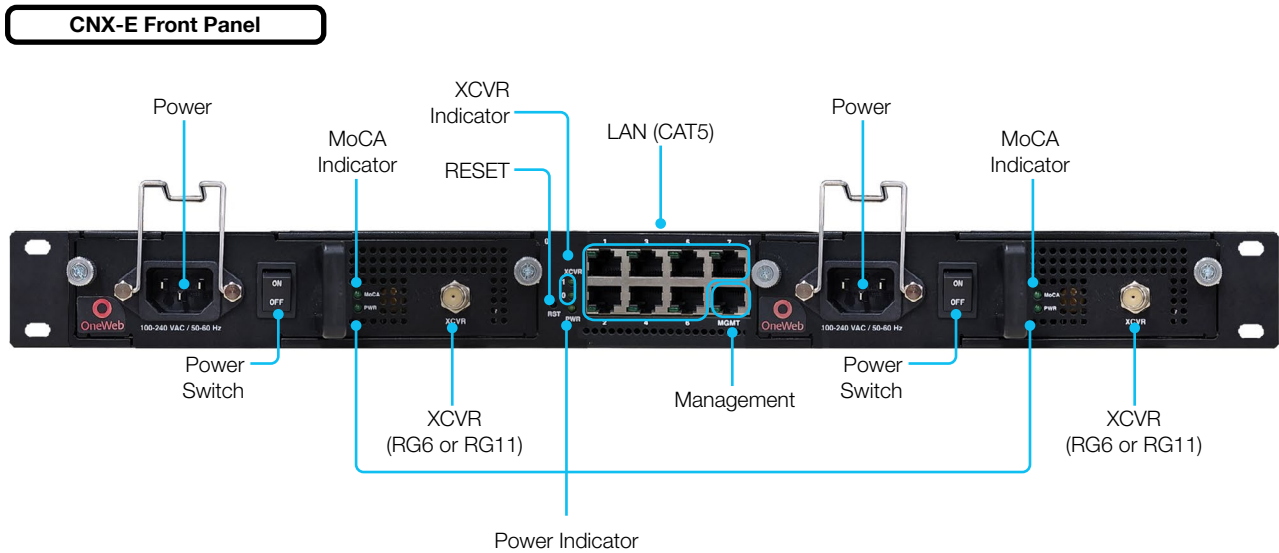


Figure 12: Front Panel View

The following table shows status indicators on the CNX.

LED Display	Color	Description
POWER	■ Steady Green	The CNX is powered on.
	■ Off	The CNX is powered off.
MoCA	■ Steady Green	The user network is ready.
	■ Blinking Green	The user network is connected.
	■ Off	The user network is not connected.
XCVR	TBD	TBD

6.3.2 CNX Back Panel View

The following figure shows the CNX back panel.

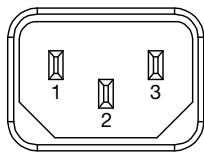


Figure 13: Back Panel View

6.3.3 CNX Connector Pinout Guide

Reference the following connector pinout information for the connection Ports of the CNX.


Power Connector for CNX



IEC 320 C14 Plug Male


Pin	Signal
1	NEUTRAL
2	FG
3	LIVE

Coax Connectors



RF F Type Female

Conductor	Function
Inner	Power + Data
Outer	GND

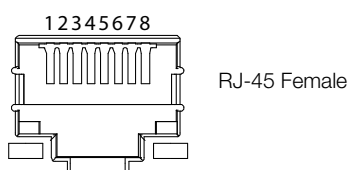LAN Connector

RJ-45 Female

Pin	Signal
1	BI_DA+
2	BI_DA-
3	BI_DB+
4	BI_DC+
5	BI_DC-
6	BI_DB-
7	BI_DD+
8	BI_DD-