

User's Manual

Foreword


Thank you for purchasing this WiFi video camera. It has an elegant appearance, many functions and can be used for wide-angle shooting. Prior to use, please r ead this user's manual carefully so as to show its performance and extend its service life to maximum. We hope that this product can meet your needs and accompany you at your side all the time.


Overview of the product

- It is compact in size and convenient for installation;
- ♦ A high performance chip is used to ensure that you can obtain high definition videos and highly continuous dynamic pictures, and re cord videos at low l uminance, and H.264 video format is supported;
- ◆ Support FHD(1920x1080 30FPS) video recording;
- ◆ Support high-speed USB2.0;
- Support Min SD card of max. 32G;
- lack Support video output, live replay and output to HDTV to play HD pictures.

System Requirements

System Requirements			
Operating System	PCCAM	Microsoft Window XP(SP3), Vista, 7, 8 Mac OS X ver: 10.8.0 or above version	
	MSDC	Microsoft Window 2000, XP, Vista, 7, 8 Mac OS X ver: 10.0.0 or above version	
CPU		Intel Pentium	
Internal Memory		Larger than 1GB	
Sound Card and Display Card		The sound card and video card shall support DirectX8 or higher version.	
CD Driver		Speed of 4 times or faster	
Hard Disk		Free space of more than 2GB	
Others		One standard USB1.1 or USB2.0 port	

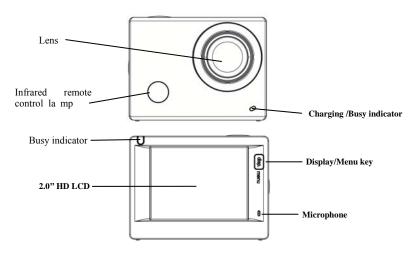

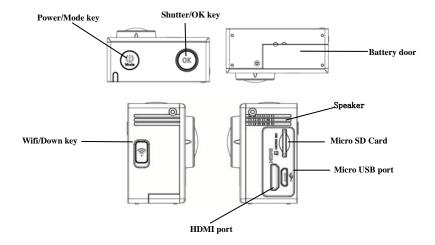


1. Charge the built-in lithium battery



Connect the camera to the computer for charging, at this time, the charging indicator will be in red, and it will be off after charging. Generally, it takes 2-4 hours to charge the battery.

${\bf 2.}\ Use\ the\ storage\ card$


- 1. Push the TF card i nto the slot till it is in place as per the instruction in concavely engraved words by the 2. To take out the TF card, press the tail of the storage card inwardly softly and it will be popped out.



Note: There's no built-in memory unit in the camera, so make sure to insert a storage card into it prior to use (it is recommended at least Class 6 high speed TF card).

3. Power on/off


3.1 Power on: Press Power key for 3 seconds, the screen will be on and the camera will be started.



- 3.2. Power off: Hold on Power key for 3 seconds when the camera is in the idle state to turn it off.
- 3.3. Auto screen off: The screen will be turned off automatically when the time that the camera is in the idle state for automatic screen off to save power. After that, the lamp for screen off will be on.
- 3.4. Power off when the camera is lack of electricity. When electrical quantity of the battery is very low, an icon of will be displayed on the LCD screen, prompting you to charge it in time. When the icon turns red and flickers, the camera will be turned off automatically.

4. Shift among functional modes

The camera has 4 modes, namely video recording mode, car-carrying mode, shooting mode and replay mode. After power is on, press Power key to shift among them.

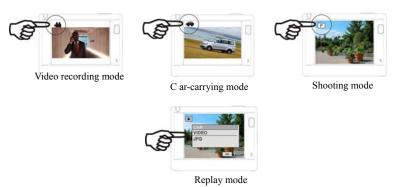

. .

Note: after the shutd own of the s ystem will save the current setting patt ern, the next open o pportunity automatically entered into the model.

5. Indicator

Busy indicator (red): When the camera is busy such as recording videos, shooting photos and turning off screen automatically, the work indicator will flicker.

Charging indicator (blue): When it is on, the user is prompted that the camera is being charged and it will be off after charging is completed.

6. Video recording mode

After power is on, the video camera will enter video recording mode directly and in preview mode, press Shutter key to start video recording; Pressit again to stop shooting. If the memory card is full or electrical quantity is low, it will also stop shooting:


- 1. Icon of mode, indicating video recording mode;
- 2. Indicate quality of video;
- 3. Indicate size of video, and FHD 1080P(30FPS) / HD 720P(60FPS) / HD 720P(30FPS)/VGA(120FPS) is optional;
- 4. Recording time, indicating recordable length of time;
- 5. Icon of battery, indicating current electrical quantity;



7. Car-carrying mode

After power is on, press Power key to enter car-carrying mode

- 1. Icon of mode, indicating car-carrying mode;
- 2. Indicate quality of video;
- $\label{eq:continuous} 3. \ Indicate size of video, and FHD (30 FPS) / HD (60 FPS) / HD (30 FPS) \\ is optional;$
- 4. Recording time, indicating recordable length of time.
- 5. Icon of batter y, indicating current electrical quantity

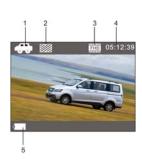

Prompt:

- 1. In car-carrying mode, a passage of video is kept every three minutes in recording. After the storage card is full, the earliest passage will be deleted, and video will be recorded in a circulating way.
- 2. Boot after choosing to car-carrying mode, normal shutdown again after boot, connect the car charger will automatically enter the vehicle model and start the video.

8. Shooting mode

After power is on, press Power key twice to enter shooting mode, and in preview state, press Shutter key to take a photo:

- $1. \ Icon \ of \ mode, indicating \ the \ current \ is \ shooting \ mode;$
- 2. Size of video, and 3M/5M/8M/10M/12M is optional;
- 3. Icon of quality of pictures;
- 4. Counter, indicating number of photos to be taken;
- 5. Icon of electrical quantity of battery.


9. Replay mode

9.1 After power is on and entering Preview state, press Power key continuously to shift to Replay mode. Select the file to be replayed through the menu as follows:

Select CAR to replay files in car-carrying video mode;

Select VIDEO to replay files in general video mode;

Select JPG to replay files in shooting mode;

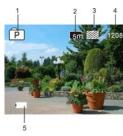



9.2 Introduction to play screens

9.2.1 Screens of video files



- 1. Icon of replay mode;
- 2. Indicate serial number of current file/ total number of files;
- 3. Indicate parameter of recording time;
- 4. Indicate recording time point.
- 5. Playback timer

When a video file is being played, click Ok key to pause play, and click Menu key to stop playing.

9.2.2 Screen of photos

- 1. Icon of replay mode;
- 2. Indicate serial number of current file/ total number of files;

In replaying, Press WIFI key to select other file type, in a circulating way.



10. Menu operation


There is a different menu in each working mode as shown in the following figures:



Operation: Press Menu key, the menu for this mode will be displayed on the LCD. At this time, press Power key to move the cursor leftward or rightward and select on the menu, and press WIFI key to move the cursor upward or downward and select on the menu in a circulating way. Press OK key to confirm and press Menu key to return or exit from menu mode.


Application of remote controller

1. Definition of keys of remote controller




2. Use of remote controller:

Using the r emote c ontroller, you can achie ve functions of video r ecording, s hooting and power of f without operating on the camera. Just point the signal transmission port of the remote controller at IR signal receiving lamp of the camera, and press corresponding keys to achieve functions of video recording, shooting and power off.

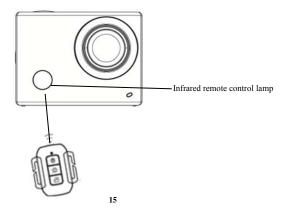

Connect device to HDTV:

Connect the video camera to an HDTV with a HD cable as shown in the following figure, display signals in the camera will be output into the HDTV automatically, and you can browse HD videos and photos that are recorded or taken in the HDTV

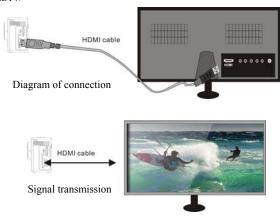

APP (for Android and iOS System)

I. How to Obtain the APP Installation Program

- 1. For the Android System, you can search "SYMAGIX" in the Play Store to obtain corresponding installation programs, and t hen you c an install th em according to the i ndicated steps o r thr ough scannin g the two-dimensional code
- 2. For the I OS System, you can search "S YMAGIX" in the APP Store to obtain corresponding instal lation programs, and t hen you c an install th em according to the i ndicated steps o r thr ough scannin g the two-dimensional code

II. Camera WIFI and System Applications


Android Applications

1. Please install the SYMAGIX application program (provided by the Supplier or the Internet) for the Android



mobile phone or tablet PC, and then the Display Screen will show the Icon

- 2. Insert a Storage Card into the Camera and then power it on. Press the WIFI key to conduct WIFI connection, and the Screen of the Ca mera will show the WIFI signal Ic on with the external sc reen revealing WIFI
- 3. Enable the WIFI function of the Andro id mobile p hone or t ablet PC, an d tr y to find the AP Na me $WDV6000SA_WIFI; please\ conduct\ connection\ between\ them\ till\ the\ system\ reveals\ a\ successful\ connection;$ if you are conducting WIFI connection for the first time, please input the password: 1234567890.
- 4. Tap and e nable the Application Program Icon on the Android mobile phone or tablet PC; you can directly view the pr eview picture trans mitted by the Camera (see the f ollowing picture), and then conduct relevant operations.

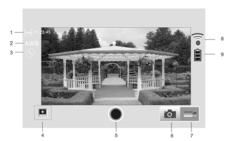

- 1. Resolution
- 2. White Balance
- 3. Settings (Enter Settings Menu)
- 4. Enter the Playback Mode
- 5. Shutter Button
- 6. Photo Mode
- 7. Video Mode
- 8. Wi-Fi Signal Icon
- 9. Camera's Battery Status Icon

IOS Applications

 $1.\ Please\ install\ the\ S\quad YMAGIX\ application\ program\ (provi\ ded\ b\ y\ the\ Supplier\ or\ the\ Internet)\ f\quad or\ the\ IOS$

mobile phone or tablet PC, and then the Display Screen will show the Icon



- 2. Insert a Storage Card into the Camera and then power it on. Press the WIFI key to conduct WIFI connection, and the Screen of the Ca mera will show the WIFI signal Ic on with the external sc reen revealing WIFI
- 3. Enable the WIFI f unction of the IOS m obile phone or ta blet PC, and tr y to find the AP Nam e WDV6000SA_WIFI; please conduct connection between them till the system reveals a successful connection; if you are conducting WIFI connection for the first time, please input the password: 1234567890.

4. Tap and enable the Application Program I con on the IOS m obile phone or tablet PC; you can directly view the preview pict ure trans mitted by the Cam era (see the following picture), and then conduct relevant operations.

- 1. DV battery icon
- 2. Video resolution
- 3. White balance
- 4. Setup (enter setup menu)
- 5. Enter Playback mode
- 6. Shutter button
- 7. Photo mode
- 8. Video mode

Notes:

- ${\bf 1.} \ \ {\bf If you need to record\ videos\ or\ download\ pictures\ using\ your\ mobile\ phone\ or\ tablet\ PC,\ please\ insert\ one\ TF\ card\ for\ your\ camera;$
- 2. When the Camera has been successfully connected with your mobile phone or tablet PC, the WIFI Indicator Light will be on.

Application on PC

- 1. The camera has a pl ug-and-play function. Connect the power-on device to the computer with the USB cable, and the mode can be automatically switched to the removable hard disk. Removable disk icon will appear in the "My Computer" window. The pictures you shot stored in the removable disk I: \ jpg folder (I is this eq uipment removable disk); video files your shot stored in I: \ video folder; vehicle-mounted files you shot saved in I: \ CA R folder. Note: If using a mobile hard disk f unction on Windows 2000 or later v ersions of Windows operating system, do not install the driver.
- 2. The default mode is removable disk when connecting the net work video camera to the computer. When the user wants to use the network video capabilities (PC CAM), press the shutter button once to switch to the camera mode (the screen will display the word "PCCAM"). An icon will be produced in My Computer
- ", Double-click on this icon you can achieve real-time video capabilities, the user can use this device for network video capabilities.



Note: In case of PCCAM, version 1 is XP sp3 or the above.

Technical Parameters

Image Sensor	5.0 Million Image Sensor
Function Modes	Video recording mode, car-carrying mode, shooting mode and replay mode
Lens	F2.4, f=3.1mm
LCD Display Screen	2.0 inch HD LCD Screen
Photo Definition Ratio	12M, 10M, 8M, 5M, 3M.
Video Definition Ratio	FHD (1920x1080 30fps), HD (1280X720 30fps), HD (1280X720 60fps), VGA(640X480 120fps)
Storage Media	TF Card (32GB at most)
File Formats	Videos(MOV); H.264 Compressed Format; Photos(JPG)
USB Port	USB 2.0 Port
Power Supply	External rechargeable lithium battery 1200mAh.
Language	English, Simplified Chinese, Spanish, Portuguese, German, Italian, French, Russian
Auto Shut-down	1minute/3minutes/5minutes/OFF
Dimension	59x44x25.5mm

Note:

- 1. A TF card must be inserted if you need to take a photo, record a video, or download files on the terminal;
- 2. The Wi-Fi indicator will remain on when the terminal is connected to DV.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

	Reorient or relocate the receiving antenna.
	Increase the separation between the equipment and receiver.
	Connect the equipment into an outlet on a circuit different from that to which
the	receiver is connected.
	Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

FCC ID: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielding line is there as accessories, shipment will follow the product shipment