BLU Studio G Plus HD user manual

Table of Contents

Salety information	4
Appearance and Key Function	6
Introduction	8
Call Functions	9
Contacts	11
Camera	18
Gallery	20

Music	22
Sound Recorder	23
Alarm Clock	24
FM Radio	25
Play Store	26
Settings	27

Storage......33

Safety Information

Please carefully read the items below:

Use Safely

Do not use the phone in situations where it might cause danger.

Transportation Safety

Please observe all transportation laws and regulations.

Please drive with both hands on the wheel.

Hospitals

Please follow limitations.

Please turn off your mobile phone when near medical instruments.

Airports

Remember to follow all airport and flight safety regulations.

Please do not use your phone during flight.

Toxic Chemicals

Do not use your mobile phone around fuels or chemicals.

Do not use in hazardous areas where explosions may occur.

Accessories and Batteries
Use only Blu authorized batteries and accessories

Backup

Remember to keep a written record of all important information.

Water

Your phone is not waterproof. Keep it away from water and liquids.

SOS Emergency Calls

Make sure your mobile phone is switched on and in a service area. In home screen, tap the phone key and dial 911 and send.

Appearance and Key Function



1.Volume up/down key 2.Power key 3. P/L Sensor 4.Rear camera Receiver

6. Back key 7. Home key 8. Menu key

9. Rear camera 10. Flash

5. Front camera

11.Speaker

Introduction

Installation of the SIM Cards

Note: Please keep the SIM card out of the reach of children. The SIM card and its contacts are easily damaged due to scratching or bending. Please be cautious when carrying, installing or taking out the SIM cards. SIM: Contact your cellular phone service provider directly to obtain the SIM card.

To insert SIM cards:

- Remove the rear cover. Insert the SIM card(s).
- 2. Insert the SD card. (For additional storage capacity)
- Replace the rear cover of the phone and power on.
 SIM Slot1



SIM Slot2

T card Power On and Off

On - Please ensure the SIM card has been properly inserted into the phone. Long press the Power key to switch on the phone.

Off - In standby mode, long press on Power key until an options menu

appears. Select Power Off in the menu and confirm

Security

You may set a security lock feature as a security measure for the phone. For further information regarding password locks, password revision and other functions please enter into the security option in system settings.

Call Functions

At the dial keyboard, enter the phone number and then click the dial key. If dialing an extension, you may click the dial pad icon in the bottom of the screen to open the interface and enter the number of the extension. You may also press and hold the 0 key to add a (+) sign when adding an international dialing prefix.








Add New Contact

- Click the add contact icon (+) to add contact.
 - Select to save your contacts to the Google[™] account, the phone or the SIM card.
 - You may enter different contact details which include adding a picture, name, telephone number, group, address, and email among other options.
 - 4. Click to finish and save contact.



Messages

You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

Send an SMS

Application Menu » Messaging » New message (or shortcut icon)

- Click to enter recipient (You may enter contacts from
- contact book or enter a new number)

 2. Compose Message
- 3. Send

Send an MMS

When creating message, the default message style is SMS. The message will automatically convert to MMS when adding an attachment.

. Click the attachment icon in the messaging interface.

2. Click to add attachments and create an MMS message.


Internet Browser

Menu Functions Backward

- After browsing through multiple pages, this option will return the user to the previous page.
- Forward
- After browsing through multiple pages, this option will move to a web page after the current page. Windows
- You may view all windows open by clicking the windows icon in the upper right part of the browser. Click the save to Bookmarks option to make the current URL as a saved

Bookmarks

- Bookmark
- Click Bookmarks/History to opened saved bookmarks.
- Find on page: Search current page.

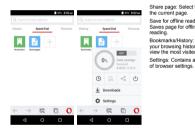

Share page: Select to share the current page. Save for offline reading: Saves page for offline reading. Bookmarks/History: Show your browsing history and view the most visited pages. Settings: Contains a variety

Bluetooth & Wi-Fi

Bluetooth is a short-range wireless communications technology that devices can use to exchange information and connect to different types of devices which include headsets and other devices

Power on Bluetooth



- Settings » Bluetooth and select to power on Bluetooth.
 The Bluetooth icon will appear in the notification bar.
- Click "scan for devices" and the phone will start to scan for all devices within range.

 3) In Bluetooth settings all the devices found will displayed.

in the list under the icon.

Note: The maximum detecting time of the phone is 2 minutes.



Camera

Camora

Prior to use: Insert SD card before using the camera or video camera. All photos or videos taken by the phone are typically stored in the memory card for large storage capacity of images.

Open Camera

- 1. Applications Menu » Camera
- 2 Switch to video mode if you want to record videos

Note: You may place a camera shortcut icon on any of the screens

Take Pictures

- 1. Aim the object that the picture will be taken.
- Press the "Shutter" button on the screen
- 3. After taking the picture, the file will be saved in the camera's gallery folder.
- 4. You can view the photos by clicking the preview box button. You may adjust various settings for the camera by pressing Menu while in the camera interface. When in the camera viewfinder mode, you can switch to video or photos' callery.





Gallery

Open Images

Applications Menu » Gallery

Share Pictures

You may share pictures by sending them through different types of installed applications. You may also send

types of installed applications. You may also send pictures through the MMS message function by composing a message and attaching the picture. Any image can also be sent via the Bluetooth function by selecting Bluetooth equipment that has been paired.

Adjust Image

Press Menu and Edit to adjust images

You may select from different effects that may include:

Vintage, Black and White, Instant, Latte, Litho, X-Process, Crop, Rotate, Mirror, Straighten, Vignette, Contrast, Exposure, Auto color, Shadows, Vibrancy, among other settings that can be used to adjust picture images.

View Images


In the picture interface, click on an album to view images

In the photo album, scroll the picture towards left to view the next picture or towards right to view the previous one.


Crop Pictures

If you want to adjust the size of the picture, use the crop tools. Once the arrow appears, pinch your fingers in or out to adjust the size. If you want to adjust the image and keep its proportion, please hold down any of the four corners of the image and adjust accordingly.

Music



Sound Recorder

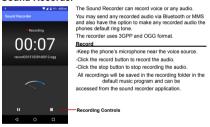

Alarm Clock

- 1. Click on the Clock icon in the application menu
- 2. Click set alarm button and enter the alarm clock set interface where you may delete and

edit alarms





Nextradio

nextradio

background.

Through this function, you may listen to FM radio on the device. The FM radio uses the wired headphones as an antenna in order to receive signal. Before using this function, connect the original equipment headphones that came with the phone.

Open next radio

Press the next Radio icon to open the application.

next Radio as Background

Click on the Home key to move the next Radio to the



Google Play™ Store

Google Play[™] allows you to download music, movies, and even games. Click the Play icon to sign in with your Google [™] account.

Search and select between different Play Store categories

Settings



 Settings » Wi-Fi to power on. When on, the Wi-Fi will automatically search for available networks. Any unsecured network can be used directly and any secured network requires a password or credentials prior to connection.

* Bluetooth

Press the switch to power on Bluetooth. Once on, the Bluetooth will automatically scan for any nearby open equipment.

SIM cards

Press the switch to power on SIM cards. When insert two cards, click to set cellular data. calls, SMS messages

O Data Usage

Mobile and Wi-Fi Data Usage

More

•Tethering, Portable Hotspot, VPN, APN

Airplane Mode

Note: When in flight mode, all network connections will turn off automatically.

Display

Brightness, Auto rotating screen, Wallpaper, Screen Timeout

Sound & notification

This option sets the phone tone settings for receiving calls and notifications. Some of the settings include:

 Vibrate, volume, ring tones, ring tones notification, dial touchpad, and haptic feedback and tones

Storage

View the phone memory usage.

Battery

General power usage



Manage applications - Manage and delete installed applications.

Running services - Press the 'Force Stop' button to stop any of the services listed and removes from the running services list.

Location

Mobile Network Location - Use wireless services to find locations in applications.
 When using the GPS, power on to set satellite positioning for accuracy.

Security

Set up screen locks: Use slide, face/voice unlock, pattern, PIN or password to lock the screen

 Pattern: The first time there will be simple unlock instructions and examples. Click next step" to continue the security pattern step.

 PIN: Enter PIN number to unlock the screen.

PIN: Enter PIN number to unlock the screen.

Password: Use password to unlock the screen

You may stop the security feature at any time.

Set up SIM card PIN lock

 SIM card PIN (Personal Identification Number) is used to prevent unauthorized use of SIM card.

To change a blocked PIN code, you will need to unlock the SIM lock then go to the Change Password screen. The phone will automatically prompt you enter the old PIN code and ask to enter a new PIN code twice. The phone will then prompt you that the change was successful. If you enter the PIN noorectly three times, the SIM and PIN codes will be automatically locked. You will need the PLN code to unlock the phone which is available automatically locked. You will need the PLN code to unlock the phone which is available will be represented by locked. Please see your service provide find a new SIM card.

Password visible – Make the password visible when it's typed.
 Use security credentials - Allow applications to visit security credentials or other



credentials

Add accounts, include Exchange、GoogleTM、IMAP、Personal(IMAP)、
Personal(POP3)、POP3

Language and Input

. Language - Change the language of the phone.

. Custom Dictionary - Add or delete words to the custom dictionary. Keyboard Settings – Haptic vibration, Haptic tones, Capitalizing, Speech Input.

Inputting words. Predictive text function, Auto-Text, Input keyboard method

Backup & Reset

 Backup Data - Will back up all application data, WLAN passwords, and other settings to GoogleTM 's servers •Restore to Factory Settings - Clear all data stored on the phone.

Oate & Time

Date and Time adjustment

•Time Zone - Select Time Zone according to where your location. . Select Date Format - There are 3 kinds of formats you can choose from: Month-Day-Year, Day-Month-Year and Year-Month-Day, and

Year-Month-Day which is the default setting

Schedule Power On & Off

Schedule power on an

Accessibility

Power button ends call and auto rotate screen

. Speak Passwords and large text

Printing

Need to download the "CloudPrint.apk" from the Internet and install.

About device

•Phone information status and firmware updates

Storage



Connect the phone with the USB cable provided. Once connected, a connection interface will appear. In the connection mode interface, select MTP and turn on from the connection screen to be able to transfer files. Other storage options are also available.

Some system settings, hardware, and UI options may vary depending on final version

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body)as

required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 0.5 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.