



## Instruction Manual

Model: 6636D01

Desktop Style 4.3" LCD WiFi Internet TV and Radio Player

# TABLE OF CONTENTS

<b><u>Introduction</u></b>	<b>1</b>
<b><u>About Product</u></b>	<b>2</b>
2.1 Product Description	
2.2 Product Features	
2.3 Accessory List	
<b><u>Getting Started</u></b>	<b>3</b>
3.1 Location of Controls on the Main Unit-Top	
3.2 Location of Connectors on the Main Unit - Rear	
3.3 Location of Controls on the Remote Control	
3.4 Understanding the Controls on the Remote Control	
<b><u>Operational Instructions</u></b>	<b>4</b>
4.1 Start Menu	
4.2 Connect Internet through WiFi	
4.3 Internet TV	
4.4 Internet Radio	
4.5 SHOUTcast	
4.6 Podcast	
4.7 Media Player-Playing Video/Music/Picture	
4.8 UPnP File Sharing-Play Video/	
4.9 Setting Digital Photo Frame	
4.10 Setting Time, Date, Calendar and Alarm	
4.11 FM Radio Setup	
4.12 TV/LCD Output	
<b><u>Other Settings</u></b>	<b>5</b>
5.1 Language	
5.2 Network Setting	
5.2.1. Wi-Fi Setup	
5.2.2. Network Types	
5.2.3. Network Status	
5.3 Alarm	
5.4 Key Tone Setting	
5.5 Slideshow Setting	
5.6 FM Setting	
5.7 Screensaver time	
5.8 Time Zone	
5.9 Date & Time	
5.10 Firmware Update	
5.11 Auto Power Off	
5.12 Restore Default Factory Setting	

5.13 About

**TV-Out Troubleshooting Guide**

- 6.1 No Screen Display
- 6.2 No Sound
- 6.3 Remote control is not working
- 6.4 Cannot connect to Wi-Fi Network
- 6.5 Black and White Screen

**6**

**User Safety Guide**

**7**

**Specifications**

**8**

**Warranty Note**

**9**

Congratulations on your purchase of our product. Lookeey TV 6636D01 will allow you enjoy TV channels, radio stations and podcast throughout the world via Wi-Fi internet connection. Its TV-out function will turn your home TV into an internet TV.

Please read this manual carefully before you start to use it. This instruction manual contains the important information you will need. Please keep this manual for future reference.

## **About Product**

### **2.1 Product Description**

Bringing over thousands of worldwide Internet TV channels, radio stations and podcasts throughout the world via Wi-Fi connection, Lookeey TV 6636D01 not only allow you to enjoy these on its 4.3" high resolution LCD screen and built-in speaker/earphone, but also let you take these to your home big TV screen. Moreover, it can play video, music

And, it can stream video, music, pictures from your home or office PC to TV by UPnP function. FM Radio, Picture Viewer and more... The powerful built-in speakers allow you to listen to your music with depth and clarity.


### **2.2 Product Features**

- Stream over 2000 TV channels and over 30000 radio stations and podcasts throughout the world via Wi-Fi internet connection.
- Support SHOUTcast, Podcast, Live Internet radio stations and video broadcasting.
- Browse channels by regions, genres, languages, keyword search, and my favorite's lists
- Media player reads and plays videos, music and picture files from local disk with built-in
- Stream videos, music and pictures from your home or office PC to TV by UPnP function.
- Digital picture frame (with background music option).
- TV-out function supports resolutions at 720 x 480 pixels.
- Support TV output in: CVBS and YPbPr.
- Support Wi-Fi in 3 protocols: Static IP, DHCP and PPoE.
- FM radio and dual alarm clock/calendar.
- Wake up to internet radio, FM radio, music or a buzzer.
- Auxiliary line input for any audio device with 3.5 mm jack.
- Easy operation with a remote control or Top Keys on unit.

## 2.3 Accessory List

- Main Unit
- Remote Control
- AC Adapter 5V/1A
- CVBS Cable
- Flexible FM antenna
- Instruction Manual
- YPbPr Cable (optional)
- Line-in audio cable (optional)
- USB Mini 5P cable (optional) USB interface is the power connector

## 3.1 Locations of Controls on the Main Unit-Top

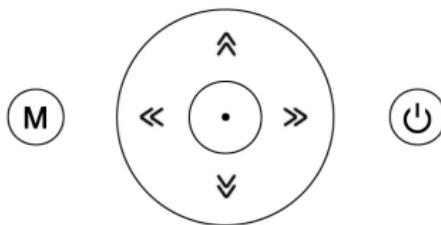


**M** **MENU:** Press once to go back to the previous directory or sub directory. Long press for about 3 seconds to go to the main menu.

 **POWER:** Press to turn it ON/OFF.

-  **UP / VOL+:** Scroll up or increase the volume
-  **DOWN / VOL-:** Scroll down or decrease the volume
-  **LEFT:** Short press to the previous track/menu, hold for fast backward during media playing.
-  **RIGHT:** Short press to the next track/menu, hold for fast forward during media playing.
-  **ENTER:** Press to confirm your selection. It can be used to switch the screen display mode.

## 3.2 Location of Connectors on the Main Unit - Rear

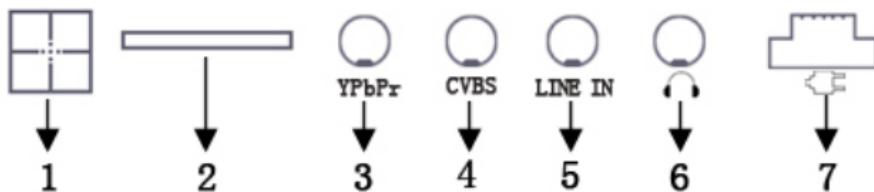

1. RG45 connector
2. card Slot
3. YPbPr output
4. CVBS output
5. Line-in (Audio)
6. Earphones jack
7. USB Mini 5P and DC Power jack

### 3.3 Locations of Controls on the Remote Control



### 3.4 Understanding the Controls on the Remote Control

1. Power
2. Play In Order: Play video/music in order on playlist
3. Shuffle: Randomly select and play video/music on playlist
4. Repeat: Repeat playing the selected video/music on playlist
5. Mute
6. Fast Backward
7. Fast Forward
8. Jazz: Jazz mode
9. POP: Pop mode
10. Previous: Go to the previous Track
11. Next: Go to the next Track
12. Bass: Bass mode
13. Normal: Back to default. No equalization
14. Menu: Go to the main menu
15. UP: Direction Key, Scroll up or Increase the volume (when playing video/audio) or adjust FM Radio stations manually.
16. EXIT: Back or Return to the previous page/menu/track/channel
17. Left Key: Direction Key and Return to the previous track/menu
18. Enter: Press to confirm your selection. It can be used to switch the screen mode.
19. Right Key: Direction Key and Go to the next page/menu/track/channel
20. Play/Pause
21. Down: Direction Key, Scroll down or Decrease the volume (when playing video/audio) or adjust FM Radio stations manually.
22. Stop
23. FULL SCREEN: Switch three screen display mode
24. FAV: Add to My Favourites list
25. DEL: Delete
26. PAGE-: Go to previous page
27. PAGE+: Go to next page
28. VOL-: decrease the volume
29. VOL+: increase the volume
30. I-TV: Internet TV shortcut key
31. I-RADIO: Internet Radio shortcut key
32. LCD/TV: switch LCD/TV

## 4.1 Start Menu


After connecting the main unit to a power outlet, press the **POWER** button on the unit or the remote control to turn the unit on. When the main unit is on, user will be brought to the main menu as below. Press **UP/DOWN/LEFT/RIGHT** buttons and select options. Press **ENTER** to go to the menu you want.



## 4.2 Connect Internet through Wi-Fi

You may need a Wi-Fi wireless router, together with password key if set.

1: Select Settings > Network Setting > Wi-Fi Setup > Auto Scan. (The '>' indicates options leading to further menus.) The Auto Scan system will automatically search all available Wi-Fi networks within reach. Once the available networks are found, these will be listed as below for your selection.

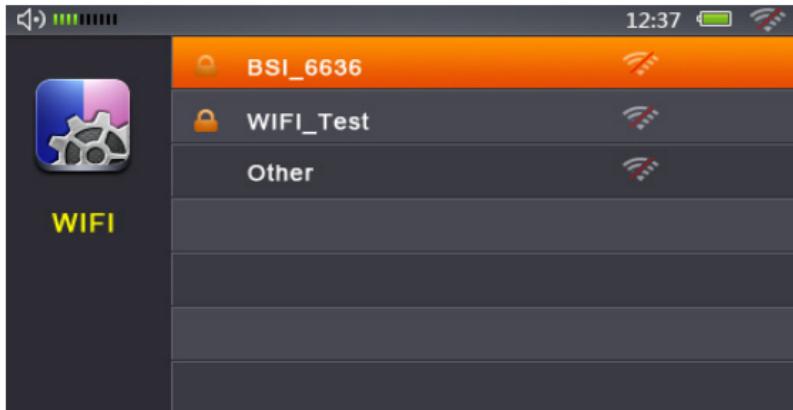

2:

Two types of network:

- Encrypted network: Show a "lock" icon and password is required for accessing to the network.
- Unencrypted network: There's no "lock" icon and password is not required for connecting.

Use remote control to select a particular network and press **ENTER** to connect. System will automatically start to connect if unencrypted network is selected. If encrypted network is selected, you will be brought to another screen to enter the password (assigned by the administrator of the network). Press **UP/DOWN/LEFT/RIGHT**, and **ENTER** on the remote control or the main unit to enter the password and follow by selecting **OK** to connect.



If the system is successfully connected to the selected network, a notification will show "Wi-Fi Connected Successfully"; otherwise "Wi-Fi password Invalid" will appear. Please re-enter the correct password.

**Remark:** This item supports 3 protocols: Static IP, DHCP and PPoE. DHCP is the default protocol to be used by the system automatically. Please check the network setting and review which protocol is being set – you will need to manually connect the unit to the network if Static IP or PPoE is in use.

## 4.3 Internet TV

When you select Internet TV menu, it connects to the Internet portal and provides a list of TV channels, organized into different categories such as Region, Genres, and Languages. Press **UP/DOWN/LEFT/RIGHT**, and **ENTER** on the remote control or the main unit to choose different channels.

- **Countries & Regions:** Sort by Countries & Regions
- **Genres:** Sort by Drama, Movie, Music, Sport, Animation...
- **Languages:** Sort by broadcasting languages
- **Search:** Enter keywords to search
- **My Favourites:** Press **FAV** on the remote control to store a playing station under "My Favourites"



This image below is the screenshot of an Internet TV playing Mode:



You can switch the program to different screen modes: Full screen, default and 4:3 by

- 1) Pressing **ENTER** on the main unit
- 2) Pressing **ENTER OR FULL SCREEN** on the remote control

Other instructions:

**UP/DOWN or VOL+/VOL-:** Adjust the volume +/-


**LEFT/RIGHT:** Go to the next/previous channel

**STOP/EXIT:** Exit from the current playing channel and go back to Internet TV Menu

#### 4.4 Internet Radio

When you select Internet Radio mode, it connects to the Internet portal and provides a list of Radio stations, organized into different categories such as Location, Genres, and Languages. Press **UP/DOWN/LEFT/RIGHT**, and **ENTER** on the remote control or the main unit to choose different stations. The operation is the same as Internet TV.

This image below is the screenshot of an Internet Radio playing Mode:

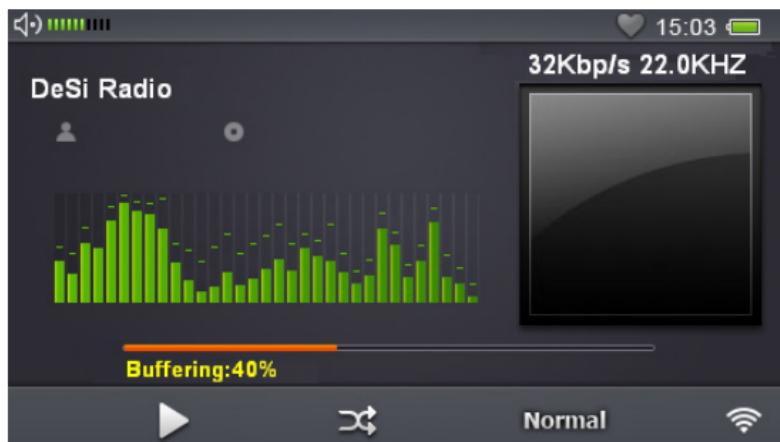

#### 4.5 SHOUTcast Internet Radio Program


SHOUTcast Internet Radio Program offer thousands Internet Radio Stations through the internet. The programs and playing lists are continuously updated and refreshed.

Press **UP/DOWN/LEFT/RIGHT**, and **ENTER** on the remote control or the main unit to choose different stations.



## 4.6 Podcast

You can watch programs stored by the publishers and sort by Genres, Search and add to my favourites. Press **UP/DOWN/LEFT/RIGHT**, and **ENTER** on the remote control or the main unit to choose different stations. Please refer to Internet TV mode instruction.

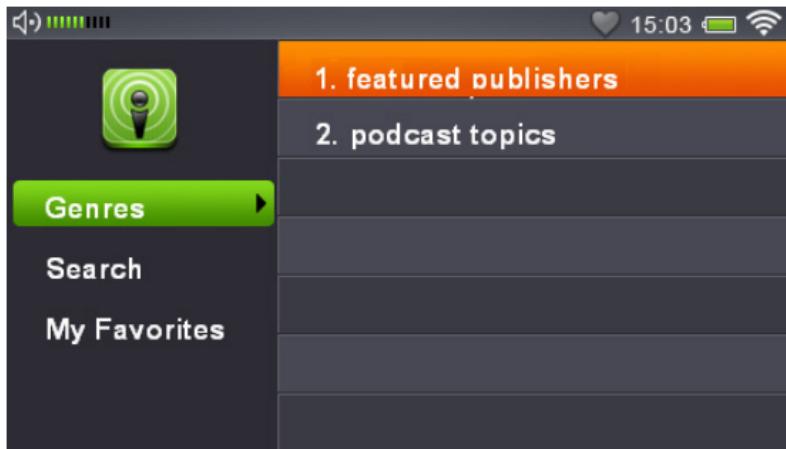

- 3.** Click the "InternetRadio" icon and click "Allow" button to activate the sharing function. Press "OK" to confirm the settings.
- 4.** Go to Library > Add to Library and then Select "My folders and those of others that I can access". Click "Advanced Options" to choose the sharing folders.
- 6.** Click "Close" when the adding process is complete.
- 7.** Go to Main Menu → Select UPnP and press **ENTER** to search all available UPnP devices. Press **UP/DOWN** on the remote control or the main unit to select the UPnP device on the list and press **ENTER**.




8. Once you're in UPnP mode, all sharing files are organized in different categories such as Music, video, picture etc. Press **UP/DOWN** on the remote control to select and play video/Music/picture.



## 4.9 Setting Digital Photo Frame

1. Select "Photos" menu and press **ENTER**.

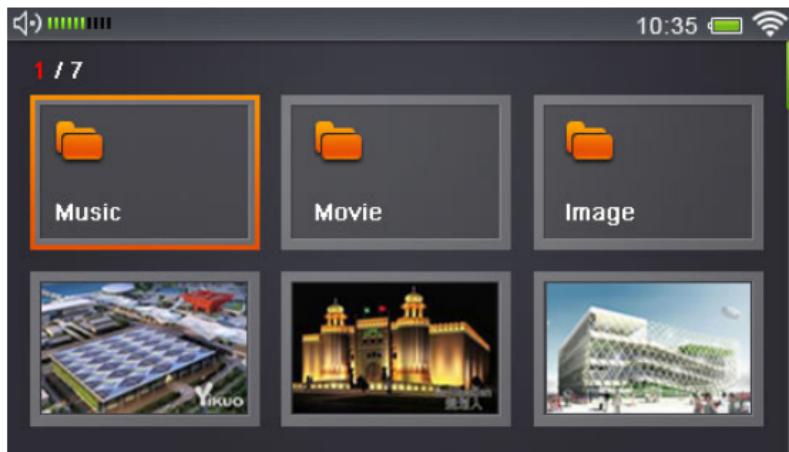

3. Press **UP/DOWN/LEFT/RIGHT** on the remote control or the main unit to select the folder or file to browse, and press **ENTER**. If you want to enjoy a picture slideshow with background music: please go to Media Player, Internet Radio or FM Radio to choose the music you like and exit with music on, and then come here to choose slideshow.



: Previous



: Next



: Enlarge



: Shrink



: Rotate




: Slideshow

## 4.10 Setting Time, Date, Calendar and Alarm

Before Set Time and Date, please go to Settings to choose and confirm your Time Zone first. And then go to Date & Time in Settings or "Clock" in main Menu, and press **ENTER**.

- **Clock Display:** shows current date, time and week.
- **Calendar:** Full Calendar display
- **Alarm:** Two sets Alarm are available.
- **Clock Setting:** allows you to set clock and time manually.

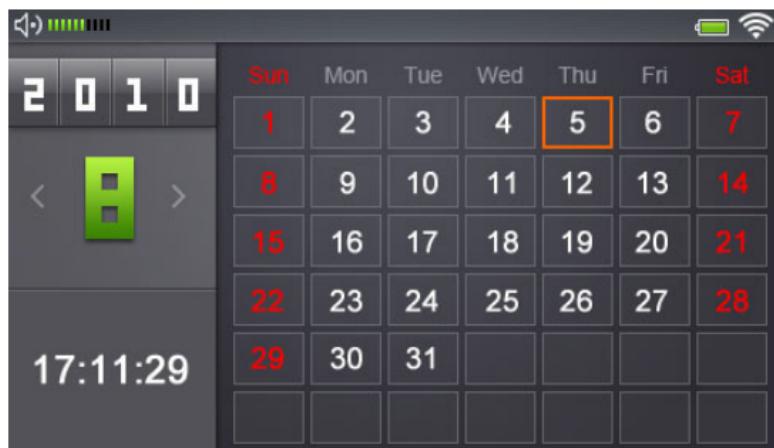



**Alarm On/Off:** Turn on/off the alarm.

**Alarm Time:** Press **UP/Down/Left/Right** on the remote control or the main unit to set the alarm. After finish the digital setting, press **Enter** to confirm.

**Snooze:** Snooze time options: 5, 7, 10 and 15 minutes. The system will automatically switch to Time & Date screen saving when no command is given in the period of time set by the user.

**Set Alarm Tone:** Particular alarm tone can be set from: Default Ring, radio, Music from local built-in memory and SD card.

**Alarm Date:** Alarm set to be in effective in 4 options: once, daily, working day. (Monday – Friday or Monday – Saturday)

## 4.11 FM Radio Setup

1. Connect the FM antenna to the YPbPr jack at the main unit.
2. Go to Setting menu > FM setting > Region Setting and select from the available regions: America, Europe and Japan.
3. Auto Scan: Go to Setting menu > FM setting > Auto Scan. Press **ENTER** on the remote control or the main unit, and a message on LCD to remind you to connect FM antenna. And then press **ENTER** again to search FM stations. After Searching, a FM Stations list available will show up. You could test listening every station here.
4. Listen to FM station: Select FM menu to play FM stations your unit found during last Auto Scan.

## 4.12 TV / LCD Output

**This product supports two types of video and audio output:**

1. LCD output from the main unit: 4.3" TFT high resolution 480 X 272 pixels, 16:9 LCD
2. TV output: Signal received from the main unit will be output to TV via CVBS or YPbPr.

**Before switching TV output, follow the steps below to connect the main unit and TV:**

1. Connect the 3.5mm plug of the CVBS cable (included in the package) to the CVBS slot at the main unit, and connect the other plugs (Yellow plug for composite video, Red and White for audio) to the AV jacks of a TV.
2. Turn on the TV and switch to AV channel or other particular channel depending on the TV model.
3. Make sure the main unit is powered on.

**Two ways to initiate the TV output after the connection is complete:**

1. Go to "TV OUT" menu and select either LCD Out or TV Out.
2. Press **LCD/TV** on the remote control to switch between LCD (main unit) and TV output.



Now you can enjoy the video, audio and picture files from the main unit projected on your TV screen!

Select "Settings" menu and choose the following options.

**5.1 Language:** Press **UP/DOWN** on the remote control to choose, and press **ENTER** to save the change. The change will take effect immediately after going back to the Main Menu or other interfaces.

**5.2 Network Setup:** (Also see section 4.2)

**5.2.1 Wi-Fi Setup:** Scan for available Wi-Fi connection.

**5.2.2 Network Type:** 1) Static IP 2) DHCP 3) PPoE

**5.2.3 Network Status:** Information contains IP address, Mask, Route and DNS to determine if the system is Wi-Fi connected.

**5.3 Alarm:** Please refer to the information provided in section 4.10

**5.4 Key Tone Setting:** Tone On – Press **ENTER** to Turn on, and then you will see 5 Key tone sound options; Tone Off – Turn off.

**5.5 Slideshow Setting:** Set picture slideshow mode and change display periods (5, 10, 15 and 30 seconds) for each image.

**5.6 FM Setting:**

**Region Setting:** Choose your FM Region.

**Auto Scan:** Search FM stations automatically. Please refer to 4.11 FM setup for more info.

**5.7 Screensaver Time:** Switch to Clock Display Mode automatically if no command given within a period of time set by users. System will return to the previous interface after click **EXIT** or return to main menu after click  **MENU**.

**5.8 Time Zone:** Choose and confirm your time zone first before Set Date & Time.

**5.9 Date & Time:** Press **UP/DOWN** to adjust the time and date. Press **LEFT/RIGHT** to change setting, and press **ENTER** to save the change. (Time Format: 12/24 hours)

**5.10 Firmware Update:** Please check Firmware Update from time to time to improve your product with more functionality and stability.

Update methods:

Online – System will check online, download and install the latest firmware automatically

Local Disk – Update the firmware manually from local disk or SD card.

**5.11 Auto Power-Off:** The unit will shut down automatically if no command given within a period of time set by users. Select Close to disable Auto Power-Off function to use Screensaver

function (Clock Display).

**5.12 Restore Default Factory Setting:** Restores the system to manufacturer's default settings.

**5.13 About:** Firmware version, Model number and Wi-Fi Mac address.

## **TV-Out Troubleshooting Guide**

**6**

### **6.1 No Screen Display**

- Check the connections between the main unit and TV. The AC plug may not be connected properly.
- Check if the Main Unit is powered on.
- Check if the TV is tuned to AV channel.

### **6.2 No Sound**

- Check if the audio plugs and jacks are connected properly and correctly.
- Check if it is in Mute mode.

### **6.3 Remote control is not working**

- Use the remote control within the effective range (6 meters).
- Press the correct button again.

### **6.4 Cannot connect to Wi-Fi Network**

- Check if the Wi-Fi connection is available.
- Check if unit is connected to Wi-Fi connection correctly. Please refer to 4.2 instructions for connecting to a network.
- Restart the Main Unit

### **6.5 Black and White Screen**

- Unplug and re-plug all cables properly.
- Check the settings of the TV connected to the Main Unit.

1. Place the appliance on a level surface away from sources of direct sunlight, heat, or water to prevent fire or shock hazard.
2. Place the appliance in a clean and dry condition.
3. Store the cables and accessories in a safe place. Avoid walking on or pulling the cables.
4. Use only the accessories provided by the manufacturer.
5. It is normal that top and rear of the main unit will be warm after use for a while.  
Place a cloth or other protective material between it and the furniture if necessary.
7. Do not attempt to disassemble or repair the unit. Please refer all servicing to qualified service personnel.
8. Unplug the appliance when unused for long period of time or during thunderstorm and lighting.

## Specifications

---

**LCD:** 4.3" TFT 480 x 272 pixels, high resolution 16:9 display

**AV Out:** CVBS and YpBPr

**Audio Output:** 2x3W8Ω HiFi Speaker

**I/O ports:**

- Mini 5P USB connector and Power jack
- Earphone jack
- Line-in 3.5mm jack
- CVBS AV jack
- YPbPr AV jack
- SD card slot
- RJ-45 Ethernet Jack (optional)

**Wi-Fi:**

- WLAN security: Support WPA, WPA2, WEP
- Wi-Fi search: Auto Search; Manual Search
- IEEE 802.11 b/g

**Power:** AC100V-240V 60/50Hz, or 4 x AA Batteries.

**Dimensions (W X H x D):** 222x105x116mm

### **Best-Supplier One Year Limited Warranty**

Best-Supplier's warranty obligations for this hardware product are limited to the terms set forth below: Best-Supplier International Inc. ("Best-Supplier") warrants this Looke TV-branded hardware product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Best-Supplier will either (1) repair the hardware defect at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. Best-Supplier may request that you replace defective parts with new or refurbished user-installable parts that Best-Supplier provides in fulfillment of its warranty obligation. A replacement product or part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Best-Supplier's property. Parts provided by Best-Supplier in fulfillment of its warranty obligation must be used in products for which warranty service is claimed. When a refund is given, the product for which the refund is provided must be returned to Best-Supplier and becomes Best-Supplier's property.

### **EXCLUSIONS AND LIMITATIONS**

This Limited Warranty applies only to hardware products manufactured by or for Best-Supplier that can be identified by the "Looke TV" trademark, trade name, or logo affixed to them. The Limited Warranty does not apply to any non-Best-Supplier hardware products or any software, even if packaged or sold with Best-Supplier hardware. Manufacturers, suppliers, or publishers, other than Best-Supplier, may provide their own warranties to the end user purchaser, but Best-Supplier, in so far as permitted by law, provides their products "as is". Software distributed by Best-Supplier with or without the Looke TV brand name (including, but not limited to system software) is not covered under this Limited Warranty. Refer to the licensing agreement accompanying the software for details of your rights with respect to its use.

Best-Supplier does not warrant that the operation of the product will be uninterrupted or error-free. Best-Supplier is not responsible for damage arising from failure to follow instructions relating to the product's use.

This warranty does not apply: (a) to damage caused by use with non-Best-Supplier products; (b) to damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes; (c) to damage caused by operating the product outside the permitted or intended uses described by Best-Supplier; (d) to damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Best-Supplier or an Best-Supplier Authorized Agent, Distributor or Service Provider; (e) to a product or part that has been modified to alter functionality or capability without the written permission of Best-Supplier; (f) to consumable parts, such as batteries, unless damage has occurred due to a defect in materials or workmanship; (g) to cosmetic damage, including but not limited to scratches, dents and broken plastic on ports; or (h) if any product serial number has been removed or defaced.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. BEST-SUPPLIER'S RESPONSIBILITY FOR HARDWARE DEFECTS IS LIMITED TO REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY APPLE IN ITS SOLE DISCRETION. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE TERM OF THIS LIMITED WARRANTY. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE EXPIRATION OF THE LIMITED WARRANTY PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. No Best-Supplier's reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW, APPLE IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO OR CORRUPTION OF DATA; OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE WHATSOEVER CAUSED INCLUDING THE REPLACEMENT OF EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, PROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED OR USED WITH APPLE PRODUCTS AND ANY FAILURE TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENCE ACTS AND/OR OMISSIONS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Service options, parts availability and response times may vary. Service options are subject to change at any time. In accordance with applicable law, Best-Supplier may require that you furnish proof of purchase details and/or comply with registration requirements before receiving warranty service. Please refer to the accompanying documentation for more details on this and other matters on obtaining warranty service.

Best-Supplier will maintain and use customer information in accordance with the Best-Supplier Customer Privacy

If your product is capable of storing software programs, data and other information, you should protect its contents against possible operational failures. Before you deliver your product for warranty service it is your responsibility to keep a separate backup copy of the contents and disable any security passwords if available. **THE CONTENTS OF YOUR PRODUCT WILL BE DELETED AND THE STORAGE MEDIA REFORMATTED IN THE COURSE OF WARRANTY SERVICE.** Your product will be returned to you configured as originally purchased, subject to applicable updates. You will be responsible for reinstalling all other software programs, data and passwords. Recovery and reinstallation of software programs and user data are not covered under this Limited Warranty.

FCC NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.