# **Tablet PC Android Instruction Manual**

Please learn about the product as follow the instruction Manual.

Version: 1.0

#### NOTICE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this equipment not expressly approved by Shenzhen Xind Communication Equipment Co..Ltd may void the FCC authorization to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Radiofrequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### 1. Details

Thank you for choosing our products. Our company promise to provide high quality product. Each of our products has been tested strictly before launch. Please read the instruction manual before your usage.

### 1.1 Appropriate Layout

#### **Cautions**

- a. Keep away from moisture environment, such as the bathroom and kitchen.
- b. Usage under the range of temperature from 10-35 degree (50-95 Fahrenheit) with the moisture 20-80%
- a. Protect from blazing sunshine. Long-time exposure in high temperature may cause deformation.
- b. Please properly dispose the package and waste.
- c. Stay away from children.
- d. Please use it in a clear environment.
- e. Keep it away from the electromagnetic field.
- f. Away from Stereo System, for which may cause powerful electromagnetic field, data loss and LCD damage.

### 1.2 About Battery

#### Caution

- a. Do not use other power adapter. Otherwise it may cause damage or fire.
- b. Keep it away from fire. Otherwise it may cause explosion or fire disaster.Do not put the machine in 60 degree (140 Fahrenheit), otherwise it may cause explosion.

### 1.3 Connect to AC Power Supply

#### **Cautions**

- a. Please do not use the loose or damaged outlet, otherwise it may cause electric shock or fire.
- b. Use ground connection safely, otherwise it may cause electric shock and damage the apparatus.
- c. Do not touch the socket by wet hand, otherwise it may cause electric shock.
- d. Keep the plug close to the outlet when move the power wire.
- e. Charge and use your tablet PC under the appropriate voltage/current.
- f. If you hear any fizzy sound near the socket, please remove the plug and ask customer service for help.
- g. Keep the plug close to the outlet.
- h. Do not buckle the wire or place heavy object on it. Keep it away from children and pets.

  Damaged wire may cause electrical shock or fire.
- i. Keep the wire and plug clean.
- j. If anything leaks into the apparatus or adapter, please remove the power wire or any cables and ask the customer service for help.
- k. Remove all the wires before cleaning.

### 1.4 Use the apparatus

#### **Cautions**

- a. Please make sure you turn the power off when remove the tablet PC. Do not be stripped over.
- b. Obey the aviation guidance by air. Otherwise it may result in aircraft accident.
- c. Use soft cleaning product for PC only. Do not turn it power on while it is still wet.

- d. Remove the power wires in rainy or thunderingdays,otherwise it may cause electric shock or fire.
- e. Do not place water, chemical reagent or any liquid on the tablet PC. The leaking may cause electrical shock, fire or damage.
- f. Mercury contained in the LCD screen. If the liquid in damaged screen splashes into your eyes or skin, please rinse the skin immediately and see doctor if necessary.
- g. Do not scratch the screen with point object.
- h. Do not press the screen hard, otherwise it may damage the LCD screen.
- i. Do not take the battery apart, otherwise it may cause electric shock.

## 2. To Learn About Your Tablet PC

#### **2.1** Introduction of units and its function.

#### 2.1.1 Front View



- (1) Multi-touch screen
- (2) Backspace
- (3) Micro-camera

#### 2.1.2 Dorsal View



- (1) Plastic Lid
- (2) TF Card Expansion Slot (Within the plastic lid)

## 2.1.3 Right Side View




- (1) Menu Key / Volume down
- (2) Search Key / Volume up
- (3) Screen-rotation Lock

### 2.1.4 Overhead View



- (1) Headphone Jack
- (2) Microphone/Reset
- (3) Power on and off/ Sleep and wake button

## 2.1.5 底视图 Bottom View



- (1) 30 Pin
- (2) Speaker
- (3) Dock Connector

#### 2.2 Accessories

## 2.2.1 Power Adapter

Use under utility grid.



### 2.2.2 USB expansion (selected)



## 3. How to use

### 3.1 Charge Battery

r or

Whenthe built-in battery was low, it will show the icon on the status bar or the screen. Please charge in time.

Way to charge

- 1. Hock up the plug
- 2. The dynamic icon shows on the status bar
- 3. The icon will show on the status bar whencharged completely.

#### Attention:

Charging time will be longer if it is on.

### 3.2 Storage Space

There are three parts for storage: local storage space, memory card, an attached USB flash disk.

Open "ES File Browser"

"extsd" is for local storage.

"sdcard" is for memory card storage.

"udisk" is for an attached USB flash disk.

After accessing into file with the corresponding storage, you can browse, copy, shear, paste, delete etc.



### 3.3 How to Use Memory Card

### 3.3.1 Install Memory Card

Open the plastic lid, and place the TF card inside. The click sound shows it has been installed right.



Attention: No further information about the changed position of card slot.

### 3.3.2 User Guide of Memory Card

Wheninstalling the TF card, the icon the icon will appear on status bar of the screen, Then you can get operating.

Open "ES File Browser", tap "sdcard" file, and start your operation.



#### 3.4 Buttons

#### 3.4.1 Power Button

When it is power off, press the power button for three seconds to get it started.

When it is power on, short press the power button, and it will in standby status.

press the power button for three seconds to get it shut down.

press the power button for eight seconds to restart.



When it is in standby status, short press the power button to start.

### 3.4.2 Backspace

Under operating status, short press the backspace key to view previous page. press a little long to back to the home page.

### 3.4.3 Menu Volume Down / Menu Key

Under the operation, the setting menu will appear under the bottom of the screen by short press Volume Down / Menu Key.



Volume controlling bar will appear by pressing Volume Down / Menu Key for a little while. Keep the volumedown by 0.5 second per degree.



### 3.4.4 Voice up / Backspace Key

Under operating status, short press the Voice up / Backspace Key to view search page. Volume controlling bar will appear by pressing Voice up / Backspace Key for a little while. Keep the volume up by 0.5 second per degree.

#### 3.4.5 Screen-rotation Lock

Under operating status, to shift the screen-rotation lock to the volume key direction will lock the screen's rotation. Or you can view in any orientation—portrait or landscape.

### 3.4.6 Reset Key

When system halted or no response, sticking thin and point object (such as paper clip) to reset key can force tablet PC to shut down.

Attention: sticking it repeatedly may cause data loss. Please do not easily try.

#### 3.5 Screen Rotation

Our product supports gravity sensor with three directions of axes. The screen will rotate depending on how you handle it.



#### Attention:

- 1. The screen will not rotate if you set the screen-rotation lock.
- 2. Some applications which don't support the rotation will remain in one direction.

#### 3.6 Multi-touch Instructions

You can accomplish all the tasks by touching with your fingers only.

## 3.6.1 Opening Applications

Tap its icon on the home screen.



## 3.6.2 Long press operation

Press the screen for a little while until the dynamic effect shows.




## 3.6.3 Slide Operation

Dynamic effect appears when your finger slides.



## 3.6.4 Zooming In

Zooming-in effect appears when two fingers stretch.

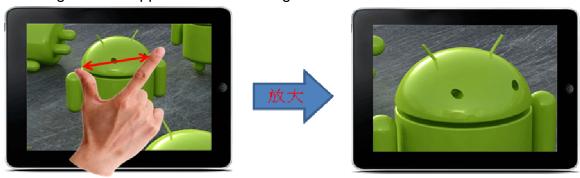

## 3.6.5 Zooming Out

Zooming-out effect appears when two fingers draw close.



### 3.8 Connection to your own PC


Use the data link to connect tablet PC and your own PC, then do the following steps:




Tap the red area and drag down




Tap "USB connected"

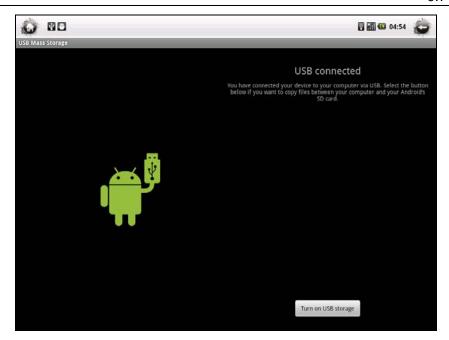

#### Turn on USB storage

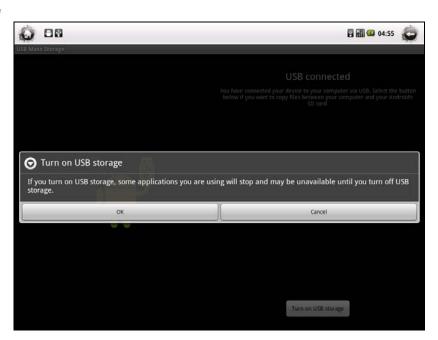

Tap OK

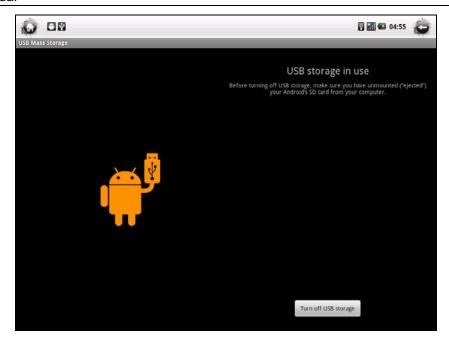

Attention: Turn off the USB storage before pulling out the data link.

### 3.9 Language and Keyboard Settings

Settings→Language and Keyboard Settings→ Text Settings, tick the input method you want.



Attention: Input method can be shifted by long pressing the input field.

## 4. Install and Upgrade Applications

### 4.1 Install Applications


All the systematic applications by Android are ended with the suffix name ".apk".

#### 4.1.1 Local and Micro SD Installation


Find the application stored on systematic disk or TF card through file browser, and tap the icon directly. Tap "Install" when tip screen asks "Do you want to install this application?"



The bar which show the process of installing.

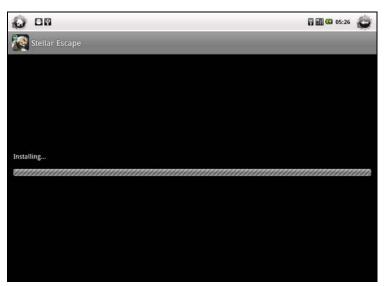

After tip screen showing "Application installed", you can choose "Open" or "Done".

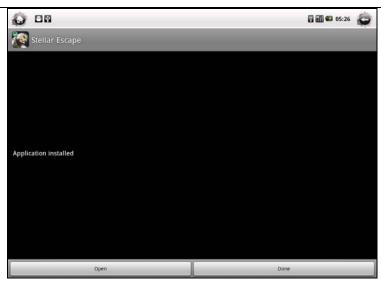


The installed application will appear on the home screen with corresponding item.



## 4.1.3 Location of Applications

Applications are installed to the local acquiescently.

Settings > Application Program > Application Program Management, you can select the setting applications. After Application info interface appearing, you may choose "Move to SD card" and the application is moved at once.

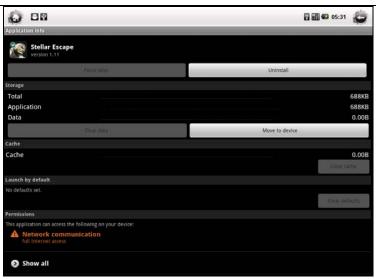

Attention: Settings→SD card and device memory →Uninstall the SD card Please uninstall the SD card first before you want to take it out.



## 4.2 System Upgrade

Our product supports systematic upgrading.

### **4.2.1** Upgrade the system by upgrading cards

Place the upgrading TF card in the expansion slot. Press the Volume up/ search Key and Power on Key for three seconds at the same time. It will upgrade and operate at once. When it is done, the tablet PC will turn off automatically. Then take out the upgrading cards and turn it power on. You can enjoy the newly upgraded system.

Attention: you can ask sales agent for upgrading cards.