

Android 2.2
User Manual

Directory1
1.Use statement2
2.Appearance Description2
2.1 Overall structure2
2.2 Button, and plug-ins3
3. The description of menu interface5
3.1 Desktop description5
3.2 Status Bar Description5
4.Basic set of equipment6
4.1 Wireless Control6
4.2 Sound and display7
4.3 Security and location7
4.4 Date and time8
4.5 Locate and text8
4.6 Battery Charging9
5. Software installation and management9
5.1 Browser9
5.2 E-mail10
5.3 Google Map10
5.4 Alarm clock11
5.5 build-in camera11
5.6 high definition digital output11
6. O / I File Manager11
7.FAQ12
7.1 Can not open the media player12
7.2 Screen flashing12
7.3 Headphones can not hear sound12
7.4 Can not copy the file12

#### 1. Use statement


Statement: The company are committed to quality innovation and continual improvement of software. If the final version of products has any differences from the description of the user guide, please subject to the final product. Thank you.


2. Appearance Description

#### 2.1 Overall structure




# 2.2 Button and plug-ins

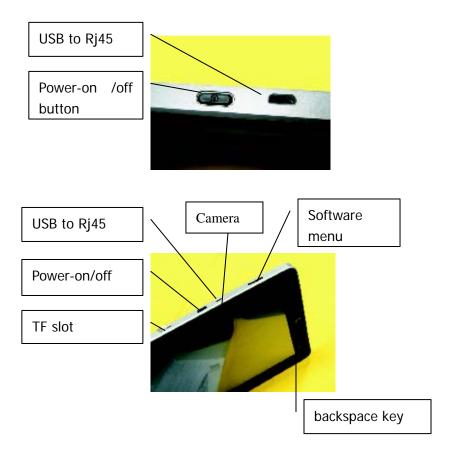

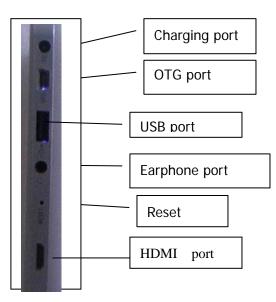

Note: if system halted, please insert one slender material into the reset key, then system will shutdown



insert an external charger, then charge lamp will come on;

When charge is completed, charge lamp will come off;

## 3. The description of menu interface

## 3.1 Desktop description

Clicking the icon" you enter the menu interface and choose the function which you need, such as email



## 3.2 Status Bar Description

The status bar is located on the top of the screen



On the top of the screen, from left to right, it shows: WIFI connect status, silent mode key , battery residual Two Volume adjustment keys, return key, menu key, Home key, Current time

## 4. Basic settings of e-pad devices

4.1 Wireless Control
Click the set-up" " in the menu
page to enter set-up interface



WI-FI setting: set up and manage the notice of access to the wireless. When The icon showed on the right is " with gray color ,that means WIFI is in the state of close



click network notification. When the right icon shows "
— ",it means device is scanning the available network.

The device will search automatically and add the nearby wi-fi network which can be connected. click wireless network port and then you can connect network.

#### 4.2 Sound and display

silent mode: All sound will become silent except for media and alarm

The Volume of media: Adjust the volume of media by dragging Volume key to right or left

Direction: It will change the direction according to the gravity when you rotate the MID

Cartoon: It will show cartoon when you open or close a window

Brightness: Adjust the brightness of screen by dragging to the right or left



Idle screen: There are six kinds of time interval for you to choose: 15 seconds,30 seconds,1 minutes,2 minutes,10 minutes and 30 minutes.

#### 4.3 Security and location

safety and location: set up my location and password selections, Using of wireless network, you can check the location of application by using wireless network Visible password: it will show your password when you typing them

#### 4.4 Date and time

Date and time: set up date, time, time zone and format Set up date and time: enter the interface of date setting to set up the date and time

Select time zone: enter the interface of time zone to set up the time zone

Set up time format: set up the display format of time Choose date format: Choose different display format of date



#### 4.5 Locate and text

set up the locate (language and area), text entry and automatic error correction

Select area: There are 54 kinds of languages to choose



#### 4.6 Battery Charging

There is a built-in battery, when the battery level is low, the system will recommend you to charge Way to charge: One end of the adaptor connect to power socket, the other to the power port of the device.

- 1, When the indicator light of charging is on , it means device is charging.
  - When the indicator light turns to green, it means battery is fully charged.
- 2, During the charging period, user can still use the Pc. Note: In the boot of state, .it takes long time for charging..

## 5. Software installation and management

5.1Browser

Click" and open the following web page Start: enter website by inputting web address



#### 5.2 E-mail

Click E-mail icon" and enter the e-mail, You can proceed as follows:

- 1. Set an e-mail account
- 2. Open a new e-mail
- 3. Send and receive e-mails

Note: Shortcut menu will popup when clicking the menu button..

### 5.3 Google map



- --Click the zoom icons on the touch screen to zoom in and zoom out images
- --Drag touch screen, move the image up-and-down and right-and-left

#### Click Menu:

- --search: search maps by entering address
- --Line: search drive circuit by entering starting and finishing address
- --Map mode: three modes to choose, map mode, satellite mode and traffic mode.
- --My position: Find out my current location by setting up "My Location"
- --more:more information about Google Map

#### 5.4 Alarm clock

Click " and enter the alarm clock settings



Set up time: Enter the interface of time settings to set up time

Set up hour format: set up displaying format of time Select the format of date: choose different format to show date.

#### 5.5 build-in camera

Autodyne or video chat, you can enjoy the happiness Which was brought by camera at any time.

#### 5.6 high definition digital output

With this function, you can connect the tablet with TV set, watching movie on large screen gives you super-fun.

#### 6.0/I File Manager

Click " \_ and enter O/I File manager, you can browse the files in the e-pad and T-Flash memory card.

Short click the menu key or click the mean software on the screen to bring up the operator interface.

Operation: bring up the operation interface

--Cut: Cut a file or folder--Copy: Copy a file or folder--Delete: Delete a file or folder

--Rename: Rename a file or folder

- --Select all :Select all files or folders
- --New:creat a new interface
- --File : creat a new file
- --Folder : creat a new folder
- --Search: Search files or folders

#### 7. FAQ

- 7.1 Can not open the media player
- --Check battery
- -Connect the power adapter and then check again
- --If it still cannot be opened, please contact our sales person
- 7.2 Screen is flashing after starting up
- --short of power, please charge
- 7.3 can not hear sound from Headphones
- --please check whether the volume has been set to 0
- --please check whether the music file has been damaged. Try playing other music to determine. If the file has been damaged, it could lead to serious noise or skips.
- 7.4 Can not copy the file
- --Confirm whether the computer and the player is properly connected
- --Confirm whether the storage space is full

#### FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE 3: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.