IMPRESSÌON



9.7" ANDROID TABLET Instruction Manual

IMP<u>RESSÌON</u>


Leader © 2012 Leader International Inc.
Impression is a trademark and service mark of Leader International Inc.
All products distributed by Leader International Inc. Unless otherwise indicated.
All other brand names, trademark and service marks are property of their owners.

225 S. Lake Avenue, Suite 300 , Pasadena, CA 91101

www.leaderinternationalinc.com

Contents

Controls	2
Function Keys	3
Launcher	
FwTool	10
Settings	11
Camera/Camcorder	19
Web Browsing	20
iReader	2
Application Installer	24
Task Manager	25
File Manager	
KOBO	28
SAM	31
Music Player	34
Video Player	36
Picture Browser	37
Email Setup	39
Clock Settings	42
Specifications	44
FCC Statement	46

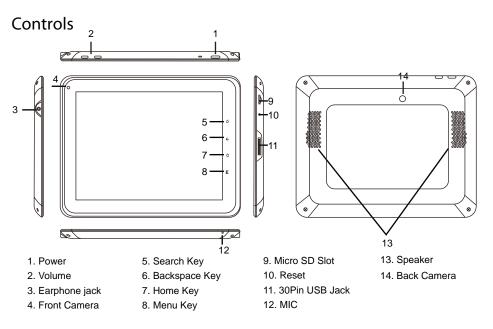

Function Keys

Home Key

- In the option pro ram menu or we pa e press home key to return to the main inter ace.
- Press hol the home key an it will show your recently opene applications.

Menu Key

- Press the Menu key to open the su menu or this pa e.
- Press the menu key a ain to close the su menu.
- Press hol the menu key in an application to open close the irtual key oar .
- hen the screen is locke press the Menu key to enalle the screen. Press it a ain to unlock the screen
 - I you ha e set the unlock mo e you can unlock the screen ase on your settin s.

Backspace Key

• Press the B CKSP CE key to return to the pre ious operation or pre ious screen.

Search Key

• Press search to enter search input inter ace.

On/Off Key

Turn ON

• Press and hold Power ON/OFF key to turn on the tablet pc.

Turn OFF

- Press ON/OFF key to lock the screen and enter sleep mode.
- Press and hold ON/OFF key: The mode selection window pops up. You can then choose silent mode, or power off.

Volume Key

- Press + to increase the volume.
- Press to reduce the volume.

Accessories Included in The Package:

Tablet pc

Power adapter

cable

nstruction anual

arranty ard

top card


e istration card

uick tart uide

o o card

Deluxe case

Launcher

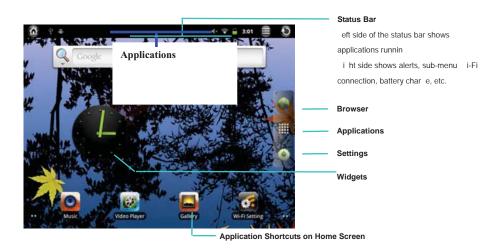

Screen Interface

ain screen interface is similar to a computer desktop.

Place application shortcuts and wid ets here.

Touch and swipe to o to ne t pa e, move thin s on the screen, etc.

Touch fin ers and spread apart or brin to ether to oom pictures in and out.

Widgets

Press the screen for - seconds. The dd to ome screen menu will pop up offerin you options to add wid ets, chan e wallpaper, etc.

Deleting Application shortcuts

Press and hold down the application button on the screen. The application list button will chan e to a trash can. ra the application to the trash.

Status Bar

Pay attention to the status bar on the top of screen. ficons show on the left, it is a reminder that applications are runnin . On the ri ht of the status bar, there are alarm settin s, i-Fi connection, battery char e, etc.

Status Bar Icons



hen a prompt is displayed on the status bar, touch it to open the notification.

- lick selection window to open prompt messa e
- lick on the top of the column to read the full messa e
- lose the column

Application List

lick the pplication ist icon to show the application library.



Touch an application icon to start it up.

Press and hold the application icon and a shortcut will be added to the home screen.

Press the ome key in the application list interface to return to the home screen.

FwTool

n the application list screen, lick the FwTool icon:



lick Touch e alibration

lick tart

The screen will automatically recalibrate in about seconds


Language Settings

Touch: ettin s an ua e keyboard elect lan ua e hoose an ua e




Screen Brightness Settings

Touch: ettin s isplay ri htness d ust slider and hit O

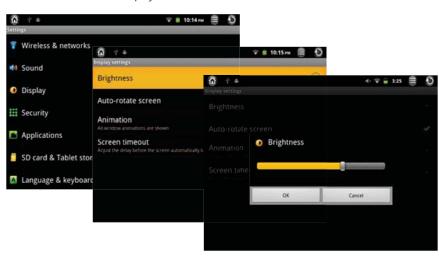

Screen Timeout Settings


Touch: ettin s isplay creen Timeout hoose Time

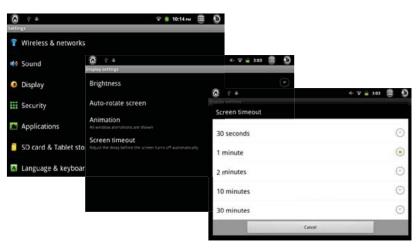

SD card Mount / Un-Mount

fter insertin a micro- card to the tablet, do the followin to install the card.

Touch: ettin s tora e ount card

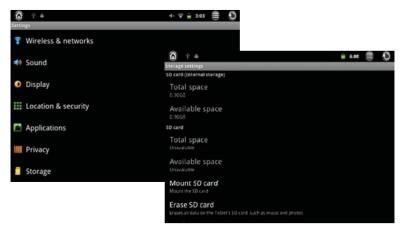

SD card Mount /Un-Mount (continued)



The ettin's screen will also show how much memory is available on the card as well as on the internal memory.

fter mountin a card, the selection will chan e to nmount card To uninstall the card select this option.

USB Connections

indicator when connected

The tablet can be connected with P by cable, and you will status bar while the tablet and P connected. Touch the status bar and swipe down it to open the dialo bo . cable, and you will see a icon be displayed on the



elect onnected and then click on the button Turn on stora e the tablet's internal stora e should now be enabled.

efore removin tablet from P , click on Turn off stora e to e ect it.






Wi-Fi Settings

Touch: enu ey ireless Networks i-Fi ettin s

lick i-Fi turn on i-Fi . Tablet will start searchin available networks.

hoose available network, input password and click onnect.

For advanced settin s, touch menu icon at ri ht of status bar and choose dvanced

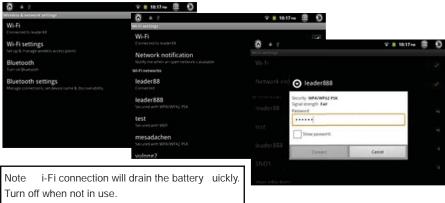

Camera/Camcorder

: Press this icon to select camera.



Web Browsing

efore usin $\,$ the internet browser, please make sure $\,$ i-Fi service was turned on. lick the $\,$ rowser icon to open the browser.

lick on the menu icon at the ri ht side of the status bar for browser commands.




iReader

hen you first run this application you will see the followin pictures, it likes a file mana er interface:






t will open the $\;$ icro $\;$ card by default. o you can see the T T files on the list, and you can touch the T T file to open it, see the ri ht picture:

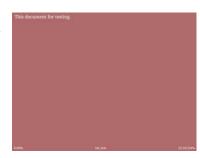

nd the ne t time, when you run i eader a ain, it will show you the file you read last time on the library, like the followin picture:

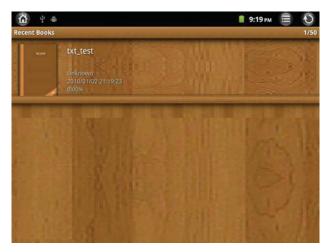


Application Installer

n the application list screen, click the P nstaller icon:

hoose application location or

choose ninstall

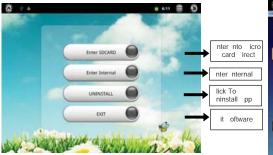



- elect application.
- lick nstall or cancel.

Task Manager

n the application list screen, click the Task ana er: icon:





arnin: se this screen with caution to avoid accidentally removin applications.

The Task ana er shows all the runnin applications and how much memory they are usin .

lick on an application to end it kill it or uninstall it.



File Manager

n the application list screen, click the File ana er icon:



:Press this icon, you can see the files in your icro card

: Press this icon, you can see the files in your device s internal stora e

: Press this icon you can chan e the file icon

: Press this icon, you can search the file which you are lookin for.

: press this icon you can create a new folder

: press this icon you can create a new file

: after you copy a file, you can press this icon to paste it to the place you want.

Iso you can press and hold one file which you want for up, and then you can choose the followin order to run it:



The Kobo App in i10A

obo offers F e eadin applications for the i . This means that you can browse, search, buy and read your favorite e ooks and download them directly to your device at anytime.

Opening Kobo and the Accounts screen

You use the obo application to read e ooks, please ensure that you ve connected i-Fi network before you open it.

Open Kobo

Touch the obo icon kobo on the home screen or launcher.

The first time you open the obo, it will show you the new version details on the screen.


Press O or back icon to close it.

Sign in or Create a new account

hen you open the obo on your device at the first time, your library will be empty. You need sin in your account if you have before or reate a new account on obo to view your library, and also you can visit their store to find hundreds of free titles to et you start.



fter you si n in, then you can search the books you need, and also you can buy it.

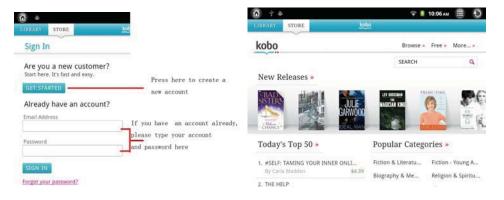

SAM (SlideMe)

(lide e) provides direct access to applications and ames to download and install on your tablet.

Opening SAM and finding applications

Open to browse and search for free and paid applications.


Open SAM

Touch the arket icon in the auncher or on the ome screen.

hen you open for the first time, you must read and accept the terms of service to continue, as the followin picture:



fter you accept it, you will see the followin picture:

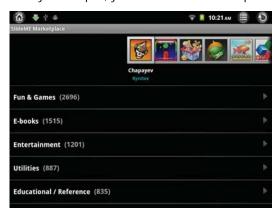

Then you can choose the type of application and touch it to open. nd you will see the followin picture:



Touch anyone you want to download and then press ownload to download the application you chose to your icro card.

hen the downloadin finished, the device will remind you install the application or not


automatically.

Press nstall

Then the application you download from has already installed in your tablet.

Music Player

n the application list screen, click the usic icon:

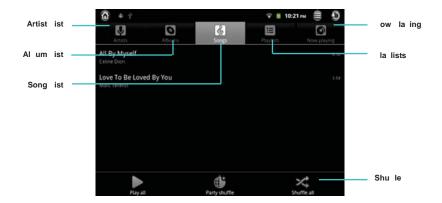


Song Screen



Video Player




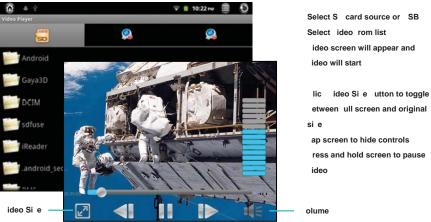

Picture Browser

n the pplication ist screen, click the allery icon:



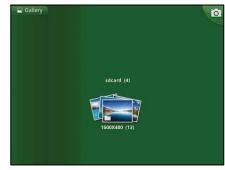

ap to select a picture or ideo ouch and Swipe to iew all the photos ideos

S card and SB sources will automaticall e scanned or pictures and ideos ouch the older to open the picture rowser



Pictures

Touch screen and \quad wipe left or ri ht to view the ne t or previous picture. Touch screen with \quad fin ers and spread apart to \quad oom or use +/- buttons .



- Tap screen to show / hide menu
- elect lideshow
- Tap enu for more options
 - elete
 - hare with luetooth device
 - o ore:
 - Photo details
 - et as wallpaper
 - rop
 - otate eft
 - otate i ht

Email Setup

n the pplication ist screen, click the



lick Ne t.

elect type of email account.



nput email address and password.



Email Setup (continued)



Follow the prompts to set up your email account.

Note: The values in the fields on the left are for illustration only. et all fields to the appropriate settin s for your account.

elect Ne t to o to the ne t screen.

f you are unsure about the settin s, contact your email host for details.

elect Ne t to o to the ne t screen.

Email Setup (continued)



elect how often to check for new email.


nable / disable email notification.

nter a name for this email account.


nter how you want your name to be displayed for out oin messa es.

elect one

Clock Settings

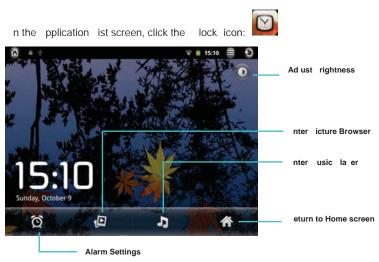

Alarm & Time Settings

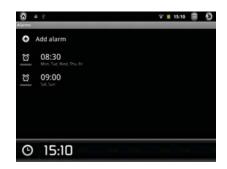

nter larm ettin s screen lick dd larm et Time

et time and alarm options



Specifications

Р		N Te ra ual core, orte
creen	isplay	. inch Touch Panel, P creen,
	esolution	
emory	Flash O	iN N
ntenna		uilt-in ntenna
ifi		. b/ /n
- ensor		upport
amera		. pi el Front camera . pi el back camera
udio		Ρ,
ideo		Ρ ,
Photo		P , PN

nput/Output	Touch Panel	apacitive type Touch Panel
	peaker	uilt in peaker
	eadphone	. mm stereo ack
		nternal icrophone
	1	icro lot, capacity up to support TF
		pin to
uttons / witches		. ardware Power ON/OFF witch and eset witch
		. olume p, olume own
		. ack ey, ome ey, enu ey, earch ey
	Туре	uilt-in echar eable . m h i-Polymer
attery	ctive	hrs battery life on full power mode with backli ht settin on
		mid ran e
ar har er	Output	pin char er , . ust use ori inal char er
ertification	e ulation	,F , o

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without RF striction.

Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation betweenthe equipment and receiver.
- ·Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ·Consult the dealer or an experienced radio/TV technician for help.

ndustry anada e uirement:

This lass apparatus complies with anadian - .

et appareil num ri ue de la classe est conforme la norme N - du anada.

Other names of systems and products mentioned in these instructions are usually the re-istered trademarks or trademarks of the manufacturers who developed the system or product concerned. The T- and @marks are not used to identify re-istered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printin . owever, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of eader nternational nc.. ny unauthori ed distribution of this manual is e pressly forbidden

eader international including find it necessary to modify, amend or otherwise chain e or update this manual. e reserve the right to do this at any time, without any prior notice. If specifications and features are subject to chain e without notice. If screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at: www.leaderinternationalinc.com

Or write to us at: eader nternational nc . ake venue, uite Pasadena,

opyri ht 🛭