Contents

Contents	1
Controls	2
Function Keys	
Home Key	
Menu Key	
Backspace Key	
Search Key	
On/Off Key	4
Volume Key	
Direction Key	
Recover Factory Settings	
Update System Version	
Accessories Included in The Package (请业务部确认配件信息)	
Touch Screen Interface	
Screen Interface	
Screen Interface	
Widgets	

Deleting Application Shortcuts	7
Status Bar	7
Status Bar Icons	8
Application List	9
Settings	10
Touch Screen Calibration	10
Language Settings	11
Screen Brightness Settings	12
Screen Timeout Settings	13
SD card Mount / Un-Mount	14
SD card Mount /Un-Mount (continued)	15
USB Connections	16
Wi-Fi Settings	17
Wi-Fi Settings	18
Camera/Camcorder	19
Web Browsing	20
Application Installer	22
Task Manager	23
File Manager	24

Music Player	25
Song Screen	26
Video Player	
Pictures	29
Email Setup	30
Email Setup (continued)	31
Email Setup (continued)	
Clock Settings	33
Alarm & Time Settings	
Specifications	
FCC Statement	

Controls

12

13

14

15

16

17

Power

Camera


Volume

USB Jack

Search Key

Backspace

Key

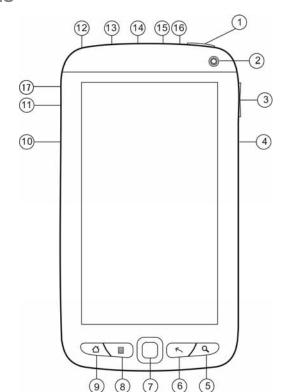

- 1 Direction Keys
- 2 Menu Key
- 3 Home Key
- 4 Mini USB Jack
- 5 Reset
- 6 Charge Jack
- 7 Micro SD Slot
- 8 Earphone Jack
- 9 Indicator
- 10 Indicator(Charging)
- 11 Microphone

< 2 >

Function Keys

Home Key

- In the option program, menu or webpage, press home key to return to the main interface.
- Press & hold the home key and it will show your recently opened applications.

Menu Key

- Press the Menu key to open the sub-menu for this page.
- Press the menu key again to close the sub-menu.
- Press & hold the menu key in an application to open/close the virtual keyboard.
- When the screen is locked, press the Menu key to enable the screen. Press it again to unlock the screen.

(If you have set the unlock mode, you can unlock the screen based on your settings.)

Backspace Key

• Press the BACKSPACE key to return to the previous operation or previous screen.

Search Key

• Press search to enter search input interface.

< 3 >

On/Off Key

Turn ON

Press and hold Power ON/OFF key to turn on the tablet pc.

Turn OFF

- Press ON/OFF key to lock the screen and enter sleep mode.
- Press and hold ON/OFF key: The mode selection window pops up. You can then choose silent mode, Wi-Fi mode or power off.

Volume Key

- Press + to increase the volume.
- Press to reduce the volume.

Direction Key

• The up/down/left/right direction keys can fix a program. The middle is the confirmation key to select the fixed program.

.

Recover Factory Settings

- Press Setting>Privacy>Factory data reset
- Note: The unit will be the initial situation as when you buy it after you recovered factory setting

Update System Version

Press Volume + button and reset button together, Then it will show the update status.

Accessories Included in The Package (请业务部确认配件信息)

- 1 Tablet pc
- 2 Power adapter
- 3 USB cable
- 4 Instruction Manual
- 5 Warranty Card
- 6 Registration Card
- 7 Pouch (only if ordered separately)

Touch Screen Interface



Screen Interface

Main screen interface is similar to a computer desktop.

Place application shortcuts and widgets here.

Touch and "swipe" to go to next page, move things on the screen, etc.

Touch 2 fingers and spread apart or bring together to zoom pictures in and out.

Widgets

Press the screen for 1-2 seconds. The "Add to Home screen" menu will pop up offering you options to add widgets, change wallpaper, etc.

Deleting Application Shortcuts

Press and hold down the application button on the screen. The application list button will change to a trash can. Drag the application shortcut to the trash.

Status Bar

Pay attention to the status bar on the top of screen. If icons show on the left, it is a reminder that applications are running. On the right of the status bar, there are alarm settings, Wi-Fi connection, battery charge, etc.

Status Bar Icons




When a prompt is displayed on the status bar, touch it to open the notification.

- Click selection window to open prompt message
- Click on the top of the column to read the full message
- Close the column

Application List

Click the Application List icon to show the application library.

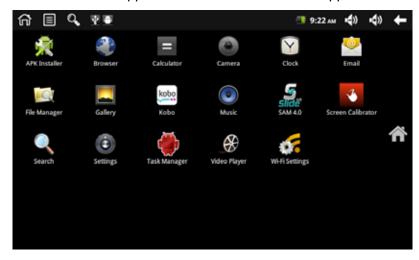

Touch an application icon to start it up.

Press and hold the application icon and a shortcut will be added to the home screen.


Press the "Home" key in the application list interface to return to the home screen.

Settings

Touch Screen Calibration

In the application list screen, Click the "Screen Calibrator" icon:



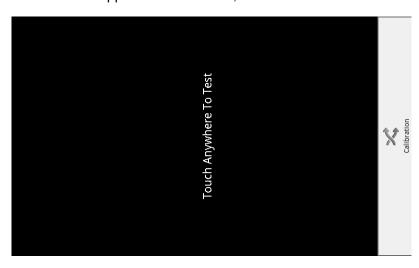


- 1 Click "Screen ReCalibrator"
- 2 Click "Menu Key">"Calibrator"
- 3 Click the point the screen shows you.

< 10 >


Language Settings

Touch: "Options" > "Language & keyboard" > "Select language" > Choose Language

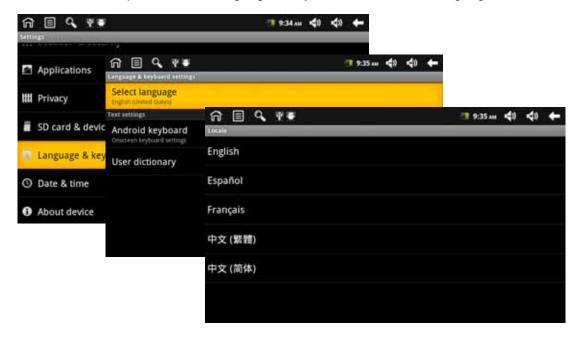


Screen Brightness Settings

Touch: "Settings" > "Display" > "Brightness" > Adjust slider and hit "OK"

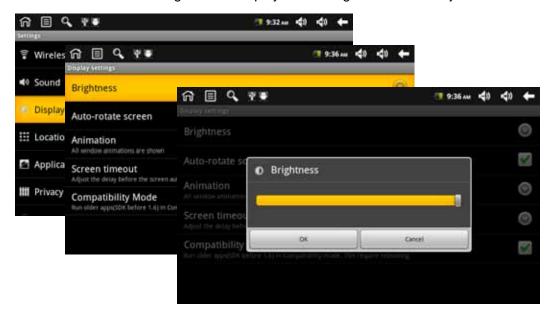

Screen Timeout Settings


Touch: "Settings" > "Display" > "Screen Timeout" > Choose Time

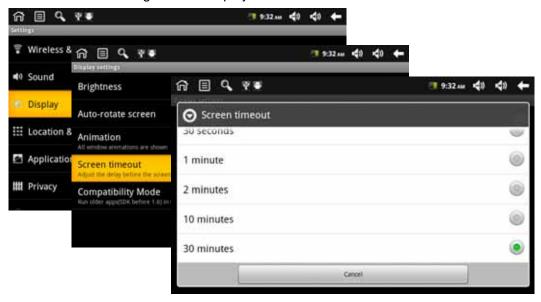


SD card Mount / Un-Mount

After inserting a micro-SD card to the tablet, do the following to install the card.

Touch: "Settings" > "SD Card & Tablet Storage" > "Mount SD card"

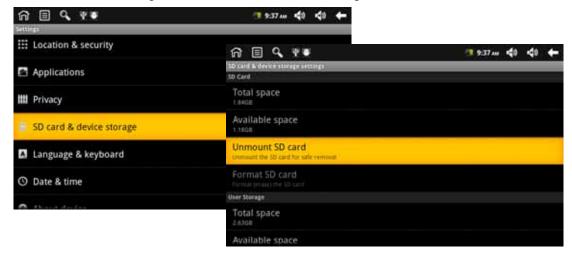

SD card Mount /Un-Mount (continued)

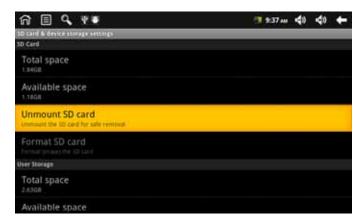

The Settings screen will also show how much memory is available on the card as well as on the internal memory.

After mounting a card, the selection will change to "Unmount SD card" To uninstall the card select this option.

USB Connections



To connect a USB device such as a flash drive, plug it into USB
The USB connection icon will be displayed, however you must first install the device.

First, touch the status bar and swipe down to open the dialog box.



The dialog at left will open.

Select "USB Connected"

Click on the button: "Turn on USB Storage"

The USB device should now be enabled.

Before removing USB device, click on "Turn off USB Storage" to eject the device.




< 17 >

Wi-Fi Settings

Touch: "Menu Key" > "Wireless & Networks" > "Wi-Fi Settings"

- 1 Click Wi-Fi (turn on Wi-Fi). Tablet will start searching for available networks.
- 2 Choose available network, input password and click "Connect".

For advanced settings, touch menu icon at right of status bar and choose "Advanced"

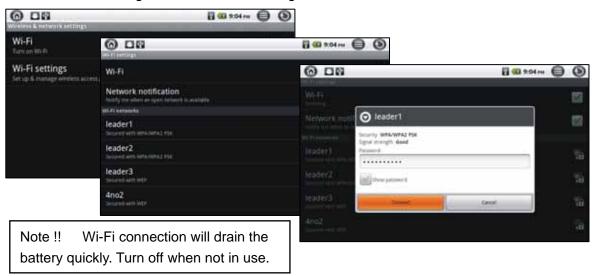


Camera/Camcorder

In the application list, click the "Camera" icon:



Note: Make sure you have an SD Card installed to use the Camera/Camcorder

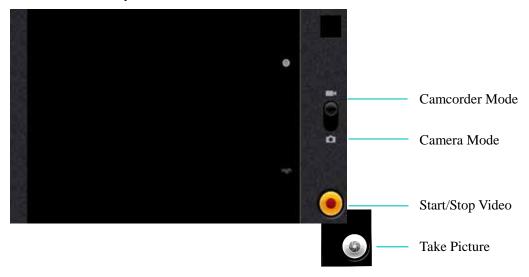

Web Browsing

Before using the internet browser, please make sure Wi-Fi service is turned on.

Click the "Browser" icon to open the browser.

Click on the menu icon at the right side of the status bar for browser commands.

New Window: Opens a new browser window.

Bookmarks: You can also just tap on the bookmark icon on the top right of each page. Here you can see your list of bookmarks. Just tap on one of them to open it in the current window.

New Windows: When you have several windows currently opened, tap on **Windows** to display the list of currently open windows. Tap on one to open it

Refresh / Stop: Will stop loading the web page, if it is currently loading. Will refresh the current web page once it has stopped loading.

Forward: Will go to the next page that you browsed.

More: Will give you access to other options (**Find on page** to search for a specific word on the current page, **Select text** to select a section of text to put into the system clipboard -- which you can then paste into another application such as an e-mail by holding down your finger in a text field), **Page info** to get information about the current web page, **Downloads** to view the list of items you have downloaded from the Internet. Go to **Home** > **Files** > **Downloads** to see the actual files that are saved on your device. Settings to adjust the way

the browser works.

Please note that some Web features requiring special plug-in software or Active X controls may not work in this special version of the Web Browser.



Application Installer

In the application list screen, click the "APK Installer" icon:



1 Choose application location (or choose Uninstall)



- 2 Select application.
- 3 Click Install or cancel.



Task Manager




In the application list screen, click the "Task Manager: icon:



Warning: Use this screen with caution to avoid accidentally removing applications.

The Task Manager shows all the running applications and how much memory they are using.

Click on an application to end it (kill it)or uninstall it.

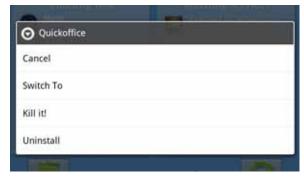

File Manager



In the application list screen, click the "File Manager" icon:



Use the file manager to organize files.

The icons across the left are for navigating to files on the SD card, internal storage, USB and to move up and down within the folders.


Click on the menu button

on the right side of the status bar to show the bottom menu. Use this to add a new folder or file.


Music Player

Marie

In the application list screen, click the "Music" icon:

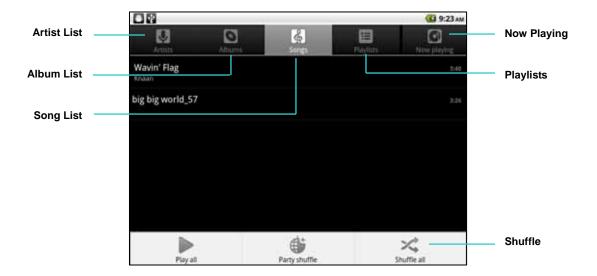

Song Screen

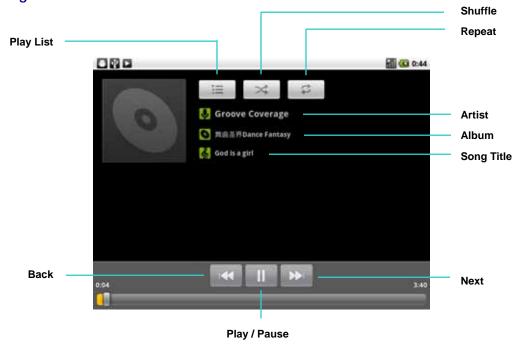

Video Player

⋒ 🗏 🔍 🕶

CrossFireCG2009.mp4

In the application list screen, click the "Video Player" icon:

12:18 ru **4**0 **4**0 **4**




- 1. Select SD card source or USB
- 2. Select video from list
- Video screen will appear and video will start.
- Tap screen to hide controls.

< 27 >

Gallery

In the Application List screen, click the "Gallery" icon:

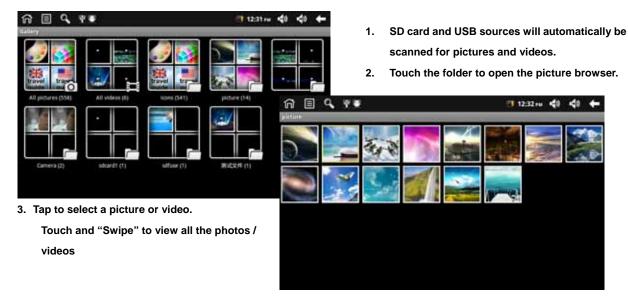

Pictures

Touch screen and "Swipe" left or right to view the next or previous picture.

Touch screen with 2 fingers and spread apart to zoom (or use +/- buttons).



- Tap "Menu" for more options
 - o Delete
 - Share with Bluetooth device
 - o Crop
 - o Set as
 - o Rotate
 - o More:
 - Slideshow
 - Setting

Email Setup



In the Application List screen, click the "EMAIL" icon:



2 Select type of email account.

Input email address and password.
 Click "Next".



Email Setup (continued)



3 Follow the prompts to set up your email account.

Note: The values in the fields on the left are for illustration only. Set all fields to the appropriate settings for your account.

Select "Next" to go to the next screen.

If you are unsure about the settings, contact your email host for details.

Select "Next" to go to the next screen.

< 31 >

Email Setup (continued)



Select how often to check for new email.

Enable / disable email notification.

Enter a name for this email account.


Enter how you want your name to be displayed for outgoing messages.

Select "Done"


Clock Settings

In the Application List screen, click the "Clock" icon:



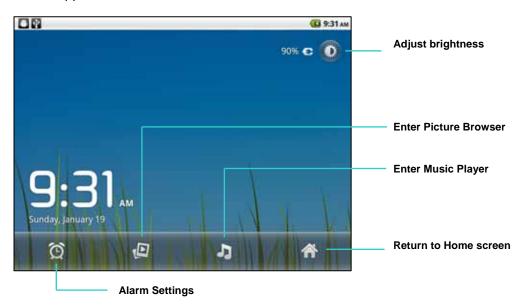

Alarm & Time Settings

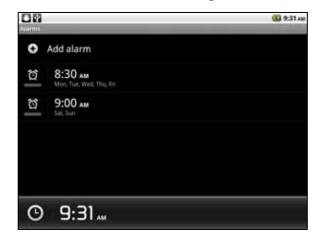

Enter "Alarm Settings" screen (see page 36) Click "Add Alarm" Set Time

Set time and alarm options



< 34 >

Specifications

CPU		MIPS , 600MHz
Screen	Display	7 inch TFT screen
	Resolution	800*480
Memory	Flash ROM	4 GB NAND Flash
	RAM	256MB DDR2
Antenna		Built-in Antenna
Wi-Fi		802.11 b/g/n
G-Sensor		3-axis accelerometer
Camera		0.3M Front camera
Audio		mp3 wma wav ogg rm arm
Video		Support: avi mkv(h264/xvid) mov mp4 rm rmvb 3gp MPEG-4
		asf
		Support: 720P

Photo		JPG、BMP、PNG
Input/Output	Touch Panel	Resistive type touch panel (two point)
	Speaker	Built in loud speaker
	Headphone	3.5mm stereo jack
	MIC	Internal MIC
	SD / MMC	TF slot, capacity up to 16GB
	USB	USB Host (A type) M ini USB Connector(Include USB 2.0 dev ice)
Buttons / Switches		1. Hardware Power ON/OFF key and Reset key
		2. Volume Up, Volume Down
		3. Back key, Home key, Menu key, Search key,
		4. Direction key: Up, Down, Left, Right and OK key
Battery	Туре	Built-in rechargeable 3.7V 3000mAh Li polymer
	Active	Up to 6 hours of watching video
Car Charger	Output	5V, 1.5A DC-Jack
Certification & Regulation		CE, FCC, RoHS

FCC Statement

FCC Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ·Reorient or relocate the receiving antenna.
 ·Increase the separation between the equipment and receiver.
- ·Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ·Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance:

- ·To assure continued compliance, follow the attached installation instructions.
- ·Use only the provided shield interface cables when connecting to computer.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with part 15 subpart B of the FCC Rules. Operation is subjected to the following conditions: (1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

- FCC Radiation Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF striction.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone or other product.

Industry Canada Requirement:

This Class B apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme á la norme NMB-003 du Canada.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM and $\ \mathbb{B}$ marks are not used to identify registered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Leader International Inc.. Any unauthorized distribution of this manual is expressly forbidden.

Leader International Inc may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at: www.leaderinternationalinc.com

Or write to us at:

Leader International Inc
225 S. Lake Avenue, Suite 300
Pasadena, CA 91101
USA

Copyright © 2011