INSTRUCTION MANUAL


A072G

7" Multi-Touch Tablet Tableta de 7" (17,8cm) Multi-Táctil



Dual-Core Processor / Procesador Dual-Core

Device Controls and Ports

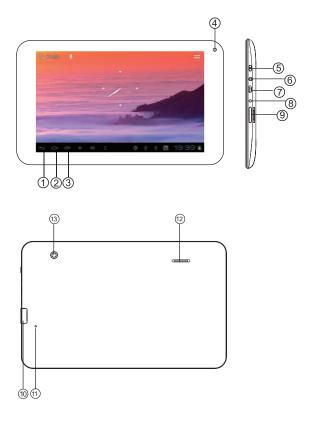

- 1. Back Key
- 2. Home Key
- 3. Open Apps Key
- 4. Front Webcam
- 5. Power

- 6. 3.5mm Audio Jack
- 7. Microphone (Mini-USB OTG port)
- 8. DC IN
- 9. HDMI
- 10.Micro SD card reader


- 11. Reset
- 12.Speaker
- 13. Back Webcam

Charging Your Device

Connect the AC adapter to your Tablet via the DC input on the bottom (illustrated below). The Tablet may also be charged via USB by connecting your Tablet to a PC with the included USB cable.

It is recommended that the Tablet be fully charged before the first use. A full charge and discharge (15% or below) cycle is recommended to maximize the battery's life and performance.

If the battery is completely drained please allow the Tablet at least 10-25 minutes to recharge prior to turning it on.

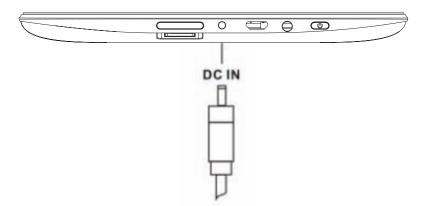

Note: When charging the tablet while powered OFF, the battery indicator will only appear momentarily. Although the battery indicator disappears, the tablet will continue to charge. A full charge takes approximately 3 hours.

Turn Device ON/OFF/Standby Mode

ON: Press and hold the Power button until the loading screen appears. Once the lock screen appears, unlock the Tablet by swiping your finger from the left 'Unlock' icon to the right 'Unlock' icon (illustrated below). Should the display 'Timeout' (or go black) before you are able to unlock the device, press the Power button for one second to turn the display back on.





OFF: Press and hold the Power button until the Tablet options appear. The options will prompt you to tap 'OK' to power the Tablet off or 'Cancel' to return back to the Home screen.

STANDBY: To enter Standby mode, simple tap and release the Power button. To wake up from Standby, tap and release the Power button.

NOTE: Leaving the device in Standby mode when not in use will result in a small battery drain. Switch the Tablet off completely to conserve power between charges.

Connecting to a Wireless Network

Note: To connect your Tablet to the Internet, you must have an Internet connection and a wireless network.

- **A.** Open the App Tray **** > Select 'Settings' > Switch the 'Wi-Fi' option from 'OFF' to 'ON' by tapping the 'OFF' icon.
- **B.** A list of networks will appear to the right of the screen> Select your network and enter the password/network key.
- **C.** Tap 'Connect' to complete the connection.

Tip: Check the "Show Password" box to verify password was entered correctly.



Browse the Web

Your Tablet Is equipped with a full HTML Web Browser that enables you to view webpages

- A. To access the Web Browser select the nicon from the App Tray.
- **B.** To enter a URL, tap the URL field at the lop of the browser and enter the desired link using the QWERTY keyboard.
- C.Tap 'Go' to load the page. .



Bookmark a Favorite Page

- A. Scrollto the top of the desired web page.
- B. Tap the star on the URL field ☆ >Tap 'OK.'



Settings: Date, Time, & Screen Timeout

Manual Time Setting

A. Open theApp Tray **** >Select 'Settings'> Scroll down to and tap 'Date & Time'> Select' Set Time'> Set the hour and minute by tapping the arrow keys; then tap 'Set.'

Manual Date Setting

A. Open theApp Tray **** >Select 'Settings'> Scroll down to and tap 'Date & Time'> Select 'Set Date'> Set the month, date, and year by tapping the arrow keys; then select 'Set.'



Auto Date & Time

A. Open the App Tray **** >Select 'Settings' > Scroll down to and tap 'Date & Time'> Select 'Automatic Date & Time' to check the box.

Note: The 'Automatic Date & Time' option sets the date and time using the network provided. Should an incorrect time zone appear, tap 'Select Time Zone' and find the appropriate time zone



Screen Timeout

A. Open theApp Tray *** >Select 'Settings'> 'Display'> 'Sleep.'

B. A dialogue box will appear with several options to choose from. Tap the length oftime (in seconds or minutes) before the Tablet goes black (to conserve battery life).

Home Screen, Application Shortcuts

Home Screen

A. This is your starting point. The Home screen features pre-installed games, shortcuts and many popular App links ready for download once you connect to the internet.





Add or Remove Favorite Apps from App Tray

A. To open the App Tray tap the **!!!** icon located at the upper right hand corner of the Tablet to display all of the applications that have been pre-installed or downloaded to your Tablet.

- **B.** To add to the Home Screen, tap and hold the desired app. Release the icon onto the Home screen.
- **C.** To remove an app from the Home screen, tap and hold the icon until it enlarges, then drag to the 'Remove' option that appears at the top of the screen.



Note: Apps that are running in the background may take up valuable memory and drain battery resources. Tap the — icon and swipe to close the apps.

Transfer Your Music/Photos/Videos

- A. Connect your Tablet to your PC via the USB cable.
- B. A USB symbol will appear in the Notifications Bar/Bottom Bar.
- C. Select the USB icon that appears in the Notifications Bar/Bottom Bar.
- D. Tap 'USB Connected'> 'Turn on USB Storage.'

Drag-and-drop your music, video, and photo files between your Tablet and PC.





Note: Your Tablet will be recognized as an external drive. Once completed, tap 'Turn off USB Storage' and remove Tablet from your PC.

Playing Your Music/Videos/Photos

Playing Music

- A. Go to App Tray then tap the 'Music' app.
- B. Select the desired song and adjust volume settings to your liking.
- C. To exit out of the app, tap 'Home or 'Back.'
- D. To stop music playback, go back to the Music app and tap 'Pause.'





Watch Videos

- A. Go to the App Tray and select 'Super-HD Player' 🗾
- **B.** Select the movie file to view.
- **C.** Once the video begins, you may select playback controls that appear on the display.

View Photos

- A. Go toApp Tray and select 'Super-HD Player' 🗾
- **B.** Tap on photo files you would like to view.

Online Video Streaming

Your Tablet is capable of streaming videos directly from the Internet or via 3rd party streaming applications. To properly run certain applications Adobe® Flash® Player may be required. Popular streaming video applications are available through the App Shop for download onto your Tablet. Prior to streaming films, download the application of your choice.



Webcam and Video Chat

Camera Use

A. Open the Camera application by taping the Webcam icon 🜇 .

B. Capture images shown on the display by tapping the apperture button

C. Tap the thumbnail of a in image that appears to view or edit the photo.



Note: You may also view your photos with the "Super-HD Player" app



Camera Functions

A. Tap the Trash can icon to delete.

B. Tap Menu > "Set Picture As" to set the photo as the table's background.

Camera Functions


A. Download and install your favorite video chat app from the App Shop.

B. The Wecam is set as the default camera for video chat.



Setting your Email

- A. From your App Tray, tap the 'Email' icon to enter the Email client.
- B. Enter an email address and a password.
- C. After you have entered your information, press 'Next' to move to the next step.
- **D.** The email app will test the incoming and outgoing mail servers. Once completed, you will be prompted to enter an account name and your name.
- **E.** The account name is used to identify the name of the account on the Tablet.
- **F.** Your name will be displayed on all outgoing messages sent from the email app on your Tablet.

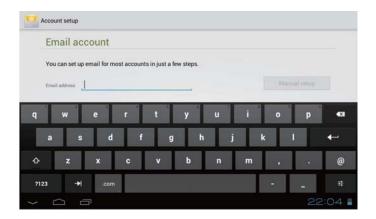

Certain email providers will require you to enter more details about the type of account you are using. You will have three choices: POP3, I MAP, and Exchange. If unsure of your account type, please contact your email provider for more information

FAQ s

How do I reset my Tablet?

If your Tablet won't turn on try resetting the device. To reset, first make sure the power source is unplugged. Press and hold the Power button for 10 seconds and then plug the power source back in. Press the Power button for another 2-3 seconds.

Note: To erase all data on the Tablet go to: Settings > Backup & reset > Factory Data Reset.

• Where can I download Android Apps from?

We've pre-installed the App Shop, giving you immediate access to well over 200,000 of the best Android apps available. Additionally, there are several 3rd party Android App Shop that offer free and paid Apps that you'll find at the App Shop for download. Google Play is not officially supported at this time.

• Why am I unable to connect to my Wi-Fi Network?

Make sure that the correct password is entered when connecting to your wireless network. To ensure a correct password is being entered enable the "Show password" option and double check for a case sensitive password. If you are still having problems you may need to contact your Wireless provider.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using standard operating positions accepted by the FCC with the wifi transmitting at its highest power level in all tested frequency bands, although the SAR is determined at the highest power level, the actual SAR level of the Mobile Internet Device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new Mobile Internet Device is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC,

Tests for each Mobile Internet Device are performed in positions and locations (e.g. worn on the body) as required by the FCC. For body worn operation, this Mobile Internet Device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that the device is 0mm to your body