

ENGLISH – Instruction Manual

SCX Design® Walnut Wood Wireless Earbuds and Charging Case
Reference: E18 / 32495 FCC ID: 2A2OH-E1830L
Color: Walnut

Please read the instruction manual carefully before using the product.


Product Specification:

Total Weight: 55.5g (3.8g X 2 earbuds)
Battery (charging box): 1.11Wh - 300mAh
Battery (earbuds): 0.148Wh to 0.1667Wh
Input: 5V
Distance: 10m
Play time: 5h per charge
Support: Android and iOS System

Includes 3 different sizes of eartips.

The logo lights up while charging or when the earbuds are removed/inserted.

Key functions:

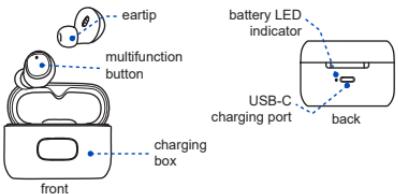

Connection:

1) Open the charging case and take the earbuds out.
2) Turn on the wireless pairing settings on your mobile device and select "E18.30L".

Notes: after successfully pairing with your device, if you put the two earbuds in the charging case, they will automatically turn off; if you remove them from the charging case, they will turn on and pair automatically with the previous device.

Reset the Pairing of the Two Earbuds:

If one of the earbuds is not working properly, it may be necessary to reset the pairing of the earbuds. Please follow these instructions:

1. Turn off smartphone wireless function
2. Put both earbuds back into the charging case while the indicator still flashes red
3. Take both earbuds out from the charging case, they will pair with each other automatically. Once paired, one earbud will light blue while the other will alternatively flash blue and red until connected wirelessly.

Charging of Product:

- Earbuds charge via the charging box.
- When the charging box's battery is low, the LED indicator turns red.
- The charging box can be recharged via the USB-C port thanks to the included cable.
- When the box is charging, the LED indicator turns blue.
- Once the charging is completed, the LED indicator turns green.

Button Control:

Play/Pause: 1 x Touch
Volume +/-: 2 x Touch (R) to increase / 2 x Touch (L) to decrease
Previous Song: 1 second Press (L) to return to previous song
Next Song: 1 second Press (R) to skip to next song

Warning!

Do not place or use this product near a source of high heat or in a humid environment.
Do not use if the equipment is damaged.
Only use the cables that are supplied with this equipment.
Keep the product out of reach of children.
Using your phone while charging it can cause higher temperatures.

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Never Store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).



Designed by SCX design
68 bis boulevard Pereire
75017 Paris – France

FRANCAIS – Manuel d'instruction

SCX Design® Walnut Wood Wireless Earbuds and Charging Case
Référence: E18 / 32495 FCC ID: 2A2OH-E1830L
Couleur : Noyer

Veuillez lire attentivement le mode d'emploi avant d'utiliser le produit.


Spécifications du produit :

Poids total : 55.5g (3.8g x 2 écouteurs)
Batterie (boîtier de chargement) : 1.11Wh - 300mAh
Batterie (écouteur) : 0.148Wh to 0.1667Wh
Entrée : 5V
Distance de transmission : 10m
Autonomie : 5h par charge
Support : Android et système iOS

Comprend 3 différentes tailles d'embouts.

Le logo s'allume pendant le chargement ou lorsque les oreillettes sont retirées/insérées.

Fonctions principales :

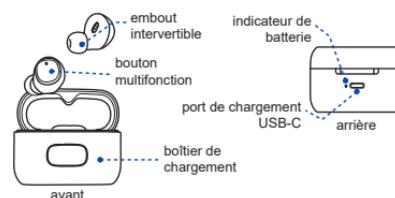

Connexion :

- 1) Ouvrez le boîtier de chargement et sortez les écouteurs.
- 2) Activez le menu de connexion sans fil de votre appareil et sélectionnez "E18.30L" pour vous connecter.

Remarque : après l'appairage avec votre appareil, les écouteurs s'éteindront automatiquement si vous les placez dans le boîtier de chargement. Si vous les retirez du boîtier de chargement, ils s'allument et se couplent automatiquement avec le périphérique précédent.

Réinitialisation de l'appareil :

Si l'un des deux écouteurs ne se connecte pas automatiquement, suivez les instructions suivantes :

1. Eteignez la connexion sans fil sur votre smartphone
2. Placez les 2 oreillettes dans le boîtier de chargement tant que la LED rouge est toujours allumée.
3. Retirez les oreillettes du boîtier, elles vont alors s'appairer automatiquement.
3. Une fois appairées, une oreille clignotera bleu tandis que l'autre clignotera alternativement rouge puis bleu en attendant d'être connectée à votre smartphone.

Chargement du Produit :

- Les écouteurs se chargent via le boîtier de chargement.
- Lorsque la batterie du boîtier est faible, le voyant s'allume en rouge.
- Le boîtier peut être recharge via le port USB-C grâce au câble de chargement fourni.
- Lorsque le boîtier est en charge, le voyant de charge s'allume en bleu.
- Une fois la charge du boîtier complète, le voyant s'allume en vert.

« Bouton multifonction » :

Play/Pause : 1 x Tape
Augmenter le volume : 2 x Tape sur l'oreille droite
Diminuer le volume : 2 x Tape sur l'oreille gauche
Chanson précédente : 1 pression de 1 seconde sur l'oreille gauche
Chanson suivante : 1 pression de 1 seconde sur l'oreille droite

Attention !

Ne placez pas et n'utilisez pas ce produit à proximité d'une source de chaleur élevée ou dans un environnement humide.
Ne pas utiliser si l'équipement est endommagé.
Utilisez uniquement les câbles fournis avec cet équipement.
Gardez le produit hors de portée des enfants.

Déclaration de la FCC :

Cet appareil est conforme à la partie 15 des règles de la FCC.
L'exploitation est soumise aux deux conditions suivantes :
Cet appareil ne doit pas provoquer d'interférences nuisibles.
Cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant provoquer un fonctionnement indésirable.

Ne jamais stocker ou utiliser ce produit à des températures inférieures à 32 °F (0 °C) ou au-dessus de 115 °F (45 °C).



IMPORTATEUR POUR LES ETATS-UNIS
ET LE CANADA
Distribué par Koozie Group
14421 Myerlake Circle
Clearwater, FL 33760
USA
Designed by SCX design
68 bis boulevard Pereire
75017 Paris – France

Instruction Manual

Manuel d'instruction

