

MERKURY

INNOVATIONS



Bluetooth

RHYTHMGLOW

LED Candle & Bluetooth Speaker

Included:

- LED Candle with Wireless Speaker
- USB Charging Cable
- User Manual


User Manual for

EBA0-240004A

IMPORTANT: PLEASE READ BEFORE USING THIS PRODUCT

ON-BOARD CONTROLS

(Buttons, Ports, and Indicators)

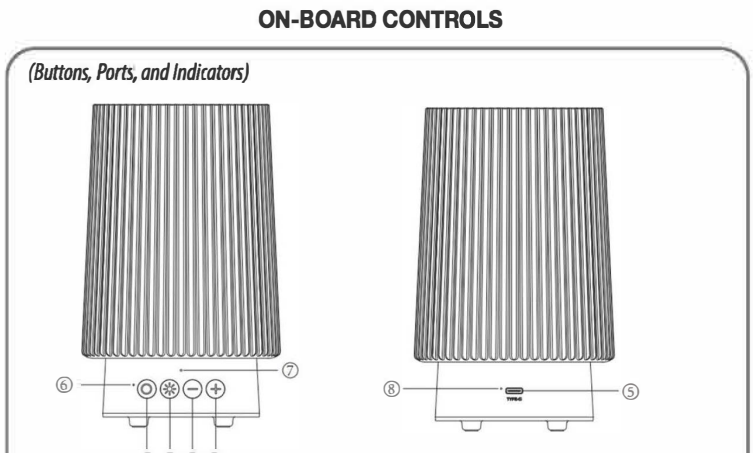

- Button 1: Press to play or pause when connected to Bluetooth®, or to answer/hang up calls. Press and hold for 3 seconds to turn the device on or off.
- Button 2: Press and hold to turn the lamp on or off, even when the device is not powered on. Press to adjust the warm white brightness (3 levels).
- Button 3: Press to decrease volume. Press and hold to go to the previous track.
- Button 4: Press to increase volume. Press and hold to go to the next track.
- 5: USB Type-C Charging Port
- 6: Bluetooth® Indicator Light
- 7: Built-in Microphone
- 8: Charging Indicator Light

SPECIFICATIONS:

- Bluetooth® Range: Up to 10m
- Input: 3.7V / Output: 3W
- Battery Capacity: 600mAh
- Freq. Response: 20Hz-20KHz
- Charging Time: 2 Hours

- Play Time: 3-4 Hours* (Light On)
- 6-7 Hours* (Light Off)
- Talk Time: 8 Hours
- Standby Time: 60 Hours
- Speaker Size: ø40mm

*Depends on individual use and may be slightly more or less than the time specified.

CONNECTING TO A DEVICE:

- Turn on the speaker. The blue light will flash to show it is ready to pair.
- Turn on Bluetooth® on your device (phone, tablet, etc.) and look for nearby devices.
- Choose "MERKURY BT134" to connect.

Note: If asked for a PIN, enter 0000.

TWS FUNCTION:

- To connect two speakers together, double-press Button 1 on both speakers.
- To disconnect the speakers, double-press Button 1 on one of the speakers.

When both speakers are turned on and not connected to Bluetooth® or each other (TWS), the Bluetooth® indicator lights on both speakers will flash. Once the two speakers are successfully paired in TWS mode, the main speaker's Bluetooth® indicator light will flash, and the other speaker's Bluetooth® indicator light will turn off. After the TWS pairing is complete, the main speaker's blue light will stay on when connected to a phone via Bluetooth®, and the other speaker's Bluetooth® indicator light will remain off.

Note: The Bluetooth® Indicator lights on the speakers will show the connection status.

BLUETOOTH® INDICATOR LIGHTS:

- Slow flashing blue light: Power is on.
- Fast flashing blue light: Searching for Bluetooth® devices or not connected to a device.
- Solid blue light: Connected to a Bluetooth® device.

Note: When the battery power drops below 3.4 volts (low), a low battery warning will sound. This warning will continue for 1 minute. If the battery power continues to drop and reaches 3.2 volts (very low), the device will automatically turn off.

POWER AND CHARGING:

- The device will turn off automatically if not used for 10 minutes.
- The device will trigger an alarm when the battery is low.
- To charge the device, plug the USB Type-C charging cable into the device and then into a power source.
- The red light will turn on while charging and turn off when fully charged.

TROUBLESHOOTING

Issue	Possible Cause(s)	Solution
Device won't turn on	Low battery	Check if the device is fully charged. Try resetting the device by pressing and holding Button 1 for 10 seconds.
Bluetooth® connection problems	• Bluetooth® not enabled on playback device • Speaker not in pairing mode • Device not paired	Ensure Bluetooth® is turned ON, on your device. Make sure the speaker is in pairing mode (blue light flashing rapidly). Try forgetting the device on your Bluetooth® settings and re-pairing.
Poor sound quality	• Low battery • Interference • Device not paired to optimal device	Check if the device is fully charged. Ensure the device is not placed near interference sources (microwave ovens, Wi-Fi routers). Try pairing the speaker with a different device.
Low battery warning doesn't sound	Volume is muted	Check if the volume is turned up.

TECHNICAL SUPPORT

If you are experiencing problems, do not attempt to fix the product by yourself or return it to the store you bought it from. Please refer to the user manual or just contact our helpful support team:

Merkury Innovations

45 Broadway, 3rd Floor,
New York, New York 10006
www.merkuryinnovations.com
support@mercuryinnovations.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

©2024 Merkury Innovations, LLC.

To explore our full selection of products, visit us at: www.merkuryinnovations.com

The illustrated product and specifications may differ slightly from that supplied. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. All other trademarks and trade names are those of their respective owners.

Made in China

CE

FC

RoHS





MERKURY

INNOVATIONS



Bluetooth

RHYTHMGLOW

LED-Kerze mit drahtlosem Lautsprecher

Packungsinhalt:


- LED-Kerze mit drahtlosem Lautsprecher
- USB-Ladekabel
- Bedienungsanleitung

Bedienungsanleitung für MI-BT134

WICHTIG: VOR DER VERWENDUNG DIESES PRODUKTES LESEN

INTEGRIERTE STEUERUNGEN

(Druckknöpfe, Anschlüsse und Anzeigeleuchten)

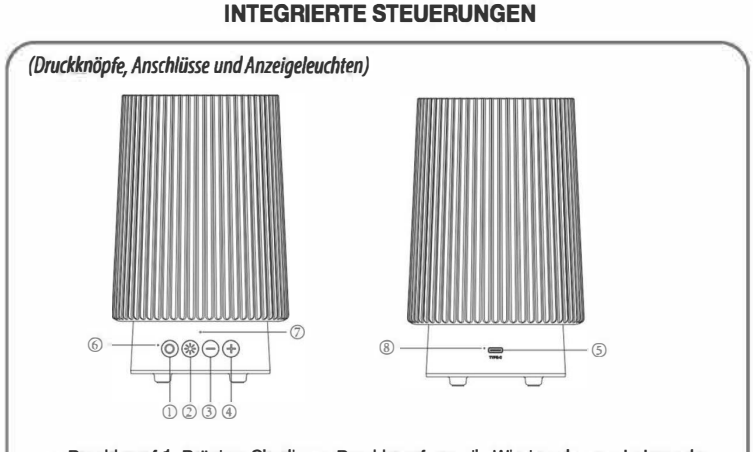

- Druckknopf 1: Drücken Sie diesen Druckknopf, um die Wiedergabe zu starten oder zu unterbrechen, wenn eine Bluetooth®-Verbindung besteht, oder um Anrufe anzunehmen/zu unterbrechen. Drücken Sie diesen Druckknopf und halten Sie ihn 3 Sekunden lang gedrückt, um das Gerät ein- oder auszuschalten.
- Druckknopf 2: Drücken Sie diesen Druckknopf und halten Sie ihn gedrückt, um die Lampe ein- oder auszuschalten, auch wenn das Gerät nicht eingeschaltet ist. Drücken Sie diesen Druckknopf, um die warmweiße Helligkeit (3 Stufen) einzustellen.
- Druckknopf 3: Drücken Sie diesen Druckknopf, um die Lautstärke zu verringern. Drücken Sie diesen Druckknopf und halten Sie ihn gedrückt, um zum vorherigen Titel zurückzukehren.
- Druckknopf 4: Drücken Sie diesen Druckknopf, um die Lautstärke zu erhöhen. Drücken Sie diesen Druckknopf und halten Sie ihn gedrückt, um zum nächsten Titel zu springen.
- 5: USB-Typ-C-Ladeanschluss
- 6: Bluetooth®-Anzeigeleuchte
- 7: Eingebautes Mikrofon
- 8: Ladekontrolllampe

SPEZIFIKATIONEN:

- Bluetooth®-Bereich: Bis 10m
- Eingangsspannung: 3.7V / Ausgangsleistung: 3W
- Batteriekapazität: 600mAh
- Freq. Frequenzgang: 20Hz-20KHz
- Aufladezeit: 2 Stunden

- Abspieldauer: 3-4 Stunden* (LED Ein)
- 6-7 Stunden* (LED Aus)
- Gesprächszeit: 8 Stunden
- Standby-Zeit: 60 Stunden
- Lautsprecher-Größe: ø40mm

*Hängt von jeder individuellen Verwendung ab und kann etwas mehr oder weniger als die angegebene Zeit betragen.

ANSCHLUSS AN EIN GERÄT:

- Schalten Sie den Lautsprecher ein. Wenn die blaue LED blinkt, ist er für die Verbindung bereit.
- Schalten Sie Bluetooth® an Ihrem Gerät (Telefon, Tablet, usw.) ein und suchen Sie nach Geräten in der Nähe.
- Wählen Sie "MERKURY BT134" für die Verbindung.

Anmerkung: Wenn eine PIN gefragt wird, geben Sie 0000 ein.

TWS-FUNKTION:

- Um zwei Lautsprecher miteinander zu verbinden, drücken Sie zweimal den Druckknopf 1 an beiden Lautsprechern.
- Um die Lautsprecher abzutrennen, drücken Sie zweimal den Druckknopf 1 an einem der Lautsprecher.

Wenn beide Lautsprecher eingeschaltet und nicht mit Bluetooth® oder miteinander verbunden sind (TWS), blinken die Bluetooth®-Anzeigeleuchten an beiden Lautsprechern. Sobald die beiden Lautsprecher im TWS-Modus erfolgreich miteinander verbunden sind, blinkt die Bluetooth®-Anzeigeleuchte des Hauptlautsprechers und die Bluetooth®-Anzeigeleuchte des anderen Lautsprechers erlischt. Nach Beendigung der TWS-Verbindung leuchtet die blaue LED des Hauptlautsprechers weiter, wenn er über Bluetooth® mit einem Telefon verbunden ist, und die Bluetooth®-Anzeigeleuchte des anderen Lautsprechers bleibt ausgeschaltet.

Anmerkung: Die Bluetooth®-Anzeigeleuchten an den Lautsprechern zeigen den Verbindungszustand.

BLUETOOTH®-ANZEIGELEUCHTEN:

- Langsam blinkende blaue LED: Die Stromversorgung ist eingeschaltet.
- Schnell blinkende blaue LED: Es wird nach Bluetooth®-Geräten gesucht oder es besteht keine Verbindung zu einem Gerät.
- Durchgehend blau leuchtende LED: Verbunden mit einem Bluetooth®-Gerät.

Anmerkung: Wenn die Batteriespannung unter 3,4 Volt (niedrig) sinkt, ertönt ein Batteriewarnton. Diese Warnung dauert 1 Minute lang. Wenn die Batteriespannung weiter sinkt und 3,2 Volt (sehr niedrig) erreicht, schaltet sich das Gerät automatisch aus.

STROMVERSORGUNG UND AUFLADUNG:

- Das Gerät schaltet sich automatisch aus, wenn es 10 Minuten lang nicht benutzt wird.
- Das Gerät löst einen Alarm aus, wenn die Batterie leer ist.
- Um das Gerät aufzuladen, stecken Sie das USB-Typ-C-Ladekabel in das Gerät und dann in eine Stromquelle.
- Die rote LED leuchtet während des Ladevorgangs auf und erlischt, wenn die Batterie vollständig geladen ist.

FEHLERSUCHE

Problem	Mögliche Ursache(n)	Lösung
Das Gerät schaltet sich nicht ein	• Leere Batterie	Prüfen Sie, ob das Gerät vollständig aufgeladen ist. Versuchen Sie, das Gerät zurückzusetzen, indem Sie es 10 Sekunden lang gedrückt halten.
Probleme bei Bluetooth®-Verbindung	• Bluetooth® am Abseilgerät nicht aktiviert • Lautsprecher nicht im Verbindungsmodus • Gerät nicht verbunden	Stellen Sie sicher, dass Bluetooth® am Gerät eingeschaltet ist. Stellen Sie sicher, dass sich der Lautsprecher im Verbindungsmodus befindet (die blaue LED blinkt schnell). Versuchen Sie, das Gerät in den Bluetooth®-Einstellungen zu löschen und erneut zu verbinden.
Unzureichende Tonqualität	• Leere Batterie • Störung • Gerät nicht mit optimalem Gerät verbunden	Prüfen Sie, ob das Gerät vollständig aufgeladen ist. Stellen Sie sicher, dass sich das Gerät nicht in der Nähe von Störquellen (Mikrowellen, Wi-Fi-Router) befindet. Versuchen Sie, den Lautsprecher mit einem anderen Gerät zu verbinden.
Der Warnton bei niedrigem Batteriestand ertönt nicht	Die Lautstärke ist stummgeschaltet	Prüfen Sie, ob die Lautstärke erhöht ist.

TECHNISCHE UNTERSTÜTZUNG

Im Falle von Problemen mit dem Produkt geben Sie es bitte nicht an das Geschäft zurück, in dem Sie es gekauft haben. Im Falle von Problemen versuchen Sie nicht, das Produkt selbst zu reparieren, und bringen Sie es nicht in das Geschäft zurück, in dem Sie es gekauft haben.

Merkury Innovations

45 Broadway, 3rd Floor,
New York, New York 10006
www.merkuryinnovations.com
support@mercuryinnovations.com

Dieses Gerät entspricht Teil 15 der FCC-Bestimmungen. Für den Betrieb gelten die folgenden zwei Bedingungen:
1. Das Gerät darf keine schädlichen Störungen verursachen.
2. Das Gerät muss den Empfang von Störungen zulassen, einschließlich von Störungen, die einen unerwünschten Betrieb verursachen können.

©2024 Merkury Innovations, LLC.

Siehe unsere gesamte Produktpalette unter: www.merkuryinnovations.com

Das abgebildete Produkt und die technischen Daten können leicht von den gelieferten Daten abweichen. Die Marke und das Logo BLUETOOTH® sind eingetragene Marken im Besitz der Bluetooth® SIG, Inc. Andere Marken und Handelsnamen sind Eigentum der jeweiligen Inhaber.

Hergestellt in China

CE

FC

RoHS





FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.