



IFYOO ONE PRO WX CONTROLLER

FOR PS 4, iOS, ANDROID, PC

User Manual

取扱説明書

Benutzerhandbuch

Guide de l'utilisateur



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement. the device can be used in portable exposure condition without restriction

Contents

WARRANTY & SUPPORT	1
INTRODUCTION & SPECIFICATION	2
PRODUCT OVERVIEW	3
PRODUCT FEATURES	4
CONNECT TO PS 4	5
CONNECT TO APPLE DEVICES	6
CONNECT TO ANDROID DEVICES	7
CONNECT TO PC	8
FAQ	9
WARRANTY & LEGAL	10
アフターサービス	12
製品の紹介 & 商品の仕様	13
製品概要	14
製品機能	15
PS 4に接続する	16
APPLE端末に接続	17
ANDROIDに接続する	18
PCに接続する	19
よく聞かれる質問	20
アフターサービス & 法律情報	21
GARANTIE UND KUNDENBETREUUNG	23
EINFÜHRUNG & PRODUKTSPEZIFIKATION	24
PRODUKTÜBERSICHT	25
PRODUKTMERKMALE	26
VERBINDUNG ZUM PS 4	27
VERBINDUNG ZUM APPLE-GERÄT	28
VERBINDUNG ZUM ANDROID-GERÄT	29
VERBINDUNG ZUM PC	29
FAQ	30
GARANTIEBESTIMMUNG & GESETZ	31
GARANTIE ET SUPPORT	33
INTRODUCTION & SPÉCIFICATION DU PRODUIT	34
APERÇU DES PRODUITS	35
CARACTÉRISTIQUES PRINCIPALES	36
CONNEXION À PS 4	37
CONNEXION À UN APPAREIL APPLE	38
CONNEXION À UN APPAREIL ANDROID	39
CONNEXION À UN PC	40
FAQ	41
GARANTIE & LOI	42

SAFETY INSTRUCTIONS

Warning: This product contains small parts, please do not swallow.

Children must use this product under adult supervision.

Recommended age for user: over 12.

- Please use the accessories in the package for assembly, and do not tamper the power cords, adapter or other parts of the product.
- In case of overheating, unusual smell or smoke, please immediately disconnect the device physically from the mains supply and contact the vendor. When charging the device, ensure good ventilation and always place the unit on non-flammable surfaces.
- In order to avoid product damage, please do not expose it to rain, high humidity or any unspecified outdoor environment. Please use the device in a dry environment.
- Please keep this device clean and dry, and avoid water, dust or other foreign matter into it.
- Please do not place the device near an open flame like a candle or similar.
- Please do not expose the device direct sunshine or over 40 degree Celsius environment.
- Please do not use water, alcohol or chemicals to clean the device directly. When cleaning, please disconnect the device from any power source.
- Please avoid falling down from height level against damage the product. Please use right steps to operate this device correctly and safely.
- Please do not disassemble and repair this device by yourself. If you encounter any problem that cannot be solved, please contact the vendor.



INTRODUCTION

IFYOO ONE Pro Bluetooth Gaming Controller (Model No.:IFYOO-V911), it's compatible with PS4, slim, Pro, iPhone (iOS 13.0 or later), iPad(iPadOS 13 or later), Macbook (Catalina or later), Android devices (android 10 or later), PC (windows XP, 7, 8,10,11)

Support PS 4 games.

iOS MFI games with game controller support.

Android Games with game controller support.

PRODUCT SPECIFICATION

Product	IFYOO ONE PRO WIRELESS CONTROLLER
Model No.	IFYOO-V911-WX
Compatibility	PS4, Apple Devices, Android Devices, PC
Connection	Bluetooth
Battery	600 mAh
Input Voltage	4.5~5V DC
Input Current	< 150mA
Working Temperature	0°C~45°C
Working Humidity	20~80%
Product Net Weight	272±10g
Product Dimensions	160 x 102 x 65 mm
Package Size	175 x 126 x 70 mm
Package Contents	1x ONE Pro Wireless Controller, 1x User Manual 1x TYPE C USB Cable

WARRANTY & SUPPORT

[One-year Warranty]

We offer a 90-day free replacement and one-year warranty service from the date of purchase. If there are any problem with the product, please do not hesitate to contact us.

[Drivers, Firmware Updates, Manuals & Video Tutorials]

For more information about the products and services, please visit our official website:


www.ifyoo.net

Download PDF manual, Firmware updates & drivers from:
www.ifyoo.net/support

Follow us on YouTube for more advanced video tutorials:
www.youtube.com/IFYOO



PRODUCT OVERVIEW

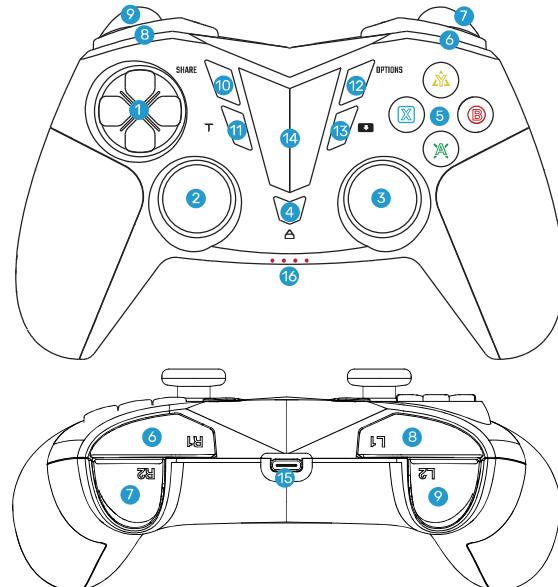

① D-PAD	⑤ :○△□ ABXY	⑨ L2 Trigger	⑬ TouchPad Press
② Left Stick L3	⑥ R1 Button	⑩ SHARE	⑭ LED BackLight
③ Right Stick R3	⑦ R2 Trigger	⑪ Turbo	⑮ USB C Charge Port
④ HOME	⑧ L1 Button	⑫ OPTION	⑯ LED Indicator

PRODUCT FEATURES

TURBO Function

Hold down the "TURBO" and then press "the button you want to set to turbo mode", TURBO function will be activate for this button. It allows continuous rapid fire.



The following buttons can set to Turbo mode:
A, B, X, Y, L1, R1, L2, R2, LSB, RSB


Notice: To deactivate the Turbo function, you just need to hold down the "TURBO" and press "the button have been activated the TURBO function", or you can reset the controller to cancel the TURBO function on all buttons.

Reset

When something goes wrong with the controller, you can reset the controller.

1) Find a SIM eject tool or an unfolded paper clip.

2) Insert it into the reset hole, hold the button for 3-5 seconds and release.

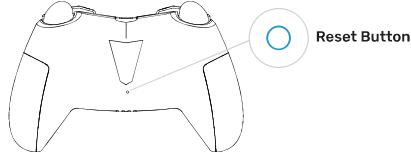

Charging


If the controller is low on battery, please charge it immediately. Use a USB C cable and 5V 1A adapter or plug it into your Console, PC to charge it, the 4 LED indicator light will Blink during charging and turn off when fully charged.

-4-

CONNECT TO APPLE DEVICE



Compatible with
iOS 13
iPadOS 13
tvOS 13
or above

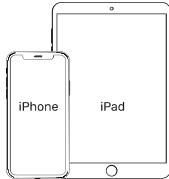

Pair it with iPhone, iPad, Apple TV



- 1) Hold the "B" buttons then Press "Home" buttons on the controller.
- 2) The LED backlight start flash green light rapidly.
- 3) On your Apple device, go to Bluetooth setting and turn bluetooth on.
- 4) Scan and choose "Xb** Wireless Controller".
- 5) You can now use your controller to play games support MFI controllers on your Apple devices.

Reconnect

Press the "Home" button to reconnect it with your Apple devices. The LED backlight will flash slowly then stay on after successfully reconnected.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:

How to Fix Pairing Problems

If the controller can not pair with your Apple Devices. Please rest the controller with an unfolded paper clip. Then reconnect the controller to your Apple device again.

Where to Find iOS Games with Controller Support

You can go to our website or google MFI games, you will find a list of games that support MFI controllers.

CONNECT TO PS 4



Pair it with PS4
with a USB Cable
when use it for the first time



Pair it with Your PS4

- 1) Connect the Bluetooth controller to your PS 4, using the USB cable that came with the controller. (USB-C to USB A).
- 2) Press the "HOME" button on the controller to pair it with your PS 4.
- 3) Once successfully paired, you can remove the cable and use the controller wirelessly.
- 4) You can use up to 4 controllers at the same time. Different LED backlight colors are assigned to different users.

Reconnect

Press the "Home" button to reconnect it with your PS 4. The LED backlight will flash slowly then stay on after successfully reconnected.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:

How to Fix Pairing Problems


If the controller can not pair with your PS 4. Please rest the controller with an unfolded paper clip. Then reconnect the controller to your PS4, using a USB cable.

-5-

CONNECT TO ANDROID DEVICES



Compatible with
Android 10
or later

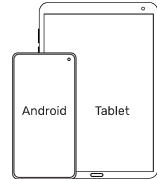

Pair it with Android Devices



- 1) Hold the "B" buttons then Press "Home" buttons on the controller.
- 2) The LED backlight start flash green light rapidly.
- 3) On your Android device, go to Bluetooth setting and turn bluetooth on.
- 4) Scan and choose "Xb** Wireless Controller".
- 5) You can now use your wireless controller to play games with controller support on your Android device.

Reconnect

Press the "Home" button to reconnect it with your Android devices. The LED backlight will flash slowly then stay on after successfully reconnected.

NOTE:

Auto connection may not supported by some Android Phones, you need to go to bluetooth setting to reconnect again.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:

How to Fix Pairing Problems

If the controller can not pair with your Android Devices. Please rest the controller with an unfolded paper clip. Then reconnect the controller to your Android device again.

Where to Find Android Games with Controller Support

You can go to our website or google Android games with controller support, you can find a list of games that support Dualshock 4 wireless controllers.

-6-

-7-

CONNECT TO PC



Compatible with
Windows XP, 7, 8, 10, 11



Pair it with PC via Bluetooth



- 1) Hold the "B" buttons then Press "Home" buttons on the controller.
- 2) The LED backlight start flash green light rapidly.
- 3) On your PC, go to Bluetooth setting and turn bluetooth on.
- 4) Scan and choose "Xb** Wireless Controller".
- 5) You can now use your wireless controller to play games with controller support on your Windows PC.

Pair it with PC via USB Cable

Use the USB cable that come with the controller, plug it into the USB port of your PC, the LED backlight turn on purple light.

Reconnect

Press the "Home" button to reconnect it with your PC. The LED backlight will flash slowly then stay on after successfully reconnected.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:

For the best gaming experience, it is recommended to use Wire mode on PC. Bluetooth is compatible with window 10, 11. For windows XP, 7, 8 wire mode is recommended.

-8-

WARRANTY

This product is guaranteed by Shenzhen Jing Waishe Technology Co., Ltd. for a period of 12 months from the date of purchase. During this period if there is a defect due to faulty materials or workmanship, the retailer from whom you purchased it will replace it with the same or a similar model on presentation of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

LEGAL

IFYOO is a registered trademark. ©2019 Shenzhen Jing Waishe Technology Co., Ltd.

All other trademarks are the property of their respective owners. All rights reserved.

Product features, appearance and the specifications may be subject to change without prior notice. Please retain this information for future reference.



The crossed out wheelie bin symbol on the product means that under the WEEE regulations, all consumer and household electrical and electronic products should not be mixed with general household waste as it may contain environmentally hazardous substances. For environmentally responsible recovery, recycling and treatment of the product, contact your local authority for details of your nearest designated collection point.

FAQ

Q: What devices can ONE Pro Wireless Gaming Controller work with?

A: PS 4, Apple Devices (iOS 13, iPadOS 13, TVOS 13), Android Phone, Android Tablet, Android TV (Android 10 or later), Windows PC (XP, 7, 8, 10, 11)

Q: How to reset the controller?

A: When something goes wrong with the controller, you can reset the controller.

1. Find a SIM eject tool or an unfolded paper clip.
2. Insert it into the reset hole, hold the button for 3-5 seconds and release.

Q: What games will work with the ONE Pro Wireless Gaming Controller?

A: For PS 4, it support most of the games.

For Android Smartphone and Tablet, you can find a list of compatible games on our website, or google Android Games with controller support.

For Apple devices, you can find a list of compatible games on our website or go to: mfigames.com.

Q: Why the controller does not vibrate?

A: Check out whether the game support vibration, if the game support vibration, please check whether the vibration function is started in the game settings. Vibration doesn't work on Apple & Android devices.

If you encounter Bluetooth interference problems while using, please disconnect other Bluetooth devices, or use it via USB Cable.

-9-

安全に使用するため

警告：本製品には細かい部品が含まれていますので、飲み込んだりしてはいけません。子供は大人の監督のもとで本製品を使用しなければなりません。

目安年齢：12歳以上

- ・梱包内の部品を使って装着してください。電源ケーブル、アダプターなどの部品を改竄しないでください。
- ・本製品が過熱し、異臭や煙が発生した場合は、直ちに本製品と給電設備を切り離して、メーカーの方とご連絡ください。本製品を充電する時、通風を確保し、不燃性の場所に本製品を放置してください。
- ・製品の損壊を避けるために、雨中、高湿度環境などの室外環境で晒さないでください。本設備は乾燥した環境で使用してください。
- ・本製品を清潔、乾燥に保持して、水・ほこり・その他の異物が入らないようにしてください。
- ・口ウソクや類似品等明るい火炎の近くに本製品を放置しないでください。
- ・口ウソクや類似品の発熱物等、高温物の近くに本製品を放置しないでください。
- ・水、アルコールや化学薬品で直接本製品を掃除しないでください。掃除する時、本製品と電源の接続を切ってください。
- ・破損を避けるために、本製品を落としたり衝撃を与えないでください。正しい操作手順で本製品をお使いください。
- ・本製品自分で分解したり、修理したりしないでください。何か解決できない問題がございましたら、サプライヤーとご連絡ください。



アフターサービス

[保障サービス]

不良品があった場合は、90日間の無料で代替品を発送します。この商品に対しては、一年間の保証サービスが提供されますので、万が一商品に不具合がございましたら、お気軽にお問い合わせ下さい。

[取扱説明書 | ドライバ | フームウェアの更新 | ビデオチュートリアル]

商品やサービスの詳細については、公式サイトをご覧ください:
www.ifyoo.net

PDF取扱説明書、ファームウェアアップデート、ドライバをダウンロードしてください:
www.ifyoo.net/support

YouTubeでは、より高度なビデオチュートリアルをご覧いただけます:
www.youtube.com/IFYOO



-12-

製品の紹介

IFYOO ONE Pro Wirelessゲームコントローラー(モデル:IFYOO-V911-Wireless)はPS4、APPLE端末(iOS 13, iPadOS 13, tvOS 13)Android端末(10以上のバージョン)、Windows PC (XP, 7, 8, 10, 11)に適用されます。



ほとんどのPS 4ゲームに対応します。AppleデバイスではMFIコントローラーに対応するゲームをプレイできます。Androidデバイスではコントローラーに対応するゲームをプレイできます。

商品の仕様

製品名	IFYOO ONE PRO WIRELESS ゲームパッド
製品型番	IFYOO-V911-WX
対応プラットフォーム	PS 4, Appleデバイス, Android デバイス
プロトコル	Bluetooth
電池	600mAh
作業電圧	4.5~5V DC
作業電流	< 150mA
作業温度	0°C~45°C
作業湿度	20~80%
製品重量	272±10g
製品サイズ	160 x 102 x 65 mm
包装サイズ	175 x 126 x 70 mm
梱包リスト	1x ONE Pro ワイヤレスコントローラー, 1x 取扱説明書 1x TYPE C USB

-13-

製品概要

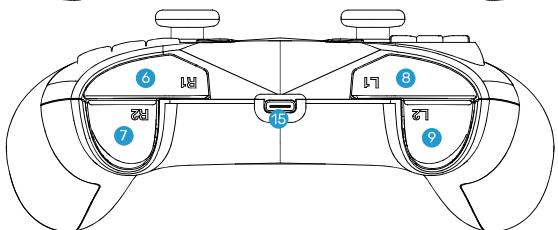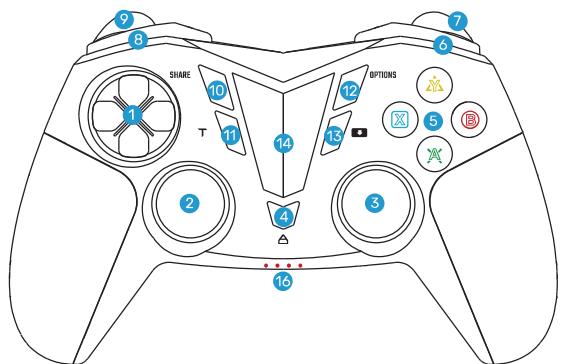

① D-pad	⑤ ◻ ◌ □ △ ABXY	⑨ L2	⑬ タッチパッドブレス
② 左スティック L3	⑥ R1 ボタン	⑩ SHARE	⑭ LED バックライト
③ 右スティック R3	⑦ R2	⑪ TURBO	⑮ USB C 充電ポート
④ HOME	⑧ L1 ボタン	⑫ OPTION	⑯ LED インジケーター

* コントローラーを使用する前に充電してください。

-14-

製品機能

TURBO自動連発機能

TURBO+【自動連発機能を設定したいボタン】と一緒に押すと、このボタンの自動連発機能は有効になります。ボタンの自動連発とは、某ボタンを押し続けて、自動的に繰り返しボタンの機能を実現できるという。




自動連発機能を有効に設定できるボタン:
A, B, X, Y, LB, RB, LT, RT, LSB, RSB

ご注意:自動連発機能をキャンセルしたい場合は、TURBO+【自動連発機能が有効になったボタン】と一緒に押すとキャンセルできます。またはコントローラーと端末の接続を切断して、全てのボタンの自動連発機能をキャンセルできます。

リセット

コントローラーに異常があると、ゲームパッドをリセットできます。

1. SIMカードを取り出すツールまたは広げたペーパークリップを使用します。
2. リセットホールに挿入し、3-5秒間押してから離します。

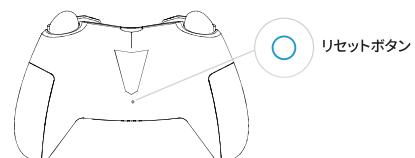

充電

コントローラーのバッテリー残量が低下している時は、お早めに充電してください。USB TYPE-Cケーブルと5V 1Aのアダプターを使用するか、ゲーム機やコンピューターに接続して充電してください。充電中、4つのLEDインジケーターが点滅します。充電が完了すると、インジケーターが消灯します。

-15-

PS4に接続する



初めて使用する時
USBケーブルでペアリングする必要があります

PS4とのペアリング

- 1) ゲームコントローラーの付属USBケーブルを使用し、コントローラーをPS4本体に接続します。(USB-C to USB A)
- 2) コントローラーの「Home」キーを押してペアリングします。
- 3) ペアリングが完了した後、ケーブルを外してワイヤレスで使用できます。
- 4) 最大4つのゲームコントローラーを同時に使用できます。各ゲームコントローラーのLEDバックライトの色が異なります。

再接続

「Home」キーを押してPS4本体に再度接続すると、LEDバックライトがゆっくり点滅します。

ゲームパッドをオフにする

「Home」キーを約6秒間押して電源を強制的に切れます。

ご注意:

ペアリングと充電の問題に対応する方法


コントローラーをPS4本体とペアリングできない場合は、ペーパークリップを広げてリセットホールに挿入し、コントローラーをリセットできます。

-16-

APPLE端末に接続



互換性
iOS 13
iPadOS 13
tvOS 13

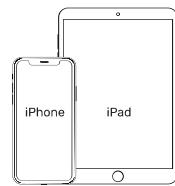

iPhone、iPad、Apple TVとのペアリング

1) 「B」キーを押したまま、「Home」キーを短く押すと。
2) LEDバックライトは緑に点滅します。

3) APPLEデバイスの電源を入れ、Bluetooth設定でBluetoothをオンにします。

4) 検索して「Xb** Wireless Controller」を選択します。

5) この時点で、APPLEデバイスでワイヤレスコントローラーを使用し、MFIコントローラーに対応するゲームをプレイできます。

再接続

「Home」キーを押してAPPLEデバイスに再度接続すると、LEDバックライトがゆっくり点滅します。

ゲームパッドをオフにする

「Home」キーを約6秒間押して電源を強制的に切れます。

ご注意:

ペアリングと充電の問題に対応する方法

コントローラーをAPPLEデバイスとペアリングできない場合は、ペーパークリップを広げてリセットホールに挿入し、コントローラーをリセットできます。

どうやってMFIコントローラーに対応するiOSゲームを検索できますか?


当社の公式サイトまたはGoogleにアクセスし、MFIゲームを検索できます。

-17-

ANDROID端末に接続



互換性
Android 10
以降

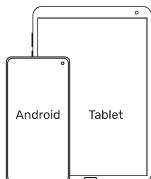

Android Phone, Tablet, TVとのペアリング

1) 「B」キーを押したまま、「Home」キーを短く押すと。
2) LEDバックライトは緑に点滅します。
3) Androidデバイスの電源を入れ、Bluetooth設定でBluetoothをオンにします。
4) 検索して「Xb** Wireless Controller」を選択します。
5) この時点で、Androidデバイスでワイヤレスコントローラーを使用し、コントローラーに対応するゲームをプレイできます。

再接続

「Home」キーを押してAndroidデバイスに再度接続すると、LEDバックライトがゆっくり点滅します。

一部のAndroid機種では、自動ペアリング機能は利用できません。スマートフォンのBluetooth設定で手動で接続する必要があります。

ゲームパッドをオフにする

「Home」キーを約10秒間押して電源を強制的に切れます。

ご注意:

ペアリングと充電の問題に対応する方法

コントローラーをAndroidデバイスとペアリングできない場合は、ペーパークリップを広げてリセットホールに挿入し、コントローラーをリセットできます。

どうやってコントローラーに対応するAndroidゲームを検索できますか?

当社の公式サイトまたはGoogleにアクセスし、コントローラーに対応するAndroidゲームを検索できます。

PC端末に接続



互換性
Windows 11, 10,
7, XP以降



BluetoothでPCとペアリング

1) 「B」キーを押したまま、「Home」キーを短く押すと。
2) LEDバックライトは緑に点滅します。
3) PCデバイスの電源を入れ、Bluetooth設定でBluetoothをオンにします。
4) 検索して「Xb** Wireless Controller」を選択します。
5) この時点で、PCデバイスでワイヤレスコントローラーを使用し、コントローラーに対応するゲームをプレイできます。

USBケーブルでPCとペアリング

コントローラーに付属のUSBケーブルを使用して、PCのUSBポートに接続します。PCのUSBポートに接続すると、LEDバックライトが紫色に点灯します。

再接続

「Home」キーを押してPCデバイスに再度接続すると、LEDバックライトがゆっくり点滅します。

ゲームパッドをオフにする

「Home」キーを約10秒間押して電源を強制的に切れます。

ご注意:

BluetoothワイヤレスモードはWindows 10、11で利用可能です。
Windows XP、7の場合は、有線接続をお勧めします。