
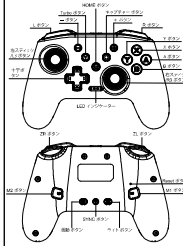


Wireless Controller For NS Quick Start Guide

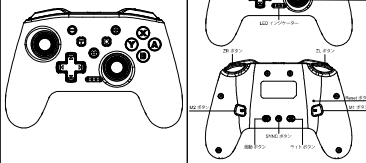

Connection Method

I. Connect to NS:
Notice: Please turn off airplane mode
connected.
① Enter the connection interface (not

Image 1



Image 3

Press the **[HOME]** button can wake up and reconnect after the first connection with the controller.

To connect, please follow under three steps to turn on airplane mode.

1. Press the information of this controller in the N3 console system setting-controllers and personal sound settings.

2. Follow the first time connection method and repair again.

Connect to Android Devices:

1. Turn on the Bluetooth function of Android device and search for the device.

2. Press the "A" and "HOME" button on the controller at the same time until LED1 and LED2 flash and then release your finger.

3. Press the "A" and "HOME" button on the controller at the same time until the Bluetooth name "Gamepad" on the Android device pairing, LED1 and LED2 are always on after successful connection.



► The controller supports **HD** mode only on the Android device.

Note: On the Android device, the vibration function, arrow and motion control functions are not available on the web controller.

III. Connect to iOS Devices:

1. Turn on the Bluetooth function of iOS device and set it to the discoverable mode.
2. Press the "W" and "HOME" button on the controller at the same time until **LED2** and **LED1** both turn red and then release your finger. The iOS device may show "Ask About Android Controller". Click on the pairing, **LED2** and **LED1** are always flashing.

► The controller supports **HIFI** games on the iOS device.

Note: This wireless controller only supports the iOS 10.0 or above system. The vibration function, screenshot, and control functions are not available.

IV. Connect to Windows PC:

Simply connect the controller to your Windows PC using the USB data cable. **LED1** and **LED2** will light up. If purchased the receiver version, you can also use the USB to PS4/PS3 cable to connect it to your PC. If you use the USB port of the computer host, it provides the "X" and "Y" on the controller at the same time, until **LED2** and **LED1** are

and then press your finger, wait for the successful connection after the successful LED2 and LED3 light. If you encounter long time connection cannot be connected, please unplug the receiver and repeat (1) steps.

✎ This controller supports X-INPUT mode games on Windows system, and game platforms such as Steam.

Note: This controller only supports Windows 7 and above system. The screenshot and motion control functions of the controller are not available.

Special prompt:

① To connect, i.e., 1 connection mode, you can press the HOME button (2) to connect back with the most recently connected device. ② Android 1.0, Windows PC device, long press (CAPSLOCK) and E33 button about 1 second, the controller will vibrate one time to indicate the function has been successfully connected. If the key is switched quickly about 1 second, CAPSLOCK and E33 button are switched quickly about 1 second, the controller will vibrate one time which means the function of A and B, X and Y will switch optionally.

Turbo Function
The function button: A/BX/Y/L/R, E32/E31

Set manual Turbo function: press and hold the Turbo button for

And then press one of the function buttons such as "A": the button "A" starts the manual turbo function.

Set auto Turbo function: press and hold the Turbo button then press the function button such as "A" which has on the manual turbo function below; the button "A" starts the auto turbo function.

Turn off the Turbo function: press and hold the Turbo button then press the function key such as "A" which has on the auto Turbo function below. The Turbo function of the button "A" has been turned off.

Close the Turbo function of all keys one time: Disable All Turbo In One Press: Press the "A" and the "Special DOWN" button, the controller will activate one time, which means it will be successful.

There are three levels of Turbo speed:

- Low:** 10 km per second corresponding to a slow floating of the signal light.
- Medium:** 12 km per second corresponding to a medium floating of the signal light.
- Fast:** 20 km per second corresponding to a fast floating of the signal light.

Increase the Turbo speed:
Press the Turbo button and "I" at the same time to increase the turbo speed.

Adjust the Turbo speed: Press the Turbo button and "1" at the same time to reduce the turbo boost.

Vibration Function

There are four **levels** of vibration strength: **none, weak, medium, and strong.**

Adjust the vibration strength:
Ensure that the controller is **successfully** connected to the board.
When you press the "vibration" button on the back, you can adjust the vibration intensity cyclically.

Programming Setting

Parameter: Assign other board's function to programmable rear buttons (SW26).

Parameter for programming Buttons: AB/XYLZL/RZR/LR/LR3 and Digital buttons.

Programming single button steps:
1. **Pin1:** Keep the controller under working, press the "button and light" button about 3 seconds continuously, the controller vibration one time, **pin1's** aperture will light up white and blink.

presses the **M2** button again to save, the controller's state one, joystick's aperture return to the normal position state, programming setting of a single button in the **APERTURE** button is equal to the **APERTURE** button. After one time for 2 seconds, and the joystick's aperture light up and blink, press the **A** button last press the **M2** button, the joystick's aperture return to the normal connection state, the joystick's aperture is equal to the **A** button function at this time, the **A** button can be used normally.

Programming multiple buttons working:

press, keep the controller under stop, press the **B** button and the **M2** button together for 2 seconds, and press the controller's state one time, joystick's aperture will light up white and blink, not automatically press multiple buttons you want to set (**A/B/X/Y/Z**, **D2931**, **3334**), and the program must be set to the first level of each button.

press, press the **M2** button twice again, and the controller's state one time, joystick's aperture return to the normal position state, programming setting of a single button in the **APERTURE** button is equal to the **APERTURE** button. For example, press the **B** button and the **M2** button at the same time for 2 seconds, and the joystick's aperture light up and blink, press the **B** button, then the joystick's aperture

1. Select the **Test** button. The **Test** button after 3 seconds, when the setting is completed, press **Test** button to save and exit. (The Function of **Test** button is the **Test** button function, after 1 second is **A** button, after 3 seconds is **A** button, you can not adjust the **Test** button. Press **Test** on the console: **System Settings** → **Connections** and **Sensors** → **Test Input Devices** → **Test Controller Buttons**).

Clear Programming:

1. Press the **Test** button and **MM202** button about 2 seconds simultaneously, and the joystick's aperture light up white and blink. Press the **Test** button to clear the programming of single button. Press **Test** and **MM202** button simultaneously, the controller will eliminate all the light which means all buttons is clear deleted.

Lighting effect control

Press **Light2** button: You can control the kind color of the light's cyclical.

Press **Light1** and **L3** button: Can be adjusted to breathing light effect.

Press **Light1** and **L32** button: Close or open the joystick's aperture light effect.

Press **Light1** and **R23** button: Turn off or turn on the paired light effect. There are no light without pair-off effect, not applicable to this function).

Press **Light2** and move the **Left joystick** up or down: The brightness of the light can be adjusted.

about charging

LED light will flash slowly while charging if controller is connecting.
If fully charged, the LED light will stay on.

LED light will flash slowly while charging if controller is off, and
LED light will be off after fully charged.

Gyro Manual Calibration

There are many or system problems occur in the game, you can
manual calibration to solve it.

operation method: Operate on menu "Flies the Controller off on
horizontal surface, press the MODE and "+" button at the same
time, wait for 10s, LED light flash slowly
three times and then press the "+" button, the signal light goes out
and the calibration is completed.

Service Support

If you encounter difficulty or product defects in the process of
using the product, please contact our after-sales service through
the purchase address. We will be analyzing one received your
problem, and we will solve the problem or provide
replacement of the product. We also welcome your valuable
suggestions to help us continuously optimize the product. We wish
you a pleasant life.

device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment has been tested and found to comply with the requirements for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, testing has shown that the operation of this equipment on a shipboard installation is unlikely to cause harmful interference to radio communications, if the equipment does cause harmful interference to radio communications, this can be determined by turning the equipment off. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If the device can be determined to need **RFN** RF exposure control, the device can be used in **portable** exposure control mode. The device can be used in **portable** exposure control mode with the following restrictions:

NS用ワイヤレスコントローラー
クイックスタートガイド

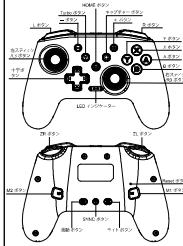

接続方法

1. 図への接続

※ 図1: 機内モードで
られないでください。
① 最初に接続する場合
② 再接続する場合

した後に右を鑑み、類似の応を行ないます。



図2

[illegible]

インストール済みの Windows VISTA/XP/2000 のゲームで、
Steam 上でダウンロード・アップデートが可能です。

注意：このソフトは Windows VISTA/XP/2000 上で動作します。
スリープ・スタンバイ機能、後述の機能は利用するものではありません。

※以下の機能は、
インストールのオプションで、1、2、3、4、5、6、7、8、9、10、11、12、13、14、15、16、17、18、19、20、21、22、23、24、25、26、27、28、29、30、31、32、33、34、35、36、37、38、39、40、41、42、43、44、45、46、47、48、49、50、51、52、53、54、55、56、57、58、59、60、61、62、63、64、65、66、67、68、69、70、71、72、73、74、75、76、77、78、79、80、81、82、83、84、85、86、87、88、89、90、91、92、93、94、95、96、97、98、99、100、101、102、103、104、105、106、107、108、109、110、111、112、113、114、115、116、117、118、119、120、121、122、123、124、125、126、127、128、129、130、131、132、133、134、135、136、137、138、139、140、141、142、143、144、145、146、147、148、149、150、151、152、153、154、155、156、157、158、159、160、161、162、163、164、165、166、167、168、169、170、171、172、173、174、175、176、177、178、179、180、181、182、183、184、185、186、187、188、189、190、191、192、193、194、195、196、197、198、199、200、201、202、203、204、205、206、207、208、209、210、211、212、213、214、215、216、217、218、219、220、221、222、223、224、225、226、227、228、229、230、231、232、233、234、235、236、237、238、239、240、241、242、243、244、245、246、247、248、249、250、251、252、253、254、255、256、257、258、259、260、261、262、263、264、265、266、267、268、269、270、271、272、273、274、275、276、277、278、279、280、281、282、283、284、285、286、287、288、289、290、291、292、293、294、295、296、297、298、299、300、301、302、303、304、305、306、307、308、309、310、311、312、313、314、315、316、317、318、319、320、321、322、323、324、325、326、327、328、329、330、331、332、333、334、335、336、337、338、339、340、341、342、343、344、345、346、347、348、349、350、351、352、353、354、355、356、357、358、359、360、361、362、363、364、365、366、367、368、369、370、371、372、373、374、375、376、377、378、379、380、381、382、383、384、385、386、387、388、389、390、391、392、393、394、395、396、397、398、399、400、401、402、403、404、405、406、407、408、409、410、411、412、413、414、415、416、417、418、419、420、421、422、423、424、425、426、427、428、429、430、431、432、433、434、435、436、437、438、439、440、441、442、443、444、445、446、447、448、449、450、451、452、453、454、455、456、457、458、459、460、461、462、463、464、465、466、467、468、469、470、471、472、473、474、475、476、477、478、479、480、481、482、483、484、485、486、487、488、489、490、491、492、493、494、495、496、497、498、499、500、501、502、503、504、505、506、507、508、509、510、511、512、513、514、515、516、517、518、519、520、521、522、523、524、525、526、527、528、529、530、531、532、533、534、535、536、537、538、539、540、541、542、543、544、545、546、547、548、549、550、551、552、553、554、555、556、557、558、559、560、561、562、563、564、565、566、567、568、569、570、571、572、573、574、575、576、577、578、579、580、581、582、583、584、585、586、587、588、589、590、591、592、593、594、595、596、597、598、599、600、601、602、603、604、605、606、607、608、609、610、611、612、613、614、615、616、617、618、619、620、621、622、623、624、625、626、627、628、629、630、631、632、633、634、635、636、637、638、639、640、641、642、643、644、645、646、647、648、649、650、651、652、653、654、655、656、657、658、659、660、661、662、663、664、665、666、667、668、669、670、671、672、673、674、675、676、677、678、679、680、681、682、683、684、685、686、687、688、689、690、691、692、693、694、695、696、697、698、699、700、701、702、703、704、705、706、707、708、709、710、711、712、713、714、715、716、717、718、719、720、721、722、723、724、725、726、727、728、729、730、731、732、733、734、735、736、737、738、739、740、741、742、743、744、745、746、747、748、749、750、751、752、753、754、755、756、757、758、759、760、761、762、763、764、765、766、767、768、769、770、771、772、773、774、775、776、777、778、779、780、781、782、783、784、785、786、787、788、789、790、791、792、793、794、795、796、797、798、799、800、801、802、803、804、805、806、807、808、809、810、811、812、813、814、815、816、817、818、819、820、821、822、823、824、825、826、827、828、829、830、831、832、833、834、835、836、837、838、839、840、841、842、843、844、845、846、847、848、849、850、851、852、853、854、855、856、857、858、859、860、861、862、863、864、865、866、867、868、869、870、871、872、873、874、875、876、877、878、879、880、881、882、883、884、885、886、887、888、889、890、891、892、893、894、895、896、897、898、899、900、901、902、903、904、905、906、907、908、909、910、911、912、913、914、915、916、917、918、919、920、921、922、923、924、925、926、927、928、929、930、931、932、933、934、935、936、937、938、939、940、941、942、943、944、945、946、947、948、949、950、951、952、953、954、955、956、957、958、959、960、961、962、963、964、965、966、967、968、969、970、971、972、973、974、975、976、977、978、979、980、981、982、983、984、985、986、987、988、989、990、991、992、993、994、995、996、997、998、999、1000、1001、1002、1003、1004、1005、1006、1007、1008、1009、1010、1011、1012、1013、1014、1015、1016、1017、1018、1019、1020、1021、1022、102

[illegible][illegible][illegible][illegible]

アフターサービスについて