


FX8

HELMET BLUETOOTH INTERCOM

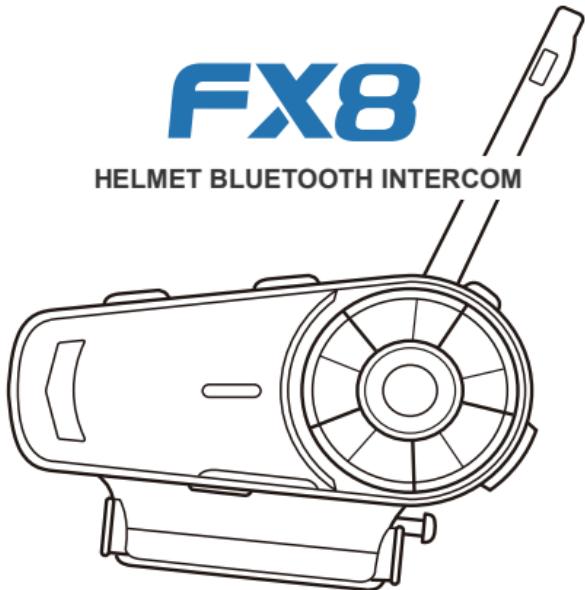


User Manual


CONTENTS

1. Package Include -----	2
2. Charging -----	3
3. Installation & Disassembly -----	4
4. Button and basic function operation -----	7
5. Device Pairing -----	11
6. Multi-device pairing connection -----	15
7. Technical Specifications -----	19
8. Q&A / Warning -----	20
9. Statement / Warranty/After-Sale Service -----	21

1. Package Include

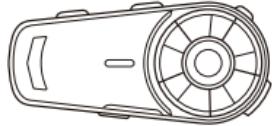


FX8

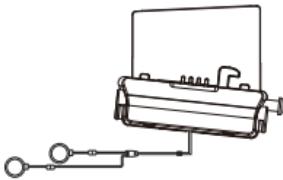

Headphone&Mic Kits



Hard Tube Microphone

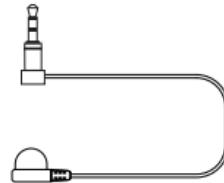

Wired Microphone



Usb Cable



Metal Clip




EVA Booster



Velcro



3M Glue Velcro

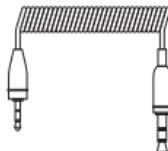

2.5mm to 3.5mm Cable




User Manual



User Guide

2. Charging:

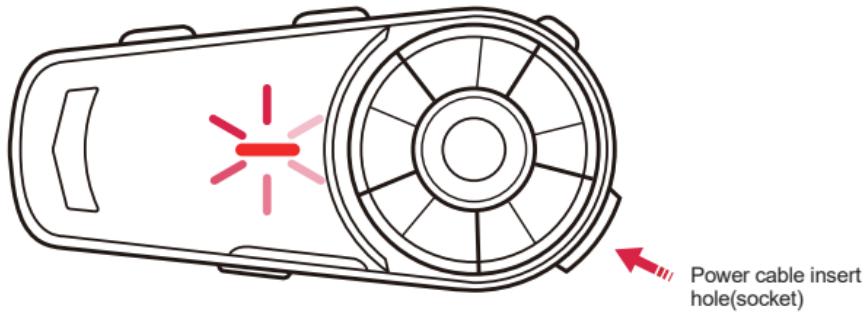


- 2.1 The function button lights up red when charging, and the red light goes out after finishing (As shown below). Please charge before using for the first time.
- 2.2 Please use a qualified charger 5V/1A±0.5A.
- 2.3 Please keep charging at least once every 2 months if the product is not used for a long time.

3. Installation & Disassembly

3.1 Speaker Installation



1. Open the inner helmet lining on the ear position and attach the velcro loops.

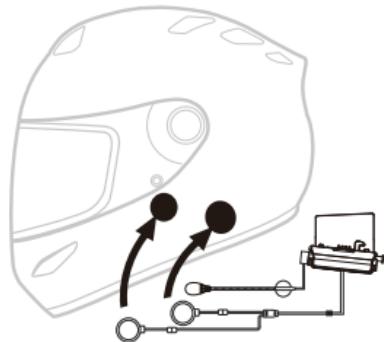


2. Attach the Headphone with Velcro hook to the loop (the short-line speaker is on the left).



3.. Place Velcro on the right position on the left side of the helmet, match the microphone with the mouth position, and tidy up the cable and lining.

Remark: the microphone should be closed to and aim at the mouth as possible. The speakers are as close to ears as possible. If installation position of the speaker is too deep so that the speaker is too far away from the ear, the sponge in accessory may be used to jack up.

3.2 Fixed by clamp

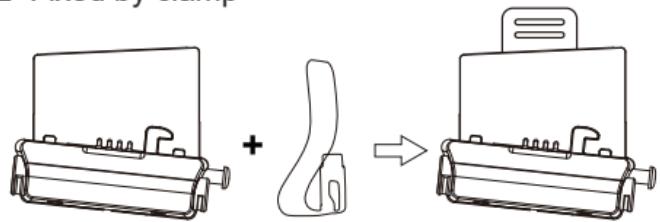

1.Find and assemble the Unit base and metal clip.


2.Fix the base on the right position.




3. Assemble the M1 S-PLUS: Insert the snap of the bottom of the host in to the groove of the base, press the host to the base so that the clip of the base buckle the top of the host.

4. Insert the microphone plug , installation complete.

3.3 Disassembly of the Device

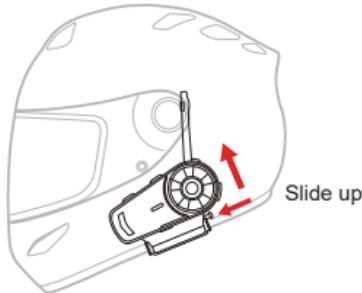


1. Press the upper clamp buckle and move the device upward to remove it.

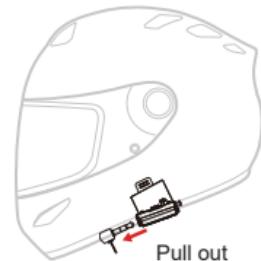

2. Pull out the microphone plug.

4.Button and basic function operation

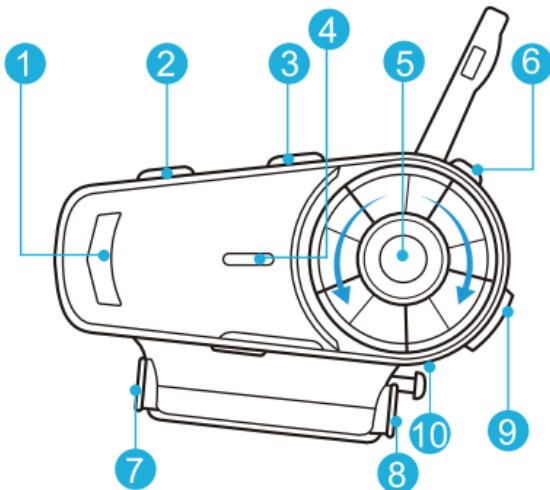

Outlook / Button

1. LED Indicator
2. Previous
3. Next
4. LED Indicator
5. Function(Volume+/-)
6. Intercom
7. Headphone & Mic Kits
8. Aux In
9. MICRO-5Pin port (charging / Data)
10. Reset

Switch On / OFF

Switch On: Long press Intercom button and Function button at the same time for 3 seconds, Voice message will also say “ Welcome to FODSPORTS Bluetooth Communication System ”.

Switch Off: Long press Intercom button and Function button at the same time for 3 seconds. Voice message will also say “ Power off ”.

*For first time use,please recharge the device until the red light is off.

Power Detect & Notification Function

Low Power Notification: When power lower than 10%, red light flash in the function button and voice message will remind power lower than 10%,please recharge immediately.

Power Detect Function: FX8 has power detect function,when device is on,short press Previous and Next button at the same time,recorded voice message will tell you:

Power over 90%

Power over 50%

Power lower than 50%

Power lower than 10% please recharge immediately

Cellphone

Answering Call: Short press Function button once.

Hangup Call: After call,short press Function button once.

Refuse Call: Long press Function button for 2 seconds.

Redial: Short press Function button twice.

Volume Up: Rotate the Function button forward while talking.

Volume Down: Rotate Function button Backward while talking.

Switch manual/automatic answering calls :While in standby, press and hold the intercom button , Previous button and Next button at the same time for 3 seconds.

Voice Command



short press Previous button twice



Automatically switch on voice command input function

When your FX8 is paired up with cellphone, short press Previous button twice, will automatically switch on the voice command function (only for iOS and Android).

Cellphone must equipped with this function.

Music Function

Play: When Standby, short press Function button once.

Pause: When music is playing, short press Function button once.

Volume Up: Rotate the Function button forward.

Volume Down: Rotate the Function button backward.

Play Previous: When music playing, short press Previous button once.

Play Next: When music playing, short press Next button once.

FM Function

FM ON: When FM is off, Long press Next button for 3 seconds.

FM OFF: When FM is on, Long press Next button for 3 seconds.

Volume Up: Rotate the Function button forward.

Volume Down: Rotate the Function button backward.

Search Desk channels: When FM is on, short press Previous/Next button once.

Intercom Function


Switch Intercom On: When device on,short press Intercom button once.

Switch Intercom Off: When talking,short press Intercom button once.

Volume Up: When talking,Rotate the Function button forward.


Volume Down: When talking,Rotate the Function button backward.

Memory Clear

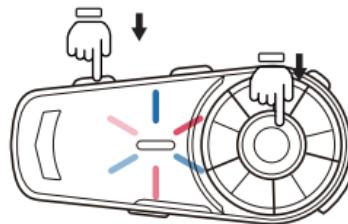

Memory Clear: When device is on,press Function and Previous button at the same time for 5 seconds.Then FX8 will clear the pairing memory with other devices.

Reset

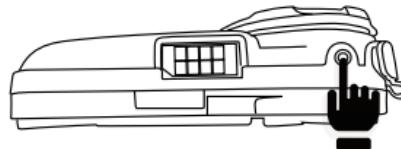


Hold down for 5 seconds

*When device is in the state of crash or stuck, Long press [Reset] button 5 second to restart the system.

5.Device Pairing


5.1 Pairing Modes

5.1.1 Passive pairing mode

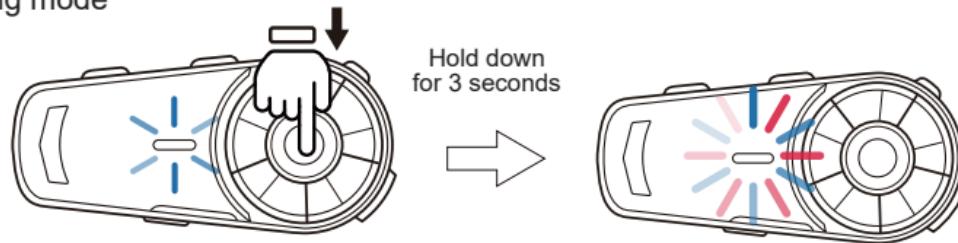


When device is on, long press Function button to enter Pairing Mode, red and blue lights flash quickly, voice notice "pairing". Pairing mode for connection to Bluetooth devices such as mobile phones and Bluetooth GPS.

5.1.2 Active search mode

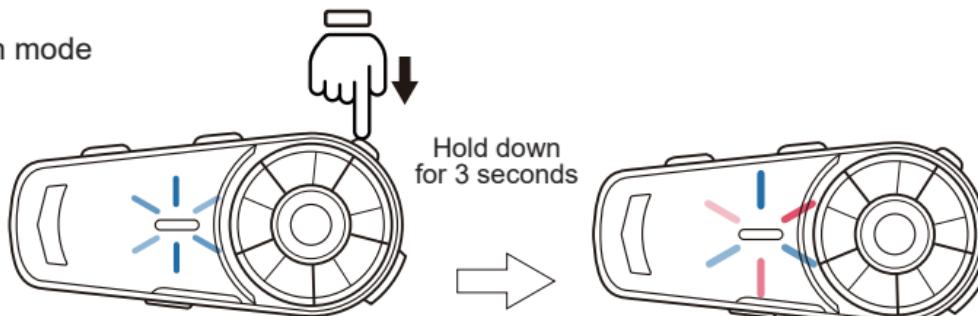


When device is on, long press Intercom button to enter Search Mode , red and blue lights flash slowly, voicemessage says “ Searching ”.Search mode only use for intercom function connection between FX8 devices.

5.2 (A) FX8 connect with (B) FX8

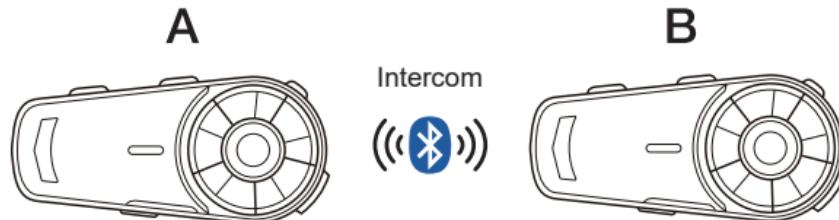


A FX8 is on positive search mode(refer to 5.1.2), B FX8 is on passive search mode (refer to 5.1.1),A and B FX8 change from flashing red and blue lights alternately to function and intercom buttons flashing blue lights at the same time,connect successfully.

5.3 Pairing With Cellphone

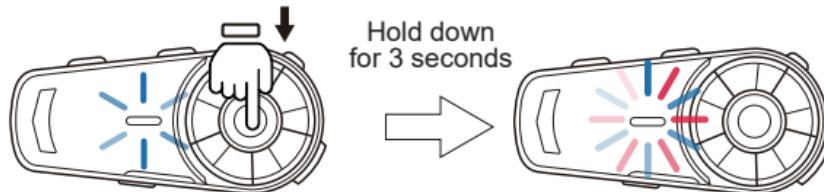


STEP1. When device is on, long press Function button, red and blue light flash quickly, entering passive pairing mode.(refer to 5.1.1)

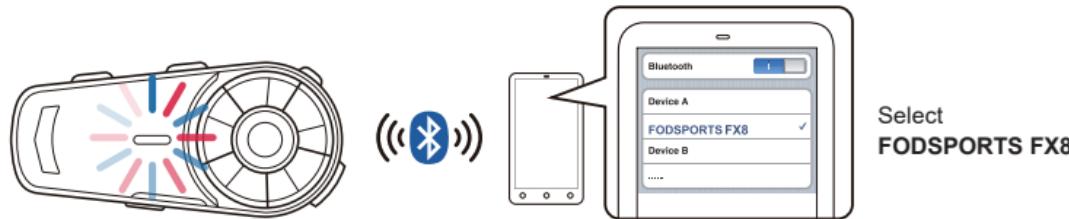

STEP2. Turn on cellphone Bluetooth, Select“ FODSPORTS FX8”,the pairing is complete.Voice message will notice “Device Connected”.

5.4 Connect with two phones

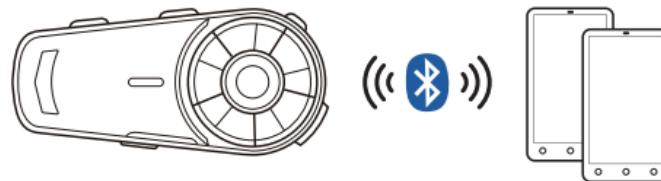


Step1 . Connect to the first phone(refer to 5.3)

Step2 . Long press the Function button, FX8 on passive search mode, connect to the second phone (refer to 5.3)


Notice: FX8 can connect with two phones, but only support one phone for audio input.

5.5 Wire Connecting

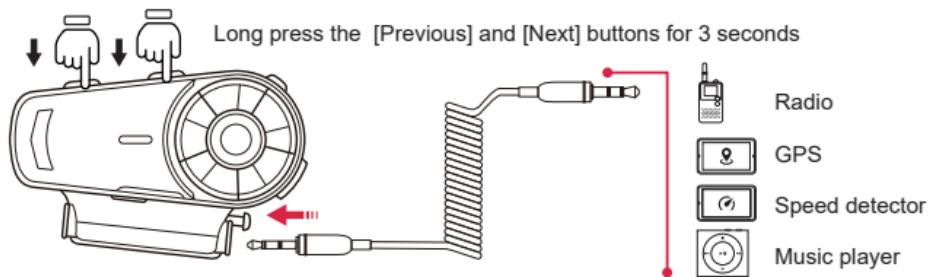

Any device with 3.5mm connector can transmit voice signal to FX8.


When device wire connected by 2.5mm to 3.5mm cable to FX8, Complete the wired sound source input.
Press the [Previous] and [Next] buttons for 3 seconds to turn on or turn off the wired audio input.

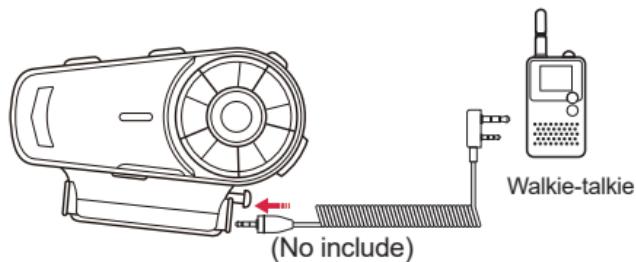

You need to purchase a cable if you need a wired connection for Walkie-talkie equipment.

6. Multi-device pairing connection

6.1 Occasions: Rider A connect with Passenger B for intercom. Then A connect with two bluetooth devices and one wired equipment and B connect with one bluetooth device(as shown below).

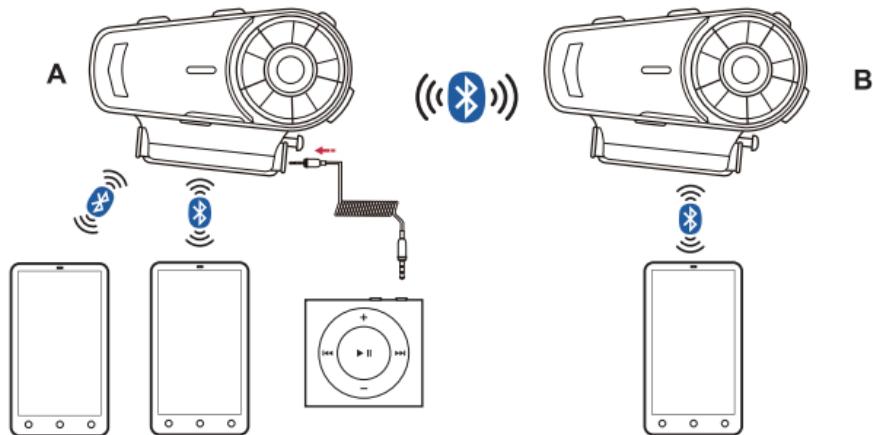

Step 1. A FX8 connect with B FX8(refer to 5.2) .

Step 2. Short press one time A or B intercom button to disconnet intercom .

Step 3. A connect with 2 phones(refer to 5.4) .

Step 4. A use 2.5 mm to 3.5 mm AUX audio line to connect with one audio device.


Step 5. B connect with one phone(bluetooth device) .


Step 6. Short press intercome button of A or B for connection.

Notice: If A or B need to use the audio function of phone(blueooth device), you need to disconnect the intercom.

6.2 Multiple Intercom

6.2.1 FX8 equipped with multiple intercom function, recommended 4 units(A,B,C,D), pairing procedure as follow:

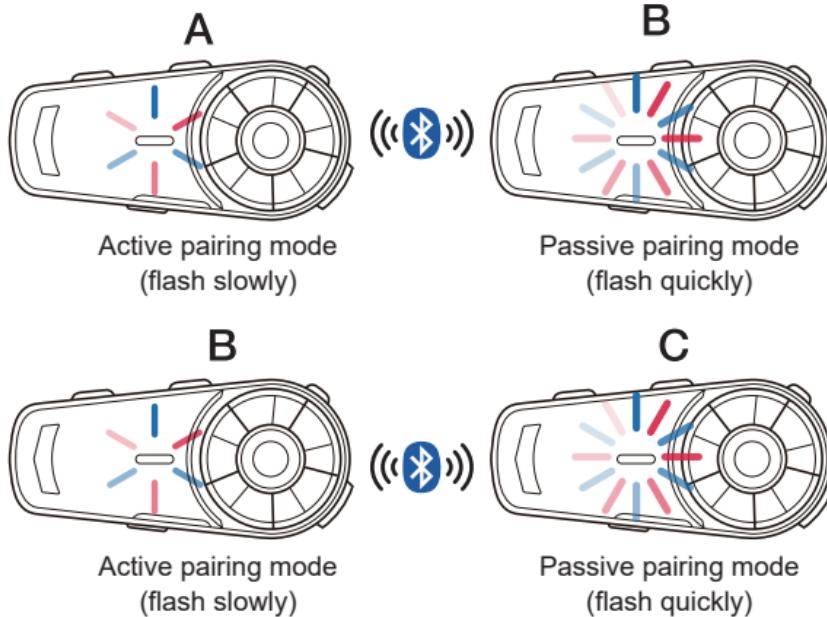

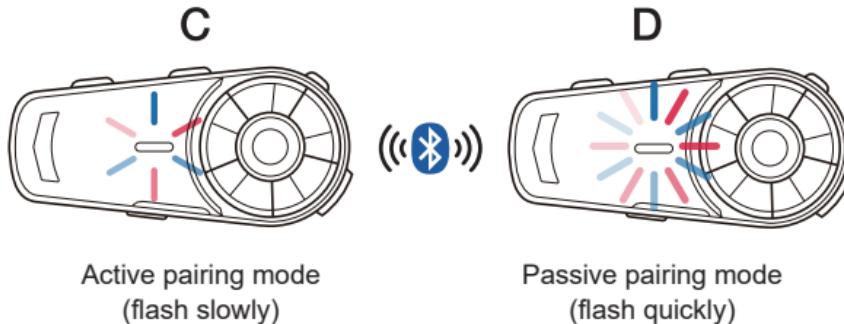

Step 1: Unit A is on positive search mode(refer to 5.1.2), Unit B is on passive search mode(refer to 5.1.1), Unit A and Unit B change from flashing red and blue lights alternately to function button and intercom button flashing blue lights at the same time,connect successfully.Short press the intercom button of Unit B for one time, exit intercom state temporarily.

Step 2: Unit B is on positive search mode(refer to 5.1.2), Unit C is on passive search mode(refer to 5.1.1), Unit B and Unit C change from flashing red and blue lights alternately to function button and intercom button (flash quickly)flashing blue lights at the same time,connect successfully.Short press the intercom button of Unit C for one time, exit intercom state temporarily.

Step 3: Unit C is on positive search mode(refer to 5.1.2), UnitD is on passive search mode(refer to 5.1.1), UnitC and Unit D change from flashing red and blue lights alternately to function button and intercom button flashing blue lights at the same time,connect successfully.

Step 4: The intercom buttons and function buttons of Unit A ,B ,C and D flash blue light at the same time, the connection of group intercom successfully.

*You can connect more FX8 by repeating the above methods.

Notice: The first and the last one FX8 can connect with another 2 Bluetooth devices. The FX8 in the middle connection position of the group can connect with an additional Bluetooth device.


For example: When in the group intercom mode, Unit B and C can only connect with one bluetooth device. Unit A and D can connect with two bluetooth devices.

*Intercom Interruption

In multiple intercoms mode, if there is an incoming call caused one unit away from the connection, after call, will reconnected automatically. If interruption is caused by distance or bad signal, please press intercom button to reconnect.

6.2.2 Memory Connection Function

FX8 will remember paired units, but after switch off and want to reconnect again, please follow the procedure:

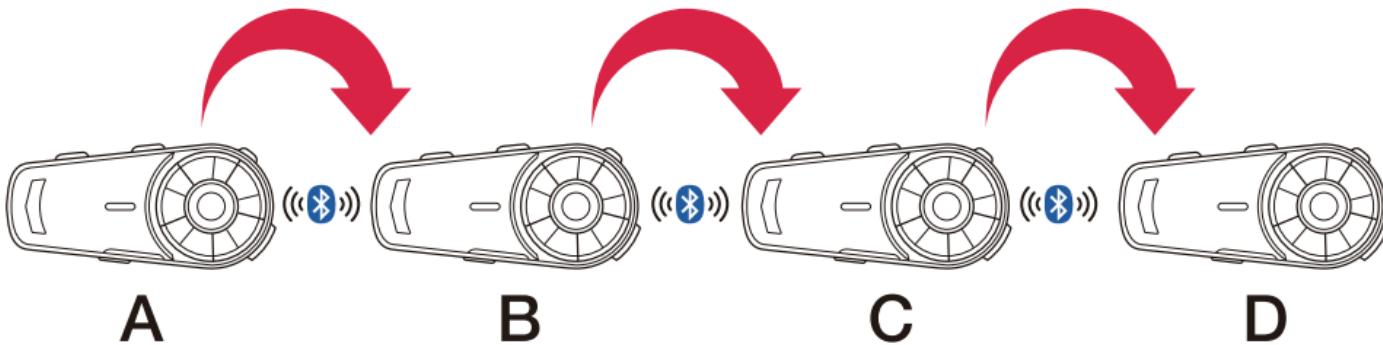

STEP1. Switch off all 4 units(A,B,C,D) and all Bluetooth devices connected to the headset such as cellphone and GPS. (It will affect the pairing)

STEP2. Switch on all 4 units(A,B,C,D) in the same time(long press intercom and function buttons about 3 seconds).

STEP3. Short press one intercom button of the 4 FX8 and they flash blue and red lights in the same time. Memory connection start successfully.

STEP4. After all 4 units reconnected , switch on original connected Bluetooth devices such as cellphone and GPS.

7. Technical Specifications

Bluetooth Support: HSP,HFP,A2DP,AVRCP, AGHSP

Battery: Lithium battery, 900mAh , 3.7v

Dimensions: 8.8cm * 4.2cm * 2.8cm

Weight: 53G, 108G(Include Headphone & Mic Kits)

Frequency Range: 2.4GHz~2.485GHz

Operating temperature: -20℃~50℃

Certification: CE FCC ROHS BQB TELEC

USB Adapter standard charge voltage: DC 5V±0.2V

USB Adapter standard charge circuit: DC 1A±0.5A

Charging time: 2~3 hours

8.Q&A / Warning

Q1: No sounds from one or two side speaker.

A1: Check device plug,needs to firmly connected.

Q2: Can it be recharged from bike USB charger while riding ?

A2: 1.Not recommended,unstable power source will cause damage on internal circuit,may cause unable to recharge/can't fully charged/can't switch on.

2.Power bank will be good.

Q3: When using radio,not transmission or continuous transmission.

A3: Check 2.5mm pin,has to insert firmly.The pin equipped with waterproof aprons,user might think its already plugged.

Q4: New device can't switch on.

A4: Recharged at least 30 minutes before switch use

*** Warning**

Sound Volume Warning

Long period or too loud may hurt hearing ability.

Disassemble or Modification

The FX8 is precisely made in factory.Any disassemble or modification may damage the device,please do not tear any of the safety regulation and serial sticker from the device ,that will void the warranty.Please contact us directly if needed.

9.Statement / Warranty/After-Sale Service

9.1 FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules.Operation is subject to the following two conditions (1) this device may not cause harmful interference,and (2) this device must accept any interference received,including interference that may cause undesired operation.


This device has been evaluated to meet general RF exposure requirement.The device can be used in portable exposure condition without restriction.

9.2 After-Sale Service

For any quality problem or missing accessories, especially pairing problem between 2 or more FX8 headsets, please feel free to contact us at email: winzon.cs@outlook.com. We're always here ready to help, will reply to you in 24 hours.

FX8

ヘルメットBluetoothインカム

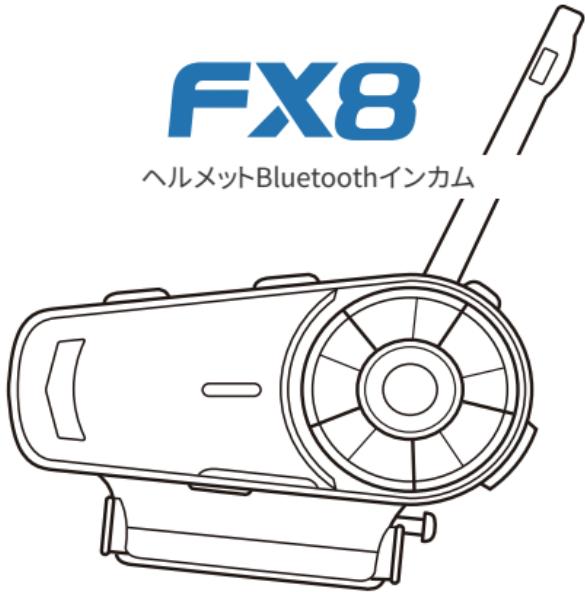


取扱説明書


目次

1. パッケージ内容	2
2. 充電	3
3. 装着&脱着方法	4
4. 操作方法	7
5. デバイスとのペアリング	11
6. 複数デバイスとのペアリング	15
7. 技術仕様	19
8. Q&A/警告	20
9. 声明/保証/アフターサービス	21


1. パッケージ内容

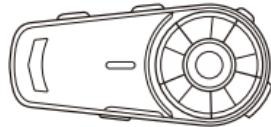


FX8 メインユニット

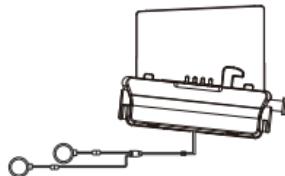

クランプ

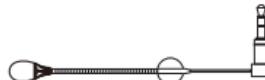

ブームマイク

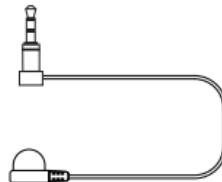

ソフトマイク




USBケーブル



メタルクリップ




スピーカー
調整パッド

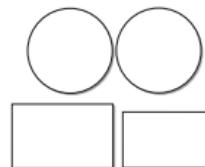

ベルクロ
ステッカー



3M糊ベルクロ
ステッカーロ

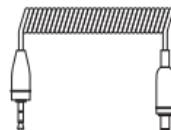

2.5mm--3.5mm オーディオケーブル




取扱説明書



クイックガイド

2. 充電

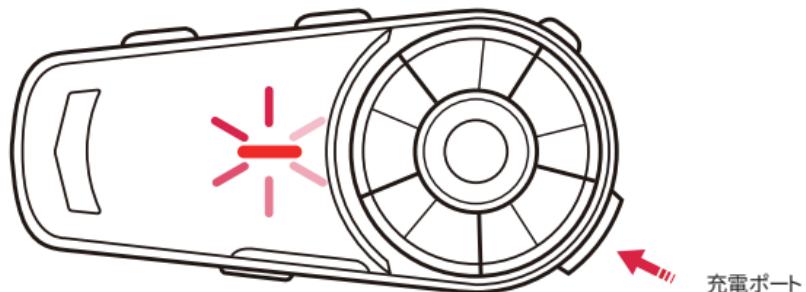


- 2.1 充電中はLEDインジケーターが赤く点灯し、満充電後は消灯します(上図のように)。初めて使用する場合は、十分充電してからご使用ください。
- 2.2 5V/1A±0.5Aの認定充電器を使用してください。
- 2.3 長期間使用しない場合は、せめて2ヶ月に1回を充電してください。

3.3 装着&脱着方法:

3.1 スピーカー&マイクの取り付け



1.ヘルメットのチークパッド、イヤーパッドを取り外して、左右のイヤーホール部へ、「スピーカー固定用面ファスナー」を貼り付けます。※耳とスピーカーとの隙間が生じやすいため、「スピーカー調整パッド」を1枚貼り付けることをおすすめします。

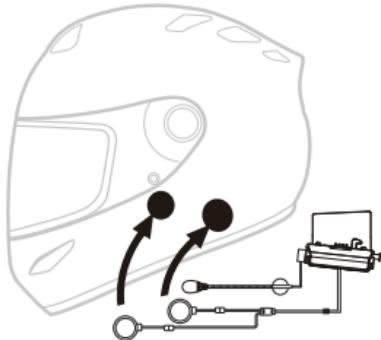


2.イヤーホールにそのまま合わせるのではなく、出来る限り、ヘルメット前方、チンストラップのV字ライン側に寄せるのがコツです。それから配線を内側に通してスピーカーを取り付けます。※短いイヤーコードは左側です。



3.マイクを口の位置に合わせて「マイク固定用面ファスナー」を貼り付けます。マイクフックテープをループに取り付けて、内側に配線します。

3.2 クランプの取り付け

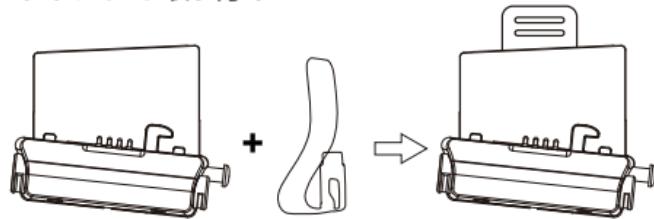

1.クリップとクランプを組み立てます。



2.ヘルメット左側の帽体と内装の間に差し込みます。




3.デバイス本体の取り付け:本体をクランプに嵌め込んで押すとロックします。



4.マイクのコネクターを接続して取り付けが完了します。

3.3 脱着方法

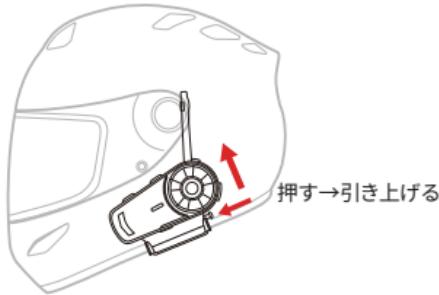


1. クランプバックルを押して、上方へ引き上げて
本体を取り外します。



2. マイクプラグを引き抜きます

4.操作方法

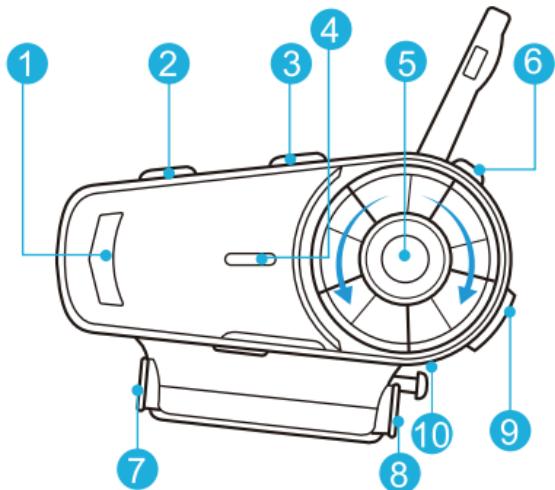

外観/ボタン名前

1. LEDインジケーター
2. 前
3. 次
4. LEDインジケーター
5. 機能(音量+/-)
6. インターコム
7. マイクポート
8. Aux ポート
9. USBポート
10. リセット

電源のオン/オフ

電源をオンにする: デバイスがオフの状態でインターモトと機能ボタンを同時に3秒間長押ししてください。音声案内が「FODSPORTS Bluetoothコミュニケーションシステムへようこそ」と言います。

電源をオフにする: デバイスがオンの状態でインターモトと機能ボタンを同時に3秒間長押ししてください。音声案内がパワーオフと言います。

※初めて使用する前に赤い光が消えるまでデバイスを充電してください。

バッテリー検知&通知機能

充電通知:バッテリー残量が10%以下になると、赤いランプが点滅し、音声でお知らせします。すぐ充電してください。

バッテリー検知機能:FX8にはバッテリー検知機能が付いています。デバイスがオンの状態で前と次のボタンを同時に押すと音声でお知らせします。

バッテリー残量が90%以上あります。

バッテリー残量が50%以上あります。

バッテリー残量が50%以下です。

バッテリー残量が10%以下です。まもなくパワーオフにします。すぐに充電してください。

携帯電話機能

電話に出る:機能ボタンを1回押してください。

電話を切る:電話の後、機能ボタンを1回押してください。

電話の拒否:機能ボタンを2秒間長押ししてください。

リダイアル:機能ボタンを2回押してください。


音量を上げる:ダイアルを時計回しへ回してください。

音量を下げる:ダイアルを反時計回りへ回してください。

手動/自動応答通話の切替:待機中にインターホン、前、次ボタンを同時に3秒間長押ししてください。

(デフォルト:自動回答)

音声コマンド

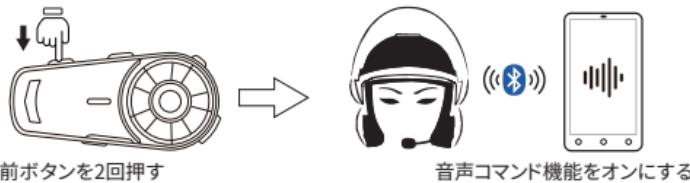

FX8デバイスが携帯電話とペアされた状態で、前ボタンを2回押すと、携帯の音声コマンド機能をオンにします。
※お使いの携帯電話にこの機能が付いていることを確認してください。

音楽機能

音楽再生: 携帯と接続の状態で機能ボタンを1回押してください。

一時停止: 音楽再生中に機能ボタンを1回押してください。

音量を上げる: ダイアルを時計回しへ回してください。

音量を下げる: ダイアルを反時計回りへ回してください。

前の曲を再生: 音楽再生中に【前】ボタンを1回押してください。

次の曲を再生: 音楽再生中に【次】ボタンを1回押してください。

FMラジオ機能

FMオン: デバイスオンの状態で次ボタンを3秒長押ししてください。

FMオフ: FMがオンの状態で次ボタンを3秒長押ししてください。

音量を上げる: ダイアルを時計回しへ回してください。

音量を下げる: ダイアルを反時計回りへ回してください。

チャネル検索: FMがオンの状態で前/次ボタンを1回押してください。

インターホム機能


インターホムをオンにする:デバイスがペアリングした状態でインターホムボタンを1回押してください。

インターホムをオフにする:通話中にインターホムボタンを1回押してください。

音量を上げる:ダイアルを時計回しへ回してください。

音量を下げる:ダイアルを反時計回りへ回してください。

メモリの削除

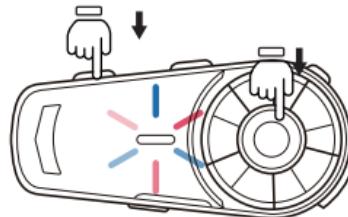

メモリの削除:デバイスがオンの状態で機能ボタンと前ボタンを同時に5秒間長押しすると、FX8は他のデバイスとのペアのメモリを削除します。

リセット




5秒長押し

※デバイスがハングアップ或いは固まる時、リセットボタンを5秒長押しして再起動してください。

5. デバイスとのペアリング


5.1 ペアリングモード

5.1.1 受動的ペアリングモード

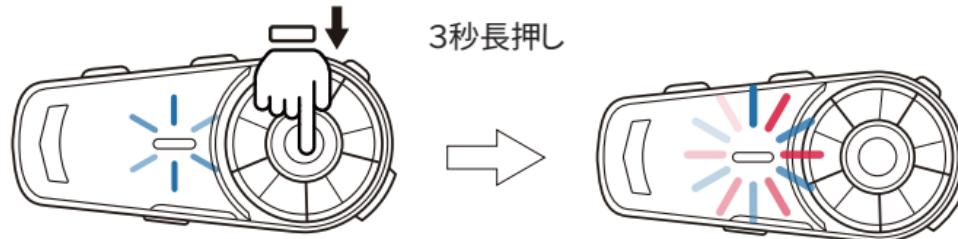

FX8デバイスがオンの状態で機能ボタンを長押ししてペアリングモードに入ると、赤と青のランプが交互にフラッシュし、音声が「ペアリング」とお知らせします。ペアリングモードで携帯電話やBluetooth GPSなどのBluetoothデバイスに接続できます。

5.1.2 検索ペアリングモード

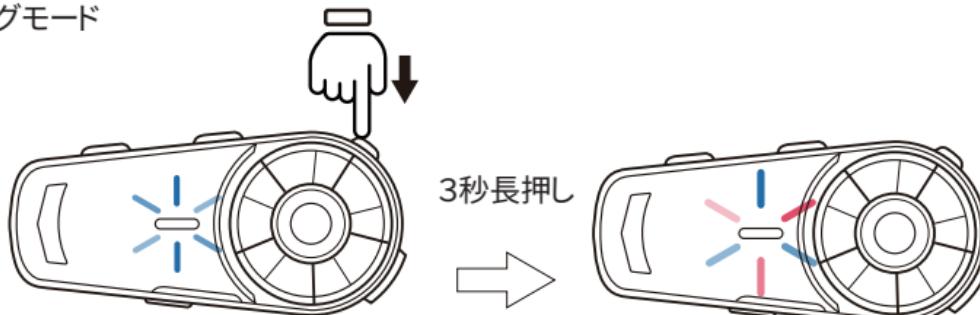

FX8デバイスがオンの状態でインターフォンボタンを長押しして検索ペアリングモードに入ると、赤と青の光がゆっくりと点滅し、音声が「検索中」とお知らせします。

5.2 FX8デバイスAとBの接続




デバイスAを検索ペアリングモードに入って(詳細は5.1.2)、デバイスBを受動的ペアリングモードに入って(詳細は5.1.1)。AとBがペアリング成功するとAとBのLEDインジケーターは赤と青交互点滅から、二箇所のLEDインジケーターが青点灯になります。

5.3 携帯電話とのペアリング




ステップ1:デバイスがオンの状態で機能ボタンを長押しすると、赤と青の光がフラッシュし、受動的ペアリングモードに入ります。(詳細は5.1.1)

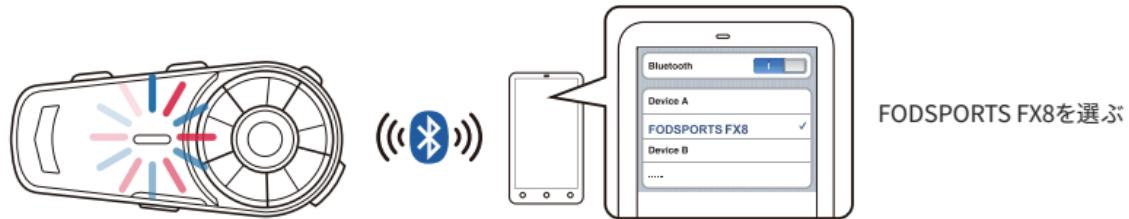

ステップ2:携帯電話のBluetoothをオンにしてFODSPORTS FX8を選ぶと、ペアリングが成功します。デバイス音声案内が「デバイスの接続に成功しました」とお知らせします。

ご注意:ペアリング完了したら、携帯Bluetoothのところにオーディオとメディアオーディオが全て選択されていることを確認ください。そうしないと通話または音楽が再生できません。

5.4 二台携帯とのペアリング

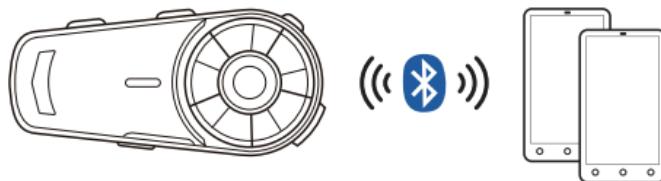


ステップ1:まずは一台目の携帯とペアリングします。(詳細は5.3)

ステップ2:FX8デバイスの機能ボタンを長押して受動的ペアリングモードに入れます。二番目携帯とペアリングしてください。(詳細は5.3)


ご注意: FX8デバイスは2台携帯とペアリングできますが、1台の携帯が音声入力できるだけです。

5.5ワイヤの接続

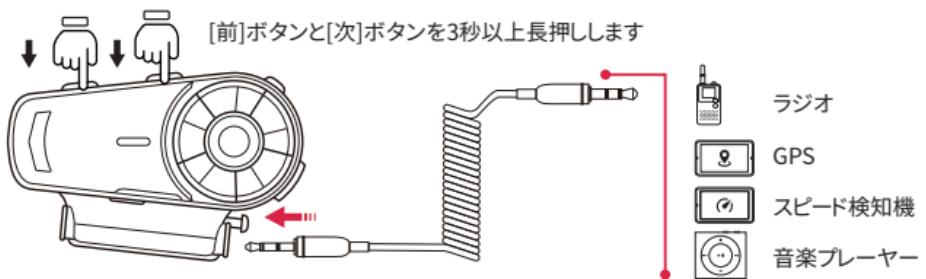

3.5mmのコネクターが付きデバイスが全てFX8デバイスと接続し音声信号を転送できます。


デバイス付き2.5mmから3.5mmのケーブルでFX8デバイスと接続したら、ワイヤ音声源の入力が完了します。
「前」と「次」のボタンを3秒長押しと、オーディオの入力をオンとオフにします。

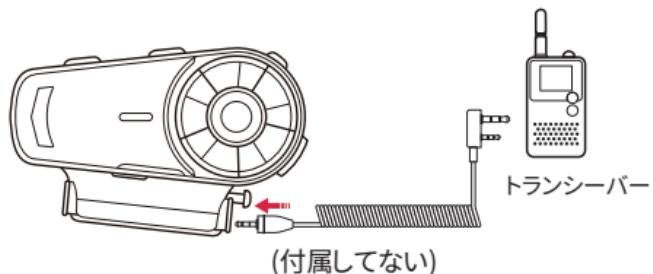

トランシーバーとの接続ケーブルが別途でご購入ください。

6.複数デバイスとの接続

6.1場合：運転手FX8デバイスAと乗り手FX8デバイスB接続してインターホン通話場合、そして、FX8デバイスAは2台Bluetoothデバイスと1台ワイヤレスデバイスと接続し、FX8デバイスBは1台Bluetoothデバイスと接続します。
(以下手順に参考)

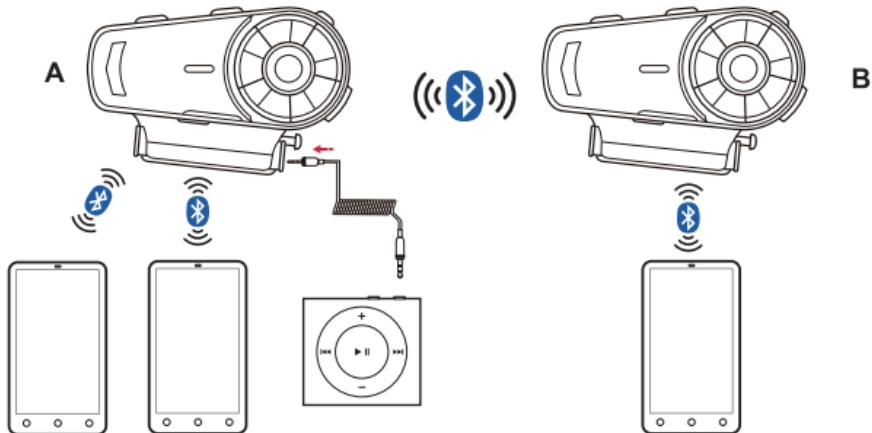

ステップ1.FX8デバイスAとFX8デバイスBを接続します。(詳細は5.2)

ステップ2.FX8デバイスA或いはFX8デバイスBのインターホンボタンを1回押し、インターホン通話モードを終了します。

ステップ3.FX8デバイスAはBluetoothで2台携帯電話を接続します。(詳細は5.4)

ステップ4.FX8デバイスAはオーディオケーブルでワイヤレスデバイスと接続します。


ステップ5.FX8デバイスBはBluetoothで1台携帯と接続します。

ステップ6.FX8デバイスA或いはFX8デバイスBのインターホンボタンを1回押し、インターホン通話モードに入ります。

ご注意: FX8デバイスAまたはFX8デバイスBはBluetoothデバイスのオーディオ機能を使いたい時、インターホン通話モードを終了しないといけません。

6.2複数のインターホン通話

6.2.1 FX8デバイスは複数インターホン通話機能を備えて、4台(A、B、C、D)をインターホン通話をお勧めします。ペアリング手順は次のとおりです。

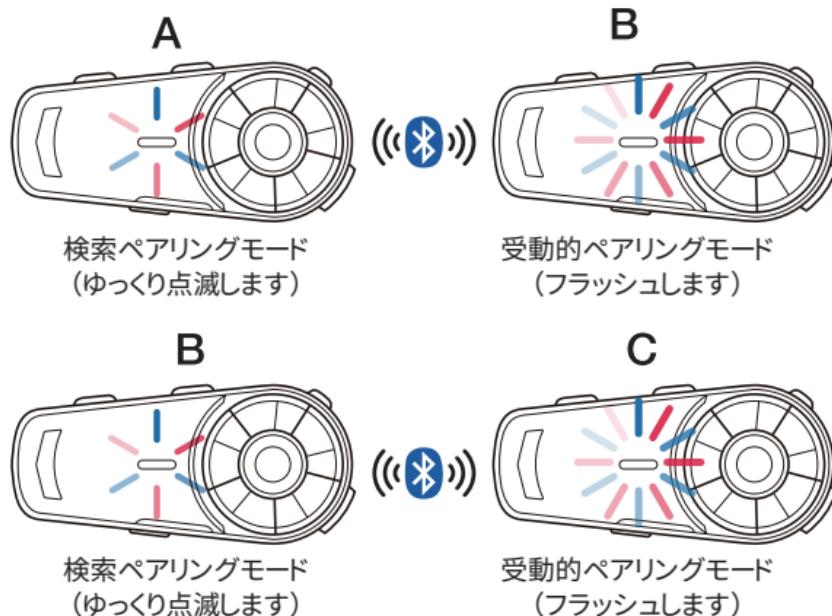



ステップ1:デバイスAを検索ペアリングモードに入って(詳細は5.1.2)、デバイスBを受動的ペアリングモードに入って(詳細5.1.1)AとBのLEDインジケーターは赤と青交互点滅から、二箇所のLEDインジケーターが青点灯になるとペアリング成功になっています。デバイスBのインターフォンボタンを1回押して、インターフォン通話モードを終了します。

ステップ2:デバイスBを検索ペアリングモードに入って(詳細は5.1.2)、デバイスCを受動的ペアリングモードに入って(詳細5.1.1)BとCのLEDインジケーターは赤と青交互点滅から、二箇所のLEDインジケーターが青点灯になるとペアリング成功になっています。デバイスCのインターフォンボタンを1回押して、インターフォン通話モードを終了します。

ステップ3:デバイスCを検索ペアリングモードに入って(詳細は5.1.2)、デバイスDを受動的ペアリングモードに入って(詳細5.1.1)CとDのLEDインジケーターは赤と青交互点滅から、二箇所のLEDインジケーターが青点灯になるとペアリング成功になっています。

ステップ4:デバイスA、B、C、Dも二箇所のLEDインジケーターが青点灯になると4台のグループインターフォン通話の接続が成功になっています。

※上記の方法を繰り返すと、もっとデバイスとのインターホン接続できます。

ご注意：4人グループインターホン通話の場合は、デバイスBとCも1台のBluetoothデバイスと接続でき、デバイスAとDも2台Bluetoothデバイスに接続できます。つまりグループ最初と最後のデバイスが二つほかのBluetoothデバイスと接続できます。グループ中位置のデバイスは一つほかのBluetoothデバイスと接続だけです。


※インターホン通話の中止

数人グループインターホン通話の場合は、中の一人が電話に出ると一度インターホン通話が切断されます。電話終了なら自動的に通話が復帰します。

距離が通信圏に離れるや信号電波が悪いのせいで通話が切断されるなら、インターホンボタンを押して通話を復帰できます。

6.2.2メモリで接続機能

FX8デバイスはペアの記憶機能が付き、一度電源を切ってからペアリングを復帰したい時、以下の手順に参考してください。

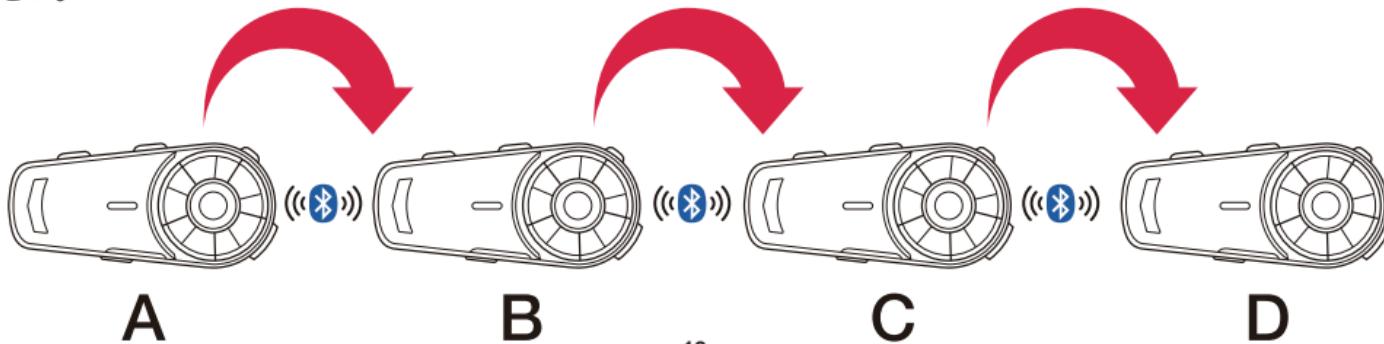

ステップ1:再ペアリングを影響しないため、4台のFX8デバイス(A、B、C、D)と携帯電話やGPSなどそばにある接続したデバイスが全て電源を切れます。

ステップ2:インターモトボタンと機能ボタンを同時に3秒長押しして4台のFX8デバイス(A、B、C、D)を電源を入れます。

ステップ3:4台のFX8デバイスのインターモトボタンも1回押すとデバイスのLEDインジケーターは赤と青交互点滅します。メモリで接続が開始します。

ステップ4:4台のFX8デバイスの二箇所LEDインジケーターも青点灯すると接続成功します。それから、携帯電話やGPSなどのBluetoothデバイスの電源を入れます。

7.技術仕様

Bluetoothサポート:HSP、HFP、A2DP、AVRCP、AGHSP

バッテリー:リチウムバッテリー、900mAh、3.7v

寸法:8.8cm * 4.2cm * 2.8cm

重量:53G、108G(付属品を含む)

周波数範囲:2.4GHz～2.485GHz

動作温度:-20°C～50°C

取り消み認証:CE FCC ROHS BQB TELEC

USBアダプター標準充電電圧:DC5V±0.2V

USBアダプター標準充電電流:DC1A±0.5A

充電時間:2～3時間

8. Q&A/警告

Q1:片側や両側にも音声が聞こえません。

A1:本体とクランプの取り付けがしっかりとどうかをご確認ください。ランプバックルが長く出すとしっかりと取り付けました。或いは外してもう一度取り付けください。

Q2:走行中にバイクのUSB充電器で充電できますか？

A2:お勧めません。不安定な電源はデバイス内部の回路を損傷する可能性があり、デバイスに充電できなくなる原因ことです。パワーバンクなら大丈夫です。

Q3:FMラジオを使えない場合はどうすればいいですか？

A3:FMラジオ受信器としてのイヤーコードを十分に展開しているとFMの受信が強化されます

Q4:入手ばかりですが、デバイスが電源を入れません。

A4:始めて電源を入れる前にせめて30分くらい充電してください。

警告

音量の注意。

長時間大音量で使用すると聴覚を損傷する可能性があります。

分解または修正。

FX8は工場で正確に作られています。分解や修正はデバイスを損傷する可能性があります。保証に必要なため、デバイスから安全規制やシリアル・ステッカーを外さないでください。

何か必要な場合は当社に直接ご連絡ください。

9. 声明/保証/アフターサービス

9.1 FCC声明

法令に担当する当事者によって認められない変更や修正は、ユーザーが本機器を使用する権限を無効にする可能性があります。

本機器はテスト済みで、FCC規定第15に基づくクラスBデジタルデバイスの制限に準拠していることが確認済みです。これらの制限は家庭での設置において、有害な干渉からの適切な保護を提供するものです。本機器は無線周波数エネルギーを使用・発生するため、指示に従わない設置や使用は無線通信に有害な干渉を起こす可能性があります。

しかし、特定の設置によって干渉が起こらないことは保証できません。本機器がラジオやテレビの受信に有害な干渉を起こした場合は、本機器の電源を切って再度入れることで確認でき、干渉を以下の方法で修正することをお薦めします。

- 受信アンテナの方向や位置を変える。
- 本機器と受信機の間の距離を開ける。
- 受信機が接続されている回路とは異なるコンセントに本機器を接続する。
- 販売先または経験豊富なラジオ/テレビ技術者に問い合わせせる。

本機器はFCC規定第15に準拠しています。操作には次の2つの条件が適用されます。(1)本機器は有害な干渉を起こさない可能性があり、(2)本機器は望ましくない操作によって起こる干渉を含む、いかなる受信された干渉をも受け入れる必要があります。

本機器は評価済みで、一般的なRF暴露の要件を満たします。本機器は制限なしでポータブルで暴露された状態での使用が可能です。

9.2 アフターサービス

品質の問題やアクセサリーの欠品、特に2台以上のFX8ヘッドセット間のペアリング問題については、お気軽にメール(winzon.cs@outlook.com)にてお問い合わせください。私たちは常にサポートを提供しており、24時間以内にご返信いたします。



Warranty Card

Purchase Date: _____

Dealer/Retailer: _____

Item No.: _____

Customer Name: _____

Customer Tel: _____

Customer E-mail: _____



Product Failure Description:

(Please be sure to fill in your related information so that we can better serve you in time)





User Manual Download



<https://community.fodsports.com/support/fx8-user-manual/>



fodsports.com

20211227V1.1

