

FX8 AIR

HELMET BLUETOOTH INTERCOM




Manual


CONTENTS

1. Package Include -----	2
2. Charging -----	3
3. Installation & Disassembly -----	4
4. Button and basic function operation-----	7
5. Device pairing and connection-----	12
6. Pairing connection -----	17
7. Technical Specifications -----	19
8. Q&A / Warning -----	19
9. Statement / Warranty / After-Sale Service -----	20

1. PACKAGE INCLUDE :

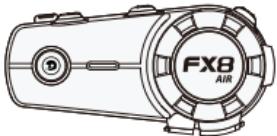

FX8 AIR




Speakers & Hard Tube Microphone




USB Cable



Button Mic

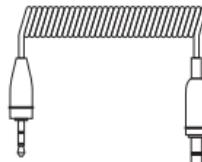

2.5mm to 3.5mm Cable



Clamp



Metal Clip




Velcro



Rubber



Eva rubber

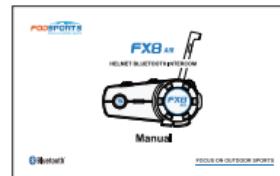


Manual

2.Charging:

2.1 When charging, the LED indicator will light up in red, and the indicator light goes out after the charging is completed(As shown below). Please charge it before using it for the first time.

2.2 Please use 5V/1A \pm 0.5A qualified charger to charge the device. Unstable current may damage the equipment.

2.3 Please keep charging at least once every 2 months If the product is not used for a long time.

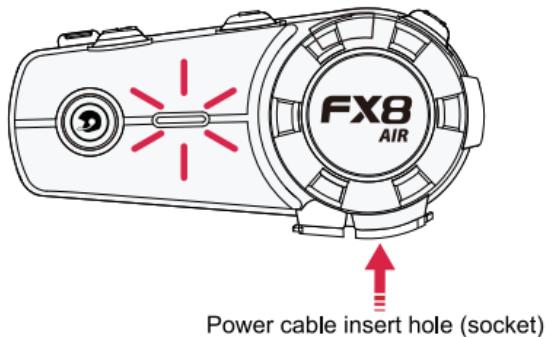

3. Installation & Disassembly

3.1 Speaker Installation



1. Open the inner lining of the helmet ear position and fix the Velcro to the ring position.



2. Fit the headset to the Velcro and fix it to the ring position. (The short-line speaker is on the left).



3. Stick the microphone and Velcro on the left side of the helmet at a suitable position, aim the microphone at the mouth position, and arrange the wires to the inner lining.


Remark: the microphone should be closed to and aim at the mouth as possible. The speakers are as close to ears as possible. If installation position of the speaker is too deep so that the speaker is too far away from the ear, the sponge in accessory may be used to jack up.

3.2 Fixed by clamp



1. Assemble the clamp and metal clip.

2. Install the base in a suitable position.

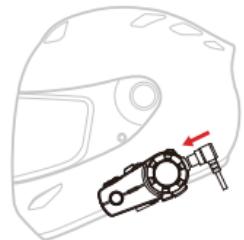

3. Install the host: Insert the raised buckle at the bottom of the host into the groove of the base, then press the host into the base so that the buckle on the top of the base buckles into the groove on the top of the host.

4. Insert the microphone and earphone connection line, installation complete.

3.3. Disassembly of the Device




1. Pull out the headset plug.



2. Press the upper clamp buckle and move the device upward to remove it.


4. Button and basic function operation

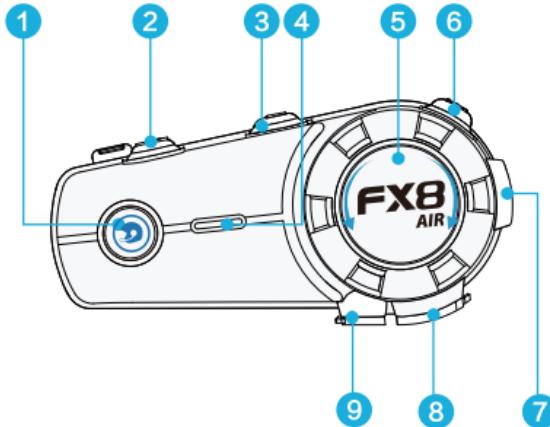


Outlook / Button

1. Intecom
2. Previous
3. Next
4. LED Indicator
5. Multi-Function(Volume+/-)
6. Mode
7. MINI Port (earphones)
8. TYPE-C Port (charging)
9. Aux Port

Power on/off

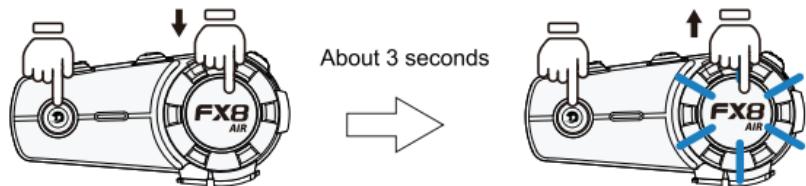

Power on: Press and hold the intercom button and multi-function button at the same time for about 3 seconds, until the voice prompt "Welcome to FODSPORTS Bluetooth communication system".

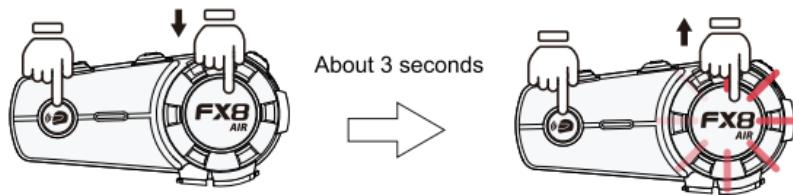

Power off: Press and hold the intercom button and multi-function button at the same time for about 3 seconds, until the voice prompt "Power off".

Battery detection & low battery automatic reminder function

FX8 AIR has the power detection function. When the device is turned on, short press the "Previous" button and the "Next" button at the same time.

Power over 90%, the voice will prompt: "beep...beep...beep".

Power over 50%, the voice will prompt: "beep...beep".

Power lower than 50%, the voice will prompt: "beep...".

Low battery reminder

When the battery level is less than 20%, you will hear a tone: power lower than 20%, please charge.

When the battery level is lower than 10%, the red light of the multi-function button will flash and you will hear a tone:power lower than 10%, it will shut down, please charge it immediately.

Cellphone

Answering Call: Short press multi-Function button.

Hangup Call: Call ended,short press multi-Function button.

Refuse Call: Long press multi-Function button for 2 seconds.

Redial: Short press multi-Function button twice.

Volume Up: Rotate the multi-Function button forward.

Volume Down: Rotate the multi-Function button Backward.

Switch manual/automatic answering calls: While in standby, press and hold the "Intercom " button and "Previous" "Next " button and at the same time for 5 seconds. (Default: answer incoming calls automatically)

*Automatic answering calls :the voice prompt "beep...beep"

*Manual answering calls :the voice prompt "beep..."


The headset is connected to 2 mobile phones at the same time

Answer an incoming call: When talking with the first mobile phone, if there is an incoming call from the second mobile phone, quickly press the multi-function button once to end the first mobile phone, and press the multi-function button again to answer the second mobile phone.

Hangup call: To end the call, short press the multi-function button.

Reject incoming call: When there is an incoming call from the second mobile phone during a call, press and hold the multi-function button for 2 seconds to reject the second call.

Voice Command

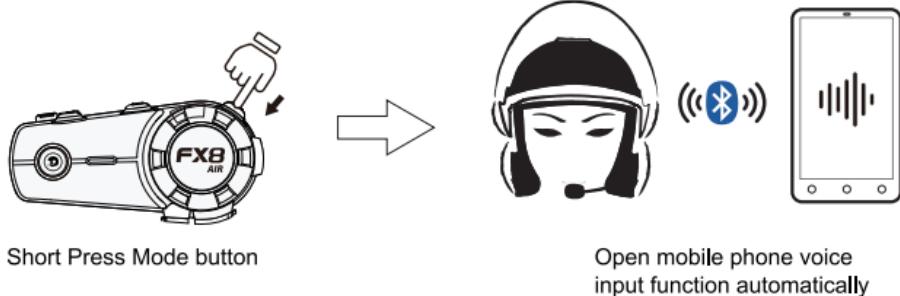

After FX8 AIR is connected to the cellphone, short press the "Mode" button to activate the voice control function.
Requires cellphone with voice control function.

Cellphone must have voice command function.

Music Function

Play: Short press the multi-function button.

Pause: Short press the multi-function button.

Volume Up: Rotate the multi-Function button forward.

Volume Down: Rotate the multi-Function button Backward.

Play Previous: Short press Previous button.

Play Next: Short press Next button.

EQ Sound Selection

Under the music playing state, short press the Mode button EQ sound effect selection button, you can switch the sound effect when listening to different types of songs.

* HiFi bass	Corresponding voice: Bass boost
* Popular Golden Classic	Corresponding voice: Midrange boost
* Pure human voice	Corresponding voice: Treble boost

APTX HD Audio

In the cellphone song playback format settings, select the APTX format, and you can enjoy real HiFi sound effects when the song is played (the mobile phone must support APTX format playback)

Intercom Function

Switch Intercom On: short press Intercom button.

Switch Intercom Off: short press Intercom button.

Volume Up: Rotate the multi-Function button forward.

Volume Down: Rotate the multi-Function button Backward.

FM Function

FM ON: Long press Next button for 3 seconds.


FM OFF: Long press Next button for 3 seconds.

Volume Up: Rotate the multi-Function button forward.

Volume Down: Rotate the multi-Function button Backward.

Search channels: short press Previous / Next button .

Memory Clear

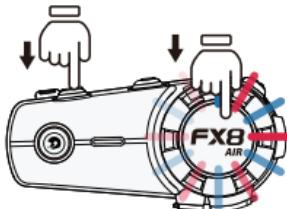


Clear pairing records: FX8 AIR can manually clear pairing records with other devices. In the standby state of the device, press the "multi-function" button and the "Previous song" button at the same time for about 5 seconds, the red and blue indicator lights flash at the same time, and the clearing of the pairing record is completed. (The voice prompt "beep...beep...beep")

5.Device pairing and connection


5.1 Pairing Mode

5.1.1 Passive search mode

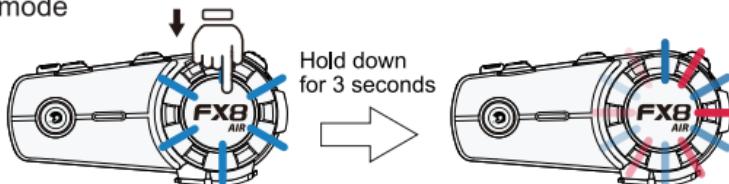


When device is on, press and hold the multi-function button for about 6 seconds, the red and blue indicator lights flash alternately quickly, enter the pairing search mode, and the voice prompt "beep...beep". The passive pairing mode is used to connect to Bluetooth devices such as mobile phones and GPS.

5.1.2 Active search mode

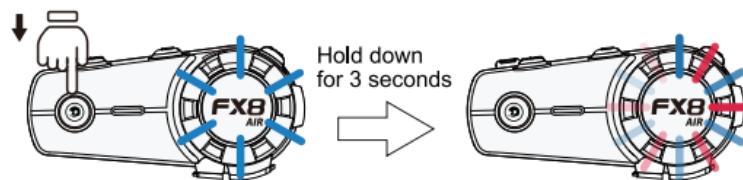

When device is on, press and hold the intercom button for about 6 seconds, the red and blue indicator lights flash alternately slowly, enter the active search mode, and the voice prompt "beep...". Active search mode is used for the intercom function connection between


5.2 (A) FX8 AIR connect with (B) FX8 AIR

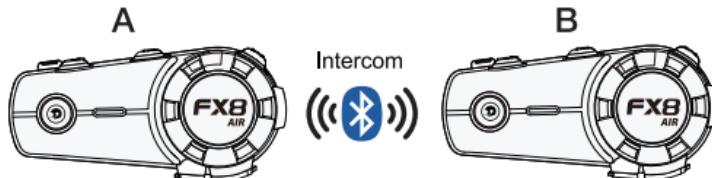

A FX8 AIR is on positive search mode(refer to 5.1.2), B M1S-PLUS is on passive search mode(refer to 5.1.1),A and B FX8 AIR change from flashing red and blue lights alternately to multi-Function and intercom buttons flashing blue lights at the same time,connect successfully.

5.3 Pairing With Cellphone

STEP1.When device is on, long press multi-Function button, red and blue light flash quickly, entering passive pairing mode.(refer to 5.1.1)

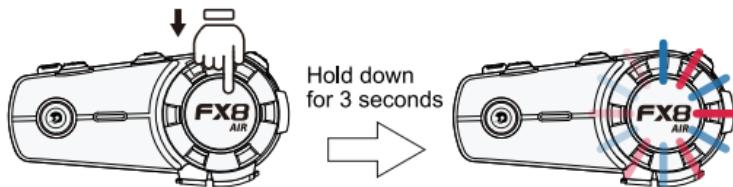

STEP2.Turn on cellphone Bluetooth,select FODSPORTS FX8 AIR,the pairing is complete.Voice message will also say "Device Connected".

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that


interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction

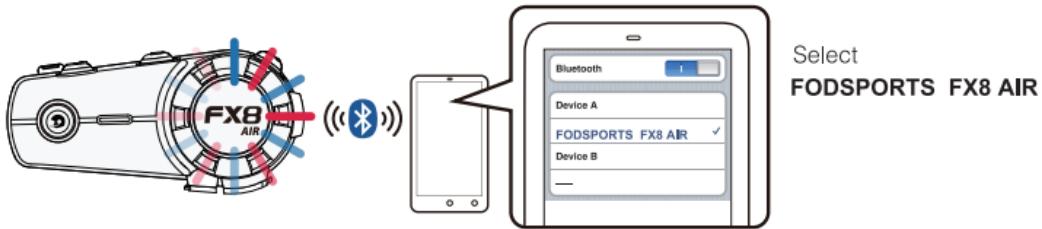

5.4 Connect with two phones




Step 1: Connect to the first phone(refer to 5.3)


Step 2: Long press the multi-function button, FX8 AIR enters the passive search mode again and connects with the second mobile phone (refer to 5.3).

Notice: FX8 AIR can connect to 2 phones, but only support one phone for audio input.

5.5 Wire Connecting

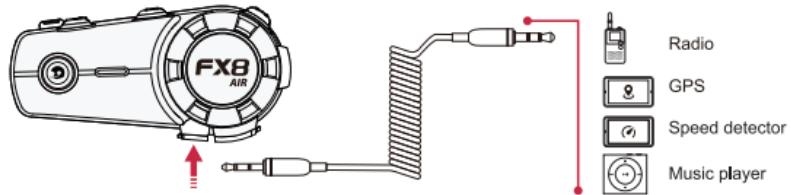

FX8 AIR can be connected to audio output devices such as radio, GPS navigator, speedometer, music player, etc. through the standard 2.5 to 3.5mm AUX audio cable.

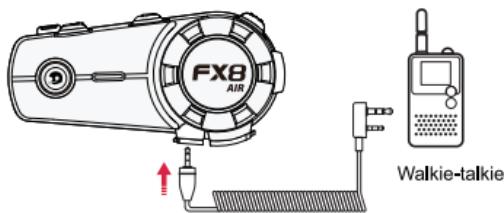


You need to purchase a cable if you need a wired connection for Walkie-talkie equipment.

Note: The wired audio cable function can only be used in standby mode.

6. pairing connection

6.1 Occasions: Rider A connect with Passenger B for intercom. Then A connect with two bluetooth devices and one wired equipment and B connect with one bluetooth device(as shown below).

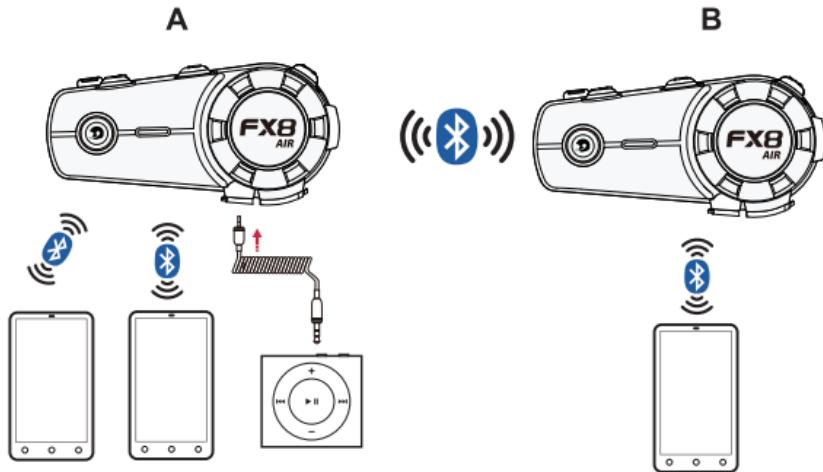

Step 1: A FX8 AIR connect with B FX8 AIR(refer to 5.2)

Step 2: Short press one time A or B intercom button to disconnect intercom

Step 3: A connect with 2 phones(refer to 5.4)

Step 4: A use 2.5 mm to 3.5 mm AUX audio line to connect with one audio device

Step 5: B connect with one phone(bluetooth device)Paired connection(refer to 5.3)

Step 6: Short press intercome button of A or B for connection.


Notice: If A or B need to use the audio function of phone(blueooth device), you need to disconnect the intercom.

Remark 2: Intercom is interrupted and reconnected:

In the 2 people intercom state, if there is a mobile phone call, the intercom will be automatically disconnected, and the intercom state will be automatically connected after the call is over. If it is interrupted due to distance or poor signal, please click the intercom button to return to the intercom state.

6.2 Memory Connection Function

FX8 AIR will remember the paired device, when you use it again, please follow the steps below:

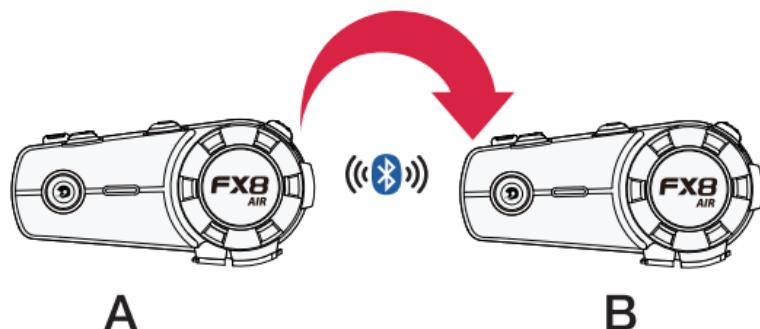


STEP1. Switch off all 2 units(A,B) and all Bluetooth devices connected to the headset such as cellphone and GPS.

It will affect the pairing)

STEP2. Switch on Unit A and B, press Unit A intercom button,A and B are connected successfully..

STEP3. After all 2 units reconnected,switch on original connected Bluetooth devices such as cellphone and GPS.

6.3 FX8 AIR can connect up to 2 devices.

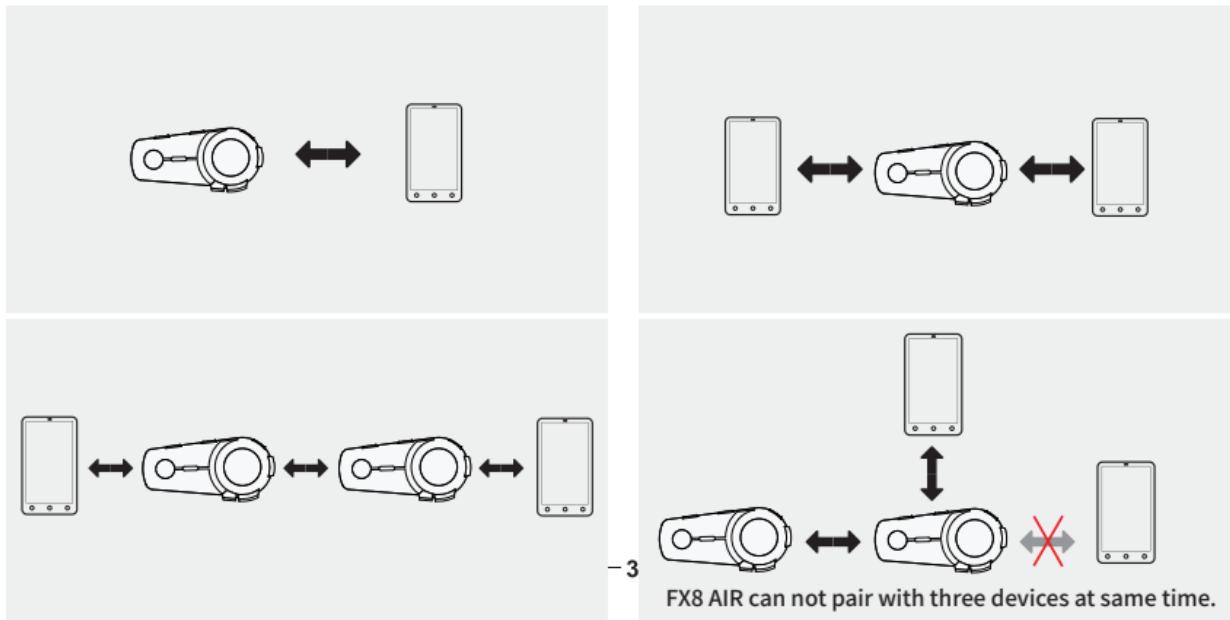

7. Technical Specifications

Bluetooth Support: HSP, HFP, A2DP, AVRCP, AGHSP

Battery: lithium battery, 900mA , 3.7V

Dimensions: 8.9cm * 4.5cm * 2.8cm

Weight: 50G,100G(Include Headphone & Mic Kits) **Frequency Range:** 2.4G-2.485G

Operating temperature: -20°C-50°C

Certification: CE FCC ROHS BQB TELEC

USB Adapter standard charge voltage: DC 5V±0.2V

USB Adapter standard charge circuit: DC 1A±0.5A

Charging time: 2-3 hours

8. Q&A / Warning

Q1: No sounds from one or two side speaker.

A1: Check device plug,needs to firmly connected.

Q2: Can it be recharged from bike USB charger while riding ?

A2: 1.Not recommended,unstable power source will cause damage on internal circuit, may cause unable to recharge/can't fully charged/can't switch on.
2.Power bank will be good.

Q3: When using radio,not transmission or continuous transmission.

A3: Check 2.5mm pin,has to insert firmly.The pin equipped with waterproof aprons,user might think its already plugged.

Q4: New device can't switch on.

A4: Recharged at least 30 minutes before switch use.

***Warning**

Sound Volume Warning Long period or too loud may hurt hearing ability.

Disassemble or Modification

The FX8 AIR is precisely made in factory.Any disassemble or modification may damage the device,please do not tear any of the safety regulation and serial sticker from the device ,that will void the warranty.Please contact us directly if needed.

9.Statement / Warranty / After-Sale Service

9.1 FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

9.2 Warranty

In normal use, one year warranty from the date of purchase, any disassembly, modification will void warranty.

Warranty Card


Production Date		Customer Name	
Purchase Date		Customer Tel	
Dealer Name		Customer E-mail	
Item No		Remark	

After-Sale Service

For any quality problem or missing accessories, especially pairing problem between 2 or more FX8 AIR headsets, please feel free to contact us at email: winzon.cs@outlook.com. We're always here ready to help, will reply to you in 24 hours.

FX8 AIR

HELMET BLUETOOTH INTERCOM

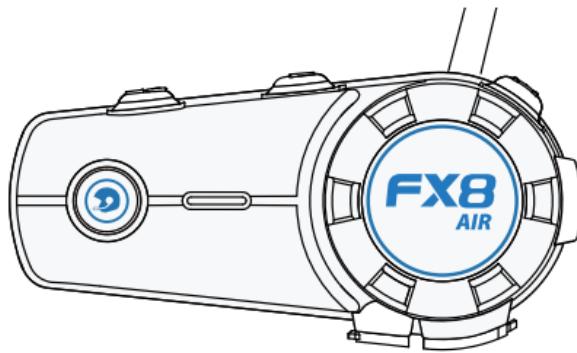


マニュアル


目次

1.パッケージ内容 -	2
2.充電 -	3
3.取り付け&取り外し -	4
4.ボタンと基本機能の操作 -	7
5.デバイスのペアリングと接続 -	12
6.ペアリング接続 -	17
7.技術仕様 -	20
8.よくある質問(Q&A)/警告 -	20
9.声明/保証/アフターサービス -	21

1.パッケージ内容

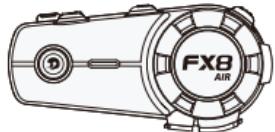


FX8 AIR




スピーカー&アームマイク




USBケーブル

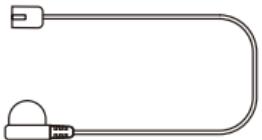

ワイヤマイク

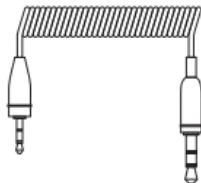

2.5mm～3.5mmオーディオケーブル

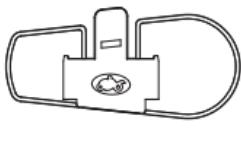

取り付けベース



メタルクリップ




マジックテープ



取り付け用ゴム




EVAベルクロ

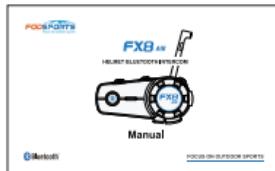

マニュアル

2.充電:

- 2.1充電中はLEDインジケーターが赤く点灯し、充電が完了するとインジケーターライトが消灯します。
(下の通り)初めて使用される場合は、充電してからご使用ください。
- 2.2 5V/1A±0.5Aの認定充電器をご使用ください。不安定な電流はデバイスを損害する可能性があります。
- 2.3 長期間使用されない場合は、最低でも2ヶ月に1回は充電してください。

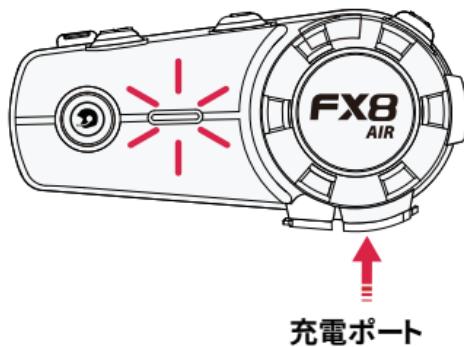

3.取り付け&取り外し

3.1 スピーカーの取り付け



1.ヘルメットの耳の位置に内側の裏地を開き、マジックテープをリングの位置に固定します




2.ヘッドセットをベルクロに取り付け、リングの位置に固定します。(短いコードスピーカーは左側にあります)



3.ヘルメットの左側のマイクとマジックテープを適切な位置を固定し、マイクが口のほうを向くよう、内装後ろ側に配線を通します。

備考1:マイクはできるだけ口元まで近づけてください。スピーカーはできるだけ耳に近い位置に設置してください。スピーカーの設置位置が深すぎれば、耳から遠い場合は、付属のスポンジを上げる場合があります。


3.2 取り付けベースで固定する

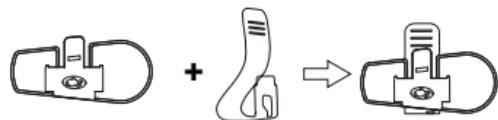

1. ベースとメタルクリップを組み立てます。



2. ベースを適切な位置に取り付けます切な位置に取

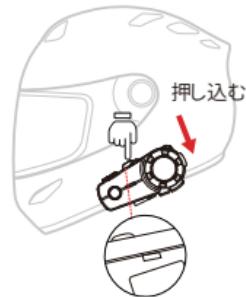


3. インカム本体を取り付ける: ホストの下部にある隆起したバックルをベースの溝に挿入してください。ベースの上のバックルがホストの上の溝にバックルするように、ホストをベースに押し込んでください。



4. マイクとイヤホンの接続線を差し込んで、取り付け完了です。

3.3デバイスを取り外す

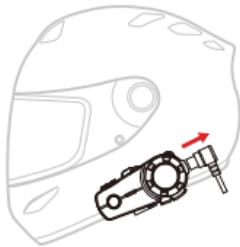


1.取り付けベースを引き抜きます。



2.上部のベースバックルを押して、デバイスを上に移動させ、取り外します。

4.ボタンと基本機能の操作

4.1各部分の名称/ボタン

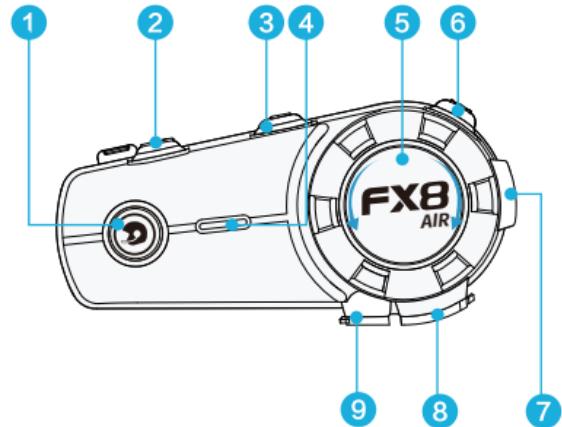

各部分の名称/ボタン

1. インターコム
2. 前
3. 次
4. LEDインジケーター
5. 多機能(ボリューム+/-)
6. モード
7. MINIポート(イヤホン)
8. タイプ-Cポート(充電)
9. Auxポート

パワーオン/オフ



パワーオン:「FODSPORTS Bluetoothコミュニケーションシステムへようこそ」という音声メッセージが聞こえるまで、インターモトボタンと多機能ボタンを同時に約3秒間押し続けます。



パワーオフ:「パワーオフ」という音声メッセージが聞こえるまで、インターモトボタンと多機能ボタンを同時に約3秒間押し続けます。

バッテリー検出&自動的な低電力通知機能

FX8 AIRには電源検出機能があり、デバイスがオフになっている時、「前」と「次」のボタンを同時に短く押すと、次の音声メッセージが表示されます:

バッテリー残量は90%以上:「ドゥー、ドゥー、ドゥー」

バッテリー残量は50%以上:「ドゥー、ドゥー」

バッテリー残量が50%以下:「ドゥー」

低電力通知

バッテリー残量が20%以下の場合、「バッテリー残量が20%以下です。充電してください」とい音声メッセージが聞こえます。

バッテリー残量が10%以下の場合、多機能ボタンの赤ランプが点滅し、「バッテリー残量が10%以下です。まもなくパワーオフにします。すぐに充電してください」という音声メッセージが聞こえます。

携帯電話

電話に応答する：多機能ボタンを短く押します。

電話を切る：多機能ボタンを短く押します。

通話を拒否する：多機能ボタンを2秒間長押しします。

リダイアル：多機能ボタンを2回短く押します。

音量を上げる：多機能ボタンを時計回りに回します。

音量を下げる：多機能ボタンを反時計回りに回します。

手動/自動応答切り替え：待機中に「インターホム」、「前」と「次」のボタンを同時に5秒間長押ししてください。(初期設定：自動的に着信に応答する)

*自動的電話応答：「ドゥー、ドゥー」という音声メッセージが表示されます。

*手動的電話応答：「ドゥー」という音声メッセージが表示されます。


本機は同時に2台スマホと接続します。

着信に応答する：1番目の携帯電話と通話する時に、2番目の携帯電話から着信がある場合は、多機能ボタンを素早く一回押すと、一番目の携帯電話との通話を終了します。多機能ボタンをもう一回押すと、二番目の携帯電話と通話できます。

電話を切る：通話中の電話を終了するには、多機能ボタンを短く押します。

電話を拒否する：通話中に2番目の携帯電話から着信がある場合は、多機能ボタンを2秒間を押し続けて、2番目の携帯電話の着信を拒否します。

音声コマンド

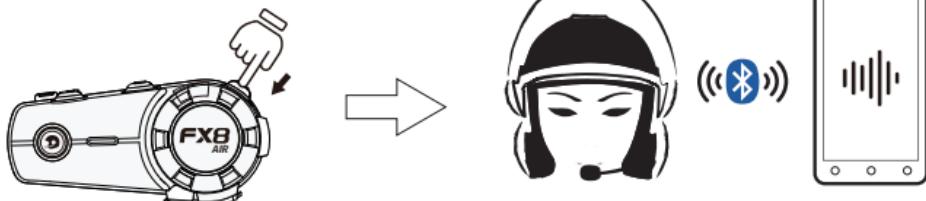

モードボタンを短く押す

自動的に携帯電話の音声入力
機能を開きます

携帯電話とペアリングした後、「モード」ボタンを短く押すと音声コマンドを有効にします。携帯電話は音声コマンド機能が付くのは必要です。

携帯電話に音声コマンド機能が備わっている必要があります。

音楽機能

再生する:多機能ボタンを短く押します。

一時停止する:多機能ボタンを短く押します。

音量を上げる:多機能ボタンを時計回りに回します。

音量を下げる:多機能ボタンを反時計回りに回します。

前の曲を再生する:『前』ボタンを短く押します。

次の曲を再生する:『次』ボタンを短く押します。

EQ音声選択

音楽再生状態で、EQ効果音選択ボタン(モードボタン)を短く押すと、様々な種類の曲を聴く時に、異なる効果音を切り替えることができます。

*HIFIベース	対応する音声:低音ブースト
*人気のゴールデンクラシック	対応する音声:中音ブースト
* 純粋な人声	対応する音声:高音ブースト

APTX HDオーディオ

携帯電話の曲を再生するフォーマット設定でAPTXフォーマットを選択すると、曲を再生する時にHiFi品質の効果音を楽しむことができます(携帯電話はAPTXフォーマット再生に対応している必要があります)

インターホン機能

インターホンをオンにする:インターホンボタンを短く押します。

インターホンをオフにする:インターホンボタンを短く押します。

音量を上げる:多機能ボタンを時計回りに回します。

音量を下げる:多機能ボタンを反時計回りに回します。

FM機能

FMオン:「次」ボタンを3秒間長押しします。


FMオフ:「次」ボタンを3秒間長押しします。

音量を上げる:多機能ボタンを時計回りに回します。

音量を下げる:多機能ボタンを反時計回りに回します。

選局:前/次ボタンを短く押します。

メモリをクリアする

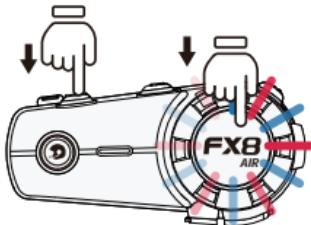

ペアリングメモリーをクリアする: FX8 AIRは他のデバイスとのペアリングメモリーを手動でクリアできます。デバイスがスタンバイ状態で、「多機能」ボタンと「前」ボタンを同時に約5秒間押すと、赤と青のライトが同時に点滅し、ペアリングメモリーのクリアが完了します。「ドゥー、ドゥー、ドゥー」という音声メッセージが表示されます

5. デバイスのペアリングと接続

5.1 ペアリングモード

5.1.1 ペアリングモード




デバイスがオンの状態で、多機能ボタンを約6秒間長押しし、赤と青のライトが素早く点滅し、ペアリングモードに入り、音声メッセージ「ドゥー、ドゥー」が聞こえます。ペアリングモードは携帯電話やGPSなどのBluetoothデバイスに接続することに適用されます。

5.1.2検索モード



デバイスがオンの状態で、インターモンボタンを約6秒間を長押しし、赤と青のインジケーターがゆっくり点滅し、検索モードに入り、音声メッセージ「ドゥー」が聞こえます。検索モード機能はFX8 AIRデバイス間に適用されます。

5.2 (A)FX8 AIR と(B)FX8 AIR を接続する。

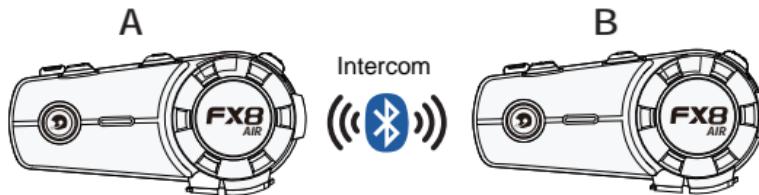


A FX8 AIRは検索モード(5.1.2を参照)、B FX8 AIRはペアリングモード(5.1.1を参照)にあり、A FX8 AIRとB FX8 AIRは赤と青のライトに交互に点滅する状態から、多機能ボタンとインターモンボタンが青のライトに同時に点滅する状態に変わると、正常に接続されたことになります。

5.3携帯電話とペアリング

ステップ1. デバイスがオンの状態で、多機能ボタンを長押しして、赤と青のライトが素早く点滅し、ペアリングモード(5.1.1を参照)に入ります。



ステップ2. 携帯電話のBluetoothをオンにし、「FX8 AIR」を選択し、ペアリングが完了します。「デバイスの接続に成功しました」という音声メッセージを通知します。

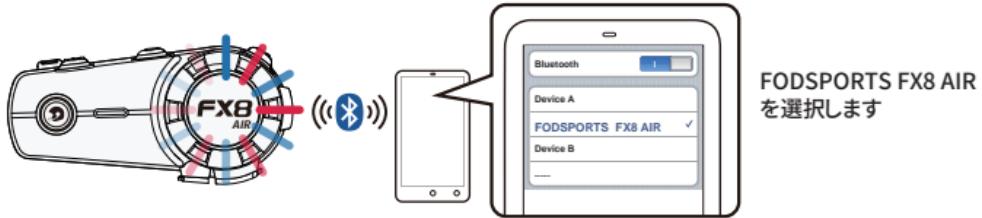

5.4 2つの携帯電話と接続する




ステップ1. 1台目の携帯電話と接続します (5.3を参照)


ステップ2. 多機能ボタンを長押しし、FX8 AIRはペアリングモードに入り、2台目の携帯電話と接続します (5.3参照)

お知らせ: FX8 AIRは、2台の携帯電話と接続することができますが、オーディオインプットについては1台しかサポートされていません。

5.5有線接続

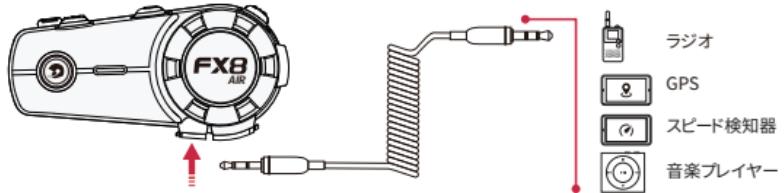

FX8 AIRは標準の2.5~3.5mm AUXオーディオケーブルを介して、ラジオ、GPSナビゲーター、スピードメーター、音楽プレーヤーなどのオーディオ出力デバイスに接続できます。

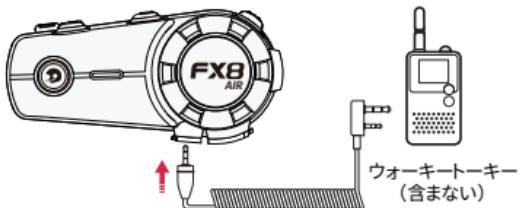


ウォーキートーキー機器の有線接続が必要な場合は、ケーブルを購入する必要があります。

お知らせ:有線オーディオケーブル機能はスタンバイモード状態のみ使用できます。

6.ペアリング接続

6.1例:ライダーAはインタークムのためにライダーBと接続します。その後、Aは2つのBluetoothデバイスと1つの有線機器と接続し、Bは1つのBluetoothデバイス(以下の通り)を接続します。

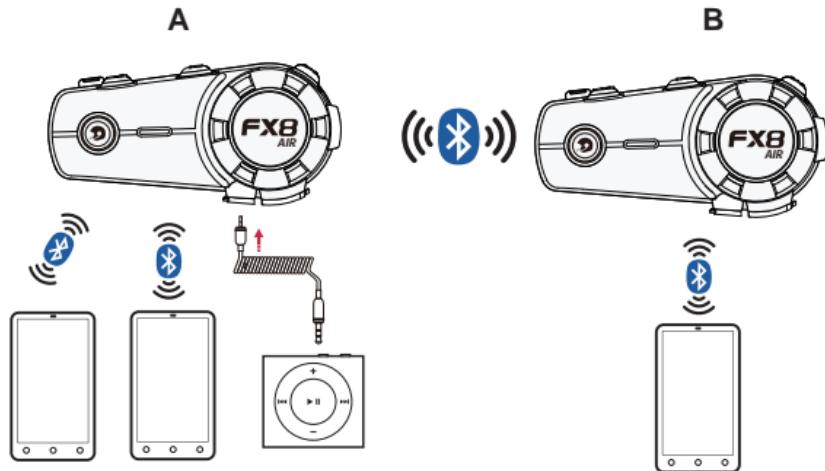

ステップ1:A FX8 AIRとB FX8 AIRを接続します(5.2を参照)。

ステップ2:AまたはBのインタークムボタンを1回短く押し、インタークムの接続を切断します。

ステップ3:2台の携帯電話とAを接続します(5.4を参照)

ステップ4:2.5mmから3.5mmのAUXオーディオケーブルを使用して、Aを1つのオーディオデバイスと接続します。

ステップ5:1台の携帯電話(Bluetoothデバイス)とBを接続します。

ステップ6:AまたはBのインターホンボタンを短く押し、インターホンの接続が復帰します。


お知らせ:AまたはBが携帯電話(Bluetoothデバイス)のオーディオ機能を使用する必要がある場合は、インターホンの接続を切断する必要があります。

備考2:インターホンの中断と再接続:

2人のインターホン状態で、携帯電話がかかってくると自動的にインターホンが切断され、通話が終了するとインターホン状態が自動的に接続されます。距離や信号不良などで中断した場合は、インターホンボタンをクリックしてインターホン状態に戻してください。

6.2.メモリ接続機能

FX8 AIRはペアリングされたデバイスの記憶あります。再度使用する場合は、以下の手順に従ってください。

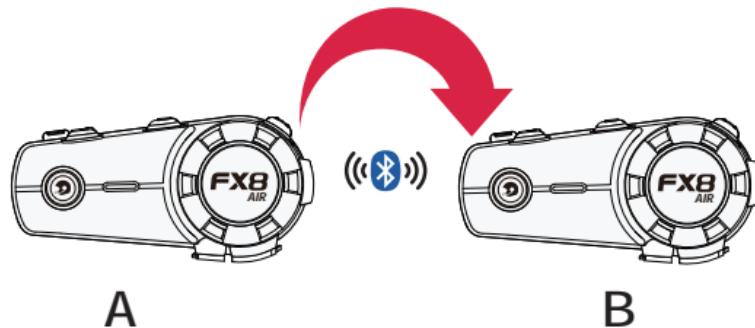


ステップ1. ユニット(A、B)と、ヘッドセットに接続されたすべてのBluetoothデバイス(携帯電話やGPS)の電源を切ります(ペアリングに影響を及ぼすため)。

ステップ2.ユニットAとBが電源を入れ、ユニットAインターモトボタンを押すと、AとBが正常に接続されます。

ステップ3. 2台のユニットが再接続された後、元々接続されていたBluetoothデバイス(携帯電話やGPS)の電源を入れてください。

6.3 FX8 AIRは2台ブルートゥースデバイスと同時に接続できます。

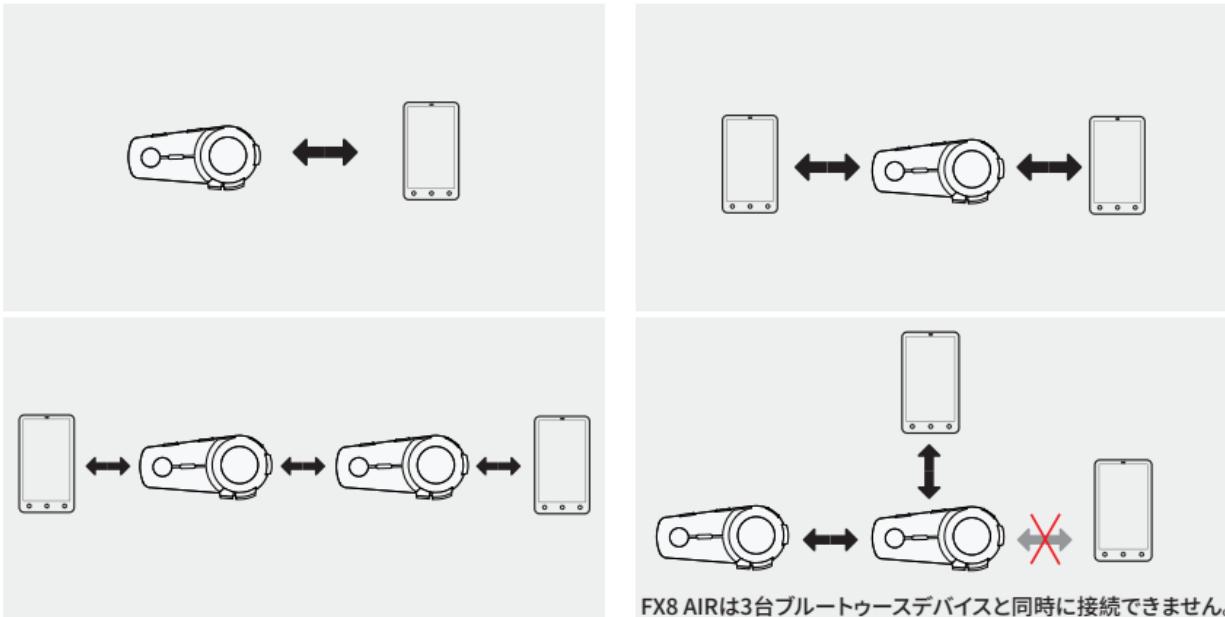

FX8 AIRは3台ブルートゥースデバイスと同時に接続できません。

7.技術仕

ブルートゥースサポート :HSP,HFP,A2DP,AVRCP, AGHSP

バッテリー:リチウム電池,900mA, 3.7v

サイズ: 8.9cm * 4.5cm * 2.8cm

重量: 50G, 100G(ヘッドフォン & マイク キズ)

周波数範囲:2.4G-2.485G

動作温度:-20°C-50°C

取り済み認証:CE FCC ROHS BQB TELEC

USBアダプタ標準充電電圧:DC 5V±0.2V

USBアダプタ標準充電電流:DC 1A±0.5A

充電時間:2-3 時間

8. Q&A/警告

Q1:サイドスピーカーの片方または両方から音が出ません。

A1:デバイスのプラグがしっかりと接続していることを確認してください。

Q2:自転車に乗っている間にバイク用USB充電器から充電できますか?

A2:1.お薦めしません。不安定な電源は内部回路に損傷を与える可能性があり、充電できなかったり、完全に充電できなかったり、電源を入れることができなくなる可能性があります。

2.充電バンクは利用可能です。

Q3:ラジオ利用中に送信できなかったり、送信を続けることができません。

A3:2.5mmのピンがしっかりと入っていることを確認してください。ピンは防水カバーが付いているため、挿入されているように見えることがあります。

Q4:新しいデバイスの電源が入りません。

A4:使用前に少なくとも30分充電してください。

*警告

音量の注意。長時間大音量で使用すると聴覚を損傷する可能性があります。

分解または修正。

FX8 AIRは工場で正確に作られています。分解や修正はデバイスを損傷する可能性があります。保証に必要なため、デバイスから安全規制やシリアル・ステッカーを外さないでください。何か必要な場合は当社に直接ご連絡ください。

9.声明/保証

9.1 FCC声明

法令に担当する当事者によって認められない変更や修正は、ユーザーが本機器を使用する権限を無効にする可能性があります。

本機器はテスト済みで、FCC規定第15に基づくクラスBデジタルデバイスの制限に準拠していることが確認済みです。これらの制限は家庭での設置において、有害な干渉からの適切な保護を提供するものです。本機器は無線周波数エネルギーを使用・発生するため、指示に従わない設置や使用は無線通信に有害な干渉を起こす可能性があります。

しかし、特定の設置によって干渉が起こらないことは保証できません。本機器がラジオやテレビの受信に有害な干渉を起こした場合は、本機器の電源を切って再度入れることで確認でき、干渉を以下の方法で修正することをお薦めします。

- 受信アンテナの方向や位置を変える。
- 本機器と受信機の間の距離を開ける。
- 受信機が接続されている回路とは異なるコンセントに本機器を接続する。
- 販売先または経験豊富なラジオ/テレビ技術者に問い合わせる。

本機器はFCC規定第15に準拠しています。操作には次の2つの条件が適用されます。(1)本機器は有害な干渉を起こさない可能性があり、(2)本機器は望ましくない操作によって起こる干渉を含む、いかなる受信された干渉をも受け入れる必要があります。

本機器は評価済みで、一般的なRF暴露の要件を満たします。本機器は制限なしでポータブルで暴露された状態での使用が可能です。

9.2 保証

通常の使用のみ。購入の日付から1年間の保証。分解や修正がある場合は保証は無効になります。

保証カード

作成日付	顧客氏名
購入日付	顧客の電話番号
販売先の名前	顧客のメールアドレス
アイテム番号	コメント

アフターサービス

品質の問題やアクセサリーの欠品、特に2台以上のFX8 AIRヘッドセット間のペアリング問題については、お気軽にメール(winzon.cs@outlook.com)にてお問い合わせください。私たちは常にサポートを提供しており、24時間以内にご返信いたします。



User Manual Download



<https://community.fodsports.com/support/fx8-air-user-manual/>



fodsports.com

