

Uolo® Pulse GloWave

Bluetooth & FM Speaker

User Manual





Technical Specifications:

- Bluetooth 5.0
- Transmission distance : 10 meters radius
- Play time : 24+ (at 60% volume with LED lights off)
- Frequency : 100Hz ~ 10KHz
- Speaker : 57mm*2, 4Ω 8W
- Input Power: 5V === 0.5A
- Maximum current consumption: 1A
- Battery capacity: 2600 mAh

Features:

1. Bluetooth
2. TWS (link 2 speakers together)
3. Support USB / SD card / AUX input
4. FM radio
5. Built-in rechargeable lithium battery
6. Built-in Mic
7. Support MP3/WAV/WMA/FLAC/APE music file format
8. IPX7 rated
9. LED party lights

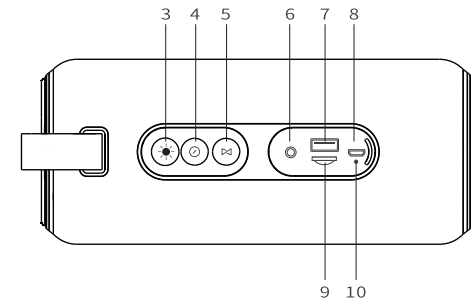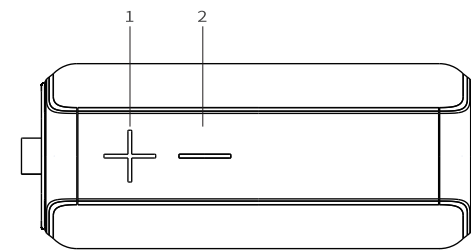

Button Function:

1. Volume + :
 - Short press to increase volume
 - Long press to the next song
 - In FM mode, long press to the next channel
2. Volume - :
 - Short press to reduce the volume
 - Long press to the previous song
 - In FM mode, long press to the previous channel
3. LED button :
 - Press to turn on the LED color changing light
 - Long press to turn off the LED color changing light
 - Double press to exit wireless connection
4. Power button :
 - Short press : play/pause
 - Long press for about 3 seconds to power on/off
 - In FM mode, double press to scan FM channels
5. Multi-function button :
 - Short press to enter/exit pairing mode
 - Long press to switch between BT and FM
 - In BT Mode:
 - Double press to activated call back function
 - Short press to answer/hang up the phone call
 - Long press 2 seconds to reject phone call
6. Auxillary input
7. USB input
8. USB C charging port (input 5V) :
 - Use charging cable to charge the speaker
 - In FM Mode, the charging cable must be connected as an antenna
9. SD card slot :
 - Inserted SD card with music to play
10. LED charging indicator

Charging & Usage:

- Uolo Pulse GloWave speaker is equipped with overcharge circuit protection.
- Takes 6-7 hours to fully charge the speaker. LED charging indicator will turn off once fully charged.
- Play time may vary depending on music type, play volume, and LED light usage
- Use up to 5V 1A charging adapter to recharge the speaker.

How to use:

1. Power on the Uolo Pulse GloWave speaker to pair with your Bluetooth compatible device. To pair with Bluetooth device :
 - a. Go to your device Bluetooth settings
 - b. Turn on Bluetooth
 - c. Search for "Uolo Pulse GloWave"
 - d. If the Uolo Pulse GloWave is not listed, press the Multi-Function Button on the speaker to switch the speaker into the pairing mode
 - e. Select and connect to Uolo Pulse GloWave
2. Bluetooth LED indicator :
 - a. Pairing/discovery mode – White LED light fast flashing (by the charging port)
 - b. Successful connected – White LED light staying on solid
3. The speaker will be in wireless mode by default when starting-up
4. Must plugin the USB C charging cable as an antenna when playing in the FM mode

Note: To use the FM mode for the 1st time, please perform a full FM channel scan. When full scan is completed, press/short hold + or - buttons to navigate through different stations.

5. TWS linking function (pair 2 Uolo Pulse GloWave together):
 - a. Long press Multi-Function Buttons on both speakers to enter into pairing mode
 - b. Uolo Pulse GloWave will appear twice on your device Bluetooth pairing list. Do not select either one just yet
 - c. The 2 speakers will pair to each other first. Once paired, only one Uolo Pulse GloWave will remain on your device Bluetooth list
 - d. Select and connect to Uolo Pulse GloWave, and you are in TWS mode
6. The default volume of the speaker is 70% when power on
7. The speaker automatically powers off after idle for 15 minutes

Troubleshooting:

Problem:	Problem:	Solution
Auto Power Off	Low battery	Recharge the speaker
Music Playing Error	MP3 music files stored path can't be identified	Save music file under the root directory of the removable drive
No Sound	Speaker volume low, or device muted	Adjust Volume on the speaker and your device
No Sound	Connection error	Hard reset the speaker by pressing and hold "power" button at the back of the speaker for 8 seconds . Forget the speaker on your device and then re-pair the speaker to your device



Limited Lifetime Warranty

*This warranty does not cover normal aging of the battery due to usage

For more info visit us at:
www.uoloonline.com

Uolo® Pulse GloWave

Haut-parleur Bluetooth et FM

Manuel de l'Utilisateur





Spécifications techniques:

- Bluetooth 5.0
- Distribution de transmission: rayon de 10 mètres
- Temps de jeu : 24+ (à 60% du volume avec les lumières LED éteintes)
- Fréquence : 100Hz ~10KHz
- Oratrice: 57mm*2, 4 Ω 8W
- La puissance d'entrée 5V === 0.5A
- Consommation de courant maximale: 1A
- Capacité de la batterie: 2600 mAh

Traits:

1. Bluetooth
2. TWS (reliez 2 enceintes ensemble)
3. Prise en charge de la carte USB / SD / entrée AUX
4. Radio FM
5. Batterie au lithium rechargeable intégrée
6. Micro intégré
7. Prise en charge du format de fichier de musique MP3 / WAV / WMA / FLAC / APE
8. Classé IPX7
9. Lumières de fête à LED

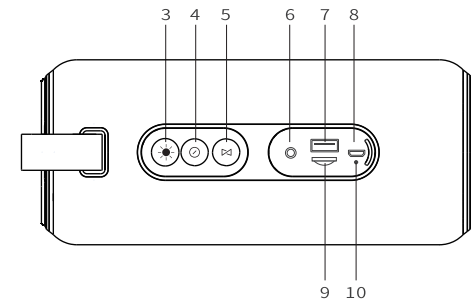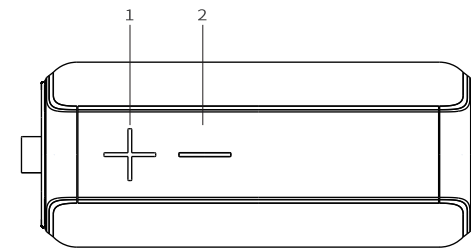

Fonction du bouton:

1. Le volume + :
 - Appuyez brièvement pour augmenter le volume
 - Appuyez longuement sur la chanson suivante
 - En mode FM, appuyez longuement sur la chaîne suivante
2. Le volume - :
 - Appuyez brièvement pour réduire le volume
 - Appui long sur la chanson précédente
 - En mode FM, appuyez longuement sur la chaîne précédente
3. Bouton LED :
 - Appuyez pour allumer la lumière à changement de couleur LED
 - Appuyez longuement pour éteindre la lumière à changement de couleur LED
 - Appuyez deux fois pour quitter la connexion sans fil
4. Bouton marche :
 - Appui court: lecture / pause
 - Appuyez longuement pendant environ 3 secondes pour allumer / éteindre
 - En mode FM, appuyez deux fois pour balayer les canaux FM
5. Bouton multifonction :
 - Appuyez brièvement pour entrer / sortir du mode de couplage
 - appui long pour basculer entre BT et FM
 - En mode BT:
 - Appuyez deux fois pour activer la fonction de rappel
 - Appuyez brièvement pour répondre / raccrocher l'appel téléphonique
 - Appuyez longuement sur 2 secondes pour rejeter l'appel téléphonique
6. Entrée auxiliaire
7. Entrée USB
8. Port de chargement USB C (entrée 5V) :
 - Utilisez le câble de charge pour charger l'enceinte
 - En mode FM, le câble de charge doit être connecté en tant qu'antenne

9. Fente pour carte SD - Carte SD insérée avec musique à lire
10. Indicateur de charge LED

Chargement et utilisation:

- L'enceinte Uolo Pulse GloWave est équipée d'une protection de circuit de surcharge.
- Prend 6-7 heures pour charger complètement l'enceinte. L'indicateur de charge LED s'éteint une fois complètement chargé
- La durée de lecture peut varier en fonction du type de musique, du volume de lecture et de l'utilisation de la lumière LED
- Utilisez un adaptateur de charge jusqu'à 5V 1A pour recharger le haut-parleur.

Comment utiliser:

1. Allumez l'enceinte Uolo Pulse GloWave pour la coupler avec votre appareil compatible Bluetooth. Pour jumeler avec un appareil Bluetooth:
 - a. Accédez aux paramètres Bluetooth de votre appareil
 - b. Activez Bluetooth
 - c. Recherchez "Uolo Pulse GloWave"
 - d. Si l'Uolo Pulse GloWave ne figure pas dans la liste, appuyez sur le bouton multifonction de l'enceinte pour faire passer l'enceinte en mode d'appairage.
 - e. Sélectionnez et connectez-vous à Uolo Pulse GloWave
2. Indicateur LED Bluetooth:
 - a. Mode de couplage / découverte - La lumière LED blanche clignote rapidement (par le port de charge)
 - b. Connexion réussie - La lumière LED blanche reste allumée
3. L'unité sera en mode sans fil par défaut lors du démarrage
4. Doit brancher le câble USB C de chargement comme antenne lors de la lecture en mode FM

Remarque: pour utiliser le mode FM pour la première fois, veuillez effectuer un balayage complet des canaux FM. Lorsque l'analyse complète est terminée, appuyez / maintenez brièvement Boutons + ou - pour parcourir les différentes stations.

5. Fonction de liaison TWS (paire 2 Uolo Pulse GloWave ensemble):
 - a. Appuyez longuement sur les boutons multifonctions des deux enceintes pour entrer en mode d'appairage.
 - b. Uolo Pulse GloWave apparaîtra deux fois sur la liste de couplage Bluetooth de votre appareil. Ne sélectionnez aucun des deux pour l'instant.
 - c. Les 2 haut-parleurs se coupleront en premier. Une fois couplé, un seul Uolo Pulse GloWave restera sur la liste Bluetooth de votre appareil.
 - d. Sélectionnez et connectez-vous à Uolo Pulse GloWave, et vous êtes en mode TWS.
6. Le volume: Le volume par défaut du haut-parleur est de 70% lors de la mise sous tension
7. Le haut-parleur s'éteint automatiquement après 15 minutes d'inactivité

Dépannage:

Problème:	Problème:	Solution
Arrêt automatique	Batterie faible	Recharger l'enceinte
Erreur de lecture de musique	Le chemin de stockage des fichiers de musique MP3 ne peut pas être identifié	Enregistrez le fichier de musique sous le répertoire racine du Lecteur amovible
Pas de son	Volume du haut-parleur faible ou appareil mis en sourdine	Réglez le volume sur le haut-parleur et votre appareil
Pas de son	Erreur de connexion	Réinitialisez le haut-parleur en appuyant longuement Bouton "d'alimentation" à l'arrière de l'enceinte pour 8 secondes. Oubliez le haut-parleur de votre appareil puis reconnectez le haut-parleur à votre appareil



Garantie à vie limitée

* Cette garantie ne couvre pas le vieillissement normal de la batterie en raison de son utilisation

Pour plus d'informations, visitez-nous à:
www.uoloonline.com

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.